

TECHNICAL MANUAL

INVERTER WALL MOUNTED TYPE RESIDENTIAL AIR-CONDITIONERS

(Split system, air to air heat pump type)

Wireless LAN interface is standard equipment.


SRK20ZT-WA/SRC20ZT-WA SRK25ZT-WA/SRC25ZT-WA

CONTENTS

1.	I. SPECIFICATIONS 3					
2.	EXT	ERIOR DIMENSIONS	5			
	(1)	Indoor units	5			
	(2)	Outdoor units	6			
	(3)	Remote control	7			
3.	ELE	CTRICAL WIRING	10			
	(1)	Indoor units	10			
	(2)	Outdoor units	11			
4.	NOI	SE LEVEL	12			
5.	PIPI	NG SYSTEM	21			
6.	RAN	IGE OF USAGE & LIMITATIONS	22			
7.	CAP	ACITY TABLES	24			
8.	APP	LICATION DATA	25			
	(1)	Installation of indoor unit	25			
	(2)	Installation of outdoor unit	29			
	(3)	Safety precautions in handling air-conditioners with flammable refrigerant	33			
9.	OUT	LINE OF OPERATION CONTROL BY MICROCOMPUTER	36			
	(1)	Operation control function by wireless remote control	36			
	(2)	Unit ON/OFF button	37			
	(3)	Auto restart function	37			
	(4)	Installing two air-conditioners in the same room	37			
	(5)	Selection of the annual cooling function	38			
	(6)	Heating only function	38			
	(7)	High power operation	38			
	(8)	Economy operation	39			
	(9)	Air flow direction adjustment	39			
	(10)	3D auto operation				
	(11)	Timer operation	41			
	(12)	Silent operation				
	(13)	Night setback operation				
	(14)	Air flow range setting				
	(15)	Display brightness adjustment				
	(16)	Wireless LAN connection function				
	(17)	Fan control during heating thermostat OFF				
	(18)	Outline of heating operation				
	(19)	Outline of cooling operation	45			
	(20)	Outline of dehumidifying (DRY) opertaion	46			

	(21)	Outline of automatic operation	46
	(22)	Protective control function	47
	(23)	Defrost heater control	53
10.	MAI	NTENANCE DATA	54
	(1)	Cautions	54
	(2)	Items to check before troubleshooting	54
	(3)	Troubleshooting procedure (If the air-conditioner does not run at all)	54
	(4)	Troubleshooting procedure (If the air-conditioner runs)	55
	(5)	Self-diagnosis table	56
	(6)	Service mode (Trouble mode access function)	57
	(7)	Inspection procedures corresponding to detail of trouble	65
	(8)	Phenomenon observed after short-circuit, wire breakage on sensor	70
	(9)	Checking the indoor electrical equipment	70
	(10)	How to make sure of wireless remote control	72
	(11)	Inspection procedure for blown fuse on the indoor and outdoor PCB	72
	(12)	Outdoor unit inspection points	75
11.		OOR UNIT DISASSEMBLY METHOD	
12.		TDOOR UNIT DISASSEMBLY METHOD	
13.		RELESS LAN INTERFACE SETTING MANUAL	
14.		PLICATION OPERATION MANUAL 1	
15.	OP.	TION PARTS 1	160
	(1)	Wired remote control (RC-EX3A, RC-E5)	160
	(2)	Interface kit (SC-BIKN2-E)1	
	(3)	Superlink E board (SC-ADNA-E)	177
16.	TEC	CHNICAL INFORMATION 1	179

■ How to read the model name

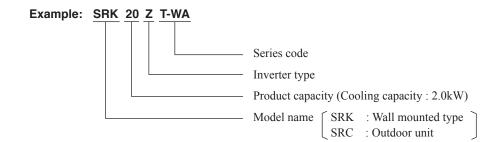

1. SPECIFICATIONS

			Model	SRK20ZT-WA		
Item					Indoor unit SRK20ZT-WA	Outdoor unit SRC20ZT-WA
Power source				1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz	
Nominal cooling capacity (range)		kW) - 3.0 (Max.))		
	Nominal heating		<u>'</u>	kW	, ,) - 4.6 (Max.))
	Heating capacity	, , , ,	-/	kW	217 (616 (1711111	- (Maxi))
	riodinig odpdon	<i>y</i> (· ·=/	Cooling		0.38 (0.1	7 - 0.74)
	Power consump	ntion	Heating	1		9 - 1.36)
	1 ower consump	HOIT	Heating (H2)	kW	0.00 (0.1	
	May power con	cumption	Tricating (FIZ)	-	1	50
	Max power consumption Running current Cooling Heating Inrush current, max current				220/ 230/ 240V)	
				· · · · · · · · · · · · · · · · · · ·		
			Α		220/ 230/ 240V)	
Operation	Inrush current, n	max current			3.0 / 2.8 / 2.7 (220/	
data	Power factor		Cooling	%		8
			Heating			4
	EER		Cooling			26
	COP		Heating]	4.	91
	001		Heating (H2)		-	_
	Sound power le	vel	Cooling] [48	57
	Souria power le	VCI	Heating		50	58
	Carried muses in a	laval	Cooling	dB(A)	Hi: 34 Me: 25 Lo: 22 ULo: 19	45
	Sound pressure	levei	Heating	1 1	Hi: 36 Me: 29 Lo: 23 ULo: 19	45
	Silent mode sou	ind pressure lev	el] [_	Cooling: 42 / Heating: 43
Exterior dim	ensions (Height ×	Width × Depth)		mm	290 × 870 × 230	540 × 780 (+62) × 290
Exterior app	earance				Fine snow (Pure white)	Stucco white
(Equivalent of	color: Munsell, RA	L)			(8.0Y 9.3 / 0.1), (9003)	(4.2Y 7.5 / 1.1), (7044)
Net weight			kg	9.5	34.5	
Compressor	type & Quantity				_	RM-C5077SBE2 (Rotary type) × 1
Compressor motor (Starting method)			kW	_	0.90 (Inverter driven)	
Refrigerant oil (Amount, type)			L	_	0.30 (DIAMOND FREEZE MB75)	
Refrigerant (Type, amount, pre-charge length)			kg	R32 0.78 in outdoor unit (Incl. t	he amount for the piping of 15m)	
Heat exchanger			g	Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant control				Ţ Ţ	tronic expansion valve	
Fan type & Quantity				Tangential fan × 1	Propeller fan × 1	
		W	42 × 1 (Direct drive)	24 × 1 (Direct drive)		
Fan motor (Starting method)		VV	Hi: 9.3 Me: 7.0 Lo: 5.9 ULo: 5.0	27.8		
Air flow Cooling		m³/min	Hi: 10.0 Me: 8.5 Lo: 6.5 ULo: 5.9	· ·		
Available external static pressure		D-	0	22.1		
	· · · · · · · · · · · · · · · · · · ·	ure		Pa	*	0
Outside air i					Not possible	_
	ality / Quantity				Polypropylene net (Washable) × 2	_
	ration absorber				Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compresso
Electric heat	1				_	Defrost heater 230V 110W
Remote control			Wireless remote control			
control	Operation Room temperature control			Microcomputer thermostat		
	Operation display				RUN: Green,	TIMER: Yellow
Safety equipments			Frost protection, Serial signal error prote	ction, Overcurrent protection, ection, Indoor fan motor error protection, ure control), Cooling overload protection		
	Refrigerant pipir	ng size (O.D)		mm	Liquid line: φ 6.35 (1/4")	Gas line: φ9.52 (3/8")
	Connecting met	hod			Flare connection	Flare connection
	Attached length	of piping		m	Liquid line: 0.54 / Gas line: 0.47	
Installation data	Insulation for piping			Necessary (Both s	ides), independent	
uaia	Refrigerant line (one way) length		m	3 - 20		
	Vertical height diff. between O/U and I/U Drain hose		m	Max.10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)	
				Hose connectable (VP16)	Hole size $\phi 20 \times 2$ pcs.	
Drain pump	max lift height			mm		
Recommended breaker size			A			
L.R.A. (Locked rotor ampere)			A		220/ 230/ 240V)	
			- ^		ble) / Terminal block (Screw fixing type)	
Interconnecting wires Size × Core number				`		
IP number	1				IPX0	IPX4
	N connecting				Possible	— (C)
Standard ac	cessories				, ,	, Photocatalytic washable deodorizing filter × 1)
Option parts					Interface kit (SC-BIKN2-E) (Cannot be used with wireless LAN)	_
						•

Notes (1) The data are measured at the following conditions.

The pipe length is 5m.

		_			
Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

(2) This air-conditioner is manufactured and tested in conformity with the ISO.(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.(4) Select the breaker size according to the own national standard.

				Model	SRK25	SZT-WA
Item				Indoor unit SRK25ZT-WA Outdoor unit SRC25ZT-WA		
Power sourc	e				1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz
	Nominal cooling	g capacity (range	e)	kW	2.5 (0.9 (Min.) - 3.3 (Max.))
	Nominal heating capacity (range)			kW	3.2 (0.9 (Min.) - 4.8 (Max.))
	Heating capacit	ty (H2)		kW	-	_
			Cooling		0.53 (0.1	7 - 0.85)
	Power consump	otion	Heating	kW	0.68 (0.1	9 - 1.40)
			Heating (H2)	, KVV	-	=
	Max power con	sumption			1.	54
	Running current	+	Cooling		2.9 / 2.7 / 2.6 (2	220/ 230/ 240V)
	Hulling Current	ı	Heating	A	3.5 / 3.3 / 3.2 (2	220/ 230/ 240V)
Operation	Inrush current, r	max current			3.5 / 3.3 / 3.2 (220/ 2	230/ 240V) Max. 9
data	Power factor		Cooling	%	8	4
	Fower lactor		Heating	70	8	9
	EER		Cooling		4.	72
	COP		Heating		4.	71
	COP		Heating (H2)]	-	- -
	Sound power le	w.ol	Cooling		50	58
	Souria power le	, vei	Heating		54	58
	Sound pressure	laval	Cooling	dB(A)	Hi: 36 Me: 28 Lo: 23 ULo: 19	46
	Sound pressure	e level	Heating		Hi: 39 Me: 30 Lo: 24 ULo: 19	45
	Silent mode sou	und pressure leve	el		_	Cooling: 42 / Heating: 43
Exterior dime	ensions (Height ×	Width × Depth)		mm	290 × 870 × 230	540 × 780 (+62) × 290
Exterior appe					Fine snow (Pure white)	Stucco white
` '	olor : Munsell, RA	AL)			(8.0Y 9.3 / 0.1), (9003)	(4.2Y 7.5 / 1.1), (7044)
Net weight			kg	9.5	34.5	
Compressor type & Quantity				_	RM-C5077SBE2 (Rotary type) × 1	
Compressor motor (Starting method)			kW	_	0.90 (Inverter driven)	
Refrigerant oil (Amount, type)			L	_	0.30 (DIAMOND FREEZE MB75)	
Refrigerant (Type, amount, pre-charge length)			kg	`	he amount for the piping of 15m)	
Heat exchanger				Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant control				· · · · · · · · · · · · · · · · · · ·	tronic expansion valve	
Fan type & Quantity				Tangential fan x 1	Propeller fan x 1	
Fan motor (Starting method)			W	42 × 1 (Direct drive)	24 × 1 (Direct drive)	
Air flow			Cooling	m³/min	Hi: 9.9 Me: 8.0 Lo: 5.9 ULo: 5.0	27.8
			Heating		Hi: 11.3 Me: 8.7 Lo: 6.7 ULo: 5.9	22.1
Available external static pressure			Pa	0	0	
Outside air ir					Not possible	_
	lity / Quantity				Polypropylene net (Washable) × 2	_
Shock & vibration absorber				Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heater				-	Defrost heater 230V 110W	
Operation Remote control			Wireless remote control			
control	Room temperat				Microcomputer thermostat	
	Operation display				RUN: Green, TIMER: Yellow Compressor overheat protection, Overcurrent protection,	
Safety equipments			Frost protection, Serial signal error prote	ction, Overcurrent protection, ection, Indoor fan motor error protection, ure control), Cooling overload protection		
	Refrigerant pipir			mm	Liquid line: φ 6.35 (1/4")	
	Connecting met				Flare connection	Flare connection
Installation	Attached length			m	Liquid line: 0.54 / Gas line: 0.47	_
data	Refrigerant line (one way) length				ides), independent	
			m		20	
	Vertical height diff. between O/U and I/U			m	,	/ Max.10 (Outdoor unit is lower)
Drain hose				Hose connectable (VP16) Hole size $\phi 20 \times 2$ pcs.		
Drain pump, max lift height			mm		_	
Recommended breaker size			Α		6	
L.R.A. (Locked rotor ampere)			Α	3.5 / 3.3 / 3.2 (2		
Interconnecting wires Size × Core number				, ,	ole) / Terminal block (Screw fixing type)	
IP number					IPX0	IPX4
	N connecting		,		Possible	_
Standard acc	cessories					, Photocatalytic washable deodorizing filter × 1)
Option parts					Interface kit (SC-BIKN2-E) (Cannot be used with wireless LAN)	_

Notes (1) The data are measured at the following conditions.

The pipe length is 5m.


			_			
ĺ	Item	Item Indoor air temperature Outdoor air temperature				Standards
	Operation	DB	WB	DB	WB	Staridards
	Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
	Heating	20°C	_	7°C	6°C	ISO5151-H1
	Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

⁽²⁾ This air-conditioner is manufactured and tested in conformity with the ISO.(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.(4) Select the breaker size according to the own national standard.

2. EXTERIOR DIMENSIONS

(1) Indoor units

Models SRK20ZT-WA, 25ZT-WA

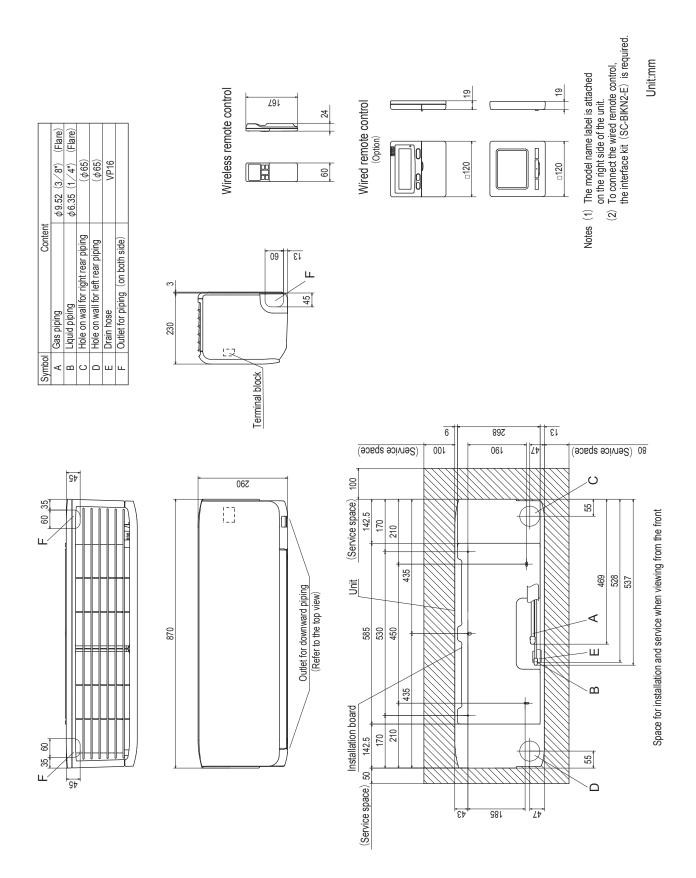

(2) Outdoor units Models SRC20ZT-WA,

SRC25ZT-WA

Notes

(1) The unit must not be surrounded by walls on the four sides.

(2) The unit must be fixed with anchor bolts. An anchor bolt must not protude more than 15mm.

(3) If the unit is installed in the location where there is a possibility of strong winds, place the unit such that the direction of air from the outlet gets perpendicular to the wind direction.


(4) Leave 200mm or more space above the unit.
(5) The wall height on the outlet side should be 1200mm or less.
(6) The model name label is attached on the right side of the unit.


(Service)	
Inlet	
liet C L2	
mminiminininininininininininininininini	777

Installation space					
1 2 2 4	Installation space	280 or more	100 or more	80 or more	250 or more
		11	L2	F3	L4

 ϕ 16 × 9 places M10-12 × 4 places φ9.52(3/8") (Flare) φ6.35(1/4") (Flare ϕ 20 × 2 places Service valve connection (liquid side) Content Service valve connection (gas side) Pipe/cable draw-out hole Drain discharge hole Anchor bolt hole Drain discharge hole

ш 占

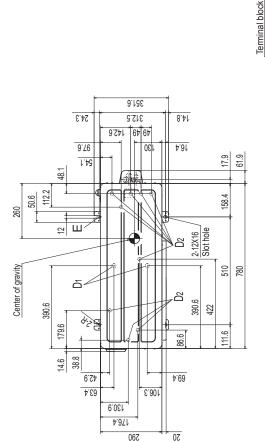

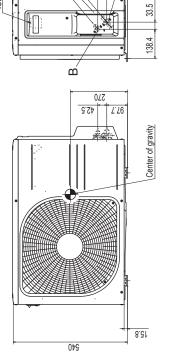


Space for installation and service when viewing from the front


RCV000Z042

(3) Remote control

(a) Wireless remote control

  Unit:mm






(b) Wired remote control (Option parts)

Interface kit (SC-BIKN2-E) is required to use the wired remote control.


Model RC-EX3A

Dimensions (Viewed from front)

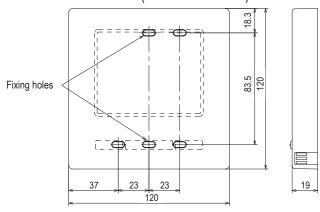

Unit:mm

Installation space

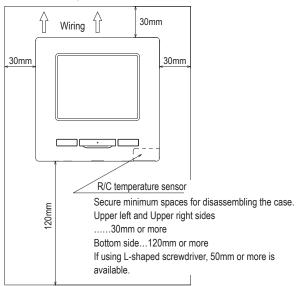

• Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
 - · Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - · Where the surface is not flat
 - · Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - · Place with high humidity where condensation occurs on the remote control
 - · Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - · Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large
- (4) When you are using the automatic grille up and down panel in the IU, you may not be able to confirm the up and down motion.
 - · Where the IU cannot be visually confirmed

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.


The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

R/C cable:0.3mm² × 2 cores

When the cable length is longer than 100 m, the max size for wires used in the R/C case is $0.5~\text{mm}^2$. Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≦ 200 m	0.5 mm ² × 2 cores
≤ 300m	0.75 mm ² × 2 cores
≤ 400m	1.25 mm ² × 2 cores
≤ 600m	2.0 mm ² × 2 cores

Adapted RoHS directive

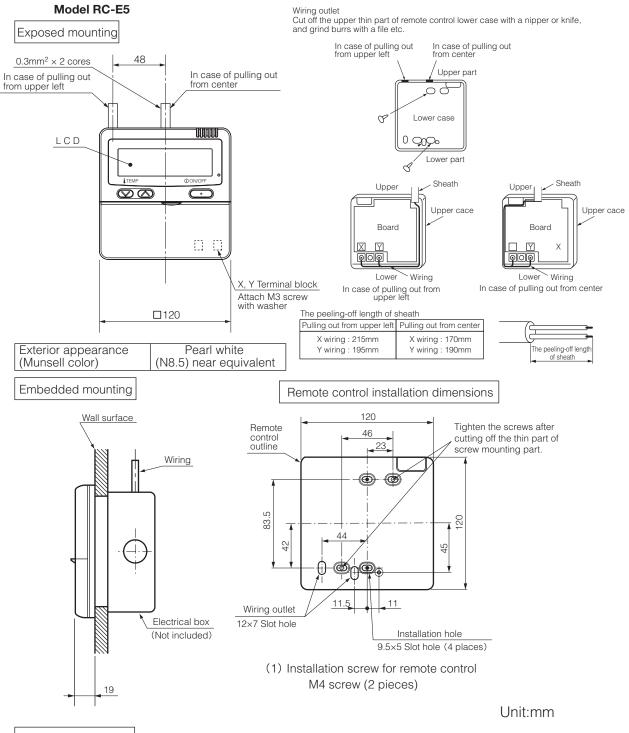

Wiring specifications

(1) If the prolongation is over 100m, change to the size below.

But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.


Length	Wiring thickness
100 to 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores

PJZ000Z295


3. ELECTRICAL WIRING

(1) Indoor units

Models SRK20ZT-WA, 25ZT-WA

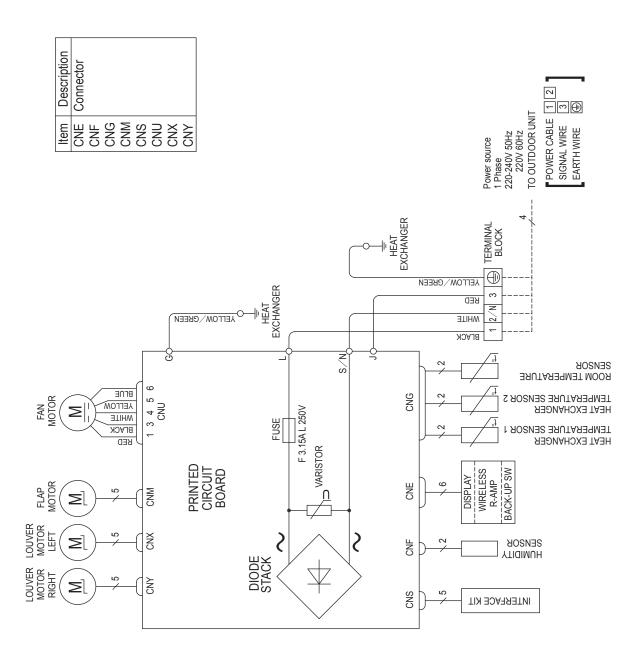

(2) Outdoor units Models SRC20ZT-WA, 25ZT-WA

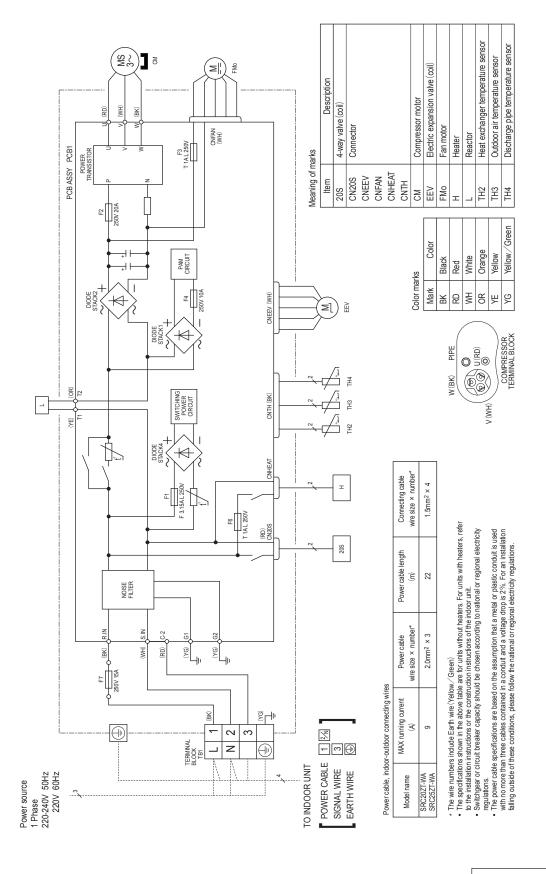

4. NOISE LEVEL


(1) Sound power level Model SRK20ZT-WA

(Indoor unit)

Model SRK20ZT-WA


Noise Cooling 48 dB(A)
level Heating 50 dB(A)

Condition		IS05151	T1/H1	
MODE	Rated	capacity	value	(Hi)

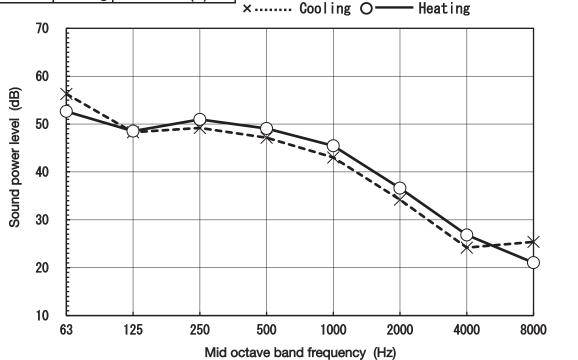

(Outdoor unit)


(5415455) 4111-57					
Model	S	RC20ZT-WA			
Noise	Cooling	57 dB(A)			
Lovel	Heating	E0 4D(A)			

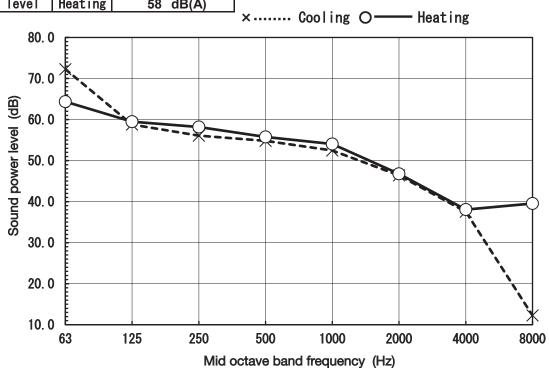

Model SRK25ZT-WA


(Indoor	unit)	
Model	S	RK25ZT-WA
Noise	Cooling	50 dB(A)
level	Heating	54 dB(A)


Condition	IS05151 T1/H1
MODE	Rated capacity value

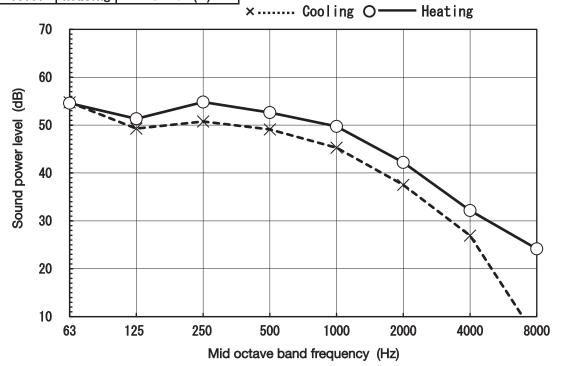

(Outdoor unit)

(00000	4111 07								
Model	SRC25ZT-WA								
Noise	Cooling	58 dB(A)							
level	Heating	58 dB(A)							

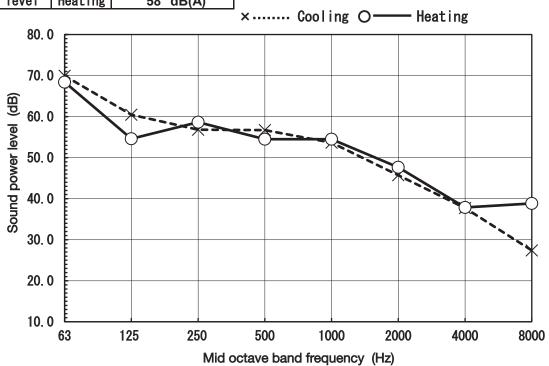


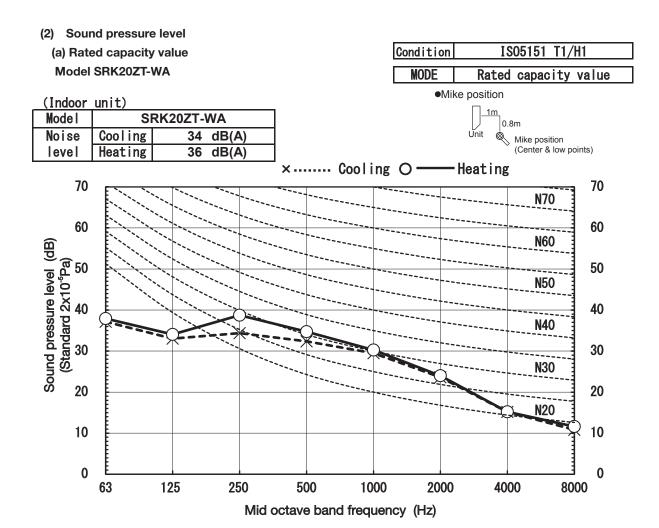


(Outdoor unit)

Model	SI	RC20ZT-WA
Noise	Cooling	45 dB(A)
level	Heating	45 dB(A)

 Mike position: at highest noise level in position as mentioned below Distance from front side 1m

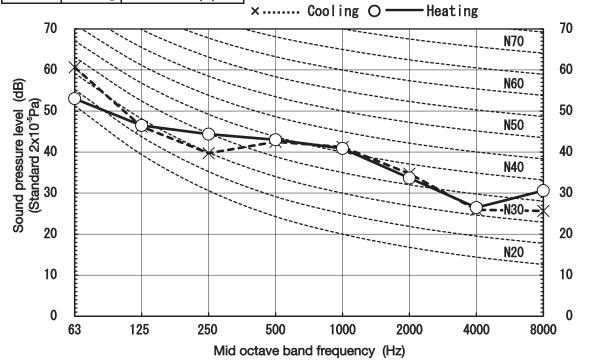


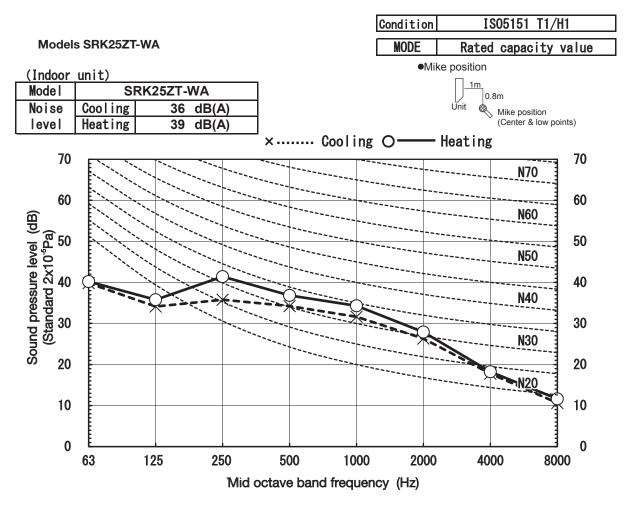



(Outdoor unit)


Model	SI	RC25ZT-WA
Noise	Cooling	46 dB(A)
level	Heating	45 dB(A)


 Mike position: at highest noise level in position as mentioned below Distance from front side 1m

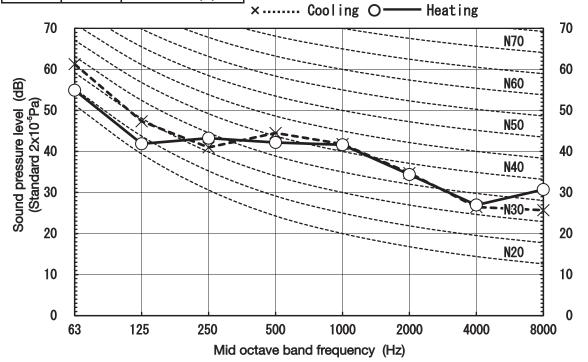

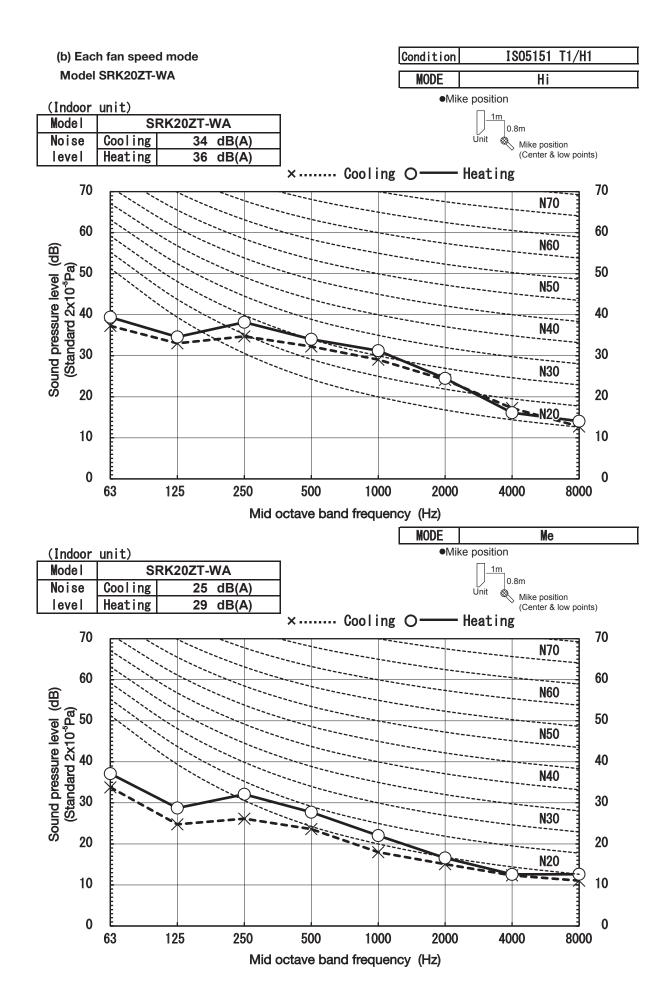

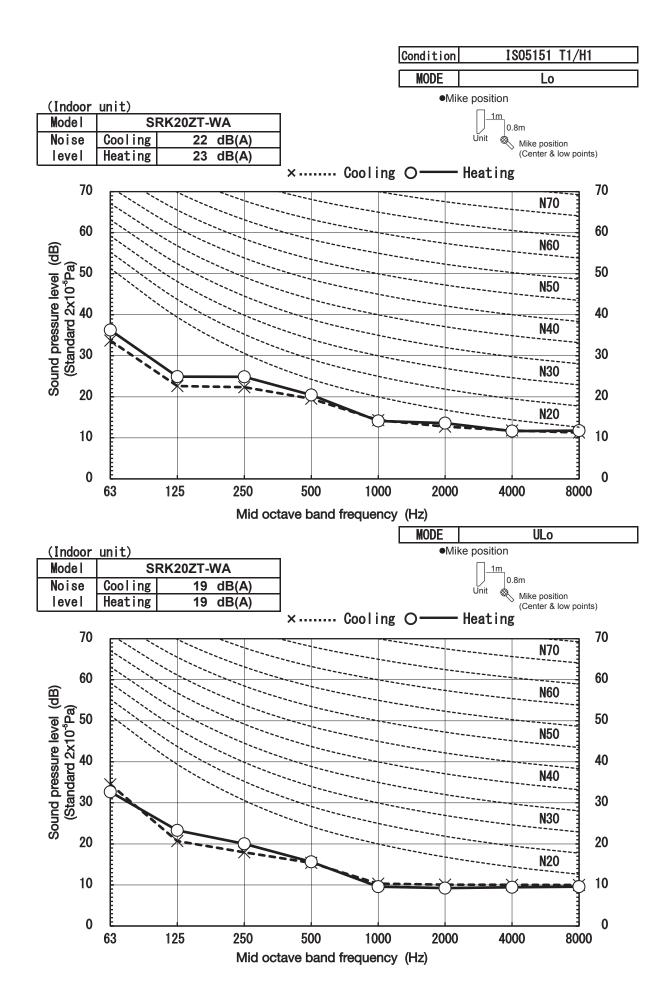

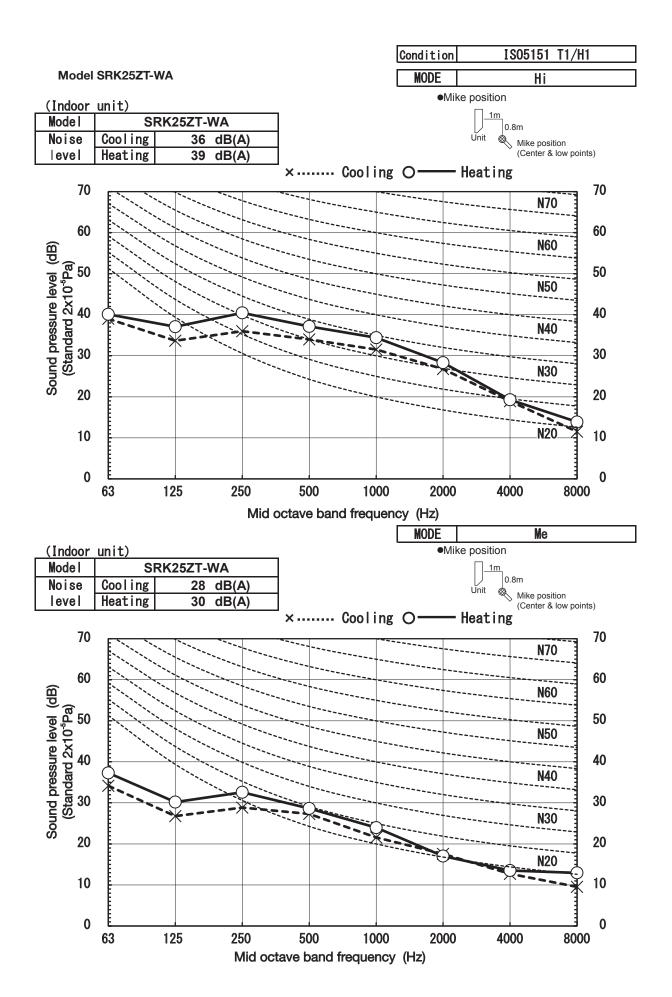

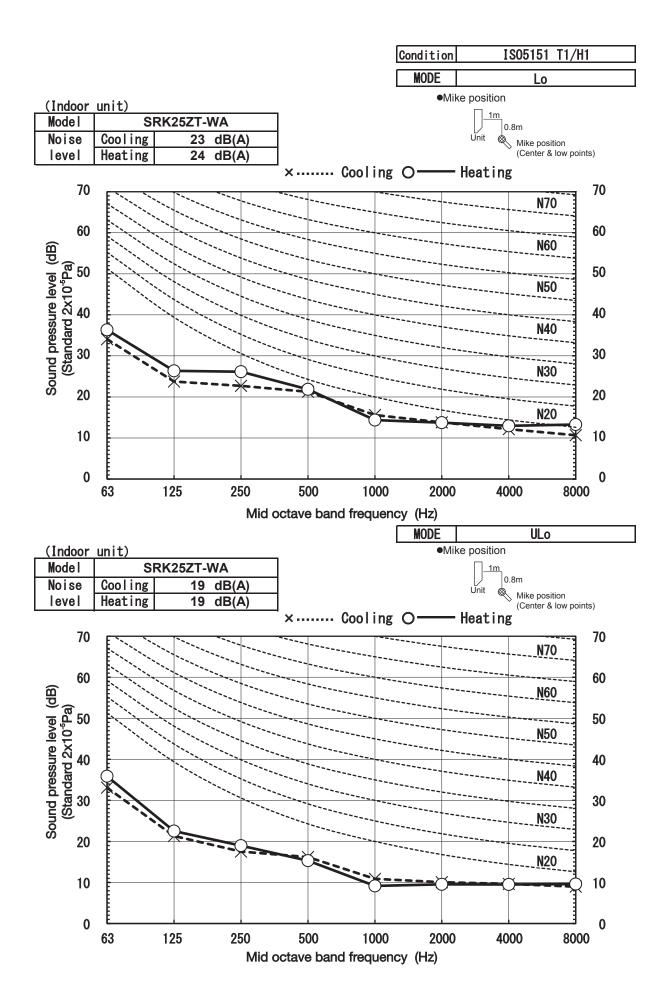

Condition ISO5151 T1/H1

Silent

(Outdoor unit)

Model	SRC20ZT-WA									
Noise	Cooling	42 dB(A)								
level	Heating	43 dB(A)								

Mike position: at highest noise level in position as mentioned below Distance from front side 1m

MODE

Tever Heating +5 db(A)	
× Cooling O Heating	
70	 70
N7	70
[<u>. </u>
60	60
60 Fig. 12-1 N60	0 🚦
B	
_ \$\infty\$ 50	50
N5	
<u> </u>	
2 Š 40	40
75 77	
SS En N4	0 🚦
9 D	·i
D is 30	30
N3	0 🗓
Ø 20	
N2	<u> </u>
10	10
] '`
	1
	1 0
0 - 105 050 500 1000 0000 1000	0
63 125 250 500 1000 2000 4000	8000
Mid active band frequency (Uz)	
Mid octave band frequency (Hz)	

(Outdoor unit)


Model	SI	RC25ZT-WA
Noise	Cooling	42 dB(A)
level	Heating	43 dB(A)

Mike position: at highest noise level in position as mentioned below Distance from front side 1m

MODE Silent ×····· Cooling O Heating 70 70 N70 60 60 Sound pressure level (dB) N60 (Standard 2x10⁻⁵Pa) 8 6 6 50 N50 40 **N40** 30 N30. 20 20 N20 10 10 0 0 63 125 250 500 1000 2000 4000 8000 Mid octave band frequency (Hz)

5. PIPING SYSTEM

Models SRK20ZT-WA, SRK25ZT-WA

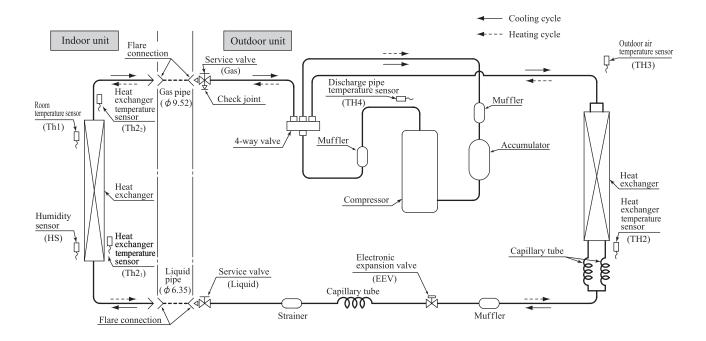

6. RANGE OF USAGE & LIMITAIONS


Item	SRK20ZT-WA, SRK25ZT-WA
Indoor return air temperature (Upper, lower limits)	Cooling operation : Approximately 18 to 32℃ DB Heating operation : Approximately 10 to 30℃ DB (Refer to the selection chart.)
Outdoor air temperature (Upper, lower limits)	Cooling operation : Approximately -15 to 46°C DB Heating operation : Approximately -15 to 24°C DB (Refer to the selection chart.)
Refrigerant line (one way) length	3 - 20m
Vertical height difference between outdoor unit and indoor unit	Max. 10m (Outdoor unit is higher.) Max. 10m (Outdoor unit is lower.)
Power source voltage	Rating ±10%
Voltage at starting	Min. 85% of rating
Frequency of ON-OFF cycle	Max. 4 times/h (Inching prevention 10 minutes)
ON and OFF interval	Min. 3 minutes

Selection chart

Correct the cooling and heating capacity in accordance with the conditions as follows. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown on specification × Correction factors as follows

(1) Coefficient of cooling and heating capacity in relation to temperature

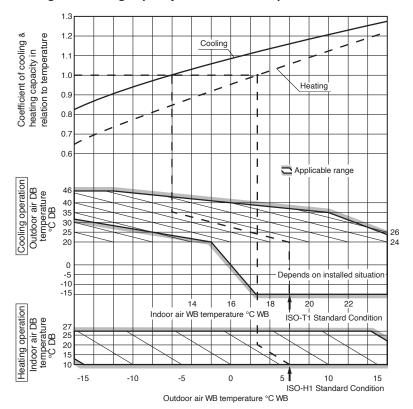

(2) Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way piping length between the indoor and outdoor units.

Piping length [m]	7	10	15	20		
Cooling	1.0	0.99	0.975	0.965		
Heating	1.0	1.0	1.0	1.0		


(3) Correction relative to frosting on outdoor heat exchanger during heating

In additions to the foregoing corrections (1), (2) the heating capacity needs to be adjusted also with respect to the frosting on the outdoor heat exchanger.

Air inlet temperature of outdoor unit in °CWB	-15	-10	-9	-7	-5	-3	-1	1	3	5 or more
Adjustment coefficient	0.95	0.95	0.94	0.93	0.91	0.88	0.86	0.87	0.92	1.00

How to obtain the cooling and heating capacity

 Example : The net cooling capacity of the model SRK25ZT-WA with the piping length of 15m, indoor wet-bulb temperature at 19.0°C and outdoor dry-bulb temperature 35°C is



7. CAPACITY TABLES

Model SRK20ZT-WA / SRC20ZT-WA

Cooling mode (kW)

	Outdoor						Inde	oor air te	empera	ture					
Air flow	air	14	°CWB	16	°CWB	18	°CWB	19	°CWB	20	°CWB	22	°CWB	24	°CWB
All HOW	temperature	21	°CDB	23	°CDB	26	°CDB	27	°CDB	28	°CDB	31	°CDB	33	°CDB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	2.25	2.02	2.36	1.98	2.45	2.09	2.49	2.06	2.53	2.03	2.60	2.13	2.67	2.08
	12	2.21	1.99	2.32	1.96	2.41	2.07	2.45	2.05	2.50	2.02	2.58	2.12	2.65	2.07
	14	2.17	1.97	2.28	1.94	2.38	2.05	2.42	2.03	2.47	2.01	2.55	2.11	2.62	2.07
	16	2.13	1.96	2.24	1.93	2.34	2.04	2.39	2.02	2.43	2.00	2.52	2.10	2.59	2.06
	18	2.08	1.94	2.19	1.91	2.30	2.03	2.35	2.01	2.40	1.99	2.49	2.09	2.56	2.05
	20	2.04	1.92	2.15	1.89	2.26	2.01	2.31	2.00	2.36	1.98	2.45	2.08	2.53	2.04
Hi	22	1.99	1.89	2.10	1.88	2.22	2.00	2.28	1.98	2.32	1.97	2.42	2.07	2.50	2.03
9.3	24	1.94	1.85	2.05	1.85	2.18	1.98	2.24	1.97	2.28	1.95	2.38	2.06	2.47	2.02
(m ³ /min)	26	1.90	1.80	2.01	1.83	2.14	1.96	2.20	1.95	2.24	1.94	2.35	2.05	2.43	2.01
	28	1.85	1.75	1.96	1.82	2.09	1.95	2.15	1.94	2.20	1.92	2.31	2.04	2.40	2.00
	30	1.79	1.70	1.90	1.79	2.05	1.93	2.11	1.92	2.16	1.91	2.27	2.03	2.36	1.99
	32	1.74	1.65	1.85	1.76	2.00	1.90	2.07	1.90	2.12	1.89	2.23	2.01	2.32	1.97
	34	1.69	1.60	1.80	1.71	1.95	1.85	2.02	1.89	2.07	1.88	2.19	2.00	2.28	1.96
	35	1.66	1.58	1.77	1.68	1.93	1.83	2.00	1.88	2.05	1.87	2.17	1.99	2.26	1.96
	36	1.63	1.55	1.74	1.65	1.90	1.81	1.98	1.87	2.02	1.86	2.15	1.98	2.24	1.95
	38	1.58	1.50	1.68	1.60	1.85	1.76	1.93	1.83	1.98	1.84	2.11	1.97	2.20	1.94
	40	1.52	1.44	1.63	1.55	1.80	1.71	1.88	1.79	1.93	1.82	2.06	1.95	2.16	1.92
	43	1.43	1.36	1.54	1.46	1.72	1.64	1.81	1.72	1.85	1.76	1.99	1.89	2.09	1.91
	46	1.34	1.27	1.44	1.37	1.64	1.56	1.73	1.64	1.77	1.69	1.92	1.83	2.02	1.88

Heating mode (HC) (kW						(kW)	
Air flow	Outdoor air temperature		Indoor air temperature				
	CWB	16°C DB	18°C DB	20°C DB	22°C DB	24°C DB	
	-15	1.66	1.63	1.59	1.55	1.52	
]	-10	1.88	1.85	1.82	1.78	1.74	
	-5	2.04	2.01	1.97	1.94	1.91	
Hi	0	2.13	2.10	2.07	2.04	2.01	
10.0	5	2.72	2.69	2.67	2.62	2.58	
(m ³ /min)	6	2.76	2.73	2.70	2.67	2.63	
]	10	2.94	2.91	2.89	2.85	2.82	
]	15	3.20	3.17	3.14	3.11	3.08	
	20	3.43	3.41	3.39	3.35	3.32	

Model SRK25ZT-WA / SRC25ZT-WA

Cooling mode

(kW)

Heating mode (HC)

(kW)

	Outdoor						Indo	oor air t	emperat	ture					
Air flow	air	14	°CWB	16	°CWB	18	°CWB	19	°CWB	20	°CWB	22	°CWB	24	°CWB
All HOW	temperature	21	°CDB	23	°CDB	26	°CDB	27	°CDB	28	°CDB	31	°CDB	33	°CDB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	2.82	2.42	2.95	2.39	3.06	2.50	3.11	2.47	3.16	2.44	3.26	2.54	3.34	2.47
	12	2.77	2.40	2.90	2.36	3.01	2.48	3.07	2.45	3.12	2.42	3.22	2.53	3.31	2.46
	14	2.71	2.37	2.85	2.34	2.97	2.46	3.03	2.44	3.08	2.41	3.18	2.51	3.28	2.45
	16	2.66	2.35	2.80	2.31	2.92	2.44	2.98	2.42	3.04	2.39	3.15	2.50	3.24	2.44
	18	2.60	2.31	2.74	2.28	2.88	2.42	2.94	2.40	2.99	2.38	3.11	2.49	3.20	2.43
	20	2.55	2.29	2.68	2.26	2.83	2.40	2.89	2.38	2.95	2.36	3.07	2.47	3.17	2.42
Hi	22	2.49	2.26	2.63	2.24	2.78	2.38	2.84	2.36	2.90	2.34	3.02	2.46	3.13	2.41
9.9	24	2.43	2.24	2.57	2.21	2.72	2.36	2.80	2.34	2.85	2.32	2.98	2.44	3.08	2.38
(m ³ /min)	26	2.37	2.21	2.51	2.19	2.67	2.34	2.74	2.33	2.80	2.31	2.93	2.43	3.04	2.36
ľ .	28	2.31	2.18	2.44	2.16	2.61	2.32	2.69	2.30	2.75	2.28	2.89	2.40	3.00	2.35
	30	2.24	2.13	2.38	2.13	2.56	2.29	2.64	2.28	2.70	2.27	2.84	2.38	2.95	2.34
	32	2.18	2.07	2.31	2.11	2.50	2.27	2.58	2.27	2.64	2.25	2.79	2.37	2.90	2.32
	34	2.11	2.00	2.25	2.08	2.44	2.25	2.53	2.24	2.59	2.22	2.74	2.35	2.85	2.31
	35	2.08	1.97	2.21	2.07	2.41	2.24	2.50	2.23	2.56	2.21	2.71	2.35	2.83	2.30
	36	2.04	1.94	2.18	2.05	2.38	2.22	2.47	2.22	2.53	2.20	2.69	2.34	2.80	2.30
	38	1.97	1.87	2.11	2.00	2.32	2.20	2.41	2.20	2.47	2.18	2.63	2.32	2.75	2.28
	40	1.90	1.81	2.03	1.93	2.25	2.14	2.35	2.18	2.41	2.16	2.58	2.30	2.70	2.27
	43	1.79	1.70	1.92	1.83	2.15	2.04	2.26	2.14	2.32	2.13	2.49	2.28	2.61	2.24
	46	1.68	1.59	1.81	1.72	2.05	1.95	2.16	2.05	2.22	2.09	2.40	2.25	2.53	2.22

riedling mode (110)						(KVV)
Air flow	Outdoor air temperature		Indoor	air tempe	rature	
	CWB	16°C DB	18°C DB	20°C DB	22°C DB	24°C DB
	-15	1.97	1.93	1.88	1.84	1.80
	-10	2.23	2.19	2.16	2.10	2.06
	-5	2.41	2.38	2.33	2.30	2.27
Hi	0	2.53	2.49	2.45	2.42	2.38
11.3	5	3.22	3.19	3.17	3.10	3.06
(m ³ /min)	6	3.27	3.24	3.20	3.16	3.12
	10	3.48	3.45	3.42	3.38	3.34
	15	3.79	3.75	3.73	3.69	3.65
	20	4.07	4.04	4.02	3.97	3.94

Notes(1) These data show average statuses.

s(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously. These data show the case where the operation frequency of a compressor is fixed.

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :5m

Level difference of Zero.

(3) Symbols are as follows.

TC: 'Total cooling capacity (kW)

SHC: Sensible heat capacity (kW)

HC: Heating capacity (kW)

8. APPLICATION DATA

(1) Installation of indoor unit

RLF012A114

Model SRK20,25ZT-WA **R32 REFRIGERANT USED**

• This installation manual deals with an indoor unit installation only. For an outdoor unit installation, refer to page29

SAFETY PRECAUTIONS

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installa-
- before installation, read the SAPETY PRECATIONS carefully and strictly follow it during the installation in order to protect yourself.

 The precautionary items mentioned below are distinguished into two levels, WARNING and CAUTION.

 The precautionary items mentioned below are distinguished into two levels, WARNING and CAUTION.

 Sequences such as death or sewere injury.

 CAUTION.

 Indicates a potentially hazardous situation which, if not avoided, can result in personal inlocations of this equipment to the user of the dealer.

 Be sure to explain the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

 Be sure to explain the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

 Be sure to explain the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

 Be sure to explain the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

 Be sure to explain the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

 Be sure to explain the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

 Be sure to explain the operating methods as well as the maintenance methods of this equipment and the completion in the equipment and the c The precautionary terms mentioned below are distinguished into two levels (22 WARNING) and (23 CAUTION).

 WARNING Indicates a potentially hazardous situation which, if not avoided, can result in serious consequences such as death or severe injury.

 ACAUTION Indicates a potentially hazardous situation which, if not avoided, can result in personal injury or property damage.

 Both mention the important items to protect your health and safety. Therefore, strictly follow them by any means.

⚠ WARNING

- Be sure to use only for residential purpose.
- If this unit is installed in inferior environment such as machine shop, vehicle (like ship), warehouse, etc., it can malfunction.
- Installation must be carried out by the qualified installer completely in accordance with the installation manual.

- dance with the installation manual.
 Installation by an unqualified person or incorrect installation can cause serious troubles such as water leak, electric shock, fire and personal injury.
 Be sure to wear protective goggles and gloves while performing installation work. Improper safety measures can result in personal injury.
 Use the original accessories and the specified components for the installation. Using parts other than those prescribed may cause water leak, electric shock, fire and personal injury.
 Do not install the unit near the location where leakage of flammable gases can occur.
 I leaked gases accumulate around the unit if one gase fire resultion in property damage and responal injury.
- If leaked gases accumulate around the unit, it can cause fire resulting in property damage and personal injury.

 When installing the unit in small rooms, make sure that refrigerant density does not exceed the limit (Reference: ISO5149) in the event of leakage. If refrigerant density exceeds the limit, consult the dealer and install the ventilation system. Otherwise lack of oxygen can occur resulting in serious accident.
- Otherwise lack of oxygen can occur resulting in serious accident.

 Install the unit in a location where unit will remain stable, horizontal and free of any vibration transmission.

 Unsuitable installation location can cause the unit to fall resulting in material damage and personal injury.

 Do not run the unit with removed panels or protections.

 Touching rotating equipment, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shock.

 This unit is designed specifically for R32.

 Using any other refrigerant can cause unit failure and personal injury.

 Do not vent R32 into atmosphere.

 R32 is a fluorinated greenhouse gas with a Global Warming Potential (GWP) = 675.

 Make sure that no air enters the refrigerant circuit when the unit is installed and removed.

- and removed.
- If air enters the refrigerant circuit, the pressure in the refrigerant circuit will become too high, which
- Be sure to use the prescribed pipes, flare nuts and tools for R32 or R410A.

 Using existing parts (for R22 or R407C) can cause refrigerant circuit burst resulting in unit failure and personal injury
- Be sure to connect both liquid and gas connecting pipes properly before operating the compressor.

 Do not open the liquid and gas service valves before completing piping work,
- and evacuation.
- and evacuation.

 If the compressor is operated when connecting pipes are not connected and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure resulting in burst or personal injury.

 Be sure to tighten the flare nuts to specified torque using the torque wrench.

 Tightening flare nuts with excess torque can cause burst and refrigerant leakage after a long period.

- During pump down work, be sure to stop the compressor before closing service valves and removing connecting pipes.
 If the connecting pipes are removed when the compressor is in operation and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure result-ing in burst or present juinty. ing in burst or personal injury.

- Ing in burst or personal injury.

 In the event of refrigerant leakage during installation, be sure to ventilate the working area properly.

 If the refrigerant comes into contact with naked flames, poisonous gases will be produced.

 Electrical work must be carried out by the qualified electrician, strictly in accordance with national or regional electricity regulations.

 Incorrect installation can cause electric shock, fire or personal injury.
- Make sure that earth leakage breaker and circuit breaker of appropriate ca-

- Make sure that earth leakage breaker and circuit breaker of appropriate capacities are installed.

 Circuit breaker should be able to disconnect all poles under over current. Absence of appropriate breakers can cause electric shock, personal injury or property damage.

 Be sure to switch off the power source in the event of installation, maintenance or service. If the power source is not switched off, there is a risk of electric shock, unit failure or personal injury.

 Be sure to tighten the cables securely in terminal block and relieve the cables properly to prevent overloading the terminal blocks.

 Loose connections or cable mountings can cause anomalous heat production or fire.

 Do not process, splice or modify the power cable, or share the socket with other power plugs.
- Do not process, splice or modify the power cable, or share the socket with other power plugs.

 Improper power cable or power plug can cause fire or electric shock due to poor connection, insufficient insulation or over-current.

 Do not perform any change in protective device or its setup condition yourself. Changing protective device specifications can cause electric shock, fire or burst.

 Be sure to clamp the cables properly so that they do not touch any internal component of the unit.

 If cables touch any internal component, it can cause overheating and fire.

 Be sure to install service cover properly.

 Improper installation can cause electric shock or fire due to intrusion of dust or water.

 Be sure to use the prescribed power and connecting cables for electrical work.

- Be sure to use the prescribed power and connecting cables for electrical work. Using improper cables can cause electric leak or fire. This appliance must be connected to main power source by means of a circuit breaker or switch with a contact separation of at least 3mm.

- Improper electrical work can cause unit failure or personal injury.

 Be sure to connect the power source cable with power source properly.

 Improper connection can cause intrusion of dust or water resulting in electric shock or fire.

 Do not turn ON the wireless LAN communication near automatic control equipment such as an automatic door or fire-alarm device.
- the properties of the communication of equipment.

 Do not turn ON the wireless LAN communication in a hospital, etc. where the use of wireless devices is prohibited. It may cause malfunction of medical equipment due to a wireless device.

 Do not turn ON the wireless LAN communication near a person with a cardiac pacemaker or implanted defibrillator.

 - It may cause malfunction of a medical device.

↑ CAUTION

- Take care when carrying the unit by hand.
 If the unit weight is more than 20 kg, it must be carried by two or more persons.
 Do not carry the unit by the plastic straps. Always use the carry handle.
 Do not install the outdoor unit in a location where insects and small animals can inhabit. Insects and small animals can enter the electrical parts and cause damage resulting in fire or personal injury. Instruct the user to keep the surroundings clean.
 If the outdoor unit is installed at height, make sure that there is enough space for installation, maintenance and service.

- If the outdoor unit is installed at height, make sure that there is enough space for installation, maintenance and service.

 Insufficient space can result in personal injury due to falling from the height.

 Do not install the unit near the location where neighbours are bothered by noise or air generating from the unit.

 It can affect surrounding environment and cause a claim.

 Do not install in the locations where unit is directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty atmosphere. It can cause corrosin of heat exchanger and damage to plastic parts.

 Do not install the unit close to the equipment that generates electromagnetic waves and/or high-harmonic waves.

 Equipment such as inverters, standby generators, medical high frequency equipment and telecommunication equipment can affect the system, and cause malfunctions and breakdowns.

 The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.

- function or cause jamming.

 Do not turn ON the wireless LAN communication near another wireless device, microwave, cordless phone, fax machine, etc. It may cause malfunction of wireless device.

- Do not install the unit in the locations where:

 - There are heat sources nearby.

 There is any obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.

 - There is any obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.
 Unit is directly exposed to oil mist and steam such as kitchen.
 Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will generate or accumulate.
 Drain water cannot be discharged properly.
 TV set or radio receiver is placed within 1 m.
 Height above sea level is more than 1000 m.
 It can cause performance degradation, corrosion and damage of components, unit malfunction and fire.
 Dispose of all packing materials properly.

 Packing materials contain nails and wood which can cause personal injury.
 Keep the polybag away from children to avoid the risk of suffocation.
 Do not out anything on the outdoor unit.

- Keep the polybag away from children to avoid the risk of suffocation.

 Do not put anything on the outdoor unit.

 Object may fall causing property damage or personal injury.

 Do not touch the aluminum fin of the outdoor unit.

 Aluminium fin temperature is high during heating operation. Touching fin can cause burn.

 Do not touch any refrigerant pipe with your hands when the system is in operation.

 During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition. Touching pipes can cause personal injury like burn (hot/cold).

 Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.
- dance with the local codes and regulations.
 The isolator should be locked in OFF state in accordance with EN60204-1.

1. ACCESSORIES AND TOOLS

Standard accessories (supplied with indoor unit)							
1)	Installation board		1 pc.	(6)	Batteries [R03 (AAA, Micro) 1.5 V]	OBS	2 pcs.
2)	Remote control		1 pc.	(7)	Air-cleaning filters		2 pcs.
3)	Remote control holder		1 pc.	(8)	Filter holders		2 pcs.
4)	Tapping screws (for installation board φ4 × 25mm)	O	5 pcs.	(9)	Insulation (#486 50 X 100 t3)		1 pc.
5)	Wood screws (for remote control holder φ3.5 × 16mm)	8000	2 pcs.				
	3)	1) Installation board 2) Remote control 3) Remote control holder 4) Tapping screws (for installation board ϕ 4 × 25mm)	1) Installation board 2) Remote control 3) Remote control holder 4) Tapping screws (for installation board \$\phi 4 \times 25mm)\$	1) Installation board 1 pc. 2) Remote control 1 pc. 3) Remote control holder 1 pc. 4) Tapping screws (for installation board \$\phi 4 \times 25mm)\$ \$\phi = 5\$ pcs.	1) Installation board 2) Remote control 3) Remote control holder 4) Tapping screws (for installation board ϕ 4 × 25mm) 6 5 pcs. (9)	1) Installation board	1) Installation board 1 pc. (6) Batteries [R03 (AAA, Micro) 1.5 V] 2) Remote control 1 pc. (7) Air-cleaning filters 3) Remote control holder 1 pc. (8) Filter holders 4) Tapping screws (6or installation board \$\phi.4 \times 25mm) \$\overline{\phi}\$ 5 pcs. (9) Insulation (#486 50 X 100 13)

		Locally procured parts
	(a)	Sleeve (1 pc.)
	(b)	Sealing plate (1 pc.)
	(c)	Inclination plate (1 pc.)
	(d)	Putty
	(e)	Connecting cable
	(f)	Drain hose (extension hose)
	(g)	Piping cover (for insulation of connection piping)
	(h)	Clamp and screw (for finishing work)
	(i)	Electrical tape

Tools for installation Work				
Phillips headed driver	Pipe cutter			
Knife	Hole core drill (65mm in diameter)			
Saw	Wrench key (Hexagon) [4mm]			
Tape measure	Flaring tool set*			
Torque wrench	Gas leak detector*			
(14.0-62.0N·m (1.4-6.2kgf·m))	Pipe bender			
Plier	Flare adjustment gauge			

* Designed specifically for R32 or R410A

2. SELECTING INSTALLATION LOCATION

After getting customer's approval, select installation location according to following guidelines

1. Indoor unit

- · Where there is no obstruction to the air flow and where the cooled and heated air can be evenly
- A solid place where the unit or the wall will not vibrate.

 A place where there will be enough space for servicing. (Where space mentioned on the right side can be secured.)
- can be secured.)
 Where it is easy to conduct wiring and piping work.
- A place where unit is not directly exposed to sunlight or street light.
- A place where it can be easily drained.
- A place separated at least 1 m away from the television or the radio. (To prevent interference to images and sounds.)

- ages and sounds.


 A place where this unit is not affected by the high frequency equipment or electric equipment.

 Avoid installing this unit in place where there is much oil mist.

 A place where there is no electric equipment or household.


 Install the indoor unit on the wall where the height from the floor to the bottom of the unit is more than
- A place where the radio waves can reach when using the wireless LAN communication.

- A place where the air-conditioner can receive the signal surely during operating the remote control.
 A place where it is not affected by the TV, radio etc.
 Do not place where it is exposed to direct sunlight or near heat devices such as a stove.

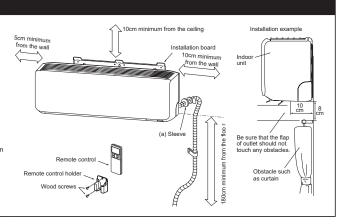


3. INSTALLING INSTALLATION BOARD

 
- Installation board should be installed on the wall which can support the weight of the indoor unit.
 Adjustment of the installation board in the horizontal direction is to be conducted with five screws in a temporary lightened state.
 With the standard hole as a center, adjust the board and level it.

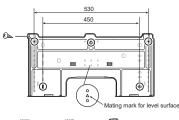







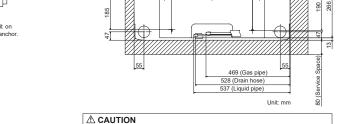

Improper adjustment of the installation board can cause water leakage

 
142.5

4. DRILLING HOLE AND FIXTURE OF SLEEVE

When drilling the wall that contains a metal lath, wire lath or metal plate, be sure to use sealing plate, sleeve and inclination plate (Locally procured parts).



(1) Drill a hole with hole




thickness. In case of rear piping draw out, cut off the lower and the right side

portions of the sleeve collar



 (3) Fix sealing plate, sleeve and inclination plate.





(4) After piping work, seal the hole in the wall with putty.

⚠ WARNING

Completely seal the hole in the wall with putty.

If not sealed properly, dust, insects, small animals, and highly humid air may enter the room from outside, which could result in fire or other hazards.

Unit (Service Space)

435

142.5 170

(Service Space)

100

⚠ CAUTION

Completely seal the hole in the wall with putty. If not sealed properly, furniture and other fixtures may be damaged by water leakage or condensation.

5. ELECTRICAL WIRING WORK

- Before installation, make sure that the power source complies with the air-conditioner's power speci-
- Carry out electrical wiring work according to following guidelines.

1. Preparing cable

- (1) Selecting cable
 Select the connecting cable in accordance with the specifications mentioned below.
 4 cores* 1.5mm² conformed with 60245 IEC57
 * 1 Earth wire is included (Yellow/Green).
- (2) Arrange each wire length as shown below.

 Make sure that each wire is stripped 10mm from the end.



(3) Attach round crimp-type terminal to each wire as shown in the below. Select the size of round crimp-type terminal after considering the specifications of terminal block and wire diameter




2. Connecting cable

- (1) Open the air inlet panel.
 (2) Remove the lid.
 (3) Remove the cable clamp.
 (4) Connect the connecting wires to the terminal block.
 (5) Fix the connecting cable by cable clamp.
 (6) Fix the lid.
 (7) Close the air inlet panel.

NOTE

Take care not to confuse the terminal numbers for indoor and outdoor connections.

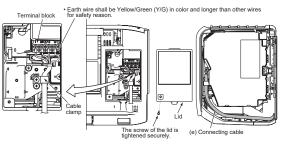

⚠ WARNING

Incorrect wiring connection can cause malfunction or fire

6. FORMING PIPING AND DRAIN HOSE 1. Forming piping Piping Forming of piping. • Hold the bottom of the Taping of the exterior Piping is possible in the right, rear, downward, left, left rear or left downward direction. Tape only the portion that goes through the wall. Always tape the wiring with the piping. piping and fix direction before stretching it and NOTE Sufficient care must be taken not to damage the panels when connecting pipes. Cut out the panel smoothly along the line in case of side or bottom piping. 2. Drain change procedures (1) Remove the screw and drain hose. (2) Remove the drain cap by hand or pliers. (3) Insert the drain cap which was removed at procedure (2) securely using a hexagonal wrench etc. (4) Install the drain hose and screw securely (2) (1) (4) Left hand side piping Right hand side piping Piping in the left rear direction Piping in the right rear direction



Piping in the left direction

- Arrange the drain hose in a downward angle
- Avoid the following drain piping









the gutter 111

The drain ho

Piping in the right direction

Pour water to the drain pan located under the heat exchanger, and ensure that the water is discharged outdoor.
 When extended drain hose is present inside the room, insulate it securely with heat insulator available in the market.

Incorrect installation of drain hose and cap can cause water leakage


Since this air-conditioner is designed to collect dew drops on the rear surface to the drain pan, do not install the connecting wire above the gutter.



Incorrect drainage work can cause water leakage

⚠ CAUTION



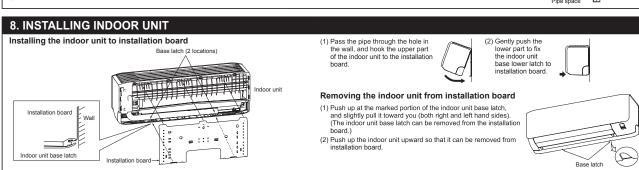

9. CONNECTING PIPING WORK

1. Preparation of connecting pipe

1.1 Selecting connecting pipeSelect connecting pipe according to the following table.

	Model SRK20/25
Gas pipe	φ9.52
Liquid pipe	φ6.35

- Pipe wall thickness must be greater than or equal to 0.8mm.
 Pipe material must be O-type (Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30).

1.2 Cutting connecting pipe

- (1) Cut the connecting pipe to the required length with pipe cutter.
 (2) Hold the pipe downward and remove the burrs. Make sure that no foreign material enters the pipe.
 (3) Cover the connecting pipe ends with the tape.

2. Piping work

- 2.1 Flaring pipe

 (1) Take out flare nuts from the service valves of indoor unit and engage them onto connecting pipes.

 (2) Flare the pipes according to table and figure shown below.

 Flare dimensions for R32 are different from those for conventional refrigerant.

 Although it is recommended to use the flaring tools designed specifically for R32 or R410A, conventional flaring tools can also be used by adjusting the dimension B with a flare adjustment

	Copper pipe outer diameter	А
l i l	φ6.35	9.1
-111	φ9.52	13.2
1 11	φ12.7	16.6



	Copper pipe	B [Rigid (cl	utch) type]	
	outer diameter	R32 or R410A	Conventional	
	φ6.35			
4	φ9.52	0-0.5	1.0-1.5	
	φ12.7			

- 2.2 Connecting pipes
 (1) Connect pipes on both liquid and gas sides.
 (2) Tighten nuts to specified torque shown in the table below
- Service valve size (mm) Tightening torque (N·m) φ 6.35 (1/4") 14-18 φ 9.52 (3/8") 34-42



⚠ CAUTION

φ 12.7 (1/2")

Do not apply refrigerating machine oil to the flared surface. It can cause refrigerant leakage.
Do not apply excess torque to the flared nuts. The flared nuts may crack resulting in refrigerant

49-61

3. Heating and condensation prevention

- (1) Dress the connecting pipe (both liquid and gas pipes) with insulation to prevent it from heating and dew concensation.

 
 Use the heat insulating material which can withstand 120 °C or higher temperature. Make sure that insulation is wrapped tightly around the pipes and no gap is left between them.

 (2) Wrap the refrigerant pipings of indoor unit with indoor unit heat insulation using tape.

 (3) Cover the flare-connected joints (indoor side) with the indoor unit heat insulation and wrap it with an in-

- sulation pad (standard accessory provided with indoor unit).

 (4) Wrap the connecting pipes, connecting cable and drain hose with the tape



NOTE

Locations where relative humidity exceeds 70 %, both liquid and gas pipes need to be dressed with 20 mm or thicker heat insulation materials.

Improper insulation can cause condensate(water) formation during cooling operation.
Condensate can leak or drip causing damage to household property.
Poor heat insulating capacity can cause pipe outer surface to reach high temperature during heating operation. It can cause cable deterioration and personal injury.

4. Finishing work

- (1) Make sure that the exterior portion of connecting pipes, connecting cable and drain hose is wrapped properly with tape. Shape the connecting pipes to match with the contours of the pipe assembly route.

 (2) Fix the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5 m or less to isolate the vibration.

 (3) Install the service cover securely. Water may enter the unit if service cover is not installed properly, resulting in unit malfunction and failure.



Ó $\chi_{\mathbf{O}}$

⚠ CAUTION

Make sure that the connecting pipes do not touch the components within the unit. If pipes touch the internal components, it may generate abnormal sounds and/or vibrations.

10. HOW TO OPEN, CLOSE, REMOVE AND INSTALL THE AIR INLET PANEL

1. Open

Pull the air inlet panel at both ends of lower part and release latches, then pull up the panel until you feel resistance. (The panel stops at approx. 70° open position)

2. Close


Hold the panel at both ends of lower part, lower it downward slowly, then push it slightly until the latch works.

3. Removing

Open the panel by 90° (as shown in the right illustration) and then pull it forward.

4. Installing

Insert the panel arm into the slot on the front panel from the position shown in right illustra-tion, hold the panel at both ends of lower part, lower it downward slowly, then push it slightly until the latch works.

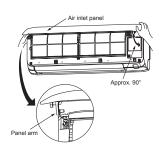

11. HOW TO REMOVE AND INSTALL THE BOTTOM AND FRONT PANEL

1. Bottom panel

1.1 Removing

- (1) Remove the 2 screws (in the cap).
 (2) Remove the 2 hooks of left and right side and then bottom panel can be removed.

1.2 Installing
(1) Install the 2 hooks of left and right side.
(2) Secure the bottom panel with the 2 screws (in the cap).

2. Front panel


- 2.1 Removing
 (1) Remove the air inlet panel, the air filters and the
- bottom panel.
 (2) Remove the 2 screws.
- (3) Remove the 4 upper latches and then front panel can be removed.

 2.2 Installing

- (1) Cover the unit with the front panel and fix 4
- upper latches.

 (2) Secure the front panel with the 2 screws.

 (3) Install the bottom panel, the air inlet panel and the air filters.

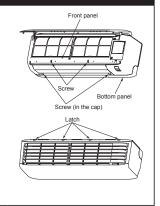

12. INSTALLING REMOTE CONTROL

Mount the batteries

 
- (1) Slide and take out the cover of backside.
 (2) Mount the batteries [R03 (AAA, Micro),
 ×2 pieces] in the body properly.
 (Fit he poles with the indication marks + & -)
 (3) Set the cover again.

NOTE

- Do not use new and old batteries together.
 In case the unit is not operated for a long time, take out the batteries
- Do not mix old and new hatteries, or hatteries.

Installing remote control holder

(1) Select the place where the unit can receive signals.
(2) Fix the holder to pillar or wall with wood



14. INSTALLING TWO AIR-CONDITIONERS IN THE SAME ROOM

In case two air-conditioners are installed in the same room, apply this setting so that one unit can be operated with only one remote control.

Setting one remote control

- (1) Slide and take out the cover and batteries(2) Cut the switching line next to the battery
- with wire cutters.
 (3) Set the batteries and cover again.



Setting one indoor unit

- Setting one indoor unit

 
 (1) Turn off the power source and turn it on after 1 minute.

 (2) Send the signal by pressing the ACL switch on the remote control that was set according to the procedure described on the left side.

 (3) Check that the reception buzzer sound "Peep" is emitted from the indoor unit. Since the signal is sent about 6 seconds after the ACL switch is pressed, point the remote control to the indoor unit for a while.

NOTE

If no reception buzzer is emitted, restart the setting from the beginning.



13. TERMINAL CONNECTION FOR AN INTERFACE

This unit is standardly equipped with a wireless LAN adapter. To install wired remote control, Superlink etc., interface kit is needed. When using the interface kit, the wireless LAN function cannot be used.


- (1) Turn off the power source. (2) Remove the air inlet panel, bottom panel and front panel.

 
 (3) Remove the control cover. (Remove the
- (3) Remove the control cover. (Remove the screw.)
 (4) There is a terminal (respectively marked with CNS) on the indoor unit PCB. Disconnect the harness from the CNS terminal.

 
terminal. Remove the wireless LAN adapter from the control box, and pull out the wireless LAN adapter harness from the wireless LAN adapter.

adapter.
After that, install the wireless LAN adapter in the control box.
While connecting an interface, connect to the CNS terminal securely with the connection harness supplied with an option "Interface connection his SCBIKN2-E" and fasten the connection harness onto the indoor control box with the clamp and screw supplied with the kit.
For more details, refer to the user's manual of "Interface connection kit SC-BIKN2-E".

Make sure that the disconnected connector does not touch the internal parts of the unit.

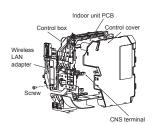





15. PUMP DOWN WORK

For the environmental protection, be sure to pump down when relocating or disposing of the unit. Pump down is the method of recovering refrigerant from the indoor unit to the outdoor unit before the connecting pipes are removed from the unit. When pump down is carried out, forced cooling operation is needed.

Forced cooling operation

(1) Turn off the power source and turn it on again after 1 minute.

(2) Press the ON/OFF button continuously for at least 5 seconds. Then operation will start.

Unit ON/OFF button

For the detail of pump down, refer to the installation manual of outdoor unit.

NOTE

After finishing the installation work, check the following points again before turning on the power. Conduct a test run and ensure that the unit operates properly. At the same time, explain to the customer how to use the unit and how to take care of the unit following the user's manual.

Before test run

before test run, check following points.	
Power source voltage complies with the rated voltage of air-conditioner.	
Earth leakage breaker and circuit breaker are installed.	
Power cable and connecting cable are securely fixed to the terminal block.	
Both liquid and gas service valves are fully open.	
No gas leaks from the joints of the service valves.	
Indoor and outdoor side pipe joints have been insulated.	
Hole on the wall is completely sealed with putty.	
Drain hose and cap are installed properly.	
Screw of the lid is tightened securely.	

16. INSTALLATION CHECK AND TEST RUN

Test run

Check following points during test run.	
Indoor unit receives signal of remote control.	
Air-conditioning operation is normal.	
There is no abnormal noise.	
Water drains out smoothly.	
Display of remote control is normal.	

After test run

artor toot run	
Explain the operating and maintenance methods to the user according to the user's manual.	
Keep this installation manual together with user's manual.	

NOTE

During restart or change in operation mode, the unit will not start operating for approximately 3 minutes. This is to protect the unit and it is not malfunction

RWC012A081

(2) Installation of outdoor unit Models SRC20ZT-WA. SRC25ZT-WA

Model SRC20,25ZT-WA R32 REFRIGERANT USED

• This installation manual deals with an outdoor unit installation only. For an indoor unit installation, refer to page 25.

SAFETY PRECAUTIONS

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installa- Be sure to confirm no operation problem on the equipment after completing the installation. If unusual tion work in order to protect yourself.

noise can be neard ourning the test run, consult the dealer.

The precautionary items mentioned below are distinguished into two levels, AWARNING and AWARNING indicates a potentially hazardous situation which, if not avoided, can result in serious consequences such as death or severe injury.

A CAUTION is equences such as death or severe injury.

A CAUTION is equenced by the dealer of the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

Be sure to keep the installation manual together with user's manual at a place where it is easily accessible to the user and the operating manual together with user's manual at a place where it is easily accessible to the user and the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

Be sure to keep the installation manual together with user's manual at a place where it is easily accessible to the user any time. Moreover, ask the user to hand the manuals to a new user, whenever required.

sequences such as death or severe injury.

A CAUTION Indicates a potentially hazardous situation which, if not avoided, can result in personal injury or property damage

Both mention the important items to protect your health and safety. Therefore, strictly follow them by any means

noise can be heard during the test run, consult the deale

⚠ WARNING

Be sure to use only for residential purpose.
 If this unit is installed in inferior environment such as machine shop, vehicle (like ship), warehouse,

- etc., it can malfunction.

 Installation must be carried out by the qualified installer completely in accordance with the installation manual.

 Installation by non qualified person or incorrect installation can cause serious troubles such as water leak, electric shock, fire and personal injury.

 Be sure to wear protective goggles and gloves while performing installation work. Improper safety measures can result in personal injury.

 Use the original accessories and the specified components for the installation. Using parts other than those prescribed may cause water leak, electric shock, fire and personal injury.

 Do not install the unit near the location where leakage of flammable gases can occur. If leaked gases accumulate around the unit, it can cause fire resulting in property damage and personal injury.
- If leaked gases accumulate around the unit, it can cause fire resulting in property damage and personal injury.

 When installing the unit in small rooms, make sure that refrigerant density does not exceed the limit (Reference: ISO5149) in the event of leakage. If refrigerant density exceeds the limit, consult the dealer and install the ventilation system. Otherwise lack of oxygen can occur resulting in serious accident.

 Install the unit in a location where unit will remain stable, horizontal and free of any vibration transmission.

 Unsuitable installation location can cause the unit to fall resulting in material damage and personal injury.

 Do not run the unit with removed panels or protections.

 Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shock.

 This unit is designed specifically for R32.

 Using any other refrigerant can cause unit failure and personal injury.

 Do not vent R32 into atmosphere.

 R32 is a fluorinated greenhouse gas with a Global Warming Potential (GWP) = 675.

 Make sure that no air enters the refrigerant circuit when the unit is installed and removed.

- Make sure that no air enters the refrigerant circuit when the unit is installed and removed.
 If air enters the refrigerant circuit, the pressure in the refrigerant circuit will become too high, which can cause burst and personal injury.
 Be sure to use the prescribed pipes, flare nuts and tools for R32 or R410A.
 Using existing parts (for R22 or R407C) can cause refrigerant circuit burst resulting in unit failure and personal injury.
 Be sure to connect both liquid and gas connecting pipes properly before operating the compressor.
- Be sure to commerce both induited and gas commercing pipes properly erating the compressor. Do not open the liquid and gas service valves before completing piping work, and evacuation. If the compressor is operated when connecting pipes are not connected and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure resulting in
- burst or personal injury.

 Be sure to tighten the flare nuts to specified torque using the torque wrench.

 Tightening flare nuts with excess torque can cause burst and refrigerant leakage after a long period.

- During pump down work, be sure to stop the compressor before closing service valves and removing connecting pipes.
 If the connecting pipes are removed when the compressor is in operation and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure resulting in burst or personal injury.

- ing in burst or personal injury.

 In the event of refrigerant leakage during installation, be sure to ventilate the working area properly.

 If the refrigerant comes into contact with naked flames, poisonous gases will be produced.

 Electrical work must be carried out by the qualified electrician, strictly in accordance with national or regional electricity regulations.

 Incorrect installation can cause electric shock, fire or personal injury.

 Make sure that earth leakage breaker and circuit breaker of appropriate capacities are installed.

 Circuit breaker should be able to disconnect all poles under over current. Absence of appropriate breakers can cause electric shock, personal injury or property damage.

 Be sure to switch off the power source in the event of installation, maintenance or service.

- Be sure to switch off the power source in the event of installation, maintenance or service. If the power source is not switched off, there is a risk of electric shock, unit failure or personal injury. Be sure to tighten the cables securely in terminal block and relieve the cables properly to prevent overloading the terminal blocks. Loose connections or cable mountings can cause anomalous heat production or fire. Do not process, splice or modify the power cable, or share the socket with other power plugs. Improper power cable or power plug can cause fire or electric shock due to poor connection, insufficient insulation or over-current.

- Do not perform any change in protective device or its setup condition yourself. Changing protective device specifications can cause electric shock, fire or burst. Be sure to clamp the cables properly so that they do not touch any internal component of the unit.
- If cables touch any internal component, it can cause overheating and fire

- If cables touch any internal component, it can cause overheating and fire.

 Be sure to install service cover properly.

 Improper installation can cause electric shock or fire due to intrusion of dust or water.

 Be sure to use the prescribed power and connecting cables for electrical work.

 Using improper cables can cause electric leak or fire.

 This appliance must be connected to main power source by means of a circuit breaker or switch with a contact separation of at least 3mm.

 Improper electrical work can cause unit failure or personal injury.

 Be sure to connect the power source cable with power source properly.

 Improper connection can cause intrusion of dust or water resulting in electric shock or fire.

 Do not turn ON the wireless LAN communication near automatic control equipment such as an automatic door or fire-alarm device.
- Do not turn On the wireless LAN communication near automatic control equipment such as an automatic door or fire-alarm device.

 It may cause an accident due to malfunction of equipment.

 Do not turn ON the wireless LAN communication in a hospital, etc. where the use of wireless devices is prohibited.

 It may cause malfunction of medical equipment due to a wireless device.

 Do not turn ON the wireless LAN communication near a person with a car-

- diac pacemaker or implanted defibrillator.
 It may cause malfunction of a medical device.

⚠ CAUTION

- Take care when carrying the unit by hand.
 If the unit weight is more than 20 kg, it must be carried by two or more persons. Do not carry the unit by the plastic straps. Always use the carry handle.
- Do not install the outdoor unit in a location where insects and small animals can inhabit.

- can inhabit.
 Insects and small animals can enter the electrical parts and cause damage resulting in fire or personal injury. Instruct the user to keep the surroundings clean.
 If the outdoor unit is installed at height, make sure that there is enough space for installation, maintenance and service.
 Insufficient space can result in personal injury due to falling from the height.
 Do not install the unit near the location where neighbours are bothered by noise or air generating from the unit.
 It can affect surrounding environment and cause a claim.
- noise or air generating from the unit.
 It can affect surrounding environment and cause a claim.
 Do not install in the locations where unit is directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty atmosphere.
 It can cause corrosion of heat exchanger and damage to plastic parts.
 Do not install the unit close to the equipments that generate electromagnetic
- waves and/or high-harmonic waves.

 Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns.
- The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.

- Do not install the unit in the locations where:

 - There are heat sources nearby.

 There is any obstacle which can prevent smooth air circulation from inlet and outlet side of the unit. Unit is directly exposed to oil mist and steam such as kitchen.

 Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and Chemical substances like animonia (organic tertilizer), calcium chioride (show metung agent) and acid (sulfurous acid etc.), which can harm the unit, will generate or accumulate.

 Drain water can not be discharged properly.

 TV set or radio receiver is placed within 1 m.

 Height above sea level is more than 1000 m.

 It can cause performance degradation, corrosion and damage of components, unit malfunction and fire.

 Dispose of all packing materials properly.

 Packing materials contain nails and wood which can cause personal injury.

 - Keep the polybag away from children to avoid the risk of suffocation.

 - Keep the polybag away from children to avoid the risk of suffocation.

 Do not put anything on the outdoor unit.

 Object may fall causing property damage or personal injury.

 Do not touch the aluminum fin of the outdoor unit.

 Aluminium fin temperature is high during heating operation. Touching fin can cause burn.

 Do not touch any refrigerant pipe with your hands when the system is in operation.

 During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition. Touching pipes can cause personal injury like burn (hot/cold).

 Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.

 The isolator should be locked in OFF state in accordance with EN60204-1.

1. ACCESSORIES AND TOOLS

Locally procured parts	1	Tools for installation work	
(a) Anchor bolt(M10-M12) × 4 pcs	Phillips headed driver	Spanner wrench	Vacuum pump*
(b) Putty	Knife	Torque wrench [14.0-62.0 N•m(1.4-6.2 kgf•m)]	Gauge manifold *
(c) Electrical tape	Saw	Wrench key (Hexagon) [4mm]	Charge hose *
(d) Connecting pipe	Tape measure	Claring tool and *	Vacuum pump adapter*
(e) Connecting cable	Tape measure	Flaring tool set *	(Anti-reverse flow type)
(f) Power cable	Pipe cutter	Flare adjustment gauge	Gas leak detector *
(g) Clamp and screw (for finishing work)		*Design	ned specifically for R32 or R410A

2. OUTDOOR UNIT INSTALLATION

- Note as a unit designed for R32

 Do not use any refrigerant other than R32. R32 will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R32 has a light blue indication mark on the top.

- a conventional religerant. Asymmetr containing RS2 has a light blue indication mark of the top.
 Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to change, which results in performance degradation.
 In charging refrigerant, always take it out from a cylinder in the liquid phase.
 All indoor units must be models designed exclusively for R32. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

1. Haulage

- Always carry or move the unit with two or more persons.
- . The right hand side of the unit as viewed from the front (outlet side) is

A person carrying the right hand side must take care of this fact. A person carrying the left hand side must hold the handle provided on the front panel of the unit with his right hand and the corner column section of the unit with his left hand.



When a unit is hauled, take care of its gravity center position which is shifted towards right hand side If the unit is not hauled properly, it can go off balance and fall resulting in serious injury.

2. Selecting the installation location

- elect the suitable installation location where: Unit will be stable, horizontal and free of any vibration transmission. There is no obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.
- There is enough space for service and maintenance of unit.
 Neighbours are not bothered by noise or air generating from the unit.
 Outlet air of the unit does not blow directly to animals or plants.
- Drain water can be discharged properly.
- · There is no risk of flammable gas leakage
- There are no other heat sources nearby.
 Unit is not directly exposed to oil mist and steam.
- Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will not generate or accumulate.
- · Unit is not directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty at-
- No TV set or radio receiver is placed within 1m.

- Unit is not affected by electromagnetic waves and/or high-harmonic waves generated by other equipments.
 Strong wind does not blow against the unit outlet.
 Heavy snowfalls do not occur (If installed, provide proper protection to avoid snow accumulation).

NOTE

If the unit is installed in the area where there is a possibility of strong wind or snow accumulation, the following measures are required.

(1) Location of strong wind

• Place the unit with its outlet side facing the wall. • Place the unit such that the direction of air from









(2) Location of snow accumulation

- higher than snow cover surface
- Install the unit under eaves or provide the roof on

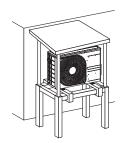

3. Installation space

 There must be 1m or larger space between the unit and the wall in at least 1 of the 4 sides. Walls surrounding the unit from 4 sides is not acceptable. The wall height on the outlet side should be 1200 mm or less. Refer to the following figure and table for details.



	Installation space (mm)
L1	280 or more
L2	100 or more
L3	80 or more
L4	250 or more

NOTE

When more than one unit are installed side by side, provide a 250mm or wider interval between them as a service space

⚠ CAUTION

When more than one unit are installed in parallel directions, provide sufficient inlet space so that shortcircuiting may not occur.

4. Drain piping work (If necessary) Carry out drain piping work by using a drain elbow and a drain grommet supplied separately as accessories if condensed water needs to be drained out.

(1) Install drain elbow and drain grommet.
(2) Seal around the drain elbow and drain grommet with putty or adequate caulking material.

<SRC20/257T-WA>



Do not block the drain holes when installing the outdoor unit.

 
⚠ CAUTION

Do not use drain elbow and drain grommet if there is a possibility to have several consecutive days of sub zero temperature. (There is a risk of drain water freezing inside and blocking the drain.)

5. Installation

- Install the unit on a flat level base.

 While installing the unit, keep space and fix the unit's legs with 4 anchor bolts as shown in the figure below. The protrusion of an anchor bolt from the foundation surface must be kept within 15mm




⚠ CAUTION

- Install the unit properly so that it does not fall over during earthquake, strong wind, etc.
- Make sure that unit is installed on a flat level base. Installing unit on uneven base may result in unit

3. PREPARATION FOR WORK


1. Removing service cover

Remove the screw. Slide service cover downwards and remove it

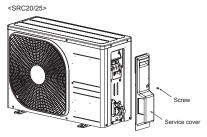

2. Removing terminal cover

Remove the screw and take out terminal cover

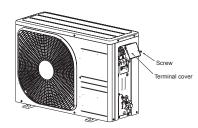

4. CONNECTING PIPING WORK

1. Restrictions on unit installation

Abide by the following restrictions on unit installation

Improper installation can cause compressor failure or performance degradation

1 1 1 1 1 1 1 1 1 1 1 1		
	Dimensional restrictions	
	Model SRC20/25	
Connecting pipe length(L)*	3-20m	
Elevation difference between indoor and outdoor units(H)**	10m or less	

- * The recommended piping length is minimum 3m, in order to avoid noise from the outdoor unit and vibration.
- ** Outdoor unit installation position can be higher as well as lower than the indoor unit installation position

2. Preparation of connecting pipe

2.1 Selecting connecting pipe
Select connecting pipe according to the following table

	-
	Model SRC20/25
Gas pipe	φ9.52
Liquid pipe	φ6.35

 
- Pipe wall thickness must be greater than or equal to 0.8mr
- Pipe material must be O-type (Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30).

NOTE

if it is required to reuse the existing connecting pipe system, refer to 5. UTILIZATION OF EXISTING PIPE.

- 2.2 Cutting connecting pipe
 (1) Out the connecting pipe to the required length with pipe cutter.
 (2) Hold the pipe downward and remove the burrs. Make sure tha
 (3) Cover the connecting pipe ends with the tape. sure that no foreign material enters the pipe

3. Piping work
Check that both liquid and gas service valves are fully closed. Carry out the piping work with service valves fully closed.



φ12.7

16.6

3.1 Flaring pipe

(1) Take out flare nuts from the service valves of outdoor unit and engage them onto connecting pipes.

(2) Flare the pipes according to table and figure shown below.

Flare dimensions for R32 are different from those for conventional refrigerant.

Although it is recommended to use the flaring tools designed specifically for R32 or R410A, conventional flaring tools can also be used by adjusting the dimension B with a flare adjustment gauge.


IIGIII	ig tool	3 0411 4130 00 0	oca by aujo	- asting the dimension b wi	ur a nare auju	suncin gauge.	
- A	-	Copper pipe			Copper pipe	B [Rigid (cl	utch) type]
+	7	outer diameter	_ ^		outer diameter	R32 or R410A	Conventional
Ηi		φ6.35	9.1		φ6.35		
- 1 i		Φ9.52	13.2		Φ9.52	0-0.5	1.0-1.5

3.2 Connecting pipes

(1) Connect pipes on both liquid and gas sides.

φ12.7

(2) righten huts to specified torque shown in the table be				
Service valve size (mm)	Tightening torque (N·m)			
φ6.35 (1/4")	14-18			
φ9.52 (3/8")	34-42			
φ12.7 (1/2")	49-61			

 

↑ CAUTION

The existing pipe system is reusable.

- Do not apply refrigerating machine oil to the flared surface. It can cause refrigerant leakage
- Do not apply excess torque to the flared nuts. The flared nuts may crack resulting in refrigerant leakage

4. Evacuation

- (1) Connect vacuum pump to gauge manifold. Connect charge hose of gauge manifold to service port of outdoor unit.
- (2) Run the vacuum pump for at least one hour after the vacuum gauge shows -0.1 MPa (-76 cm Hg).
- (2) Run the vacuum pump for at least one hour after the vacuum gauge shows -0.1 MPa (-76 cm Hg).
 (3) Confirm that the vacuum gauge indicator does not rise even if the system is left for 15 minutes or more. Vacuum gauge indicator will rise if the system has moisture left inside or has a leakage point. Check the system for the leakage point. If leakage point is found, repair it and return to (1) again.
 (4) Close the Handle Lo and stop the vacuum pump.
 Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.

- (5) Remove valve caps from liquid service valve and gas service valve.
 (6) Turn the liquid service valve's rod 90 degree counterclockwise with a hexagonal wrench key to open
- valve.

 Close it after 5 seconds, and check for gas leakage.


 Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods.

 Wipe off all the water after completing the check.

 (7) Disconnect charging hose from gas service valve's service port and fully open liquid and gas service valves. (0 not attempt to turn valve rod beyond its stop.)

 (8) Tighten operation valve caps and service port cap to the specified torque shown in the table below.

Service valve size (mm)	Service valve cap tightening torque (N·m)	Service port cap tightening torque (N·m)	
φ6.35 (1/4")	20-30		
φ9.52 (3/8")	20-30	10-12	
φ12.7 (1/2")	25-35		

 

△ CAUTION

To prevent vacuum pump oil from entering into the refrigerant system, use a counterflow prevention adapter.

5. Additional refrigerant charge

Additional refrigerant charge is required only when connecting pipe length exceeds Am.
5.1 Calculating additional refrigerant charge
Additional refrigerant charge can be calculated using the formula given below.
Additional refrigerant charge (g) = { Connecting pipe length (m) – Factory charged length A (m) } x 20 (g/m)

	Model SRC
A : Factory charged length (m)	15

NOTE

- · If additional refrigerant charge calculation result is negative, there is no need to remove the refrigerant If refrigerant recharge is required for the unit with connecting pipe length Am or shorter, charge the factory charged amount as shown in the table below.
 The maximum refrigerant charge amount is designed as shown in the table below.

	Model SRC20/25
The factory refrigerant charge amount(kg)	0.78
The maximum refrigerant charge amount(kg)	0.88

5.2 Charging refrigerant

- 5.2 Charging refrigerant

 (1) Charge the R32 refrigerant in liquid phase from service port with both liquid and gas service valves shut. Since R32 refrigerant must be charged in the liquid phase, make sure that refrigerant is discharged from the cylinder in the liquid phase all the time.

 (2) When it is difficult to charge a required refrigerant amount, fully open both liquid and gas service valves and charge refrigerant, while running the unit in the cooling mode. When refrigerant is charged with the unit being run, complete the charge operation within 30 minutes.

 (3) Write the additional refrigerant charge calculated from the connecting pipe length on the label attached on the service cover.

⚠ CAUTION

- Running the unit with an insufficient quantity of refrigerant for a long time can cause unit malfunction.
 Do not charge more than the maximum refrigerant amount. It can cause unit malfunction.

5. UTILIZATION OF EXISTING PIPE

(1) Check whether an existing pipe system is reusable or not by using the following flow chart. Are the outdoor and indoor units connected to the existing pipe system YES Is it possible to run the uni YES 🛊 Does the existing unit use any of the following refrigerant oils ? Suniso, MS,Barell Freeze, HAB, Freol, ether oil, ester oil. YES tion of the unit.? (Go to 4.Connecting piping work and check 1.Restrictions on unit installation and 2.Preparation of connecting pipe.) YES of corrosion, flaws and dents? NO Repair the damaged parts. Repair is impossible Is the existing pipe system fr Repair YES of gas leaks? rge was required Check the pipe system for air tightness. impossible. Air tightness is OK existing pipe system NO Repair is impossible. Repair the damaged p tree of peel-on or deterioration ((Heat insulation is necessary for both gas and liquid pipes.)) YES Repair e of any loose pipe support ? NO Repair the loose pipe suppor ing system YES Repair

The existing pipe system is not reusabl Install the new pipe system.

- Consult with our distributor in the area, if you need to recover refrigerant and charge it again.
- (2) Clean the existing pipe system according to the procedure given below.

 (a) Carry out forced cooling operation of existing unit for 30 minutes.

 For 'Forced cooling operation' refer to the indoor unit installation manual
 - (b) Stop the indoor fan and carry out forced cooling operation for 3 minutes (Liquid return) (c) Close the liquid service valve of the outdoor unit and carry out pump down operation (Refer to 6
- PUMP DOWN).
- (d) Blow with nitrogen gas. If discolored refrigeration oil or any foreign matter is discharged by the blow, wash the pipe system or install a new pipe system.

 (3) Remove the flare nuts from the existing pipe system. Go back to 4.CONNECTING PIPING WORK and proceed to step 2.2 Cutting connecting pipe.

⚠ CAUTION

 
- Do not use the old flare nuts (of existing unit). Make sure that the flare nuts supplied with the (new) outdoor unit are used.
- outdoor unit are used.

 If the flared / compression connection to the indoor unit is located inside the house / room then this pipework can't be reused.

6. PUMP DOWN

- (1) Connect charge hose of gauge manifold to service port of outdoor unit.
 (2) Close the liquid service valve with hexagonal wrench key.
 (3) Fully open the gas service valve with hexagonal wrench key.
 (4) Carry out forced cooling operation (For forced cooling operation procedure, refer to indoor unit installation
- manual).

 (5) When the low pressure gauge becomes 0.01 MPa, close the gas service valve and stop forced cooling operation.



7. ELECTRICAL WIRING WORK

⚠ WARNING

- · Make sure that all the electrical work is carried out in accordance with the national or regional electri-
- Make sure that an une electrical work is control of a standards.

 Make sure that the earth leakage breaker and circuit breaker of appropriate capacities are installed (Refer to the table given below).

 Do not turn on the power until the electrical work is completed.

 Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor. Moreover, it can cause an abnormal overheat accident).

Breaker specifications

Model	Phase	Earth leakage breaker	Circuit breaker
SRC20/25		Leakage current: 30 mA, 0.1sec or less	Over current: 16 A

Main fuse specification

Model	Specification	Parts No.	Code on LABEL,WIRING
SRC20/25	250 V 15 A	SSA564A136	F7

1. Preparing cable

(1) Selecting cable

- Select the power source cable and connecting cable in accordance with the specifications mentioned below
- (a) Power source cable 3 cores* 2.5mm² or more, conformed with 60245 IEC57
- 3 cores* 2.5mm or more, contomed with 60245 IEC/5
 When selecting the power source cable length, make sure that voltage drop is less than 2 %.
 If the wire length gets longer, increase the wire diameter.
 (b) Connecting cable
 4 cores* 1.5mm², conformed with 60245 IEC57
 * 1 Earth wire is included (Yellow/Green).
 (2) Arrange each wire length as shown below.
 Make sure that each wire is stripped 10mm from the end.



(3) Attach round crimp-type terminal to each wire as shown in the below. Select the size of round crimp-type terminal after considering the specifications of terminal block and wire diameter.



⚠ CAUTION

Power source cable and connecting cable must conform to the specifications mentioned in the manual Using cables with wrong specifications may result in unit malfunction.

2. Connecting cable

- 2. Connecting cable

 (1) Remove the service cover.

 (2) Connect the cables according to the instructions and figures given below.

 (a) Connect the earth wire of power source cable.

 An earth wire must be connected before connecting the other wires of power source cable.

 Keep the earth wire longer than the remaining two wires of power source cable.

 (b) Connect the remaining two wires (N and L) of power source cable.


 (c) Connect the wires of connecting cable. Make sure that for each wire, outdoor and indoor side terminal numbers match.

 (3) Fasten the cables properly with cable clamps so that no external force may work on terminal connections.

tions.


Moreover, make sure that cables do not touch the piping, etc. When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection.

<Circuit diagram>

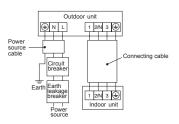

<SRC20/25>

2. Finishing work

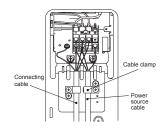

8. FINISHING WORK

1. Heating and condensation prevention

- (1) Dress the connecting pipes (both liquid and gas pipes) with insulation to prevent it from heating and
- Dress the connecting pipes (both liquid and gas pipes) with insulation to prevent it from heating and dew condensation.

 Use the heat insulating material which can withstand 120°C or higher temperature. Make sure that the exterior portion of connecting pipes, connecting pipes, connecting pipes, connecting pipes to match with the contours of the pipe assembly froute.

 2. Firsting Work

 1. Make sure that the exterior portion of connecting pipes, connecting cable and drain hose is wrapped properly with tape. Shape the connecting pipes to match with the contours of the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration.

 3. Install the exterior portion of connecting pipes, connecting cable and drain hose is wrapped properly with tape. Shape the connecting pipes to match with the contours of the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration.

 3. Install the exterior portion of connecting pipes, connecting pipes, connecting pipes, connecting pipes to match with the contours of the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration.

 3. Install the exterior portion of connecting pipes, connecting pipes, connecting pipes, connecting pipes to match with the contours of the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration.

 
 3. Install the exterior portion of connecting pipes, connecting pipes to match with the contours of the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration.

 3. Install the exterior portion of connecting pipes to match with the contours of the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration. Use the neat insulating material which can withstand 1,20°C or nigher temperature. Make sure that insulation is wrapped tightly around the pipes and no gap is left between them.

 (2) Wrap the refrigerant pipings of indoor unit with indoor unit heat insulation using tape.

 (3) Cover the flare-connected joints (indoor side) with the indoor unit heat insulation and wrap it with an insulation pad (standard accessory provided with indoor unit).

 (4) Wrap the connecting pipes, connecting cable and drain hose with the tape.



NOTE

Locations where relative humidity exceeds 70%, both liquid and gas pipes need to be dressed with 20mm or thicker heat insulation materials

⚠ CAUTION

- Improper insulation can cause condensate (water) formation during cooling operation.
 Condensate can leak or drip causing damage to household property.
 Poor heat insulating capacity can cause pipe outer surface to reach high temperature during heating operation. It can cause cable deterioration and personal injury.

⚠ CAUTION

Make sure that the connecting pipes do not touch the components within the unit. If pipes touch the internal components, it may generate abnormal sounds and/or vibrations.

pipe assembly

9. INSTALLATION TEST CHECK POINTS

After finishing the installation work, check the following points again before turning on the power Conduct test run (Refer to indoor unit installation manual) and ensure that the unit operates properly

Power source voltage complies with the rated voltage of air-conditioner.	
Earth leakage breaker and circuit breaker are installed.	
Power cable and connecting cable are securely fixed to the terminal block.	
Both liquid and gas service valves are fully open.	

No gas leaks from the joints of the service valves.	
Indoor and outdoor side pipe joints have been insulated.	
Drain hose (if installed) is fixed properly.	
Screw of the service cover is tightened properly.	

(3) Safety precautions in handling air-conditioners with flammable refrigerant

(a) Models SRC20ZT-WA, SRC25ZT-WA

RSA012A090/A



This equipment uses flammable refrigerants. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.



There is information included in the user's manual and/or installation manual.



The user's manual should be read carefully.



A service personnel should be handing this equipment with reference to the installation manual.

- This safety precaution sheet is for R32 refrigerant. If you want to know the type of refrigerant in the unit, check the label attached to the outdoor unit.
- The precautionary items mentioned below are distinguished into two levels, Marning and Caution

MARNING: Wrong installation would cause serious consequences such as injuries or death

⚠ CAUTION : Wrong installation might cause serious consequences depending on circumstances.

⚠ WARNING

- Strict compliance of the domestic laws must be observed when disposing the appliance.
- Do not use means to accelerate the defrost operation process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- · Do not pierce or burn.
- Be aware that refrigerants may not contain an odour

⚠ CAUTION

(1. General

- That the installation of pipe-work shall be kept to a minimum
- That pipe-work shall be protected from physical damage.
- That compliance with national gas regulations shall be observed.
- That mechanical connections shall be accessible for maintenance purposes
- Keep any required ventilation openings clear of obstruction.
- Servicing shall be performed only as recommended by the manufacturer.

2. Unventilated areas

The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.

3. Qualification of workers

The staff in servicing operations must hold the national qualification or other relevant qualifications.

Information on servicing

- 4.1 Checks to the area
- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised
- For repair to the refrigerating system, 4.3 to 4.7 shall be completed prior to conducting work on the system
- 4.2 Work procedure
- Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being
- 4.3 General work area
- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.
- Work in confined spaces shall be avoided.
- The area around the workspace shall be sectioned off.
- Ensure that the conditions within the area have been made safe by control of flammable material.
- 4.4 Checking for presence of refrigerant
- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe

- 4.5 Presence of fire extinguisher
- If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area
- 4.6 No ignition sources
- No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space.
- Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
- "No Smoking" signs shall be displayed.
- 4.7 Ventilated area
- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
- A degree of ventilation shall continue during the period that the work is carried out.
- The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- 4.8 Checks to the refrigeration equipment
- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
- The following checks shall be applied to
 - installations using flammable refrigerants:

 the charge size is in accordance with the room size within which the refrigerant containing parts are installed;
 - the ventilation machinery and outlets are operating adequately and are not obstructed;
 - if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
 - marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
 - refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

- 4.9 Checks to electrical devices
- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.
- This shall be reported to the owner of the equipment so all parties are advised
- Initial safety checks shall include:
- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking; – that no live electrical components and wiring are
- exposed while charging, recovering or purging the system;

 - that there is continuity of earth bonding.

5. Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc
- If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation
- Particular attention shall be paid to the following to ensure that by working on electrical component the casing is not altered in such a way that the level of protection is affected.
- This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- Ensure that the apparatus is mounted securely.
- Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres
- Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE

The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

⚠ CAUTION

6. Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.
- The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer.
- Other parts may result in the ignition of refrigerant in the atmosphere from a leak

7. Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

8. Detection of flammable refrigerants

- Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.
- A halide torch (or any other detector using a naked flame) shall not be used.

9. Leak detection methods

- Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
 Ensure that the detector is not a potential source of
- ignition and is suitable for the refrigerant used.
- Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.
- Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
- If a leak is suspected, all naked flames shall be removed/extinguished.
- If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak.
- For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

10. Removal and evacuation

- When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration.
- The following procedure shall be adhered to:
- remove refrigerant;
- purge the circuit with inert gas;
- evacuate:

times

- purge again with inert gas;
- open the circuit by cutting or brazing.

 The refrigerant charge shall be recovered into the
- correct recovery cylinders. For appliances containing flammable refrigerants,
- the system shall be "flushed" with OFN to render the unit safe. This process may need to be repeated several
- Compressed air or oxygen shall not be used for purging refrigerant systems.

- For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system.
- When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing
- operations on the pipe-work are to take place. Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is

11. Charging procedures

available.

- In addition to conventional charging procedures, the following requirements shall be followed.
- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.
- Prior to recharging the system, it shall be pressuretested with the appropriate purging gas.
- The system shall be leak-tested on completion of charging but prior to commissioning.
- A follow up leak test shall be carried out prior to leaving the site

12. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant.
- It is essential that electrical power is available before the task is commenced.
- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.c) Before attempting the procedure ensure that: mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- all personal protective equipment is available and being used correctly;
- the recovery process is supervised at all times by a competent person:
- recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer's instructions
- h) Do not overfill cylinders. (No more than 80 %volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

13. Labelling

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed.
- For appliances containing flammable refrigerants ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

14. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants.
- In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect
- couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder. and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to
- returning the compressor to the suppliers.
 Only electric heating to the compressor body shall be employed to accelerate this process
- When oil is drained from a system, it shall be carried out safely.

15. Other safety precautions

- A brazed, welded, or mechanical connection shall be made before opening the valves to permit refrigerant to flow between the refrigerating system parts.
- Flammable refrigerant used, refrigerant tubing protected or enclosed to avoid mechanical damage (IEC/EN 60335-2-40/A1).
- Tubing protected to extent that it will not be handled or used for carrying during moving of product (IEC/EN 60335-2-40/A1).
- Flammable refrigerant used, low temperature solder alloys, such as lead/tin alloys, not acceptable for pipe connections (IEC/EN 60335-2-40/A1).
- When there is flare connection, it must be installed outdoor

Selection of installation location for the indoor unit


• Minimum installation area for indoor unit

⚠ CAUTION

The indoor unit shall be installed in a room with minimum installation area or more according to the refrigerant charge amount (factory refrigerant charge + additional refrigerant charge).

For factory refrigerant charge, refer to the outdoor unit label model name or installation sheet.


For additional refrigerant charge, refer to the outdoor unit installation sheet.

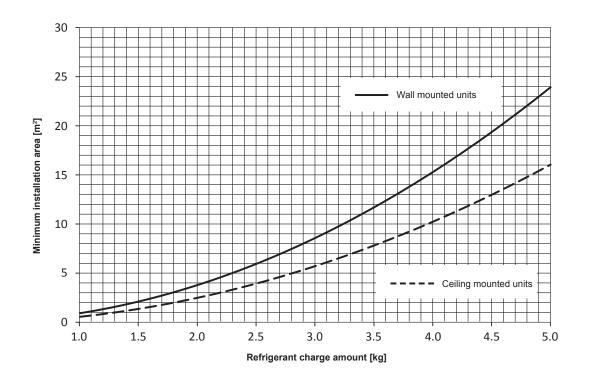

Refrigerant charge	Minimum instal	installation area [m²]	
amount [kg]	Wall mounted units	Ceiling mounted units	
1.0	1.0	0.6	
1.1	1.2	0.8	
1.2	1.4	0.9	
1.3	1.6	1.1	
1.4	1.9	1.3	
1.5	2.1	1.4	
1.6	2.4	1.6	
1.7	2.8	1.8	
1.8	3.1	2.1	
1.9	3.4	2.3	
2.0	3.8	2.6	
2.1	4.2	2.8	
2.2	4.6	3.1	
2.3	5.0	3.4	
2.4	5.5	3.7	
2.5	6.0	4.0	
2.6	6.4	4.3	
2.7	7.0	4.7	
2.8	7.5	5.0	
2.9	8.0	5.4	
3.0	8.6	5.7	

Refrigerant charge	Minimum installation area [m²]		
amount [kg]	Wall mounted units	Ceiling mounted units	
3.1	9.2	6.1	
3.2	9.8	6.5	
3.3	10.4	7.0	
3.4	11.0	7.4	
3.5	11.7	7.8	
3.6	12.4	8.3	
3.7	13.1	8.7	
3.8	13.8	9.2	
3.9	14.5	9.7	
4.0	15.3	10.2	
4.1	16.0	10.7	
4.2	16.8	11.3	
4.3	17.6	11.8	
4.4	18.5	12.4	
4.5	19.3	12.9	
4.6	20.2	13.5	
4.7	21.1	14.1	
4.8	22.0	14.7	
4.9	22.9	15.3	
5.0	23.8	16.0	

9. OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER

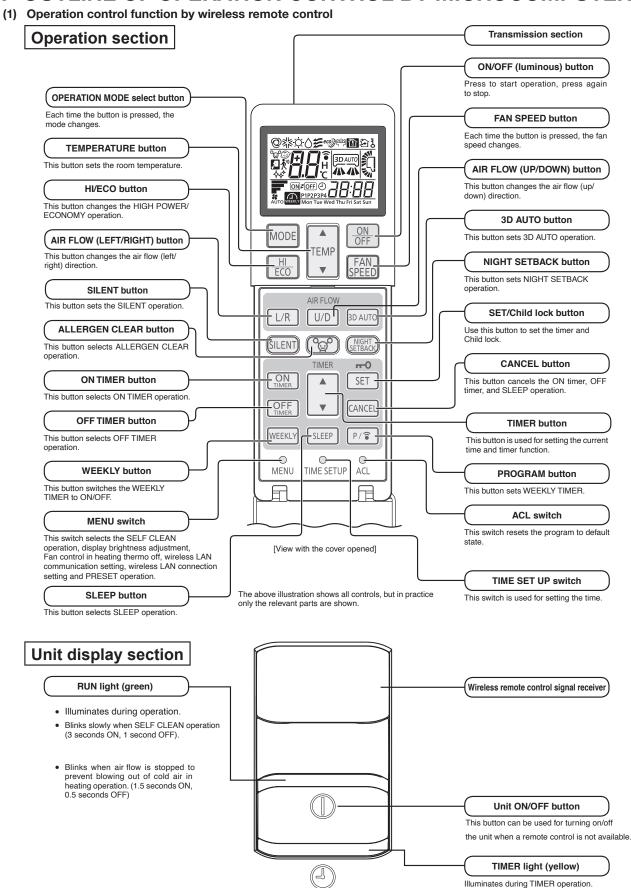

RUN light blinks quickly during invalid operation mode.

(2) Unit ON/OFF button

When the wireless remote control batteries become weak, or if the wireless remote control is lost or malfunctioning, this button may be used to turn the unit on and off.


(a) Operation

Push the button once to place the unit in the automatic mode. Push it once more to turn the unit off.

(b) Details of operation

The unit will go into the automatic mode in which it automatically determines, from room temperature (as detected by sensor), whether to go into the COOL or HEAT modes.

Function Operation mode	Room temperature setting	Fan speed	Flap/Louver	Timer switch
COOL	About 24°C	Auto	Auto	Continuous
HEAT	About 26°C	Auto	Auto	Continuous

 


(3) Auto restart function

- (a) Auto restart function records the operational status of the air-conditioner immediately prior to be switched off by a power cut, and then automatically resumes operations after the power has been restored.
- (b) The following settings will be cancelled:
 - (i) Timer settings
 - (ii) HIGH POWER operation

Notes (1) Auto restart function is set at on when the air-conditioner is shipped from the factory. Consult with your dealer if this function needs to be switched off.

- (2) When power failure ocurrs, the timer setting is cancelled. Once power is resumed, reset the timer.
- (3) If the jumper wire (J1) "AUTO RESTART" is cut, auto restart is disabled. (See the diagram at right.)

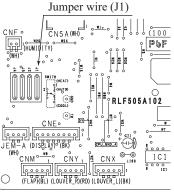

(4) Installing two air-conditioners in the same room

 
In case two air-conditioners are installed in the same room, apply this setting so that one unit can be operated with only one remote control.


(a) Setting the wireless remote control

- (i) Slide the cover and take out the batteries.
- (ii) Disconnect the switching line next to the battery with wire cutters.
- (iii) Set the batteries and cover again.

(b) Setting an indoor unit

- (i) Turn off the power source and turn it on after 1 minute.
- (ii) Point the wireless remote control (that was set according to the procedure described on the left side) at the indoor unit and send a signal by pressing the ACL switch on the wireless remote control.
 - Since the signal is sent in about 6 seconds after the ACL switch is pressed, point the wireless remote control at the indoor unit for some time.
- (iii) Check that the reception buzzer sound "Peep" is emitted from the indoor unit.At completion of the setting, the indoor unit emits a buzzer sound "Peep".(If no reception sound is emitted, start the setting from the beginning again.)



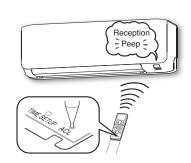

(5) Selection of the annual cooling function

(a) The annual cooling control is valid from factory default setting. It is possible to disable by cutting jumper wire (J3), or changing the setting of DIP switch (SW2-4) on the interface kit (Option) PCB if it is connected.


Jumper wire (J3)	Interface kit (SC-BIKN2-E) SW2-4	Function
Shorted	ON	Enabled
Shorted	OFF	Disabled
Open	ON	Disabled
Open	OFF	Disabled

Notes: (1) Default states of the jumper wire (J3) and the interface kit at the shipping from factory -On the PCB, the DIP switch (SW2-4) is set to enable the annual cooling function.

(2) To cancel the annual cooling setting, consult your dealer.

(b) Content of control

 
- (i) If the outdoor air temperature sensor (TH3) detects below 5°C, the indoor unit speed is switched to 7th step.
- (ii) If the outdoor air temperature sensor (TH3) detects higher than 10°C, the indoor unit speed is changed to the normal control speed.



(a) Heating only function is enabled by disconnecting the jumper wire (J4).

(b) Content of control


Operation mode setting	Operation mode
COOL/DRY/FAN	FAN
AUTO/HEAT	HEAT

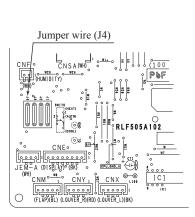


(7) High power operation

Pressing the HI POWER/ECONOMY button intensifies the operating power and initiates powerful cooling or heating operation for 15 minutes continuously. The wireless remote control displays HIGH POWER mark and the FAN SPEED display disappears.

 - (a) During the HIGH POWER operation, the room temperature is not controlled. When it causes an excessive cooling or heating, press the HI POWER/ECONOMY button again to cancel the HIGH POWER operation.
- (b) HIGH POWER operation is not available during the DRY and the ON timer to OFF timer operations.
- (c) When HIGH POWER operation is set after ON timer operation, HIGH POWER operation will start from the set time.
- (d) When the following operation are set, HIGH POWER operation will be cancelled.
 - ① When the HI POWER/ECONOMY button is pressed again.
 - 2 When the operation mode is changed.
 - ③ When it has been 15 minutes since HIGH POWER operation has started.
 - ④ When the 3D AUTO botton is pressed.
 - ⑤ When the SILENT botton is pressed.
 - 6 When the NIGHT SETBACK botton is pressed.
- (e) Not operable while the air-conditioner is OFF.
- (f) After HIGH POWER operation, the sound of refrigerant flowing may be heard.

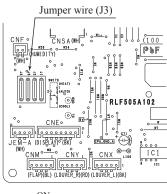



Outdoor air temperature (°C)

(8) Economy operation

Pressing the HI POWER/ECONOMY button initiates a soft operation with the power suppressed in order to avoid an excessive cooling or heating. The unit operate 1.5°C higher than the setting temperature during cooling or 2.5°C lower than that during heating. The wireless remote control displays ECONOMY mark and the FAN SPEED display disappears.

- (a) It will go into ECONOMY operation at the next time the air-conditioner runs in the following cases.
 - ① When the air-conditioner is stopped by ON/OFF button during ECONOMY operation.
 - ② When the air-conditioner is stopped in SLEEP or OFF TIMER operation during ECONOMY operation.
 - ③ When the operation is retrieved from SELF CLEAN or ALLERGEN CLEAR operation.
- (b) When the following operation are set, ECONOMY operation will be cancelled.
 - ① When the HI POWER/ECONOMY button is pressed again.
 - ② When the operation mode is changed from DRY to FAN.
 - ③ When the NIGHT SETBACK botton is pressed.
- (c) Not operable while the air-conditioner is OFF.
- (d) The setting temperature is adjusted according to the following table.

Item Mode	Cooling	Heating
Tamanamatana	(1)+0.5	①-1.0
Temperature adjustment	2+1.0	②-2.0
<i>y</i>	③+1.5	(3)-2.5

 
- ① at the start of operation.
- ② one hour after the start of operation.
- 3 two hours after the start of operation.

(9) Air flow direction adjustment

Air flow direction can be adjusted with by AIR FLOW **♦** (UP/DOWN) and **♦** (LEFT/RIGHT) button on the wireless remote control.

(a) Flap

Every time when you press the AIR FLOW \(\Delta \) (UP/DOWN) button the mode changes as follows.




• Angle of flap from horizontal

Wireless remote control display	-9	,J	Ŋ	Ş	Ş
COOL, DRY, FAN	Approx. 25°	Approx. 30°	Approx. 40°	Approx. 50°	Approx. 60°
HEAT	Approx. 25°	Approx. 35°	Approx. 50°	Approx. 60°	Approx. 70°

(b) Louver

 Every time when you press the AIR FLOW **(**LEFT/RIGHT) button the mode changes as follows.




· Angle of louver


Wireless remote control display	11				
Center installation	Left approx. 50°	Left approx. 20°	Center	Right approx. 20°	Right approx. 50°
Right end installation	Left approx. 50°	Left approx. 45°	Left approx. 30°	Center	Right approx. 20°
Left end installation	Left approx. 20°	Center	Right approx. 30°	Right approx. 45°	Right approx. 50°

(c) Swing

- (i) Swing flap
 - Flap moves in upward and downward directions continuously.
- (ii) Swing louver

 Louver moves in left and right directions continuously.



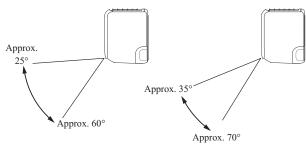



(d) Memory flap (Flap or louver stopped)

When you press the AIR FLOW (UP/DOWN or LEFT/RIGHT) button once while the flap or louver is operating, it stops swinging at the position. Since this angle is memorized in the microcomputer, the flap or louver will automatically be set at this angle when the next operation is started.

(10) 3D auto operation

Control the flap and louver by 3D AUTO button on the wireless remote control.

Fan speed and air flow direction are automatically controlled, allowing the entire indoor to efficiently conditioned.

♦ In HEAT operation

- (a) During cooling and heating (Including auto cooling and heating)
 - (i) Air flow selection is determined according to indoor temperature and setting temperature.

Operation mode	Air flow selection				
Operation mode	AUTO		HI	MED	LO
Cooling	Room temp. – Setting temp. >5°C	Room temp. – Setting temp. ≦5°C			
Cooling	HIGH POWER	AUTO	НІ	MED	10
Heating	Setting temp. – Room temp. >5°C	Setting temp. – Room temp. ≦ 5°C	п	MED	LO
пеанну	HIGH POWER	AUTO			

- (ii) Air flow direction is controlled according to the room temperature and setting temperature.
 - 1) When 3D auto operation starts

	Cooling	Heating	
Flap	Up/down swing		
Louver	Wide (Fixed)	Center (Fixed)	

When Room temp. – Setting temp. is $\leq 5^{\circ}$ C during cooling and when setting temp. – Room temp. is $\leq 5^{\circ}$ C during heating, the system switches to the following air flow direction control. After the louver swings left and right symmetrically for 3 cycles, control is switched to the control in 3).

	Cooling	Heating		
Flap	Horizontal blowing (Fixed)	Slant forwardl blowing (Fixed)		
Louver	Left/right swing			

3) After the flap swings for 5 cycles, control is switched to the control in 4).

	Cooling Heating			
Flap	Up/down swing			
Louver	Center (Fixed)			

4) For 5 minutes, the following air flow direction control is carried out.

	Cooling	Heating	
Flap	Horizontal blowing (Fixed)	Slant forwardl blowing (Fixed)	
Louver	Wide (Fixed)		

5) After 5 minutes have passed, the air flow direction is determined according to the room temperature and setting temperature.

Operation mode	Air flow direction contorol				
Cooling	Room temp. – Setting temp. ≦2°C	2°C < Room temp. – Setting temp. ≦5°C	Room temp. – Setting temp. > 5°C		
Cooling	The control in 4) continues.	Control returns to the control in 2).	Control returns to the control in 1).		
Heating	Setting temp. – Room temp. ≦2°C	2° C < Setting temp. – Room temp. $\leq 5^{\circ}$ C	Setting temp. – Room temp. > 5°C		
Heating	The control in 4) continues.	Control returns to the control in 2).	Control returns to the control in 1).		

(b) During DRY operation

Flap	Horizontal blowing (Fixed)
Louver	Wide (Fixed)

(11) Timer operation

(a) Comfort start-up (ON timer operation)

The unit starts the operation 5 to 60 minutes earlier so that the room can approach optimum temperature at ON timer.

(b) Sleep timer operation

Pressing the SLEEP button causes the temperature to be controlled with respect to the set temperature.

(c) OFF timer operation

The OFF timer can be set at a specific time (in 10-minute units) within a 24-hour period.

(d) Weekly timer operation

Up to 4 programs with timer operation (ON timer / OFF timer) are available for each day of the week.

Note Timer operation from wireless remote control becomes invalid when you connect the interface kit (such as SC-BIKN2-E).

(e) Combination of patterns which can be set for the timer operations

Item Item	Sleep timer	OFF timer	ON timer	Weekly timer
Sleep timer		×	0	×
OFF timer	×		0	×
ON timer	0	0		×
Weekly timer	×	×	×	

Notes (1) \bigcirc : Allowed \times : Not

⁽²⁾ Since the ON timer, Sleep timer and OFF timer are set in parallel, when the times to turn ON and OFF the air-conditioner are duplicated, the setting of the OFF timer has priority.

(12) Silent operation

When the silent operation is set, the unit operates by dropping the outdoor fan speed and the compressor speed.

	SR	K20	SRK25		
	Cooling	Heating	Cooling	Heating	
Outdoor fan speed (Upper limit)	4th speed	4th speed	4th speed	4th speed	
Compressor speed (Upper limit)	26 rps	41 rps	30 rps	45 rps	

(13) Night setback operation

When the night setback operation is set, the heating operation starts with the setting temperature at 10° C.

(14) Air flow range setting

Take the air-conditioner location into account and adjust the left/right air flow range to maximize air-conditioning.

(a) Setting

- (i) If the air-conditioning unit is running, press the ON/OFF button to stop.The installation location setting cannot be made while the unit is running.
- (ii) Press the AIR FLOW U/D (UP/DOWN) button and the AIR FLOW L/R (LEFT/RIGHT) button together for 5 seconds or more.


The installation location display illuminates.


(iii) Setting the air-conditioning installation location.

Press the AIR FLOW L/R (LEFT/RIGHT) button and adjust to the desired location.


Each time the AIR FLOW L/R (LEFT/RIGHT) button is pressed, the indicator is switched in the order of:



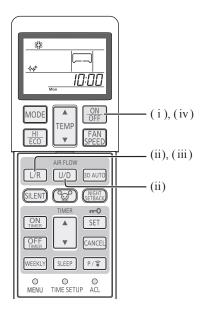

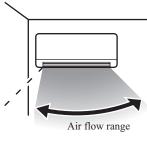



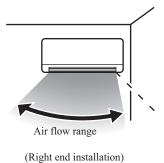

(iv) Press the ON/OFF button.

The air-conditioner's installation location is set.

Press within 60 seconds of setting the installation location (while the installation location setting display illuminates).

(15) Display brightness adjustment

This function can be used when it is necessary to adjust the brightness of unit display.

Brightness level	Run light	Timer light
LV2	100%	100%
LV1	50%	50%
LV0	0%	0%

Note(1) When the unit displays self diagnosis or service mode, brightness level is always LV2.

(16) Wireless LAN connection function

(a) Operating conditions

When a signal of wireless LAN connection setting was received from a remote control during all air-conditioners stop

(b) Detail of operation

- (i) A signal which corresponds to the signal received from a remote control is sent to interface.
- (ii) A buzzer for confirmation of receipt rings.

(c) Reset conditions

When either of the following conditions is satisfied

- (i) When a reception complete signal was received from interface
- (ii) When an interface communication setting OFF signal was received from a remote control

Note: Regarding a long buzzer sound (In wireless LAN connection setting)

When RUN light and TIMER light blink simultaneously (at an interval of 2 seconds) and you push the remote control button, the indoor unit may emit a long buzzer sound for approximately 3 seconds.

The occurrence of this buzzer sound is not abnormal.

(17) Fan control during heating thermostat OFF

- (i) Following fan controls during the heating thermostat OFF can be selected with the wireless remote control.
 - 1) Normal thermostat operation 2) Fireplace 3) Interval 4) Stop
- (ii) When the "Normal thermostat operation" is selected, the indoor fan is controlled by HOT KEEP.
- (iii) When the "Fireplace" is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the "Interval" is selected, following controls are performed:
 - 1) If the thermostat is turned OFF during the heating operation, the indoor unit turns OFF the indoor fan.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ① tap for 1 minute.
 - 3) After operating at ① tap for 1 minute, the indoor fan moves to the state of 1) above.
- (v) When the "Stop" is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF.

Note To use "Stop" function, additional work in which the suction temperature sensor can detect the room temperature appropriately is required.

Otherwise, it may take time to return to heating and the heating capacity may be insufficient.

(18) Outline of heating operation

(a) Operation of major functional components in heating mode

		Heating	
	Thermostat ON	Thermostat OFF	Failure
Compressor	ON	OFF	OFF
Indoor fan motor	ON	ON(HOT KEEP)*	OFF
Outdoor fan motor	ON	OFF (few minutes ON)	OFF
4-way valve	ON	ON	OFF (3 minutes ON)

^{*}When a wired remote control is connected, a signal of a wired remote control is priority. HOT KEEP, Fireplace, Interval and Stop can be established.

(b) Details of control at each operation mode (pattern)

(i) Fuzzy operation

Deviation between the indoor temperature setting correction temperature and the return air temperature is calculated in accordance with the fuzzy rule, and used for control of the air capacity and the compressor speed.

Model Fan speed	SRK20	SRK25
Auto	20-115rps	20-115rps
HI	20-115rps	20-115rps
MED	20-86rps	20-104rps
LO	20-70rps	20-84rps
ULO	20-44rps	20-54rps

When the defrost operation, protection device, etc. is actuated, operation is performed in the corresponding mode.

(ii) Hot keep operation

During the heating operation, the indoor fan speed can be controlled based on the temperature of the indoor heat exchanger (Th2) to prevent blowing out of cold air.

(c) Defrost operation

- (i) Starting conditions (Defrost operation can be started only when all of the following conditions are satisfied.)
 - 1) After start heating operation


When it elapsed 35 minutes. (Total compressor operation time)

2) After finish of defrost operation

When it elapsed 35 minutes. (Total compressor operation time)

- 3) Outdoor heat exchanger sensor (TH2) temperature
 - When the temperature has been -5°C or less for 3 minutes continuously.
- 4) The difference between the outdoor air sensor temperature and the outdoor heat exchanger sensor temperature is as following.

Models SRK20, 25

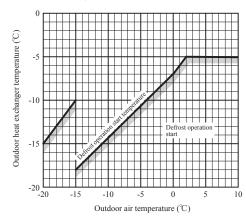


In the case, indoor air temperature is detected by sensor on the wired remote control.

5) During continuous compressor operation

In case satisfied all of following conditions.

 - Connect compressor speed 0 rps 10 times or more.
- Satisfy 1), 2) and 3) conditions above.
- Outdoor air temperature is 3°C or less.
- (ii) Ending conditions (Operation returns to the heating cycle when either one of the following is satisfied.)
 - 1) Outdoor heat exchanger sensor (TH2) temperature: 13°C or higher
 - 2) Continued operation time of defrost operation \rightarrow For more than 15 minutes
 - Defrost operation



*Depends on an operation condition, the time can be longer than 7 minutes.

(d) Countermeasure for excessive temperature rise

If it feels excessive temperature rise in heating operation, setting temperature can be lower.

(i) Setting

Push ON/OFF button 30 seconds or more after turn on the power source and operate the air-conditioner at least once time, At completion of the setting, the indoor unit emits a buzzer sound "Pip".

(ii) Contents of control

Unit: °C

		Signal of wireless remote control (Display)											
	18	19	20	21	22	23	24	25	26	27	28	29	30
Before setting	20	21	22	23	24	25	26	27	28	29	30	31	32
After setting	18	19	20	21	22	23	24	25	26	27	28	29	30

(iii) Reset condition

Push ON/OFF button 30 seconds or more during setting this mode. At completion of the reset, the indoor unit emits a buzzer sound "PiPiPi".

(19) Outline of cooling operation

(a) Operation of major functional components in cooling mode

	Cooling								
	Thermostat ON	Thermostat OFF	Failure						
Compressor	ON	OFF	OFF						
Indoor fan motor	ON	ON	OFF						
Outdoor fan motor	Outdoor fan motor ON		OFF (few minutes ON)						
4-way valve	OFF	OFF	OFF						

(b) Detail of control in each mode (Pattern)

(i) Fuzzy operation

During the fuzzy operation, the air flow and the compressor speed are controlled by calculating the difference between the indoor temperature setting correction temperature and the return air temperature.

Model Fan speed	SRK20	SRK25
Auto	15-66rps	15-74rps
HI	15-66rps	15-74rps
MED	15-52rps	15-60rps
LO	15-42rps	15-48rps
ULO	15-34rps	15-38rps


(20) Outline of dehumidifying (DRY) operation

(a) Purpose of DRY mode

The purpose is "Dehumidification", and not to control the humidity to the target condition. Indoor/outdoor unit control the operation condition to reduce the humidity, and also prevent over cooling.

(b) Outline of control

(i) Indoor unit fan speed and compressor are controlled by the area which is selected by the temperature difference.

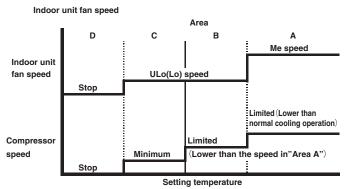

Difference between set temperature and indoor air temperature

(ii) The indoor unit checks the current area by every 5 minutes, and operates by the next checking.

 
(c) Other

When the outdoor air temperature and room temperature are low in cooling operation, indoor unit can not operate cooling mode, and DRY mode. In this case, the unit operates in heating mode to rise the indoor air temperature and after that start DRY mode.


(21) Outline of automatic operation

(a) Determination of operation mode

Operation mode is determined by indoor air temperature and outdoor air temperature as following.



 (b) Operation mode is changes when keep cooling and heating thermostat off 20 minutes and be satisfied with following conditions. If the setting temperature is changed with the remote control, the operation mode is judged immediately.



XIt can not be changed to heating mode if outdoor air temperature is 28°C or higher.

- (c) When the unit is started again within one hour after the stop of automatic operation or when the automatic operation is selected during heating, cooling or DRY mode, the unit is operated in the previous operation mode.
- (d) Setting temperature can be adjusted within the following range. There is the relationship as shown below between the signals of the wireless remote control and the setting temperature.

														$omi \cdot c$
			Signals of wireless remote control (Display)											
		18	19	20	21	22	23	24	25	26	27	28	29	30
Setting	Cooling	18	19	20	21	22	23	24	25	26	27	28	29	30
temperature	Heating	20	21	22	23	24	25	26	27	28	29	30	31	32

(e) When the unit is operated automatically with the wired remote control, the cooling operation is controlled according to the display temperatures while the setting temperature is compensated by $+2^{\circ}$ C during heating.

(22) Protective control function

Dew prevention control (During cooling)

Prevents dewing on the indoor unit

Operating conditions

When the following conditions have been satisfied for more than 30 minutes after starting operation


- Compressor's speed is 32 rps or higher.
- Detected value of humidity is 68% or higher.

Contents of operation

Air capacity control

Item	Model	SRK20, 25
101110	Upper limit of compressor's speed	RangeA: 60rps, RangeB: 60rps
LO,ULO	Indoor fan	Adaptable to compressor speed
AUTO HI MED	Upper limit of compressor's speed	RangeA: 60rps, RangeB: 60rps
AUTO,HI,MED	Indoor fan	Adaptable to compressor speed

 Note (1) Ranges A and B are as shown below.



- When this control has continued for more than 30 minutes continuously, the following wind direction control is performed.
 - a) When the vertical wind direction is set at other than the vertical swing, the flaps change to the horizontal position.
 - b) When the horizontal wind direction is set at other than the horizontal swing, the louver changes to the vertical position.

(iii) Reset condition

Humidity is 63% or lower.


(b) Frost prevention control (During cooling or dehumidifying)

Operating conditions

- Indoor heat exchanger temperature (Th2) is lower than 5°C. 1)
- 5 minutes after reaching the compressor speed except 0 rps.

(ii) Detail of anti-frost operation

Indoor heat exchanger temperature Item	5°C or lower	2.5°C or lower		
Lower limit of compressor command speed	22 rps	0 rps		
Indoor fan	Depends on operation mode	Keep the fan speed before frost prevention control		
Outdoor fan	Depends on compressor speed	D		
4-way valve	OFF	Depends on stop mode		

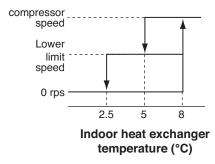

- Notes (1) When the indoor heat exchanger temperature is in the range of 2.5–5°C, the speed is reduced by 4 rps at each 20 seconds.

 - When the temperature is lower than 2.5°C, the compressor is stopped.

 When the indoor heat exchanger temperature is in the range of 5–8°C, the compressor speed is been maintained.

(iii) Reset conditions

When either of the following condition is satisfied


- 1) The indoor heat exchanger temperature (Th2) is 8°C or higher.
- 2) The compressor speed is 0 rps.

(c) Cooling overload protective control

Operating conditions

When the outdoor air temperature (TH3) has become continuously for 30 seconds at 41°C or higher, or 47°C or higher with the compressor running, the lower limit speed of compressor is brought up.

Model	SRK20, 25	
Outdoor air temperature	41°C or higher	47°C or higher
Lower limit speed	30 rps	45 rps

 

Outdoor air temperature (°C)

(ii) Detail of operation

- 1) The outdoor fan is stepped up by 3 speed step. [Upper limit 8th speed.]
- 2) The lower limit of compressor speed is set to 30 or 45 rps. However, when the thermo OFF, the speed is reduced to 0 rps.

(iii) Reset conditions

When either of the following condition is satisfied

- 1) The outdoor air temperature is 40°C or lower.
- 2) The compressor speed is 0 rps.

(d) Cooling high pressure control

Purpose


Prevents anomalous high pressure operation during cooling

Detector (ii)


Outdoor heat exchanger sensor (TH2).

Detail of operation (iii)

(Example) Compressor speed

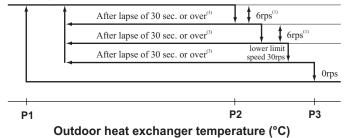

		TH2 (℃)			
		P1	P2	P3	
CDIZOO OF	Range A	48	53	55	
SRK20, 25	Range B	53	58	63	

 

Notes (1) When the outdoor heat exchanger temperature is in the range of P2-P3°C, the speed is reduced by 6 rps at each 30 seconds.

- When the outdoor heat exchanger temperature is in the range of 12-15°, the speed is reduced by 6 ps at each 56 seconds.

 When the temperature is P3°C or higher, the compressor is stopped.

 When the outdoor heat exchanger temperature is in the range of P1-P2°C, if the compressor speed is been maintained and the operation has continued for more than 30 seconds at the same speed, it returns to the normal cooling operation.

(e) Cooling low outdoor air temperature protective control


Operating conditions


When the outdoor air temperature (TH3) is 22°C or lower for 20 seconds continuously while the compressor speed is other than 0 rps.

(ii) Detail of operation

- It controls the upper and lower limit values for the compressor speed according to the following table.
- It checks the outdoor air temperature (TH3) once every hour to judge the operation range.

		Compr	essor speed: Upper/lower limit (rps)				
	Lower 1 Range B Range A		Upper 1	Lower 2	Upper 2	Lower 3	Upper 3
SRK20, 25	30	Release	60	44	50	50	50

 

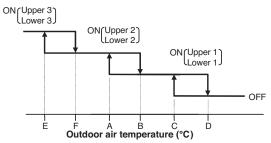

• Values of A, B, C, D, E, F

		Outdo	or air tei	mperatu	re (°C)	
	E	F	Α	В	С	D
First time	-8	-5	0	3	22	25
After the second times	-2	1	5	8	25	28

(iii) **Reset conditions**

When either of the following condition is satisfied

- The outdoor air temperature (TH3) is D°C or higher.
- 2) The compressor speed is 0 rps.

(f) Heating high pressure control

 
Purpose

Prevents anomalous high pressure operation during heating

Detector

Indoor heat exchanger sensor (Th2)

Detail of operation



- Notes (1) When the indoor heat exchanger temperature is in the range of B-C °C, the speed is reduced by 4 rps at each 20 seconds.

 (2) When the indoor heat exchanger temperature is in the range of C-D °C, the speed is reduced by 8 rps at each 20 seconds. When the temperature is D °C or higher continues for 1 minute, the compressor is stopped.
 - (3) When the indoor heat exchanger temperature is in the range of A-B °C, if the compressor speed is been maintained and the operation has continued for more than 20 seconds at the same speed, it returns to the normal heating operation.
 - (4) Indoor fan retains the fan speed when it enters in the high pressure control. Outdoor fan is operated in accordance with the speed.

Temperature list

				Unit: °C
	Α	В	С	D
RPSmin < 50	47	52	54	58
50 ≦ RPSmin < 92	47.5	55	57	61
92 ≦ RPSmin ≦ 115	47.5 - 39	55 - 40	57 - 42	61

Note RPSmin: The lower one between the outdoor speed and the compressor speed

(g) Heating overload protective control

 
Outdoor unit side

1) Operating conditions


When the outdoor air temperature (TH3) is 17°C or higher for 30 seconds continuously while the compressor speed other than 0 rps.

2) Detail of operation

- a) Taking the upper limit of compressor speed at 60 rps, if the output speed obtained with the fuzzy calculation exceeds the upper limit, the upper limit value is maintained.
- b) The lower limit of compressor speed is set to 40 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 40 rps. However, when the thermostat OFF, the speed is reduced to 0 rps.
- Inching prevention control is activated and inching prevention control is carried out with the minimum speed set at 40 rps.
- d) The outdoor fan speed is set on 2nd speed.



Compress	or speed : U			
Lowe	r limit	Upper limit	Outdoor fan speed	
Range A	Range B	Opper mint		
40	Release	60	2nd	

 

3) Reset conditions

The outdoor air temperature (TH3) is 16°C or lower.

 
(h) Heating low outdoor air temperature protective control

(i) Operating conditions

When the outdoor air temperature (TH3) is lower than -2°C or lower for 30 seconds continuously while the compressor speed is other than 0 rps.

(ii) Detail of operation

The lower limit compressor speed is change as shown in the figure below.



(iii) Reset conditions

When either of the following condition is satisfied

- 1) The outdoor air temperature (TH3) becomes 2°C or higher.
- 2) The compressor speed is 0 rps.


(i) Compressor overheat protection

(i) Purpose

It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor overheat.

(ii) Detail of operation

1) Speeds are controlled with temperature detected by the temperature sensor (TH4) mounted on the discharge pipe.

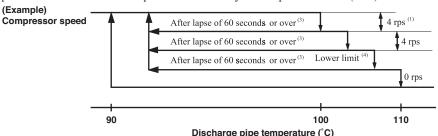

Notes (1) When the discharge pipe temperature is in the range of 100-110°C, the speed is reduced by 4 rps.

- (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps
- (3) If the discharge pipe temperature is in the range of 90-100°C even when the compressor speed is maintained for 60 seconds when the temperature is in the range of 90-100°C, the speed is raised by 1 rps and kept at that speed for 60 seconds. This process is repeated until the command speed is reached.

(4) Lower limit speed

Model	Mode	Cooling	Heating
Lower limit speed	SRK20, 25	15 rps	20 rps

2) If the temperature of 110°C is detected by the sensor on the discharge pipe, then the compressor will stop immediately. When the discharge pipe temperature drops and 3 minutes has elapsed, the unit starts again within 1 hour but there is no start at the third time.

(j) Current safe

(i) Purpose

Current is controlled not to exceed the upper limit of the setting operation current.

(ii) Detail of operation

Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor speed is reduced.

If the mechanism is actuated when the compressor speed is less than 36 rps, the compressor is stopped immediately. Operation starts again after 3 minutes.

(k) Current cut

(i) Purpose

Inverter is protected from overcurrent.

(ii) Detail of operation

Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after 3 minutes.

(I) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air-conditioning.

The compressor is stopped if any one of the following in item (i), (ii) is satisfied. Once the unit is stopped by this function, it is not restarted

- (i) When the input current is measured at 1 A or less for 3 continuous minutes or more.
- (ii) If the outdoor unit sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on.

(m) Indoor fan motor protection

When the air-conditioner is operating and the indoor fan motor is turned ON, if the indoor fan motor has operated at 300 min⁻¹ or under for more than 30 seconds, the unit enters first in the stop mode and then stops the entire system.

(n) Serial signal transmission error protection

(i) Purpose

Prevents malfunction resulting from error on the indoor ↔ outdoor signals

(ii) Detail of operation

If the compressor is operating and a serial signal cannot be received from the indoor control with outdoor control having serial signals continues for 7 minutes and 35 seconds, the compressor is stopped.

After the compressor has been stopped, it will be restarted after the compressor start delay if a serial signal can be received again from the indoor control.

(o) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(p) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 min⁻¹ or under for more than 30 seconds, the compressor and fan motor are stopped.

(q) Outdoor fan control at low outdoor temperature

(i) Cooling

1) Operating conditions

When the outdoor air temperature (TH3) is 22°C or lower for 30 seconds continuously while the compressor speed is other than 0 rps.

2) Detail of operation

After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat exchanger temperature shall implement the following controls.

• Value of A

	Outdoor fan
Outdoor air temperature > 15°C	3rd speed
0°C < Outdoor air temperature ≦ 15°C	2nd speed
Outdoor air temperature ≦ 0°C	1st speed

a) Outdoor heat exchanger temperature (TH2)≦21°C

Turn down the outdoor fan speed by 1 speed; after 1 speed down, hold that fan speed for 60 seconds; if the outdoor heat exchanger temperature is 21°C or lower, gradually reduce the outdoor fan speed by 1 speed.

• Lower limit fan speed

	Outdoor fan
Outdoor air temperature > 0°C	2nd speed
Outdoor air temperature ≦ 0°C	1st speed

b) 21°C < Outdoor heat exchanger temperature (TH2) ≤ 38°C

After the outdoor fan speed maintains at A speed for 20 seconds; if the outdoor heat exchanger temperature is 21°C-38°C, maintain outdoor fan speed.

c) Outdoor heat exchanger tempeature (TH2) > 38°C

Turn up the outdoor fan speed by 1 speed; after 1 speed up, hold that fan speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 38°C, gradually increase outdoor fan speed by I speed. (Upper limit 3rd speed)

3) Reset conditions

When either of the following conditions is satisfied

- a) The outdoor air temperature (TH3) is 24°C or higher.
- b) The compressor command speed is 0 rps.

(ii) Heating

1) Operating conditions

When the outdoor air temperature (TH3) is 6°C or lower for 30 seconds continuously while the compressor speed is other than 0 rps.

2) Detail of operation

The outdoor fan is stepped up by 2 speed step at each 20 seconds. (Upper limit 8th speed (1 speed step up corresponding to inverter number of rotations when the outdoor air temperature (TH3) is 6°C or lower))

3) Reset conditions

When either of the following conditions is satisfied

- a) The outdoor air temperature (TH3) is 7°C or higher.
- b) The compressor command speed is 0 rps.

(r) Refrigeration cycle system protection

(i) Starting conditions

- 1) When 5 minutes have elapsed after the compressor ON or the completion of the defrost operation
- 2) Other than the defrost operation
- 3) When, after satisfying the conditions of 1) and 2) above, the compressor speed, room temperature (Th1) and indoor heat exchanger temperature (Th2) have satisfied the conditions in the following table for 5 minutes

Operation mode	Compressor speed (N)	Room temperature (Th1)	Room temperature (Th1)/ Indoor heat exchanger temperature (Th2)
Cooling	50≦N	10≦Th1≦40	Th1-4 <th2< td=""></th2<>
Heating (1)	50≦N	0≦Th1≦40	Th2 <th1+6< td=""></th1+6<>

Note (1) Except that the fan speed is Hi in heating operation.

(ii) Contents of control

- 1) When the conditions of (i) above are satisfied, the compressor stops.
- 2) Error stop occurs when the compressor has stopped 3 times within 60 minutes.

(iii) Reset condition

When the compressor has been turned OFF

(23) Defrost heater control

(a) Starting conditions

When all of the following conditions (i) - (iv) have been met for 1 minute continuously, with the compressor frequency at 0 rps or higher:

- (i) Operation is in the heating mode.
- (ii) Outdoor heat exchanger sensor (TH2) temperature is -2.0°C or lower.
- (iii) Outdoor air temperature sensor (TH3) temperature is 0°C or lower.
- (iv) 1) Outdoor air temperature, at 0°C

Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is 4°C or higher.

2) Outdoor air temperature, -5°C or higher and lower than 0°C

Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is 2°C or higher.

3) Outdoor air temperature, -10°C or higher and lower than -5°C

Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is 0°C or higher.

4) Outdoor air temperature, -15°C or higher and lower than -10°C

Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is -5°C or higher.

5) Outdoor air temperature, lower than -15°C

Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is -5°C or higher.

(b) Releasing conditions

When either of the following conditions is satisfied

- (i) Compressor frequency becomes 0 rps.
- (ii) When even one of the starting conditions of (a) is lost (When continuing for 1 minute)

Note The heater is forced to turn off during defrost operation. When the defrost operation is over and the outdoor fan is turned on, the heater is forced to turn on for 5 minutes. If the outdoor fan is turned off, the heater is also turned off.

10. MAINTENANCE DATA

(1) Cautions

- (a) If you are disassembling and checking an air-conditioner, be sure to turn off the power before beginning. When working on indoor units, let the unit sit for about 1 minute after turning off the power before you begin work. When working on an outdoor unit, there may be an electrical charge applied to the main circuit (electrolytic condenser), so begin work only after discharging this electrical charge (to DC10V or lower).
- (b) When taking out printed circuit boards, be sure to do so without exerting force on the circuit boards or package components.
- (c) When disconnecting and connecting connectors, take hold of the connector housing and do not pull on the lead wires.

(2) Items to check before troubleshooting


- (a) Have you thoroughly investigated the details of the trouble which the customer is complaining about?
- (b) Is the air-conditioner running? Is it displaying any self-diagnosis information?
- (c) Is a power source with the correct voltage connected?
- (d) Are the control lines connecting the indoor and outdoor units wired correctly and connected securely?
- (e) Is the outdoor unit's service valve open?

(3) Troubleshooting procedure (If the air-conditioner does not run at all)


If the air-conditioner does not run at all, diagnose the trouble using the following troubleshooting procedure. If the air-conditioner is running but breaks down, proceed to troubleshooting step (4).

Important When all the following conditions are satisfied, we say that the air-conditioner will not run at all.

- (a) The RUN light does not light up.
- (b) The flaps do not open.
- (c) The indoor fan motor does not run.
- (d) The self-diagnosis display does not function.

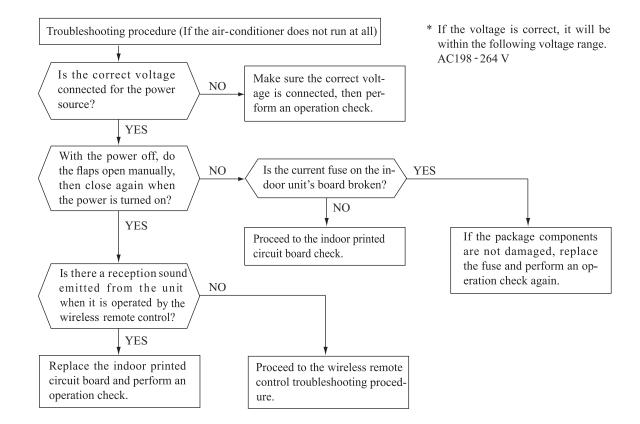

(4) Troubleshooting procedure (If the air-conditioner runs)

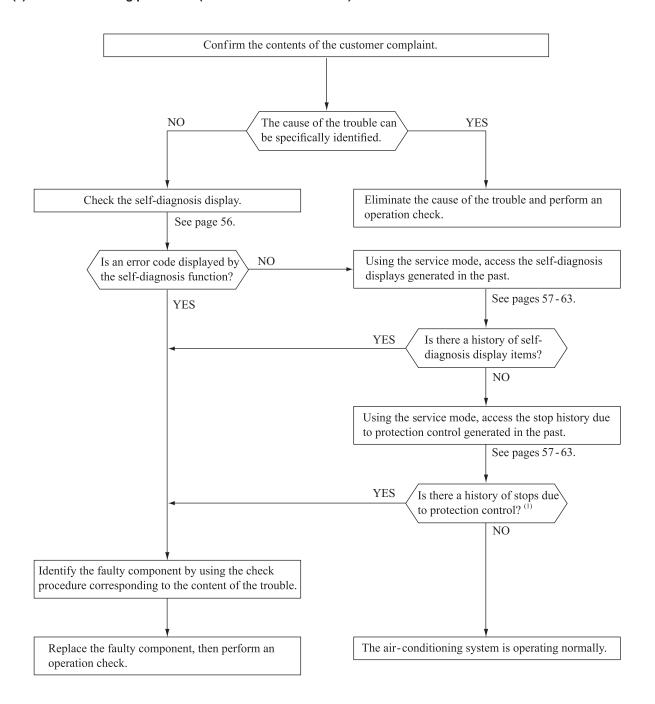

Note (1) Even in cases where only intermittent stop data are generated, the air-conditioning system is normal. However, if the same protective operation recurs repeatedly (3 or more times), it will lead to customer complaints. Judge the conditions in comparison with the contents of the complaints.

(5) Self-diagnosis table

When this air-conditioner performs an emergency stop, the reason why the emergency stop occurred is displayed by the flashing of display lights. If the air-conditioner is operated using the remote control 3 minutes or more after the emergency stop, the trouble display stops and the air-conditioner resumes operation. (1)

Indoor unit d		Wired (2) remote	Description	Cause	Display (flashing) condition
RUN light	TIMER light	control display	of trouble	Cause	Display (hasning) condition
1-time flash	ON	-	Heat exchanger temperature sensor 1 error	Broken heat exchanger temperature sensor I wire, poor connector connection Indoor unit PCB is faulty	When a heat exchanger temperature sensor 1 wire disconnection is detected while operation is stopped. (If a temperature of –28°C or lower is detected for 15 seconds, it is judged that the wire is disconnected.) (Not displayed during operation.)
2-time flash	ON	_	Room temperature sensor error	Broken room temperature sensor wire, poor connector connection Indoor unit PCB is faulty	When a room temperature sensor wire disconnection is detected while operation is stopped. (If a temperature of -45°C or lower is detected for 15 seconds, it is judged that the wire is disconnected.) (Not displayed during operation.)
3-time flash	ON	_	Heat exchanger temperature sensor 2 error	Broken heat exchanger temperature sensor 2 wire, poor connector connection Indoor unit PCB is faulty	When a heat exchanger temperature sensor 2 wire disconnection is detected while operation is stopped. (If a temperature of -28°C or lower is detected for 15 seconds, it is judged that the wire is disconnected.)(Not displayed during operation.)
6-time flash	ON	E 16	Indoor fan motor error	Defective fan motor, poor connector connection	When conditions for turning the indoor fan motor on exist during air -conditioner operation, an indoor unit fan motor speed of 300min or lower is measured for 30 seconds or longer. (The air-conditioner stops.)
Keeps flashing	1-time flash	E 38	Outdoor air temperature sensor error	Broken outdoor air temperature sensor wire, poor connector connection Outdoor unit PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.Or -55°C or higher is detected for within 20 seconds after power ON. (The compressor is stopped.)
Keeps flashing	2-time flash	E 37	Outdoor heat temperature exchanger sensor error	Broken heat exchanger temperature sensor wire, poor connector connection Outdoor unit PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.Or -55°C or higher is detected for within 20 seconds after power ON. (The compressor is stopped.)
Keeps flashing	4-time flash	E 39	Discharge pipe temperature sensor error	Broken discharge pipe temperature sensor wire, poor connector connection Outdoor unit PCB is faulty	–25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.(The compressor is stopped.)
ON	1-time flash	E 42	Current cut	Compressor locking, open phase on compressor output, short circuit on power transistor, service valve is closed	The compressor output current exceeds the set value during compressor start. (The air-conditioner stops.)
ON	2-time flash	E 59	Trouble of outdoor unit	Broken compressor wire Compressor blockage	When there is an emergency stop caused by trouble in the outdoor unit, or the input current value is found to be lower than the set value.(The air-conditioner stops.)
ON	3-time flash	E 58	Current safe stop	Overload operation Overcharge Compressor locking	When the compressor command speed is lower than the set value and the current safe has operated. (The air-conditioner stops.)
ON	4-time flash	E 51	Power transistor error	Broken power transistor	When the power transistor is judged breakdown while compressor starts. (The compressor is stopped.)
ON	5-time flash	E 36	Over heat of compressor	Gas shortage, defective discharge pipe temperature sensor, service valve is closed	When the value of the discharge pipe temperature sensor exceeds the set value.(The air-conditioner stops.)
ON	6-time flash	E 5	Error of signal transmission	Defective power source, Broken signal wire, defective indoor/outdoor unit PCB	When there is no signal between the indoor unit PCB and outdoor unit PCB for 10 seconds or longer (when the power is turned on), or when there is no signal for 7 minute 35 seconds or longer (during operation)(The air-conditioner stops.)
ON	7-time flash	E 48	Outdoor fan motor error	Defective fan motor, poor connector connection	When the outdoor fan motor speed continues for 30 seconds or longer at 75 min ⁻¹ or lower. (3 times) (The air -conditioner stops.)
ON	Keeps flashing	E 35	Cooling high pressure protecton	Overload operation, overcharge Broken outdoor heat exchange temperature sensor wire Service valve is closed	When the value of the outdoor heat exchanger temperature sensor exceeds the set value.
2-time flash	2-time flash	E 60	Rotor lock	Defective compressor Open phase on compressor Defective outdoor unit PCB	If the compressor motor magnetic pole positions cannot be correctly detected when the compressor starts. (The air-conditioner stops.)
4-time flash	ON	-	Trouble of wireless LAN interface	Defective wireless LAN interface boards, poor connector connection	When normal data cannot be received from wireless LAN interface for two minutes continuously
5-time flash	ON	E 47	Active filter voltage error	Defective active filter	When the wrong voltage connected for the power source. When the outdoor unit PCB is faulty
7-time flash	ON	E 57	Refrigeration cycle system protective control	Service valve is closed. Refrigerant is insufficient	When refrigeration cycle system protective control operates.
7-time flash	1-time flash	E 40	Service valve (gas side) closed opertion	Service valve (gas side) closed Defective outdoor unit PCB	If the output current of inverter exceeds the specifications, it makes the compressor stopping. (In heating mode). After 3-minute delay, the compressor restarts, but if this anomaly occurs 2 times within 20 minutes after the initial detection.
_	_	E 1	Error of wired remote control wiring	Broken wired remote control wire, defective indoor unit PCB	The wired remote control wire Y is open. The wired remote control wires X and Y are reversely connected. Noise is penetrating the wired remote control lines. The wired remote control or indoor unit PCB is faulty. (The communications circuit is faulty.)

Notes (1) The air-conditioner cannot be restarted using the remote control for 3 minutes after operation stops.

(2) The wired remote control is option parts.


(6) Service mode (Trouble mode access function)

This air-conditioner is capable of recording error displays and protective stops (service data) which have occurred in the past. If self-diagnosis displays cannot be confirmed, it is possible to get a grasp of the conditions at the time trouble occurred by checking these service data.


(a) Explanation of terms

Term	Explanation
Service mode	The service mode is the mode where service data are displayed by flashing of the display lights when the operations in item (b) below are performed with the indoor control.
Service data	These are the contents of error displays and protective stops which occurred in the past in the air-conditioner system. Error display contents and protective stop data from past anomalous operations of the air-conditioner system are saved in the indoor unit control's non-volatile memory (memory which is not erased when the power goes off). There are two types of data, self-diagnosis data and stop data, described below.
Self-diagnosis data	These are the data which display the reason why a stop occurred when an error display(self-diagnosis display) occurred in an indoor unit. Data are recorded for up to 5 previous occurrences. Data which are older than the 5th previous occurrence are erased. In addition, data on the temperature of each sensor (room temperature, indoor heat exchanger, outdoor heat exchanger, outdoor air temperature, discharge pipe), remote control information (operation switching, fan speed switching) are recorded when trouble occurs, so more detailed information can be checked.
Stop data	These are the data which display the reason by a stop occurred when the air-conditioning system performed protective stops, etc. in the past. Even if stop data alone are generated, the system restarts automatically. (After executing the stop mode while the display is normal, the system restarts automatically.) Data for up to 10 previous occasions are stored. Data older than the 10th previous occasion are erased. (Important) In cases where transient stop data only are generated, the air-conditioner system may still be normal. However, if the same protective stop occurs frequently (3 or more times), it could lead to customer complaints.

(b) Service mode display procedure

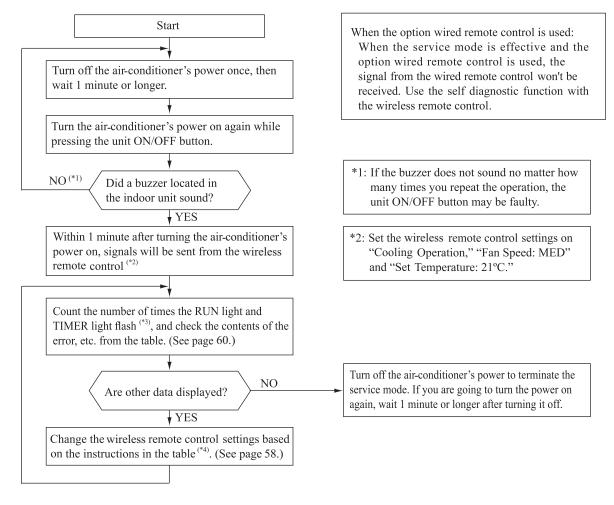

*3: To count the number of flashes in the service mode, count the number of flashes after the light lights up for 1.5 second initially (start signal). (The time that the light lights up for 1.5 second (start signal) is not counted in the number of flashes.)

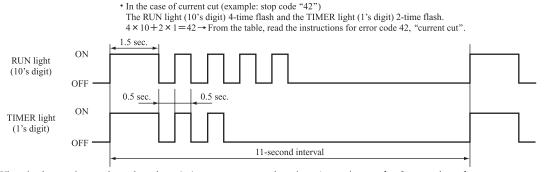

*4: When in the service mode, when the wireless remote control settings (operation mode, fan speed mode, temperature setting) are set as shown in the following table and sent to the air-conditioner unit, the unit switches to display of service data.

(i) Self-diagnosis data

What are Self-diagnosis Data?

These are control data (reasons for stops, temperature at each sensor, wireless remote control information) from the time when there were error displays (abnormal stops) in the indoor unit in the past. Data from up to 5 previous occasions are stored in memory. Data older than the 5th previous occasion are erased. The temperature setting indicates how many occasions previous to the present setting the error display data are and the operation mode and fan speed mode data show the type of data.

Wireless remote control setting		Combonto of cultural data						
Operation mode	Fan speed mode	Contents of output data						
	MED	Displays the reason for stopping display in the past (error code).						
Cooling HI		plays the room temperature sensor temperature at the time the error code was displayed in the past.						
	AUTO	Displays the indoor heat exchanger sensor temperature at the time the error code was displayed in the past.						
LO		Displays the wireless remote control information at the time the error code was displayed in the past.						
Haatina	MED	Displays the outdoor air temperature sensor temperature at the time the error code was displayed in the past.						
Heating	HI	Displays the outdoor heat exchanger sensor temperature at the time the error code was displayed in the past.						
	AUTO	Displays the discharge pipe sensor temperature at the time the error code was displayed in the past.						

Wireless remote control setting	Indicates the number of occasions previous to the present					
Temperature setting	the error display data are from.					
21°C	1 time previous (previous time)					
22°C	2 times previous					
23°C	3 times previous					
24°C	4 times previous					
25°C	5 times previous					

Only for indoor heat exchanger sensor 2

Wireless remote control setting	Indicates the number of occasions previous to the present
Temperature setting	the error display data are from.
26°C	1 time previous (previous time)
27°C	2 times previous
28°C	3 times previous
29°C	4 times previous
30°C	5 times previous

(Example)

Wireless remote control setting			
Operation mode	Fan speed mode	Temperature setting	Displayed data
		21°C	Displays the reason for the stop (error code) the previous time an error was displayed.
		22°C	Displays the reason for the stop (error code) 2 times previous when an error was displayed.
Cooling	MED	23°C	Displays the reason for the stop (error code) 3 times previous when an error was displayed.
		Displays the reason for the stop (error code) 4 times previous when an error was displayed.	
		25°C	Displays the reason for the stop (error code) 5 times previous when an error was displayed.

(ii) Stop data

Wireless remote control setting		ol setting					
Operation mode	Fan speed mode	Temperature setting	Displayed data				
		21°C	Displays the reason for the stop (stop code) the previous time when the air-conditioner was stopped by protective stop control.				
		22°C	Displays the reason for the stop (stop code) 2 times previous when the air-conditioner was stopped by protective stop control.				
	LO	23°C	Displays the reason for the stop (stop code) 3 times previous when the air-conditioner was stopped by protective stop control.				
		24°C	Displays the reason for the stop (stop code) 4 times previous when the air-conditioner was stopped by protective stop control.				
Cooling		25°C	Displays the reason for the stop (stop code) 5 times previous when the air-conditioner was stopped by protective stop control.				
Cooming		26°C	Displays the reason for the stop (stop code) 6 times previous when the air-conditioner was stopped by protective stop control.				
		27°C	Displays the reason for the stop (stop code) 7 times previous when the air-conditioner was stopped by protective stop control.				
		28°C	Displays the reason for the stop (stop code) 8 times previous when the air-conditioner was stopped by protective stop control.				
		29°C	Displays the reason for the stop (stop code) 9 times previous when the air-conditioner was stopped by protective stop cont				
		30°C	Displays the reason for the stop (stop code) 10 times previous when the air-conditioner was stopped by protective stop control.				

(c) Error code, stop code table (Assignment of error codes and stop codes is done in common for all models.)


	shes when in e mode	Stop code					
RUN light (10's digit)	TIMER light	or Error code	Error content	Cause	Occurrence conditions	Error display	Auto recovery
	OFF	0	Normal	_	_	_	_
OFF	1-time flash	01	Error of wired remote control wiring (When wired remote control was connected) (When wireless LAN interface was connected, refer to page 71.)	Broken wired remote control wire. defective indoor unit PCB	The wired remote control wire Y is open. The wired remote control wires X and Y are reversely connected. Noise is penetrating the wired remote control lines. The wired remote control or indoor unit PCB is faulty.	_	0
	5-time flash	05	Can not receive signals for 35 seconds (if communications have recovered)	Power source is faulty Power source cables and signal lines are improperly wired. Indoor or outdoor unit PCB are faulty	When 35 seconds passes without communications signals from either the outdoor unit or the indoor unit being detected correctly.	0	_
	5-time flash	35	Cooling high pressure control	Cooling overload operation. Outdoor fan speed drops. Outdoor heat exchanger temperature sensor is short circuit.	When the outdoor heat exchanger temperature exceeds the setting value.	(5 times)	0
	6-time flash	36	Compressor overheat 110°C	Refrigerant is insufficient. Discharge pipe temperature sensor is faulty. Service valve is closed.	When the discharge pipe temperature exceeds the setting value.	(2 times)	0
3-time flash	7-time flash 7-time flash 7-time control outdoor heat exchanger temperature sensor is abnormal temperature sensor is abnormal connections are poor.		Connector connections are poor.	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature. Or-55°C higher is detected for 5 seconds continuously within 20 seconds after power ON.	(3 times)	0	
	8-time flash	38	Outdoor air temperature sensor is abnormal	Outdoor air temperature sensor wire is disconnected. Connector connections are poor. Outdoor unit PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature. Or-55°C higher is detected for 5 seconds continuously within 20 seconds after power ON.	(3 times)	0
	9-time flash	39	Discharge pipe temperature sensor is abnormal (anomalous stop)	Discharge pipe temperature sensor wire is disconnected. Connector connections are poor. Outdoor unit PCB is faulty	-25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature.	(3 times)	0
	OFF	40	Service valve (gas side) closed operation	Service valve (gas side) closed Outdoor unit PCB is faulty.	If the inverter output current value exceeds the setting value within 80 seconds after the compressor ON in the heating mode, the compressor stops.	(2 times)	0
4-time flash	2-time 42 flash 42		Current cut	Compressor lock. Compressor wiring short circuit. Compressor output is open phase. Outdoor unit PCB is faulty Service valve is closed. Electronic expansion valve is faulty. Compressor is faulty.	Compressor start fails 42 times in succession and the reason for the final failure is current cut.	(2 times)	0
	7-time flash	47	Active filter voltage error	Defective active filter	When the wrong voltage connected for the power source. When the outdoor unit PCB is faulty.	0	_
	8-time flash	48	Outdoor fan motor is abnormal.	Outdoor fan motor is faulty. Connector connections are poor. Outdoor unit PCB is faulty.	When a fan speed of 75 min ⁻¹ or lower continues for 30 seconds or longer.	(3 times)	0
	1-time flash	51	Short-circuit in the power transistor (high side) Current cut circuit breakdown	Outdoor unit PCB is faulty Power transistor is damaged.	When it is judged that the power transistor was damaged at the time the compressor started.		_
	7-time flash	flash 51 Current cut circuit breakdown Power transistor is damaged. damaged at the time the compressor started. 7-time 57 Refrigeration cycle system Service valve is closed. When refrigeration cycle system protective co		When refrigeration cycle system protective control operates.	(3 times)	0	
5-time flash	8-time flash	58	Current safe	Refrigerant is overcharge. Compressor lock. Overload operation.	When there is a current safe stop during operation.	_	0
	9-time flash	59	Compressor wiring is unconnection. Voltage drop Low speed protective control	Compressor wiring is disconnected. Power transistor is damaged. Power source construction is defective. Outdoor unit PCB is faulty Compressor is faulty.	When the current is 1A or less at the time the compressor started. When the power source voltage drops during operation. When the compressor command speed is 1 ower than 32 rps for 60 minutes.	0	0
	OFF	60	Rotor lock	Compressor is faulty. Compressor output is open phase. Electronic expansion valve is faulty. Overload operation. Outdoor unit PCB is faulty	After the compressor starts, when the compressor stops due to rotor lock.	(2 times)	0
6-time flash	1-time flash	61	Connection lines between the indoor and outdoor units are faulty.	Connection lines are faulty. Indoor or outdoor unit PCB are faulty	When 10 seconds passes after the power is turned on without communications signals from the indoor or outdoor unit being detected correctly.	0	_
	2-time flash	62	Serial transmission error	Indoor or outdoor unit PCB are faulty Noise is causing faulty operation.	When 7 minute 35 seconds passes without communications signals from either the outdoor unit or the indoor unit being detected correctly.	0	
	OFF	80	Indoor fan motor is abnormal.	Indoor fan motor is faulty. Connector connections are poor. Indoor unit PCB is faulty	When the indoor fan motor is detected to be running at 300min ⁻¹ or lower speed with the fan motor in the ON condition while the air-conditioner is running.	0	_
	2-time flash	82	Indoor heat exchanger temperature sensor is abnormal. (anomalous stop)	Indoor heat exchanger temperature sensor wire is disconnected. Connector connections are poor.	When a temperature of -28°C or lower is sensed continuously for 40 minutes during heating operation. (the compressor stops).	0	_
8-time flash	4-time flash	84	Anti-condensation control	High humidity condition.	Anti-condensation prevention control is operating.		0
	5-time flash	85	Anti-frost control	Indoor unit fan speed drops. Indoor heat exchanger temperature sensor is broken wire.	When the anti-frost control operates and the compressor stops during cooling operation.	_	0
	6-time flash	86	Heating high pressure control	Heating overload operation. Indoor fan speed drops. Indoor heat exchanger temperature sensor is short circuit.	When high pressure control operates during heating operation and the compressor stops.	_	0

Notes (1) The number of flashes when in the service mode do not include the 1.5 second period when the lights light up at first (start signal). (See the example shown below.)

• In the case of current cut (example: stop code "42")

The RUN light (10's digit) 4-time flash and the TIMER light (1's digit) 2-time flash.

4×10+2×1=42→ From the table, read the instructions for error code 42, "current cut".

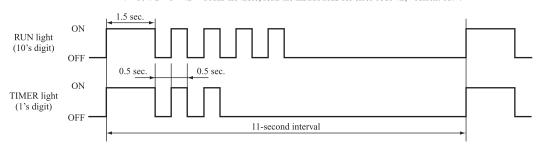

(2) Error display: — Is not displayed. (automatic recovery only)

O Displayed.

If there is a () displayed, the error display shows the number of times that an auto recovery occurred for the same reason

has reached the number of times in ().

If no () is displayed, the error display shows that the trouble has occurred once.

(3) Auto Recovery: — Does not occur

O Auto recovery occurs.

(d) Operation mode, fan speed mode information tables

(i) Operation mode

Display pattern when in service mode RUN light (10's digit)	Operation mode when there is an abnormal stop
_	AUTO
1-time flash	DRY
2-time flash	COOL
3-time flash	FAN
4-time flash	HEAT


(ii) Fan speed mode

Display pattern when in service mode	Fan speed mode when				
TIMER light (1's digit)	there is an abnormal stop				
_	AUTO				
2-time flash	HI				
3-time flash	MED				
4-time flash	LO				
5-time flash	ULO				
6-time flash	HI POWER				
7-time flash	ECONO				

* If no data are recorded (error code is normal), the information display in the operation mode and fan speed mode becomes as follows.

Mode	Display when error code is normal
Operation mode	AUTO
Fan speed mode	AUTO

(Example): Operation mode: COOL, Fan speed mode: HI

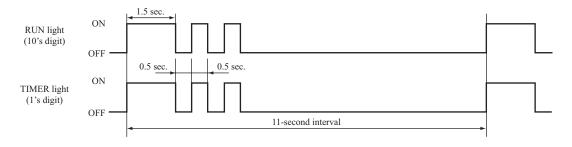

(e) Temperature information


(i) Room temperature sensor, indoor heat exchanger temperature sensor, outdoor air temperature sensor, outdoor heat exchanger temperature sensor

										U	nit: °C
TIMER light (1's digit) RUN light (10's digit) Buzzer sound		0	1	2	3	4	5	6	7	8	9
	6	-60	-61	-62	-63	-64					
	5	-50	-51	-52	-53	-54	-55	-56	-57	-58	-59
V.	4	-40	-41	-42	-43	-44	-45	-46	-47	-48	-49
Yes (sounds for 0.1 second)	3	-30	-31	-32	-33	-34	-35	-36	-37	-38	-39
(**************************************	2	-20	-21	-22	-23	-24	-25	-26	-27	-28	-29
	1	-10	-11	-12	-13	-14	-15	-16	-17	-18	-19
	0		-1	-2	-3	-4	-5	-6	-7	-8	-9
	0	0	1	2	3	4	5	6	7	8	9
	1	10	11	12	13	14	15	16	17	18	19
	2	20	21	22	23	24	25	26	27	28	29
	3	30	31	32	33	34	35	36	37	38	39
No	4	40	41	42	43	44	45	46	47	48	49
(does not sound)	5	50	51	52	53	54	55	56	57	58	59
	6	60	61	62	63	64	65	66	67	68	69
	7	70	71	72	73	74	75	76	77	78	79
	8	80	81	82	83	84	85	86	87	88	89
	9	90	91	92	93	94	95	96	97	98	99

* If no data are recorded (error code is normal), the display for each temperature information becomes as shown below.

Sensor name	Sensor value displayed when the error code is normal
Room temperature sensor	-64°C
Indoor heat exchanger temperature sensor	-64°C
Outdoor air temperature sensor	-64°C
Outdoor heat exchanger temperature sensor	-64°C

(Example) Outdoor heat exchanger temperature data: "-9°C"

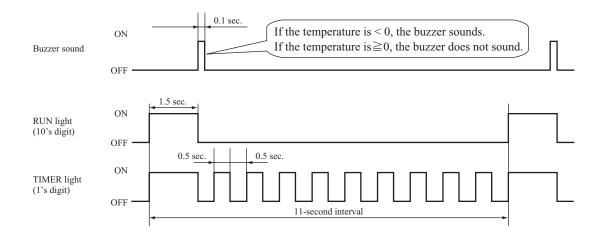

(ii) Discharge pipe temperature sensor


										Ur	nit: °C
TIMER light (1's digit) RUN light (10's digit) Buzzer sound			1	2	3	4	5	6	7	8	9
	3	-60	-62	-64							
Yes	2	-40	-42	-44	-46	-48	-50	-52	-54	-56	-58
(sounds for 0.1 second)	1	-20	-22	-24	-26	-28	-30	-32	-34	-36	-38
	0		-2	-4	-6	-8	-10	-12	-14	-16	-18
	0	0	2	4	6	8	10	12	14	16	18
	1	20	22	24	26	28	30	32	34	36	38
	2	40	42	44	46	48	50	52	54	56	58
No	3	60	62	64	66	68	70	72	74	76	78
(does not sound)	4	80	82	84	86	88	90	92	94	96	98
	5	100	102	104	106	108	110	112	114	116	118
	6	120	122	124	126	128	130	132	134	136	138
	7	140	142	144	146	148	150				

* If no data are recorded (error code is normal), the display for each temperature information becomes as shown below.

Sensor name	Sensor value displayed when the error code is normal
Discharge pipe temperature sensor	-64°C

(Example) Discharge pipe temperature data: "122°C"

* In the case of discharge pipe data, multiply the reading value by 2. (Below, $61 \times 2 = "122^{\circ}C"$)

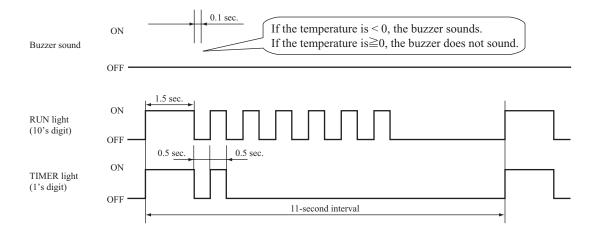

Service data record form


Customer			Mo	odel				
Date of investigation								
Machine name								
Content of	complaint		<u> </u>					
Wireless remote control setting		ol settings]	Display result	S	
Temperature setting	Operation mode	Fan speed mode	Content of displayed data		Buzzer (Yes/No.)	RUN light (Times)	TIMER light (Times)	Display content
		MED	Error code on previous occasion					
	Cooling	HI	Room temperature sensor on previous occasion					
		AUTO	Indoor heat exchanger temperature sensor 1 on previous occasion					
21		LO	Wireless remote control information on previous of	occasion				
		MED	Outdoor air temperature sensor on previous occasion					
	Heating	HI	Outdoor heat exchanger temperature sensor on previous occasion					
		AUTO	Discharge pipe temperature sensor on previous occ	casion				
26	Cooling	AUTO	Indoor heat exchanger temperature sensor 2 on pre-	evious occasion				
		MED	Error code on second previous occasion					
	Cooling	HI	Room temperature sensor on second previous occa	asion				
		AUTO	Indoor heat exchanger temperature sensor 1 on seco	ond previous occasion				
22		LO	Wireless remote control information on second pr	revious occasion				
	TT .:	MED	Outdoor air temperature sensor on second previou	is occasion				
	Heating	HI	Outdoor heat exchanger temperature sensor on seco	ond previous occasion				
		AUTO	Discharge pipe temperature sensor on second prev	ious occasion				
27	Cooling	AUTO	Indoor heat exchanger temperature sensor 2 on sec	cond occasion				
		MED	Error code on third previous occasion					
	Cooling	HI	Room temperature sensor on third previous occasi	sion				
		AUTO	Indoor heat exchanger temperature sensor 1 on thi	ird previous occasion				
23		LO	Wireless remote control information on third prev	vious occasion				
	Haatina	MED	Outdoor air temperature sensor on third previous occasion					
	Heating	HI	Outdoor heat exchanger temperature sensor on third previous occasion					
		AUTO	AUTO Discharge pipe temperature sensor on third previous occasion					
28	Cooling	AUTO	Indoor heat exchanger temperature sensor 2 on third occasion					
		MED	Error code on fourth previous occasion					
	Cooling	HI	Room temperature sensor on fourth previous occas	nsion				
		AUTO	Indoor heat exchanger temperature sensor 1 on four	orth previous occasion				
24		LO	Wireless remote control information on fourth pro	revious occasion				
	Heating	MED	Outdoor air temperature sensor on fourth previous	s occasion				
		HI	Outdoor heat exchanger temperature sensor on four	orth previous occasion				
		AUTO	Discharge pipe temperature sensor on fourth previ	ious occasion				
29	Cooling	AUTO	Indoor heat exchanger temperature sensor 2 on for	uth occasion				
	Cooling	MED	Error code on fifth previous occasion					
		HI	Room temperature sensor on fifth previous occasion	ion				
		AUTO	Indoor heat exchanger temperature sensor 1 on fift	th previous occasion				
25		LO	Wireless remote control information on fifth previ	ious occasion				
	Heating	MED	Outdoor air temperature sensor on fifth previous o	occasion				
	rreating	HI	Outdoor heat exchanger temperature sensor on fift	th previous occasion				
		AUTO	Discharge pipe temperature sensor on fifth previou					
30	Cooling	AUTO	Indoor heat exchanger temperature sensor 2 on fift	th occasion				
21			Stop code on previous occasion					
22		Cooling LO	Stop code on second previous occasion					
23			Stop code on third previous occasion					
24	-		Stop code on fourth previous occasion					
25	Cooling		Stop code on fifth previous occasion					
26	-		Stop code on sixth previous occasion					
27	-		Stop code on seventh previous occasion					
28	-		Stop code on eighth previous occasion					
29	-		Stop code on ninth previous occasion					
30			Stop code on tenth previous occasion					Ei
Judgment								Examiner
Remarks				setting of wireless remo				

Note In the case of indoor heat exchanger sensor 2, match from 26 to 30 the temperature setting of wireless remote control. (Refor to page 58.)

(7) Inspection procedures corresponding to detail of trouble


Sensor error


Broken sensor wire, connector poor connection

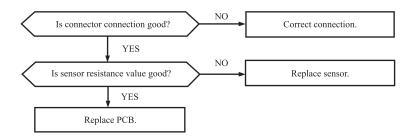

♦ Discharge pipe temperature sensor characteristics


◆ Temperature sensor characteristics (Room temperature, indoor heat exchanger temperature, outdoor heat exchanger temperature, outdoor air temperature)

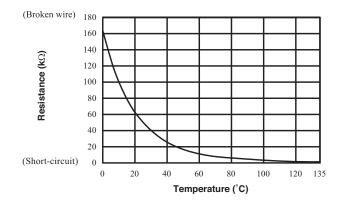

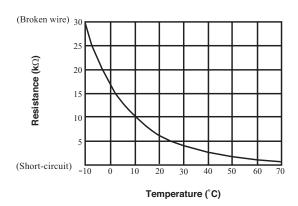

Indoor fan motor error

Defective fan motor, connector poor connection, defective indoor unit PCB

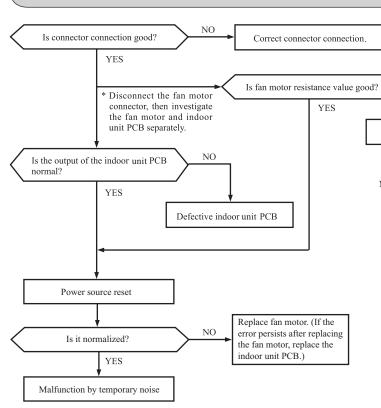

Notes (1) See page 71 for the fan motor and indoor unit PCB check procedure.


NO

Replace indoor fan motor.

- (2) After making sure the fan motor and indoor unit PCB are normal, connect the connectors and confirm that the fan motor is turning.
 - (If power is turned on while one or the other is broken down, it could cause the other to break down also.)


Current cut

Compressor lock, Compressor wiring short-circuit, Compressor output is open phase, Outdoor unit PCB is faulty, Service valve is closed, EEV is faulty, Compressor faulty.

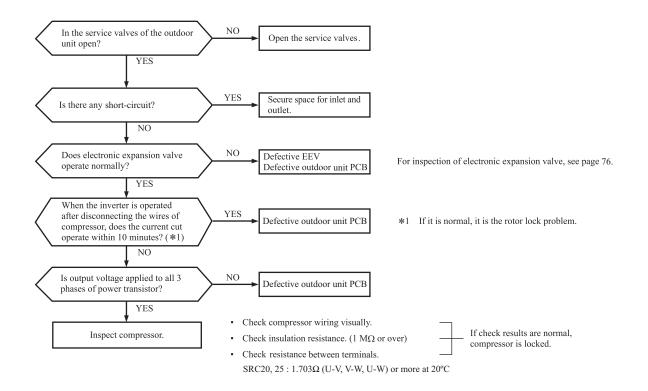


Current safe stop

Overload operation, compressor lock, overcharge

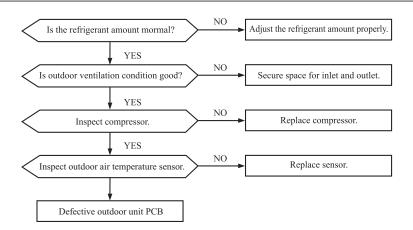


Overheat of compressor

Gas shortage, defective discharge pipe temperature sensor

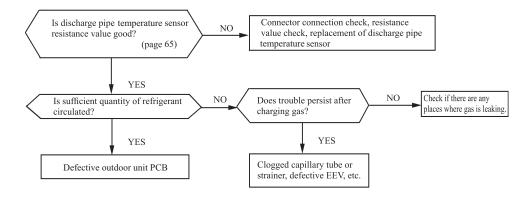


Error of signal transmission

Wiring error including power cable, defective indoor/ outdoor unit PCB

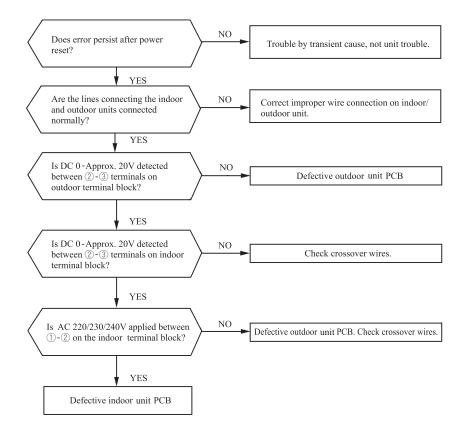


Trouble of outdoor unit

Insufficient refregerant amount, Faulty power transistor, Broken compressor wire Service valve close, Defective EEV, Defective outdoor unit PCB

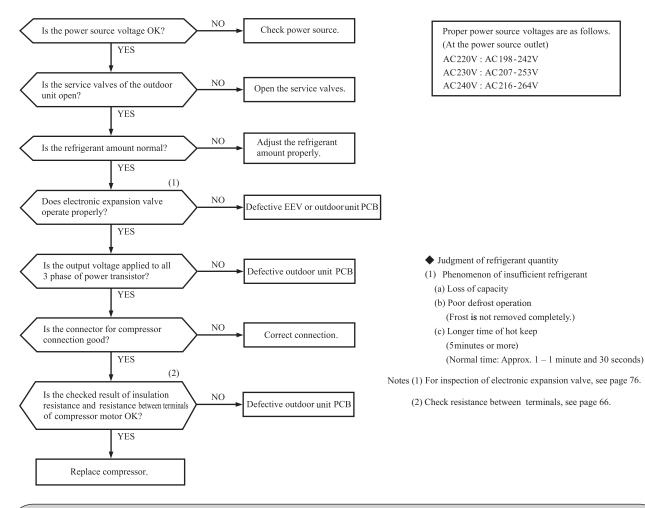

Outdoor fan motor error

Defective fan motor, connector poor connection, defective outdoor unit PCB

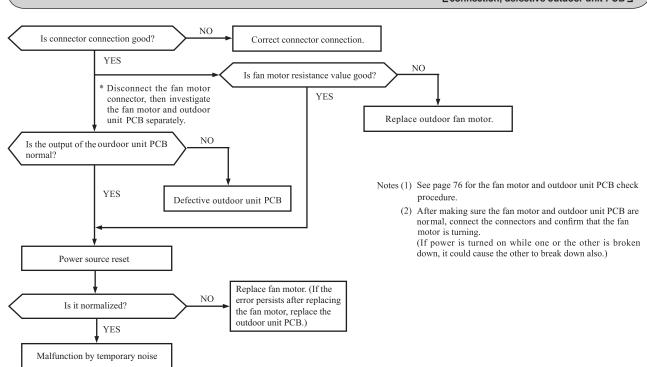


Defective compressor, defective outdoor unit PCB **Rotor lock** Is output voltage applied to all 3 NO Defective outdoor unit PCB phase of power transistor? • Check compressor wiring visually. Inspect compressor. Check insulation resistance. (1 $M\Omega$ or over) If check results are normal, compressor is locked.

Check resistance between terminals. See page 66.

Service valve (gas side) closed operation

Service valve (gas side) closed,
Defective outdoor unit PCB

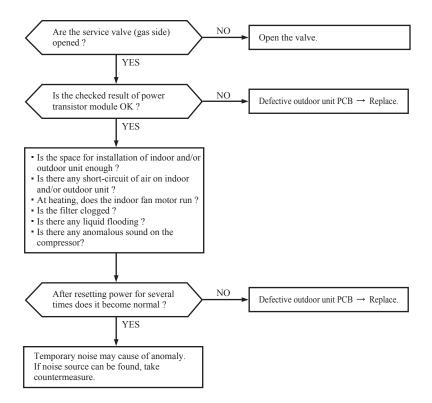


(8) Phenomenon observed after short-circuit, wire breakage on sensor

(a) Indoor unit

Sensor	Operation	Phenomenon			
Sensor	mode	Short-circuit	Disconnected wire		
Room temperature	Cooling	Release of continuous compressor operation command.	Continuous compressor operation command is not released.		
sensor	Heating	Continuous compressor operation command is not released.	Release of continuous compressor operation command.		
Heat exchanger temperature	Cooling	Freezing cycle system protection trips and stops the compressor.	Continiuous compressor operation command is not released. (Anti-frosting)		
sensor	Heating	High pressure control mode (Compressor stop command)	Hot keep (Indoor fan stop)		
Humidity sensor	Cooling	Refer to the table below.	Refer to the table below.		
	Heating	Normal system operation is possible.			

Humidity sensor operation

Failure mode		Control input circuit resding	Air-conditioning system operation	
cted	① Disconnected wire			
Disconnected wire	② Disconnected wire	Humidity reading is 0%	Anti-condensation control is not done.	
Dis	①② Disconnected wire			
Short- circuit	① and ② are shot- circuited	Humidity reading is 100%	Anti-condensation control keep doing.	

 

Humidity sensor

element


Remark: Do not perform a continuity check of the humidity sensor with a tester. If DC current is applied, it could damage the sensor.

(b) Outdoor unit

Concer Operation		Phenomenon			
Sensor	mode	Short-circuit	Disconnected wire		
Heat exchanger	Cooling	Compressor stop.	Compressor stop.		
temperature sensor	Heating	Defrost operation is not performed.	Defrost operation is performed for 10 minutes at approx. 35 minutes.		
Ourdoor air temperature sensor	Cooling	The compressor cannot pick up its speed owing to the current safe so that the designed capacity is not achieved.	Compressor stop.		
	Heating	The compressor cannot pick up its speed owing to the heating overload protection so that the designed capacity is not achieved.	Defrost operation is performed for 10 minutes at approx. 35 minutes.		
Discharge pipe temperature sensor	All modes	Compressor overload protection is disabled. (Can be operated.)	Compressor stop.		

(9) Checking the indoor electrical equipment

(a) Indoor unit PCB check procedure

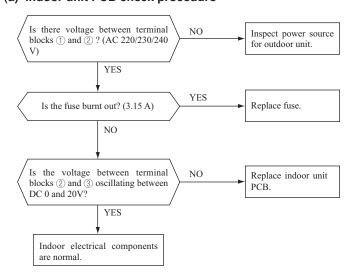


(b) Indoor fan motor check procedure

This is a diagnostic procedure for determining if the indoor fan motor or the indoor unit PCB is broken down.

1) Indoor unit PCB output check

- a) Turn off the power.
- b) Remove the front panel, then disconnect the fan motor lead wire connector.
- c) Turn on the power. If the unit operates when the ON/OFF button is pressed, if trouble is detected after the voltages in the following figure are output for approximately 30 seconds, it means that the indoor unit PCB is normal and the fan motor is broken down.

If the voltages in the following figure are not output at connector pins No. ①, ④ and ⑤, the indoor unit PCB has failed and the fan motor is normal.

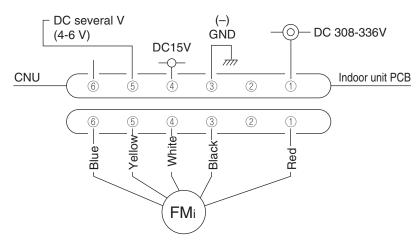

Measuring point	Voltage range when normal
1 - 3	DC 308-336V
4 - 3	DC 15V
5-3	DC several V (4-6V)


2) Fan motor resistance check

Measuring point	Resistance when normal
① - ③ (Red - Black)	$20\mathrm{M}\Omega$ or higher
4 - 3 (White - Black)	$20~{\rm k}\Omega$ or higher

Notes (1) Remove the fan motor and measure it without power connected to it.


(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.

(10) How to make sure of wireless remote control

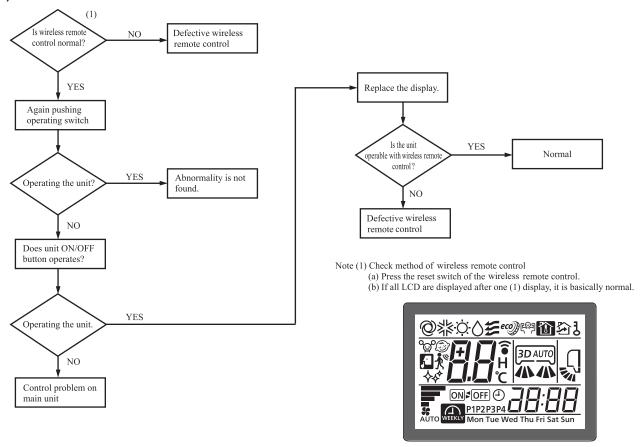

Simplified check method of wireless remote control It is normal if the signal transmission section of the wireless remote control emits a whitish light at each transmission on the monitor of digital camera.

(11) Inspection procedure for blown fuse on the indoor and outdoor unit PCB

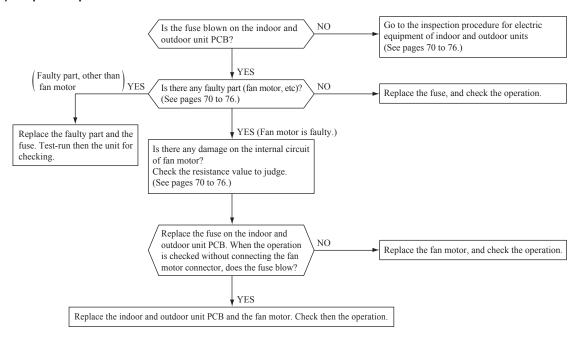


Fuse list

Models SRK20ZT-WA, SRK25ZT-WA

	Fuse position	Fuse only	Parts that may fail	
Group	Details	Ref No.	replaceable	when the fuse is blown(*1)
РСВ	Switching power source primary side	F1	YES	• Indoor unit • PCB • Fan motor

^(*1) This shows the parts being powered through the fuse.

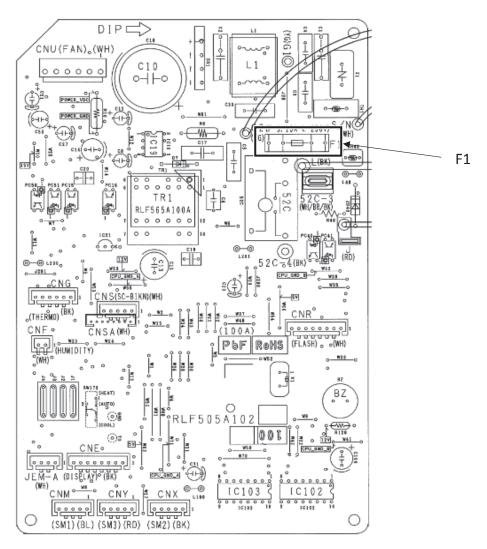


PCB

Fuse list Models SRC20ZT-WA, SRC25ZT-WA


Fuse position			Fuse only	Parts that may fail	
Group	Details	Ref No.	replaceable	when the fuse is blown(*1)	
Control box sheet metal	Main circuit primary side	F7	YES	Outdoor unit Outdoor unit terminal block PCB Reactor	
	Switching power source primary side	F1	YES	• Outdoor unit • PCB	
	Converter circuits	F2	NO (Replace the PCB.)	Outdoor unit PCB	
РСВ	Fan motor	F3	YES	• Outdoor unit • PCB • Fan motor	
	PAM control	F4	NO (Replace the PCB.)	Outdoor unit PCB	
	Defrost heater	F6	YES	Outdoor unit PCB Defrost heater	

^(*1) This shows the parts being powered through the fuse.

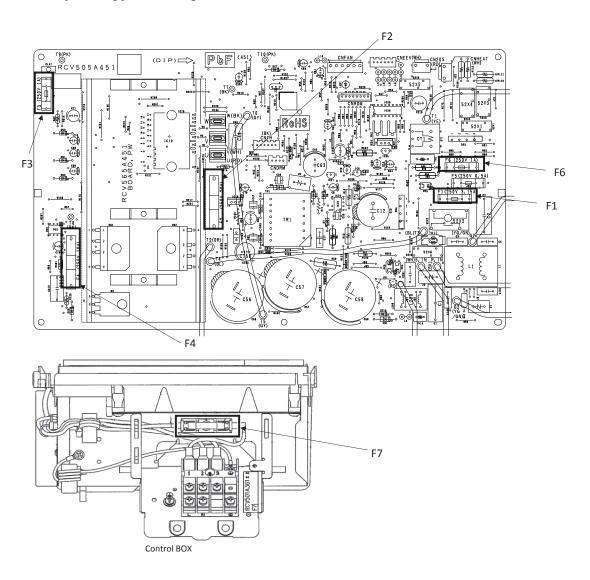

(12) Outdoor unit inspection points Models SRC20ZT-WA, SRC25ZT-WA


♦Check point of outdoor unit

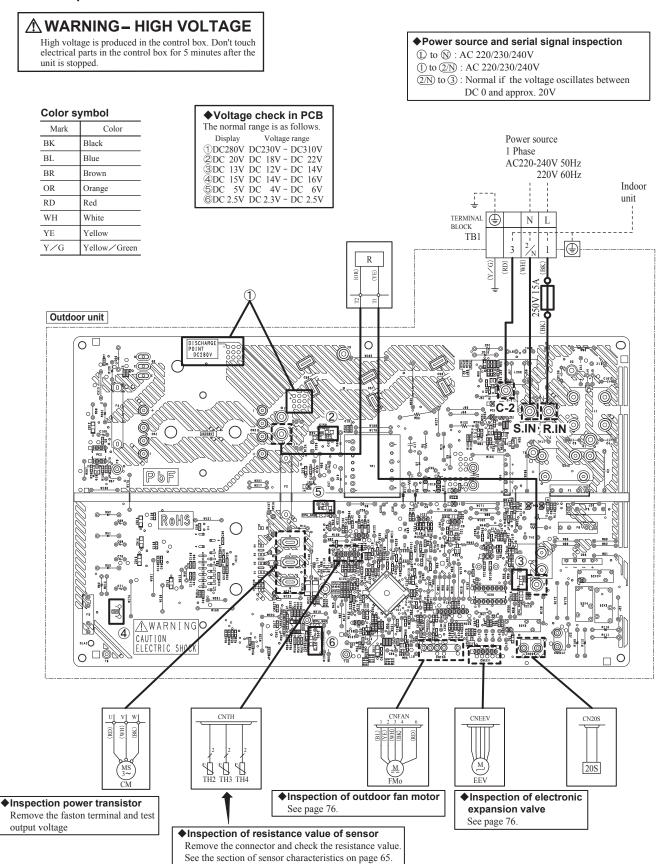

(a) Inspection of electronic expansion valve

Electronic expansion valve operates for approx. 10 seconds after the power on, in order to determine its aperture. Check the operating sound and voltage during the period of time. (Voltage cannot be checked during operation in which only the aperture change occurs.)

 - (i) If it is heard the sound of operating electronic expansion valve, it is almost normal.
- (ii) If the operating sound is not heard, check the output voltage.



- (iii) If voltage is detected, the outdoor unit PCB is normal.
- (iv) If the expansion valve does not operate (no operating sound) while voltage is detected, the expansion valve is defective.

· Inspection of electronic expansion valve as a separate unit

Measure the resistance between terminals with an analog tester.


Measuring point	Resistance when normal
1-6	
1-5	$46\pm4\Omega$
1-4	(at 20°C)
1-3	

(b) Outdoor fan motor check procedure

- When the outdoor fan motor error is detected, diagnose which of the outdoor fan motor or outdoor unit PCB is defective.
- Diagnose this only after confirming that the indoor unit is normal.
- (i) Outdoor unit PCB output check
 - 1) Turn off the power.
 - 2) Disconnect the outdoor fan motor connector CNFAN.
 - 3) When the indoor unit is operated by inserting the power source plug and pressing (ON) the backup switch for more than 5 seconds, if the voltage of pin No. ② in the following figure is output for 30 seconds at 20 seconds after turning "ON" the backup switch, the outdoor unit PCB is normal but the fan motor is defective.

If the voltage is not detected, the outdoor unit PCB is defective but the fan motor is normal.

Note The voltage is output 3 times repeatedly. If it is not detected, the indoor unit displays the error message.

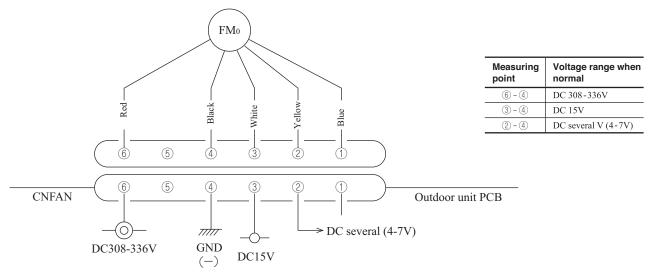

(ii) Fan motor resistance check

Measuring point	Resistance when normal
6 - 4 (Red - Black)	$20 \ \mathrm{M}\Omega$ or higher
③ - ④ (White - Black)	20 k Ω or higher

Notes (1) Remove the fan motor and measure it without power connected to it.

(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.

11. INDOOR UNIT DISASSEMBLY METHOD

(1) Remove the cover.






(2) Remove the screw(The following 2 places).



(3) Remove the end cover.




(4) Remove nails (4 places).

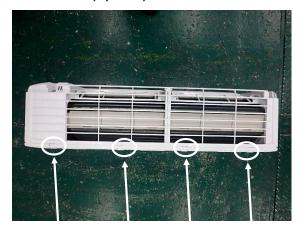


(5) Remove the cover.



(6) Remove the control cover.

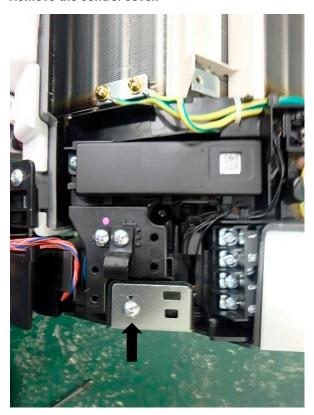

(7) Unplug the connector.

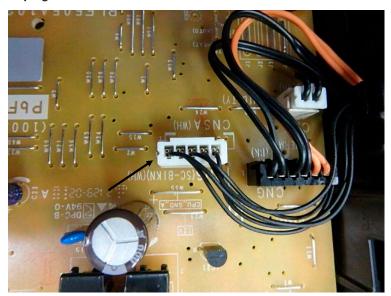

(8) Unscrew.



(9) Pull out control.



SRK20, 25ZT-WA Operation table


ON/OFF OPERATION MODE select	ON OFF AUTO COOL HEAT	0	0	(SC-BIKN2) *1
	AUTO COOL		_	
	COOL			0
MODE select		\circ	0	0
		0	0	0
		0	0	0
	DRY	0	0	0
	FAN	0	0	0
	SELF CLEAN	0	×	×(Displayed as OFF)
	ALLERGEN CLEAR	<u>O</u>	×(Displayed as FAN)	×(Displayed as GIT) ×(Displayed as FAN)
	NIGHT SETBACK	<u>_</u>	×(Displayed as HEAT)	×(Displayed as HEAT)
	Home leave mode	_	0	<u> </u>
Temperature	Vacant property mode 18°C-30°C	_	0	
adjustment	18 C = 30 C	0	0	
FAN SPEED	AUTO	0	0	0
	HIGH POWER	0	×(Displayed as ■■■)	×(Displayed as Hi)
	Hi	0	○ (Displayed as ■■■■)	(Displayed as PHi)
	Me	0	○ (Displayed as ■■■)	(Displayed as Hi)
	Lo	0	○ (Displayed as ■■)	(Displayed as Me)
	ULo	0	◯ (Displayed as ■)	(Displayed as Lo)
	ECONO	0	×(Displayed as ■)	×(Displayed as Lo)
Air flow	Up/down (1 step)	0	0	
lirection	Up/down (2 step)	0		0
ıdjustment	Up/down (3 step)	0	×(Displayed as 2 step)	×(Displayed as 2 step)
	Up/down (4 step)	0	(Displayed as 3 step)	(Displayed as 3 step)
	Up/down (5 step)	0	(Displayed as 4 step)	(Displayed as 4 step)
	Up/down (swing)		(Displayed as 4 step)	(Displayed as 4 step)
	Up/down (flap stopped)		×(Displayed as 2 step)	×(Displayed as 2 step)
		0		
	Left/right (leftmost)	0	0	0
	Left/right (left)	0	0	0
	Left/right (middle)	0	0	<u> </u>
	Left/right (right)	0	0	0
	Left/right (rightmost)	0	0	0
	Left/right (wide)	0	0	0
	Left/right (spot)	0	0	0
	Left/right (swing)	0	\circ	\circ
	Left/right (louver stopped)	\bigcirc	×(Displayed as middle)	×(Displayed as middle)
	3D AUTO	0	0	0
TIMER	Various TIMERs	0	_	0
unction	WEEKLY TIMER	0	0	0
MENU function	Display brightness adjustment	0	-	_
	Fan control in heating thermo-OFF	0	_	0
	SELF CLEAN setting	0	_	_
	Silent setting	_	_	
	Wireless LAN connection setting	0	_	_
	Wireless LAN communication	0	-	
Other	Installation location setting	0	_	_
unction	Silent	0	_	0
	Initialization of wireless LAN	0	_	
	Electricity bill display Shut-off reminder alert	<u> </u>	0	<u> </u>


○ : Operation/Setting Available
 × : Operation/Setting/Display N/A
 - : No function


*1 : Option part


12. OUTDOOR UNIT DISASSEMBLY METHOD

Work Items		ems	Figure	Procedure
(1)	Removing the top panel	1	Top panel Screws Screws	Remove screws (5pcs.) from fixing the top plate.
		2		Remove the top panel.
(2)		3	Screw: Screws	Remove screws (5pcs. + 1pc.※) at front side of the front panel.

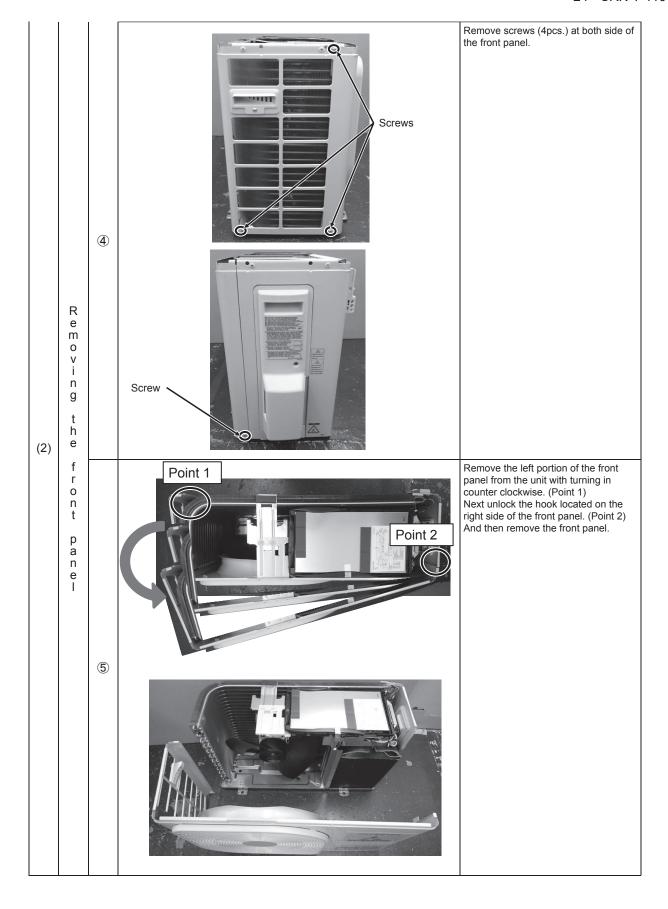


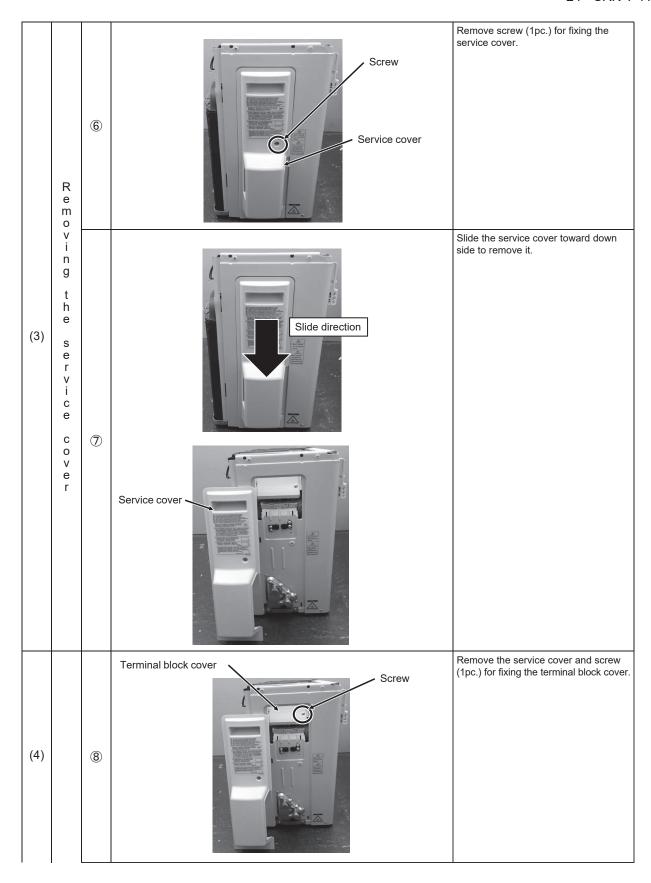


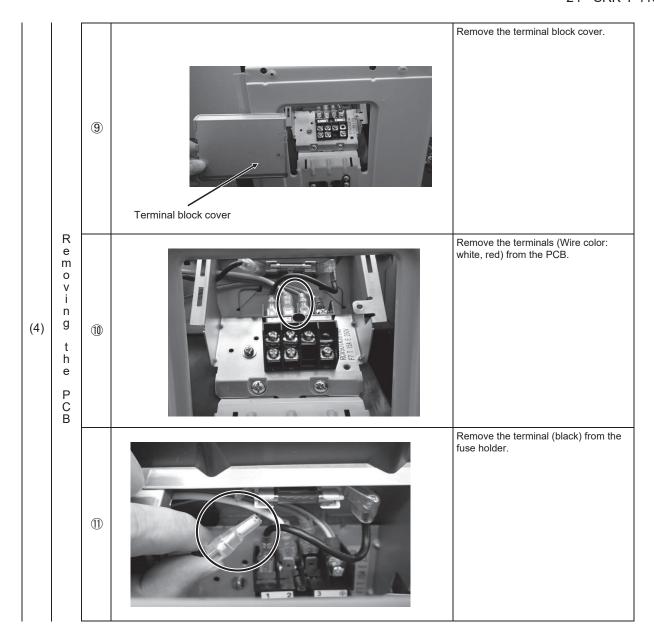

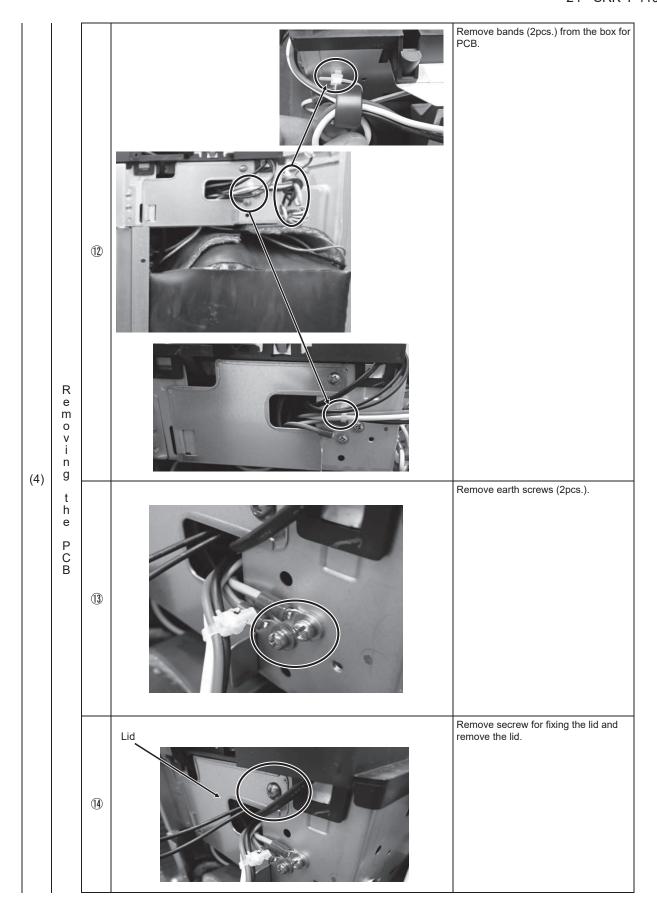

		15)	Connectors	Remove connectors (4pcs.) from the PCB.
	R e m o v i	16	Connectors	Remove connectors (2pcs.) from the reactor.
(4)	ng the PCB	1	The state of the s	Remove the cover at upper side of the PCB.
		18	Screws	Remove screws (5pcs.) for fixing the PCB.

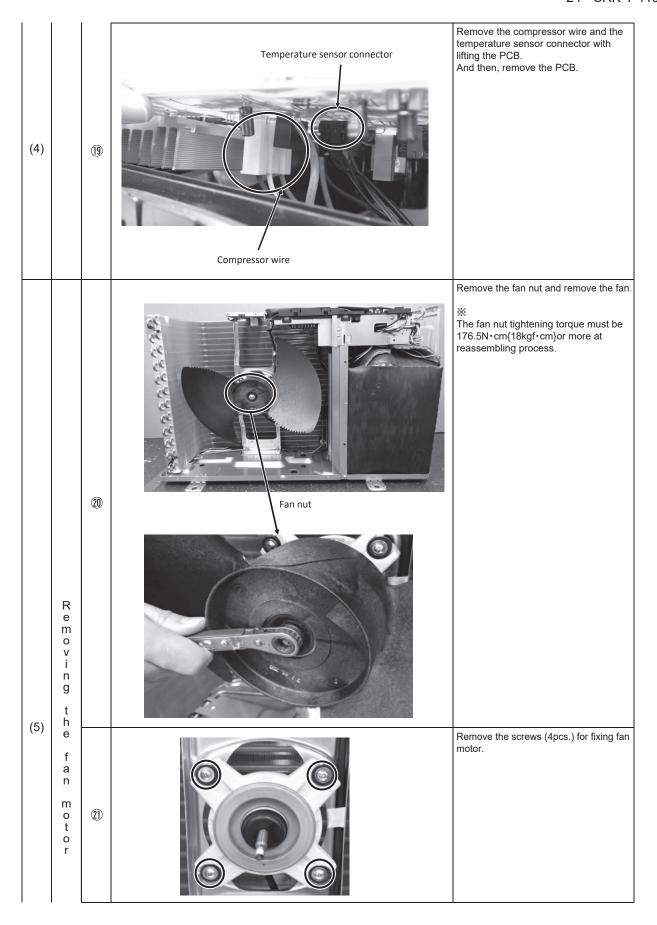

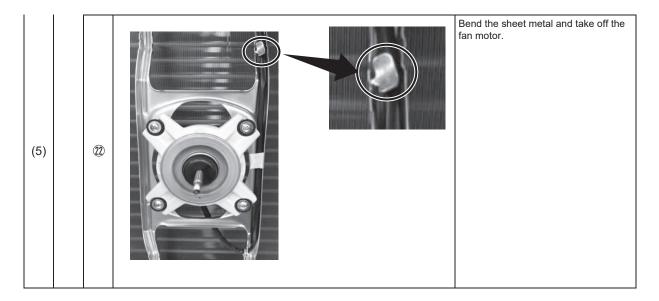

13. WIRELESS LAN INTERFACE SETTING MANUAL

- This document describes how to connect to network via wireless LAN.
- Read this manual carefully, and store it in a safe place after reading.
- Be sure to also read the "Safety precautions" in the USER'S MANUAL included with the product.
- The contents of the application "Smart M-Air" may change due to version upgrade.

Note on Wireless Communication (Radio Wave)


Wireless LAN and Radio Act

- This product has construction design certification. Therefore, application for the licence is not necessary.
- This product is certified to meet the technical standard as a wireless facility of a specified low-power radio station based on the Radio Act. Therefore, a radio station licence is not necessary when using this product.
- Wireless LAN may be subject to wiretapping or malicious access because it transmits and receives data using radio waves. Before using wireless LAN, thoroughly understand the risk. In addition, manage the SSID and KEY of this product and wireless LAN router and also the log-in ID and password for operation away from home so as to prevent them from being known by other people. In the event that the product is operated away from home by malicious access, turn OFF the function of the wireless LAN communication. (See the section "Wireless LAN communication setting" in the USER'S MANUAL.)
- This product cannot be connected directly to communication lines provided by telecommunication carriers. When connecting this product to the internet, be sure to connect it to the internet via a router.
- If a barrier that restricts radio waves (such as metal or reinforced concrete) is located between this product and a wireless LAN router the product may not operate due to interference, or a reduction in communication distance.
- Use of this product near a device emitting electric waves such as a microwave oven or cordless phone may affect communication via wireless LAN. If the product fails to communicate properly, or if a cordless phone fails to send/receive a call properly, be sure to use the product and the phone at least 1 metre away from each other.
- If you have any other problems, consult the sales outlet for the product.

Preparation before connection

Prepare the following items.

- □ Smartphone (tablet PC)
 Supported OS
 Android™ 8 to 12
 iOS 12 to 15 (iPad is not supported.)
 Check latest supported OS at each App store.
- ☐ Internet line and communication equipment (modem, router, ONU etc.)
- □ Router (wireless LAN access point)
 A product supports a 2.4 GHz band.
- □ SSID, KEY, and MAC address
 The SSID and KEY confirmation method is described in section 6.
- $\hfill \square$ Your home wireless LAN network password
- □ Remote control

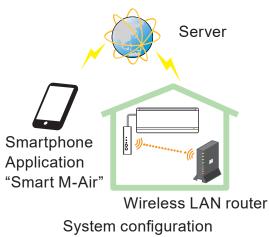

System configuration (for remote control)

Connect the smartphone (tablet PC) to the router via wireless LAN.

Open "wireless LAN" on the settings screen of the smartphone, and select SSID of the router to be used. Then, establish the connection by entering the password of the router.

1. Install the application

How to install "Smart M-Air"

How to install the "Smart M-Air" smartphone application				
For Android	For iOS (iPhone)			
Open [Google Play].	1. Open [App Store].			
2. Search for [Smart M-Air].	2. Search for [Smart M-Air].			
3. Install the application according to	3. Install the application according			
the instructions on the screen.	to the instructions on the screen.			

- The application is free. Communication data charges by others are applied to download and operate.
- The application name "Smart M-Air" and download service names "Google Play" and "App Store" may be changed in the future.
- For the settings, and contents, refer to our home page or the user's manual on our home page.

2. Confirm connection method of router

WPS (Simple setting function): Add a new device to the network using WPS button on router.

AP: Add a new device to the network by connecting to the router using SSID and Key (Password).


3. Creating user account

Smartphone setting
 Turn on wireless LAN of your smartphone and connect smartphone and router.





- (2) Application initial setting Initial application settings and the application starts.
- (3) After startup, the "Language / Time Zone Setting" screen appears.



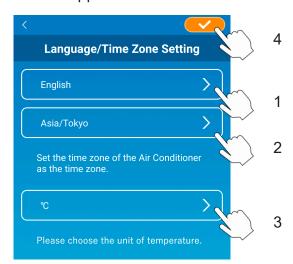

- 1. Select which language to use in the application.
- 2. Select the region in which the air conditioning unit is installed.
- 3. Select the unit of temperature displayed in the application.
- Finally, tap on the top right to complete the setting.
- (4) The "Terms of Service" screen appears. Read and check the statement in full. To consent and proceed with using the application tap [Agree]. Selecting [I don't agree] will exit the application.

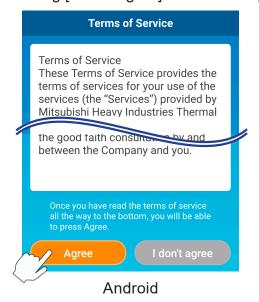

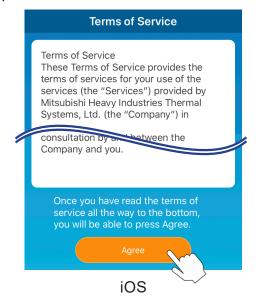

(5) The "Startup" screen appears. Tap [Operate Air Conditioner].




(6) The "Log in" screen appears.


Tap [Create an Account].

The "Handling of Personal Information" screen appears.

Read and check the statement in full. To consent and proceed with using

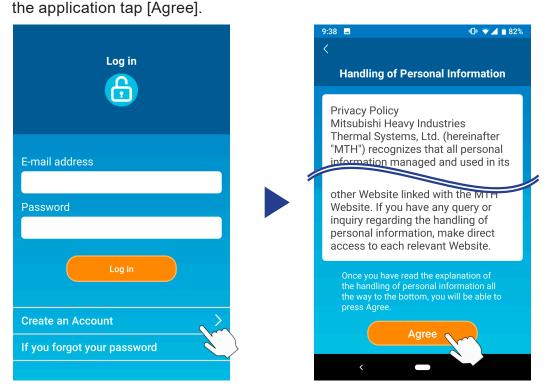


(7) The "Create an Account" screen appears. Enter your e-mail address and password Tap the [Create an Account] button. The pop-up message "Create an Account" appears, to confirm tap [OK].

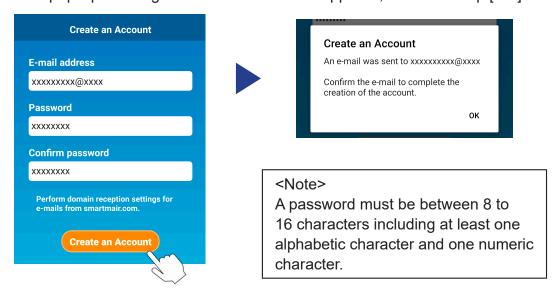

An e-mail containing a link to confirm registration will be sent to the e-mail address provided which will expire after 24 hours. Click the link within the e-mail to complete account creation.

(8) After creating an account the "Log in" screen is displayed when opening the application. Enter the registered e-mail address and password, and tap the [Log in] button.

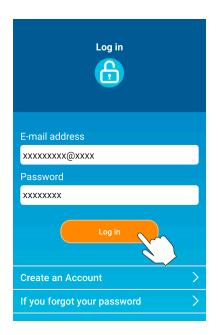


<Note>

To reset your password, tap "If you forgot your password".

4. Confirming the connection method with the wireless remote control (WPS/AP)

(a) Please confirm the "Air Conditioner List" screen is displayed.

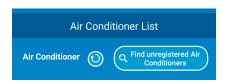

<Note>

If [Find unregistered Air Conditioners] button is not displayed confirm that section 3 step (1) has been performed correctly.

- (b) The Wireless LAN connection setting cannot be set whilst the unit is running. To turn off the air conditioner press the ON/OFF button on the wireless remote control.
- (c) Select the Wireless LAN connection setting "SL" by pressing the MENU switch on the wireless remote control.
- (d) Based on the router specifications confirmed in section 2, select "E1" (WPS mode) or "E2" (AP mode) using the ▲ and ▼ (TIMER) buttons on the wireless remote control.




<Note>

After performing step (e) below, it is necessary to complete up to step 5 (A) (3) within 2 minutes for WPS mode, and up to 5 (B) (3) within 5 minutes for AP mode.

Prepare the necessary information (SSID, KEY, MAC address, and your home wireless LAN network password) in advance.

(e) Press the SET button on the wireless remote control. The indoor unit will emit "peep pip" to confirm setting of parameters, then the RUN and TIMER lights will also flash simultaneously at 1 second ON, 1 second OFF.

If no sound is emitted by the unit, return to step (c) and repeat the process.

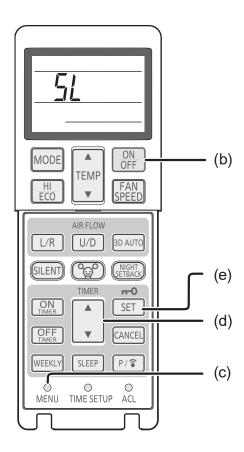

Wireless remote control

^{*} The appearance varies by models.

5. Connect the air conditioner to the network.

The connection process will vary depending on the router specifications (WPS/AP).

 
See item (A) for WPS, and item (B) for AP.

(A) Connect the air conditioner to the network with WPS function

(1) Press the WPS button.

Press the WPS button on the router*. The buttons generally look like this.


Operation to connect to the router using WPS may vary, refer to manufacturers installation guide for instructions.



- * If using an automatic connection function other than WPS, refer to manufacturers installation guide.
- (2) Use the "Air Conditioner List" screen to register an air conditioner to operate.

Tap the [Find unregistered Air Conditioners] button to display unregister air conditioners on the application.


The air conditioner name displays the last 4 digits of the SSID in the position indicated by in the image below. (Refer to section 6 for instructions on confirming SSID.)

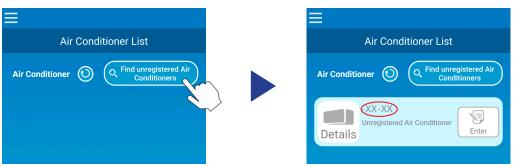

If it is not displayed, confirm again that the steps following section 4 have been performed properly.

- If it is not connected, wait at 2 minutes until the RUN and TIMER light on the indoor unit are no longer lit and repeat process from section 4.
- If the air conditioner still cannot be connected to the application, the number of devices connected with the wireless LAN router may have reached its upper limit, or the router may not be operating or may have failed. Therefore, check the wireless LAN router according to the user's manual of the router.
- If the air conditioner cannot be connected to the application even by following the setting procedure in this manual, refer to FAQ in the menu of the application.

(3) Tap the [Enter] button to select the air conditioner you want to add. Tap the [YES] the displayed pop up message to confirm.

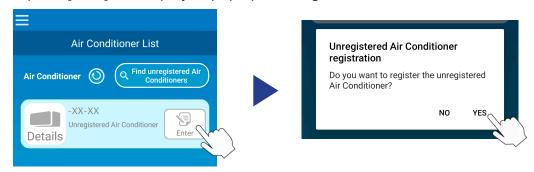

The following screen will be displayed when registration is complete.



(B) Connect the air conditioner to the network with AP

- (1) Change the wireless LAN connection destination of your smartphone to enter "Smart M-Air-XXXX"* and KEY.
 - *"Smart M-Air-XXXX" is SSID.
 - SSID and KEY confirmation method is described in section 6.
- (2) On the "Air Conditioner List" screen, tap the [Find unregistered Air Conditioners] button.

To add the air conditioner tap the [Settings] button.



If the air conditioner is not displayed, repeat steps in section 4.


- If it is not connected, wait at 5 minutes until the RUN and TIMER light on the indoor unit are no longer lit and repeat process from section 4.
- If the air conditioner still cannot be connected to the application, the number of devices connected with the wireless LAN router may have reached its upper limit, or the router may not be operating or may have failed. Therefore, check the wireless LAN router according to the user's manual of the router.
- If the air conditioner still cannot be connected to the application after following the procedure in this manual, then refer to the FAQ section in the application menu.
- (3) If prompted to permit access to location information, please permit.

After selecting the network to connect to from the displayed list, the SSID will be pre-populated* in the entry field at the bottom of the screen.

Next, enter your home wireless LAN network password and tap the at the top of the screen to confirm.



*If the home wireless LAN network SSID number is not input automatically then it will need to be entered manually.

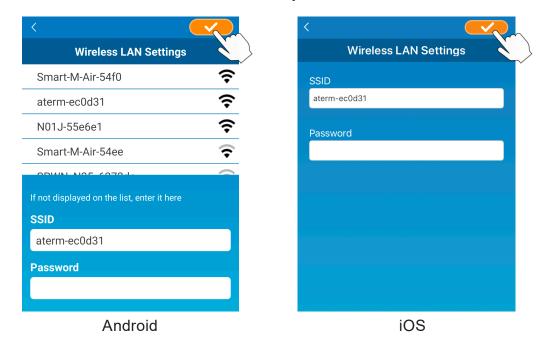

The pop-up screen will appear to confirm air conditioner has been added. Tap the [OK] button to continue, the following screen will then be displayed showing the unit has been added.



6. SSID, KEY and MAC address confirmation method

SSID, KEY and MAC address are printed on the label attached to the front of the indoor unit. Attach the label to this manual and keep it. They can also be viewed by scanning the QR code on the label.

<note> There is also a label showing this information inside the inlet panel. See the section "Name of each part and its function" in the USER'S MANUAL for label location. See the section "Maintenance" in the USER'S MANUAL for instructions to open the inlet panel.</note>
Label attachment position

"Android™" and "Google Play" are trademarks or registered trademarks of Google LLC.

Other company names and product names that appear in this manual are trademarks or registered trademarks of their respective companies.

[&]quot;iPad" is a trademark of Apple Inc. registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

14. APPLICATION OPERATION MANUAL

Smart M-Air

Operation Manual

Table of contents

(1) Application features	106
(2) Manipulation modes	108
Remote operation mode Home restricted mode Demo mode	108
(3) Preparation for use	109
Smartphone setting Application initial setting Creating user account Registering air conditioner Wireless LAN settings of air conditioner Naming air conditioner	109 111 114 115
(4) Basic usage	119
Starting / Stopping air conditioner operation Switching operation mode Changing temperature Changing fan speed and airflow direction Switching Vacant Property Mode	119 120 121
(5) Using Favourites	123
(6) Using Options	127
Shut-off reminder alert Air conditioner error notification Hi temp/low temp alert Watching function Home leave mode Cooling specific LED ON Number of smartphones	

(7)	Setting Weekly Timer	134
(8)	Setting Timer by Specifying Date via Calendar Clear the timer set from the calendar	
(9)	Displaying Electricity Bill Graph	139
(10)	Updating Firmware	140
(11)	Main Menu Canceling demo mode	
(12)	Checking Alerts	144
(13)	Changing Application Settings Switch Operation Modes Switching to "Remote operation mode" Switching to "Home restricted mode" Reset Password Language/Time Zone Settings Application Initialization Application Version Display	147 148 150 152
(14)	Troubleshooting	156 157 158
	When you forget your password and cannot log in	159
	(For Android OS)	109

(1) Application features

You can operate the air conditioner in each room at home or from outside.

- Setting operation reservation of every day of the week for each air conditioner
- · Checking the power consumption of an air conditioner
- Setting the shut-off reminder alert
- · Alerting if an air conditioner is abnormal





Figure 1-1

Figure 1-2

Note

Depending on the function of the connected air conditioner, the following operation will not be reflected in the operation of the air conditioner.

· Left/Right, 3D AUTO, Home leave mode, Electricity Bill Graph

Depending on the function of the connected air conditioner, the following operation will not appear on the screen:

· Home leave mode setting, LED ON

When the wireless LAN interface is connected, the timer setting is disabled on your home remote control depending on your air conditioner.

Please use the timer function of the application to set the timer.

(2) Manipulation modes

Remote operation mode

This mode allows you to operate the registered air conditioner via the smartphone application when you are out of the office.

Also, you can register and operate the air conditioner at home through a smartphone application.

Home restricted mode

This mode allows you to register and operate the air conditioner at home via the smartphone application.

You can operate without data communication to the server.

Operation is not available when you are out.

Demo mode

If you don't have an air conditioner compatible with a smartphone app, This mode allows you to experience the operation feel of remote operation mode.

(3) Preparation for use

Smartphone setting
 Turn on Wi-Fi of your smartphone.



Figure 3-1

Application initial setting
 Tap the Smart M-Air icon.



Figure 3-2



Figure 3-3

The application starts.



After startup, the "Language/Time Zone Settings" screen appears.

Select a language to use in the application.

Select a time zone. Select the time zone in which the air conditioner to operate via the application exists.

Choose the unit of temperature.

Finally, tap on the top right to complete the setting.

Figure 3-4

The "Terms of Service" screen appears.
Read the text to the bottom and check the description.
If you agree it and use the application, tap [Agree].
When you tap [I don't agree], the application exits.

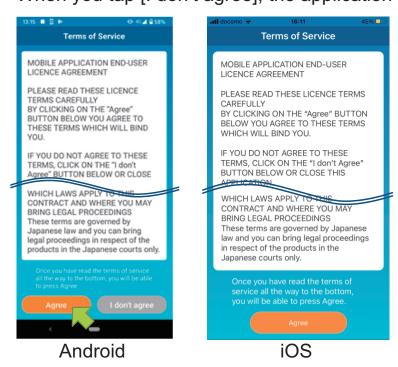


Figure 3-5

On the startup screen, select a mode to use.



Figure 3-6

Operate Air Conditioner (Remote operation mode)

Tap "Operate Air conditioner" for remote control or to use optional functions such as weekly timer.

- → To "Creating user account"
- Home Use Only (Home restricted mode)

Tap "Home Use Only" to operate only at home. Some functions are restricted, but you can change to remote operation mode at any time.

→ To "Registering air conditioner"

Switching operation mode

- → To "Changing Application Settings"
- Try a Demo (Demo Mode)

Tap "Try a Demo" to try out the app's features. (Some features only)

→ To <u>"4. Basic Usage"</u>

Creating user account


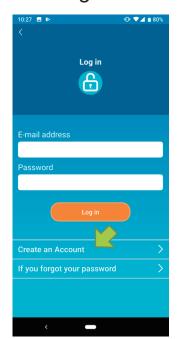


Figure 3-7

Tap [Create an Account].

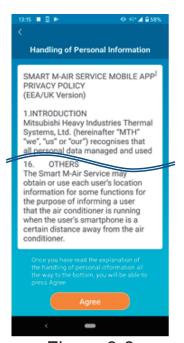

Read the text of Handling of Personal Information to the bottom and check the description.

If you agree it and use the application, tap [Agree].

Figure 3-8



Figure 3-9

The "Create an Account" screen appears. Enter your e-mail address and password and tap the [Create an Account] button.

Note

 A password must be between 8 to 16 characters including at least one alphabetic character and one numeric character.

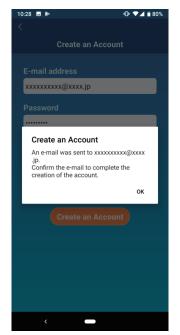


Figure 3-10

When the pop-up message "Create an Account" appears, tap [OK].

The email containing the URL of the authentication screen will be sent to the email address you entered, so please click the URL within 24 hours to complete the account creation.



Figure 3-11

After the account is created, the "Log in" Screen appears on the application.

Click the URL written in the e-mail, enter the registered e-mail address and password, and tap the [Log in] button.

If you forget your password and cannot log in, tap "If you forgot your password" and set a new password.

→ To "Reset Password"

Registering air conditioner



Figure 3-12

Use the "Air Conditioner List" screen to register an air conditioner to operate.

Tap the "Find unregistered Air Conditioners" button to display air conditioners that are not registered on your smartphone.

The air conditioner name (O locations) displays the last 6 digits of the SSID on the label of the wireless LAN interface.

Tap the [Enter] button.

- When the air conditioner is not displayed on the list screen
 - → To <u>"When the air conditioner that you want to register</u> does not appear in the air conditioner list screen"
- To delete a registered air conditioner
 - → To "How to delete a registered air conditioner"

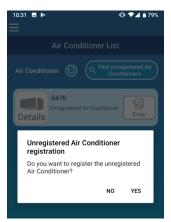


Figure 3-13

To register the air conditioner, tap [YES] on the pop-up message displayed.



Figure 3-14

Wireless LAN settings of air conditioner

If your wireless LAN router does not support WPS, manually make wireless LAN settings of your air conditioner.

Set the wireless LAN interface to the AP mode, and then change the Wi-Fi connection

destination of your smartphone to "Smart-M-Air-XXXX".

"XXXX" is the last 4 alphanumeric characters of the MAC address of the wireless LAN interface.



Figure 3-15

On the "Air Conditioner List" screen, tap the [Find unregistered Air Conditioners] button. The target air conditioner appears.

Tap the [Settings] button.

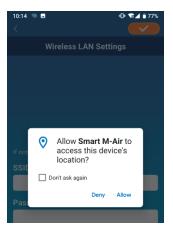


Figure 3-16

If you are prompted to permit access to location information, tap [Allow].

When you tap the network you want to set from the displayed list, the SSID appears in the "SSID" entry field at the bottom of the screen, enter "Your home Wi-Fi password" below it, and tap in the top right.

If the network you want to set is not displayed in the list, enter "SSID" and "Your home Wi-Fi password" directly, then tap on the top right to set.

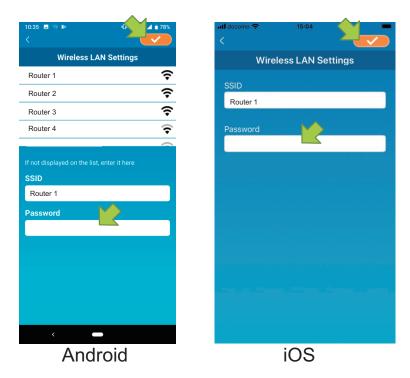


Figure 3-17



Figure 3-18

After the wireless LAN settings is completed, the air conditioner is registered.

Naming air conditioner



If you want to change the name of the air conditioner displayed in the application such as the air conditioner list screen, tap "Details" to display the detailed screen of the air conditioner.

Figure 3-19



Figure 3-20

Press and hold down (1 second) an air conditioner name. The "Edit Air Conditioner name" dialog appears. Use this to change the name.



Figure 3-21



Figure 3-22



Figure 3-23

Enter a new air conditioner name and tap [YES].

(4) Basic usage

Starting / Stopping air conditioner operation



Figure 4-1

To start or stop the operation, tap the [ON] / [OFF] button of the air conditioner that you want to operate on the "Air Conditioner List" screen.

When the button color changes, switching is complete. (Grayed out when off)

To update to the latest information, tap ().



Note

 When operating an air conditioner from an external location, it may take up to one minute to complete the air conditioner operation.

Switching operation mode



Figure 4-2

Tap an air conditioner that you want to switch the operation mode on the "Air Conditioner List" screen.



Figure 4-3

To change the "Operation mode", tap each mode from "Auto" to "Dry".

- appears when the air conditioner is in clean mode. To cancel clean mode, tap
- appears when the weekly timer is set by this application.
- appears when the application is used at home where the air conditioner is set and connected to the application.

Changing temperature



Figure 4-4

To set a desired temperature, tap / . The current set temperature appears in the circle.



When the operation mode is Fan, Set temp. shows "-".

Tap / >> to change settings.

Figure 4-5

Changing fan speed and airflow direction



Figure 4-6

Switching Vacant Property Mode



Figure 4-7

When Vacant Property Mode is ON, operation mode and Set temp. can be set as follows.

- Cool: Set temp. 31°C to 33°C (at 1°C intervals)
- Heat: Set temp. 10°C to 17°C (at 1°C intervals)

Only "Cool" or "Heat" can be set as an operation mode.

(5) Using Favourites



Figure 5-1

Register your desired settings of "Set temp", "Operation mode", "Fan", "Up / Down" and "Left / Right" with Favourite. Tapping the [Favourite] button changes the current settings to the registered settings.

On the air conditioner details screen, press and hold down (1 sec) the [Favourite 1] or [Favourite 2] button. The "Favourite" screen appears.



Figure 5-2

Change each item to your favourite setting, and tap on the top right to add it to Favourites.

Press in the upper left of the screen to return to the operation screen.



Figure 5-3

When you tap the [Favourite 1] or [Favourite 2] button, the current settings are changed to the favourite settings you tapped.




To change the name of the "Favourite" button, press and hold down the "Favourite" button for approximately 1 second. "Edit Favourite name" dialog appears to change the name.

Figure 5-4



Figure 5-5

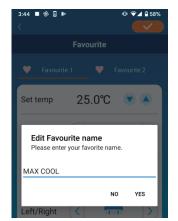

Enter the new favourite name and tap [YES].

Figure 5-6



Figure 5-7

(6) Using Options

You can make various option settings such as alerts and LED lighting, and check the number of accounts registered with an air conditioner.

Home restricted mode: Only "Home Leave Mode", "Cooling specific"

and "LED ON" are operable.

Demo mode : Options are not operable.

You can switch to remote operation mode using "Changing Application Settings" in the main menu.


→ To "Changing Application Settings"



Figure 6-1

Tap [Options] on the lower part of the air conditioner details screen.
The "Options" screen appears.

Only "LED ON" is ON by default.

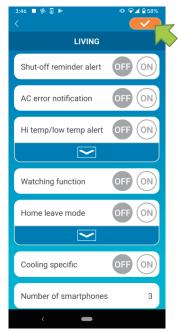

Switch between [ON] and [OFF], and tap on the top right of the screen to save the settings you changed.

Note

 Shut-off reminder alert, AC error notification, Hi temp/low temp alert ,Watching function can be used with "Remote operation mode".

Figure 6-2

Shut-off reminder alert

If you are more than 1 km away from the air conditioner you are driving, you can receive a push notification to the smartphone application.

■ To receive alerts, tap [ON].



Figure 6-3

When the pop-up message appears, tap [YES] and then tap on the top right.

■ To not to receive alerts, tap [OFF].



When the pop-up message "If your external location is disabled, it cannot be retrieved. Do you want to disable the external location?" appears, tap [YES] and then tap on the top right.

Figure 6-4

Note

- Acquisition of location information is performed by using the location of your smartphone as the location of the air conditioner.
 Perform location information acquisition near your air conditioner.
- AC error notification (Air conditioner error notification)

If any abnormality is detected in your air conditioner, an e-mail is sent to the registered e-mail address.

- → To " When an abnormality notification appears in the air conditioner list"
- To receive notifications, tap [ON] and then tap _____on the top right.
- To not to receive notifications, tap [OFF] and then tap _____ on the top right.

Hi temp/low temp alert

When the air conditioner reaches the specified high/low temperature condition, a push notification is sent to the smartphone application.

- To receive alerts, tap [ON] and enter the high and low temperatures and then tap on the top right.



Note

- When the room temperature is higher / lower than the temperature specified here, alerts are sent.
 - If you set the high temperature at 31°C, an alert is sent when the room temperature exceeds 31°C. No alert is sent at 31°C.
- Setting only either of high or low temperature receives alerts only for high or low temperature.

Figure 6-5

■ To not to receive alerts, tap [OFF] and then tap _____on the top right.

Watching function

When the air conditioner is controlled other than your smartphone, an e-mail is sent to the registered e-mail address.

Note

- The notification also applies to the operation with the timer of the air conditioner itself and the end of internal clean operation.
- To receive alerts, tap [ON] and then tap ——on the top right.
- To not to receive alerts, tap [OFF] and then tap _____ on the top right.

Home leave mode

When the room temperature is lower than a setting temperature, heating is turned on automatically.

When the room temperature is higher than a setting temperature, cooling is turned on automatically.

■ To use "Home leave mode", tap [ON].



Figure 6-6

When the pop-up message "It may not be Possible to use the Home leave mode even if it is turned ON." appears, tap [OK] and then tap on the top right.

Note

- There is no "Home leave mode" depending on the air conditioner connected.
 In this case, "ON" has no effect.
- To not to use "Home leave mode", tap [OFF] and then tap on the top right.

■ To change the setting of home leave mode, tap ____. To hide them, tap ____. The following settings can be changed.



Figure 6-7

 Determine temp: Set the preferred outside temperature to start the operation of the air conditioner in cooling/heating mode.

Allowable setting range in cooling: 26°C to 35°C (at 3°C intervals)
Allowable setting range in heating: 0°C to 15°C (at 5°C intervals)

• Set temp: Set the preferred indoor temperature to operate in cooling/heating mode.

Allowable setting range in cooling: 26°C to 33°C (at 1°C intervals)
Allowable setting range in heating: 10°C to 18°C (at 1°C intervals)

 Fan speed: Set the fan speed in cooling/heating mode.

[example]

Cooling → When you input the determine temp. as 32°C, set temp. as 26°C and the fan speed at the slowest, the air conditioner will start operating at 26°C with the slowest fan speed when the outside temperature reaches to 32°C.

Cooling specific

If you set it as an air conditioner for cooling only, you won't be able to use the heating in the smartphone application.

■ To use "Cooling specific", tap [ON] and then tap _____ on the top right.



 When "ON" is set or "Heat" is set to favourites, the pop-up message asking whether to initialize favourites appears.

If you tap [YES] on the pop-up message, the "Cooling specific" setting is turned "ON" to initialize the favourite with heating set.

Figure 6-8

■ To not to use "Cooling specific", tap [OFF] and then tap on the top right.

LED ON

Lights up the LED of the wireless LAN interface.

- To use LED lighting, tap [ON] and then tap ____ on the top right.
- To not to use LED lighting, tap [OFF] and then tap _____ on the top right.

Number of smartphones

Displays the number of smartphones registered with the air conditioner.

(7) Setting Weekly Timer

Makes the timer setting for every day of the week.



Tap [Weekly Timer] on the lower part of the air conditioner details screen.

The "Weekly Timer" screen appears.

Figure 7-1

Tap on the top right of the screen to save the settings you changed.



Figure 7-2

Tap the day of the week you want to set to display the timer list for that day of the week.

You can set up to six timers for each day of the week, but you cannot set the same time for the same day.



A disabled timer shows the time and operation mode only.

Tap the switch at to enable and edit.

Edit each item and tap on the top right to set the timer on the target day.

Figure 7-3



When at least one timer setting is ON, the timer icon appears on the air conditioner detail screen.

Figure 7-4

The timer you set here is applied to every week on that day.

To turn off the timer only on a certain day, or to apply the timer of another day, set individually from the "Calendar" screen.

(8) Setting Timer by Specifying Date via Calendar

When you set the weekly timer, the same timer is applied to the same day every week. To turn off the timer or set the timer of a different day on a certain day, set individually from the "Calendar" screen.



Figure 8-1

Tap [Calendar] on the lower part of the air conditioner details screen.

The [Calendar] screen appears.



Figure 8-2

Tap the date of the calendar. Select the timer of the day of the week that you want to apply from "Weekly Timer Settings" and tap on the top right of the screen.

If you select "OFF" from "Weekly Timer Settings", the weekly timer is not applied.

When the timer of a different day of the week is applied or the timer is turned off, the date appears in green.

Clear the timer set from the calendar



Figure 8-3

Tap the date whose timer you want to clear.



From "Weekly Timer Settings", select the same day of the week as the date to clear and tap

Figure 8-4



Figure 8-5

When cleared, the background of the date is displayed in white.

(9) Displaying Electricity Bill Graph

Displays an electricity bill by month on a graph. You can also set the electricity unit cost.



Note

Depending on the type of air conditioner you connect, the function may be disabled.

Tap [Electricity Bill Graph] on the lower part of the air conditioner details screen.

The "Electricity Bill Graph" screen appears.





Figure 9-2

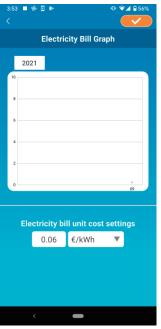


Figure 9-3

If you change the electricity bill unit cost settings, you can enter a unit price by changing the unit of measure.

After editing, tap _____ to save the setting.

(10) Updating Firmware

If the firmware of your wireless LAN interface is not up to date, an exclamation mark 1 appears on the "Air Conditioner List" screen.



Tap [Details] to display the air conditioner details screen.

Figure 10-1



Figure 10-2

Tap the [Firmware update] button.

Note

- Perform the firmware update in the same wireless LAN area as the air conditioner.
- Please turn off the air conditioner in advance.
- If firmware update is disabled, the button is not enabled.



Figure 10-3

Tap [YES] to update the firmware to the latest one.

The firmware update takes 10 minutes (Max). The operation from the application is not accepted during that period.

If after 10 minutes (Max) the "Firmware update" button appears, retry the firmware update.



Figure 10-4

When the firmware becomes up to date, the firmware version appears instead of the [Firmware update] button.

(11) Main Menu

Tap the menu button () that appears on the top left in the screen such as "Air Conditioner List", to display the main menu.

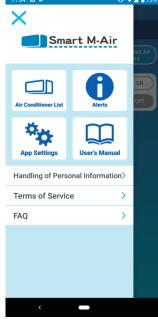


Figure 11-1

Air Conditioner List : Operates or sets an

Air conditioner.

■ Alerts : Checks alerts.

■ App Settings : Switches the operation

mode or sets the password.

■ User's Manual : Displays the user's

manual.

■ Handling of Personal Information

: Displays the handling of personal information.

■ Terms of Service : Displays the terms of

service.

■ FAQ : Displays the FAQ.

Canceling demo mode


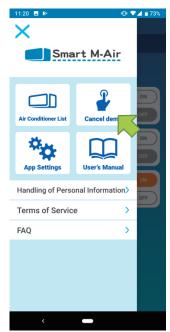


Figure 11-2

In the demo mode Cancel demo : Exits the demo mode.

(12) Checking Alerts

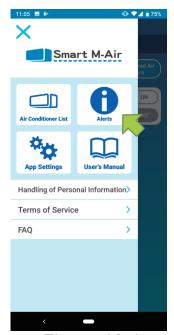

Open the main menu and tap [Alerts].

Figure 12-1



Figure 12-2

A list of alerts appears.

Tap each alert to display the alert details screen and check it.

appears to the alert that is not checked in the alert details screen.

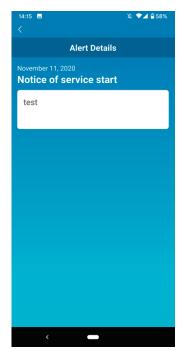


Figure 12-3

(13) Changing Application Settings



Open the main menu and tap [App Settings].

Figure 13-1



Figure 13-2

The "Application Settings" screen appears.

- Switch Operation Modes: Switches between the remote operation mode and home restricted mode.
 - → To <u>"Switch Operation Modes"</u>
- Password Settings: Sets a password.
 - → To <u>"Reset Password"</u>
- Language/Time Zone Settings: Sets a language to use in the smartphone application and a time zone for an air conditioner.
 - → To "Language/Time Zone Settings"
- Application Initialization: Initializes the smartphone application.
 - → To <u>"Application Initialization"</u>
- Application Version Display: Displays the version of your smartphone application.
 - → To "Application Version Display"

Note

In "Home restricted mode", you cannot operate "Password Settings".
 In "Try a Demo", only "Language/Time Zone Settings" and "Application Version Display" can be operated.
 Functions that cannot be operated are displayed in gray, and nothing is displayed even if you tap them.

Switch Operation Modes

You can see the current operation mode. To switch the operation mode, select the desired mode and tap ______.

Switching to "Remote operation mode"


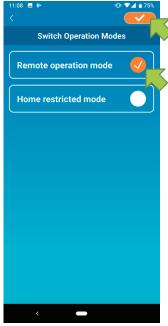


Figure 13-3

Tap [Remote operation mode] \rightarrow Tap on the top right to switch the mode.

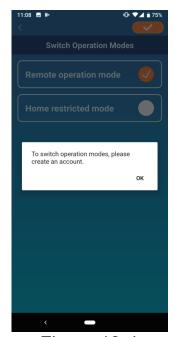

When the account creation pop-up message appears, tap [OK], agree with the handling of personal information, and create an account.

→ To "Creating user account"

Figure 13-4

• Switching to "Home restricted mode"

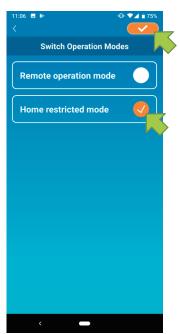


Figure 13-5

Tap [Home restricted mode] → Tap on the top right to switch the mode.

Note

 Note that if you switch the mode to "Home restricted mode", the account information used in "Remote operation mode" is deleted. The popup for remote control disabled and the popup for deleting server data will appear, so tap [YES].

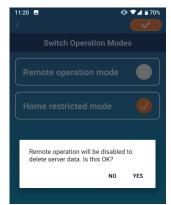


Figure 13-6



Figure 13-7



Figure 13-8

When the operation mode switching completion pop-up message appears, tap [OK].

Reset Password

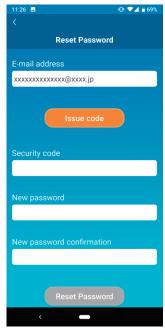


Figure 13-9

Enter the registered e-mail address and tap the [Issue code] button.

Note

 After tapping the [Issue code] button, keep this screen displayed until the password resetting is completed.

If you tap < and return to the previous screen, these operations are canceled.

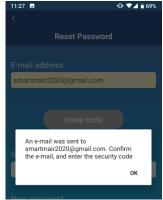


Figure 13-10

When the e-mail sending pop-up message appears, tap [OK].

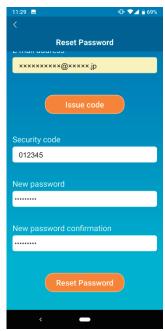


Figure 13-11

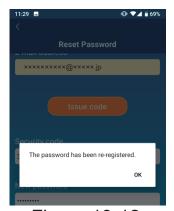


Figure 13-12

An e-mail with a security code will be sent to the e-mail address you entered. Enter "Security code" and "New password" and tap [Reset Password] to update your password.

Note

 A password must be between 8 to 16 characters including at least one alphabetic character and one numeric character.

Language/Time Zone Settings

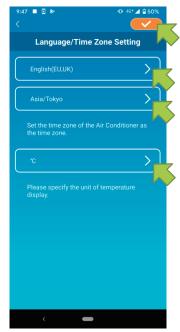


Figure 13-13

The "Language/Time Zone Settings" screen appears.

Select a language to use in the application.

Select a time zone. Select the time zone in which the air conditioner to operate via the application exists.

Choose the unit of temperature.

Finally, tap on the top right to complete the setting.

Application Initialization

Initializes the smartphone application.


Note

• Note that if you initialize the application in "Remote operation mode", the information of the account logged in is deleted.



Figure 13-14

Tap [Initialize the application].

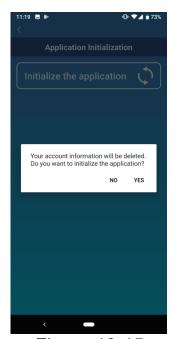

When the pop-up message "Your account information will be deleted.

Do you want to initialize the application?" appears, tap [YES].

Figure 13-15



Figure 13-16

When the pop-up message "Initialization is complete. Close the application." appears, tap [OK] to close the application.

Application Version Display



Figure 13-17

Displays the version of your smartphone application.

(14) Troubleshooting

 When the air conditioner that you want to register does not appear in the air conditioner list screen



Tap the [Find unregistered Air Conditioners]

Button to search unregistered air conditioners and update the "Air Conditioner List" screen.

Figure 14-1

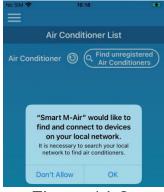


Figure 14-2

When asked for "search your local network" on iOS, tap the "OK" button.

If you accidentally tap the "Don't Allow" button, change the Smart M-Air's "local network" in the iOS app permission settings to "ON", then tap the "Find unregistered Air Conditioner" button again.

• How to delete a registered air conditioner



To delete a registered air conditioner, press and hold down (2 seconds) the icon of the target air conditioner.

Figure 14-3



Figure 14-4

When the deleting air conditioner pop-up Message appears, tap [YES].

When an abnormality notification appears in the air conditioner list



When an abnormality notification appears, air conditioner abnormality has been detected. Contact your dealer.

When "AC error notification" of the option settings is enabled, an e-mail is sent to the registered e-mail address.

Figure 14-5

When you forget your password and cannot log in

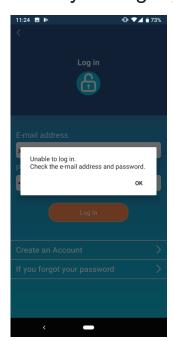


Figure 14-6

If you forgot your password and failed to log in, tap [OK] on the pop-up message, tap [If you forgot your password] to display the "Reset Password" screen, and set a new password.

→ To "Reset Password"

When operation is performed by another account

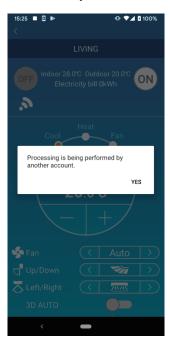


Figure 14-7

The message shows in the following cases:

- When the application is operated from other smartphones at the same time
- When the air conditioner is changing its operation status by its set control

The equipment is not malfunctioning, so please try again after a while.
(Approximately 1 minute)

 When "Shut-off reminder alert" does not turn on (For Android OS)



Figure 14-8

You must select "While using the app" when there is a request to allow access to your device information for this application.

If you accidentally tap other buttons such as "Only this time" or "Deny", you can change it to "While using the app" in Android OS Setting Screen.

15. OPTION PARTS

(1) Wired remote control (RC-EX3A, RC-E5)
(a) Model RC-EX3A



1) Safety precautions

◆Please read this manual carefully before starting installation work to install the unit properly.
Every one of the followings is important information to be observed strictly.

∕ •WARNING	Failure to follow these instructions properly may result in serious
Z!\\\ARINING	consequences such as death, severe injury, etc.
∴ CAUTION	Failure to follow these instructions properly may cause injury or property
Z!\CAUTION	damage.

It could have serious consequences depending on the circumstances.

The following pictograms are used in the text.



Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

MARNING

- Consult your dealer or a professional contractor to install the unit.

 Improper installation made on your own may cause electric shocks, fire or dropping of the unit.
- Installation work should be performed properly according to this installation manual.

Improper installation work may result in electric shocks, fire or break-down.

- Be sure to use accessories and specified parts for installation work.
 Use of unspecified parts may result in drop, fire or electric shocks.
- Install the unit properly to a place with sufficient strength to hold the weight.

If the place is not strong enough, the unit may drop and cause injury.

Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient and improper work can cause electric shock and fire.

Shut OFF the main power source before starting electrical work.
Otherwise, it could result in electric shocks, break-down or malfunction.


Do not modify the unit.

 
It could cause electric shocks, fire, or break-down.

Be sure to turn OFF the power circuit breaker before repairing/ inspecting the unit.

Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.

!\WARNING

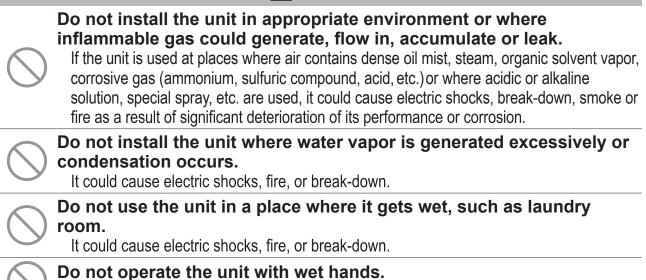



It could cause electric shocks, fire, or break-down.

Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.

Improper connections or fixing could cause heat generation, fire, etc.

Seal the inlet hole for remote control cable with putty.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

If dew or water enters the unit, it may cause screen display anomalies.

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

Do not leave the remote control with its upper case removed.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

ACAUTION

Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
 - Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0°C or below, or 40°C or above
 - Where the surface is not flat
 - · Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - Place with high humidity where condensation occurs on the remote control
 - · Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - · Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large

To connect to a personal computer via USB, use the dedicated software.

Do not connect other USB devices and the remote control at the same time.

It could cause malfunction or break-down of the remote control/personal computer.



2) Accessories & prepare on site

Following parts are provided.

Accessories R/C main unit, wood screw (φ 3.5 x 16) 2 pcs., Quick reference

Following parts are arranged at site. Prepare them according to the respective installation procedures.

01 0 1 0 1	'	
Item name	Q'ty	Remark
Switch box For 1 piece or 2 pieces (JIS C 8340 or equivalent)	1	
Thin wall steel pipe for electric appliance directly on a wall. (JIS C 8305 or equivalent)	As required	These are not required when installing directly on a wall.
Lock nut, bushing (JIS C 8330 or equivalent)	As required	
Lacing (JIS C 8425 or equivalent)	As required	Necessary to run R/C cable on the wall
Putty	Suitably	For sealing gaps
Molly anchor	As required	
R/C cable (0.3mm ² x 2 pcs.)	As required	See right table when longer than 100m.

When the cable length is longer than 100m, the max size for wires used in the R/C case is 0.5mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≦ 200m	0.5mm ² x 2 cores
≦ 300m	0.75mm ² x 2 cores
≦ 400m	1.25mm ² x 2 cores
≦ 600m	2.0mm ² x 2 cores

3) Installation place


Secure the installation space shown in the figure.

For the installation method, "embedding wiring" or "exposing wiring" can be selected.

For the wiring direction, "Backward", "Upper center" or "Upper left" can be selected.

Determine the installation place in consideration of the installation method and wiring direction.


Installation space

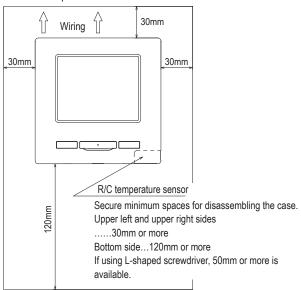

4) Installation procedure

Perform installation and wiring work for the remote control according to the following procedure.

Dimensions (Viewed from front)

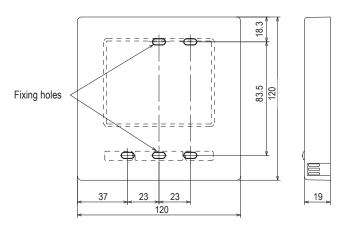

To disassemble the R/C case into the upper and lower pieces after assembling them once

 \cdot Insert the tip of flat head screwdriver or the like in the recess at the lower part of R/C and twist it lightly to remove. It is recommended that the tip of the screwdriver be wrapped with tape to avoid damaging the case.


Take care to protect the removed upper case from moisture or dust.

In case of embedding wiring

(When the wiring is retrieved "Backward")


Embed the switch box and the R/C wires beforehand.

Seal the inlet hole for the R/C wiring with putty.

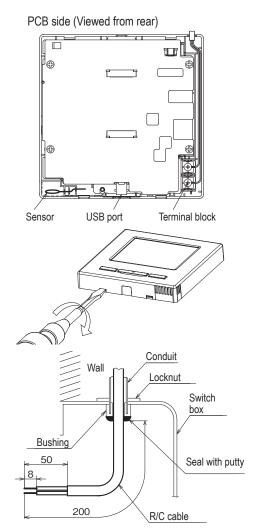


② When wires are passed through the bottom case, fix the bottom case at 2 places on the switch box.

Switch box for 1 pc.

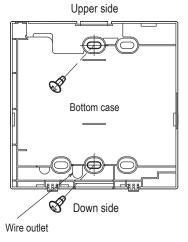

Switch box for 2 pcs.

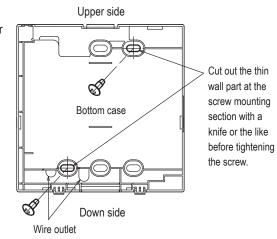


- ③ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- 4 Install the upper case with care not to pinch wires of R/C.

Cautions for wire connection

Use wires of no larger than 0.5mm² for wiring running through the remote control case. Take care not to pinch the sheath.

Tighten by hand $(0.7N\cdot m \text{ or less})$ the wire connection. If the wire is connected using an electric driver, it may cause failure or deformation.

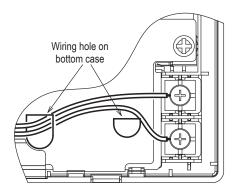


In case of exposing wiring


(When the wiring is taken out from the "upper center" or "upper left" of R/C)

1) Cut out the thin wall sections on the cases for the size of wire.


When taking the wiring out from the upper center, open a hole before separating the upper and bottom cases. This will reduce risk of damaging the PCB and facilitate subsequent work.

 
When taking the wiring out from the upper left, take care not to damage the PCB and not to leave any chips of cut thin wall inside.



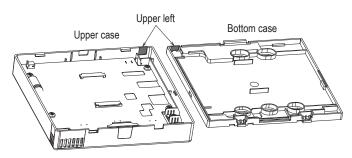

- ② Fix the bottom R/C case on a flat surface with two wood screws.
- ③ In case of the upper center, pass the wiring behind the bottom case. (Hatched section)
- 4 Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- (5) Install the top case with care not to pinch wires of R/C.
- 6 Seal the area cut in 1 with putty.

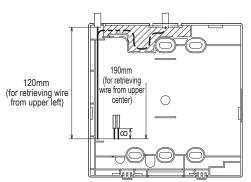

 


5) Main/Sub setting when more than one remote control are used

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.

One is main R/C and the other is sub R/C.

Operating range is different depending on the main or sub R/C.

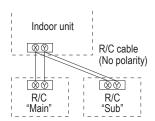

R/C operation			Main	Sub
Run/Stop, Change set temp., Change flap direction, Auto swing, Change fan speed operations				0
High power of	peration, En	ergy-saving operation	0	0
Silent mode of	control		0	×
Useful	Individual f	ap control	0	×
functions	Anti draft se	etting	0	×
	Timer		0	0
	Favorite se	tting	0	0
	Weekly tim	er	0	×
	Home leave	e mode	0	×
	External ve	ntilation	0	0
Select the language		anguage	0	0
Silent mode control				×
Energy-saving setting			0	×
Filter	Filter sign reset		0	0
User setting	Initial settin	gs	0	0
	Administrator settings	Permission/ Prohibition setting	0	×
		Outdoor unit silent mode timer	0	×
		Setting temp. range	0	×
		Temp increment setting	0	×
		Set temp. display	0	0
		R/C display setting	0	0
		Change administrator password	0	0
		F1/F2 function setting	0	0

○ : operable ×: not operable					
R/C operations					Sub
Service Installation Installation date			on date	0	×
setting	settings	Compan	y information	0	0
		Test run	0	×	
		Static pr	essure adjustment	0	×
		Change	auto-address	0	×
		Address	setting of main IU	0	×
		IU back-	up function	0	×
		Motion s	ensor setting	0	×
	R/C function	Main/Su	b of R/C	0	0
	settings	Return a	nir temp.	0	×
		R/C sen	sor	0	×
		R/C sen	sor adjustment	0	×
		Operation	n mode	0	×
		°C / °F		0	×
		Fan spe	ed	0	×
		External input		0	×
		Upper/lo	0	×	
		Left/right flap control		0	×
		Ventilation setting		0	×
		Auto-restart		0	×
		Auto temp. setting		0	×
		Auto fan speed		0	×
	IU settings			0	×
	Service &	IU addre	ess	0	0
	Maintenance	Next service date		0	×
		Operation data		0	×
		Error	Error history	0	0
		display	Display/erase anomaly data	0	×
			Reset periodical check	0	0
		Saving IU settings		0	×
		Special	Erase IU address	0	×
			CPU reset	0	0
			Restore of default setting	0	×
			Touch panel calibration	0	0
		Indoor u	nit capacity display	0	×


Advice: Connection to personal computer

It can be set from a personal computer via the USB port (mini-B). Connect after removing the cover for USB port of upper case.

Replace the cover after use.

Special software is necessary for the connection.


For details, view the web site.

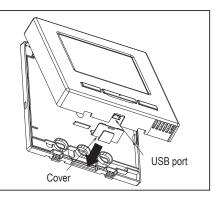

Advice: Initializing of password

Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.

- The administrator password at factory default is "0000". This setting can be changed (Refer to User's Manual).
 - If the administrator password is forgotten, it can be initialized by holding down the [F1] and [F2] switches together for five seconds on the administrator password input screen.
- Service password is "9999", which cannot be changed.
 When the administrator password is input, the service password is also accepted.

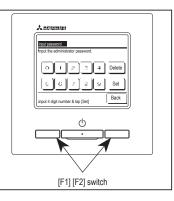

(b) Model RC-E5



Read together with indoor unit's installation manual.

MARNING

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
 - Loose connection or hold will cause abnormal heat generation or fire.
- Make sure the power source is turned off when electric wiring work.
 Otherwise, electric shock, malfunction and improper running may occur.



ACAUTION

- Do not install the remote control at the following places in order to avoid malfunction.
- (1) Places exposed to direct sunlight
- (4) Hot surface or cold surface enough to generate condensation
- (2) Places near heat devices(3) High humidity places
- (5) Places exposed to oil mist or steam directly





Do not leave the remote control without the upper case.


In case the upper cace needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.



Accessories	Remote control, wood screw (φ3.5×16) 2 pieces	
Prepare on site	Remote control cord (2 cores) the insulated thickness in 1mm or more.	
	[In case of embedding cord] Erectrical box, M4 screw (2 pieces)	
	[In case of exposing cord] Cord clamp (if needed)	

Installation procedure


- Open the cover of remote control, and remove the screw under the buttons without fail.
- Remove the upper case of remote control. Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.

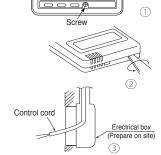


[In case of embedding cord]

3 Embed the erectrical box and remote control cord beforehand.

  Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to erectrical box. Choose either of the following two positions in fixing it with screws.






- S Connect the remote control cord to the terminal block. Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)
- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

[In case of exposing cord]

 - ③ You can pull out the remote control cord from left upper part or center upper part. Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.
- ④ Install the lower case to the flat wall with attached two wooden screws.




(4)

Onnect the remote control cord to the terminal block.

Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)

 Wiring route is as shown in the right diagram depending on the pulling out direction.



The wiring inside the remote control case should be within 0.3mm² (recommended) to 0.5mm². The sheath should be peeled off inside the remote control case.

The peeling-off length of each wire is as below.

Pulling out from upper left	Pulling out from upper center
X wiring : 215mm	X wiring : 170mm
Y wiring: 195mm	Y wiring: 190mm



- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
- In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control


- ① Wiring of remote control should use 0.3mm² × 2 cores wires or cables. (on-site configuration)
- ② Maximum prolongation of remote control wiring is 600m.

If the prolongation is over 100m, change to the size below.

But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

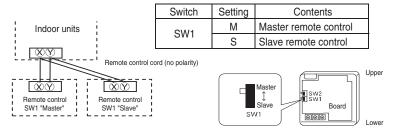

Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.

Note: The setting "Remote control sensor enabled" is only selectable with the master remote control in the position where you want to check room temperature.

 
The air-conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.

The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

At the same time, a mark or a number will be displayed for two seconds first.

This is the software's administration number of the remote control, not an error cord.



When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear

Check wiring of the indoor unit and the outdoor unit etc.



3 . 5 . 6-3

The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating: 16-30°C (55-86°F)

Except heating (cooling, fan, dry, automatic): 18-30°C (62-86°F)

●Upper limit and lower limit of set temperature can be changed with remote control.

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F). Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.

 When @TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting), [If upper limit value is set]

During heating, you cannot set the value exceeding the upper limit.

[If lower limit value is set]

During operation mode except heating, you cannot set the value below the lower limit.

2. When ② TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE" [If upper limit value is set]

During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

[If lower limit value is set]

During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

How to set upper and lower limit value


1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds .

The indication changes to "FUNCTION SET ▼".

- 2. Press ▼ button once, and change to the "TEMP RANGE ▲ " indication.
- 3. Press (SET) button, and enter the temperature range setting mode.
- 4. Select "UPPER LIMIT \blacktriangledown " or "LOWER LIMIT \blacktriangle " by using $\boxed{\blacktriangle}$ $\boxed{\blacktriangledown}$ button.
- 5. Press (SET) button to fix.
- 6. When "UPPER LIMIT ▼" is selected (valid during heating)
 - ① Indication: " $\bigcirc \lor \land$ SET UP" \rightarrow "UPPER 30°C \lor "

 - ③ Press ◯ (SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds)

 After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
- 7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)
 - ① Indication: " \bigcirc $\lor \land$ SET UP" \rightarrow "LOWER 18°C \land "
 - ② Select the lower limit value with temperature setting button $\boxed{\lor}$ $\boxed{\land}$. Indication example: "LOWER 24°C \lor \land " (blinking)
 - ③ Press (SET) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds)
 After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼".
- 8. Press ON/OFF button to finish.

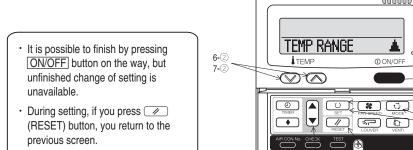

2 . 4

Previous button

The functional setting

●The initial function setting for typical using is performed automatically by the indoor unit connected, when remote control and indoor unit are connected.

As long as they are used in a typical manner, there will be no need to change the initial settings. If you would like to change the initial setting marked "O", set your desired setting as for the selected item.

The procedure of functional setting is shown as the following diagram.

Start : Stop air-conditioner and press " " (SET) and " " (MODE) buttons at the same time for over three seconds.

Finalize : Press " (SET) button.

Reset : Press " (RESET) button.

Select : Press | To button.

Record and keep the settina

End : Press ON/OFF button.

It is possible to finish above setting on the way, and unfinished change of setting is unavailable

○ ": Initial settings " * " : Automatic criterion Consult the technical data etc. for each control details

Stop air-conditioner and press

(SET) + (MODE) buttons at the same time for over three seconds.

FUNCTION SET 🔻 To next page ■ RINCTION ▼ (Remote control function) Function setting O1 LOMMESP Validate setting of ESP:External Static Pressure Invalidate setting of ESP 02 AUTORUN SE AUTO RUN ON AUTO RUN OFT automatical operation is impossible 03 MAIA TEMPSW Temperature setting button is not working 04 EE MODE SW 은데 YALID 은데 INVALII Mode button is not working 05 TO ON/OFF SW കര WALID 50 INVALID On/Off button is not working 06 SEFAN SPEED SW কিন্তা INWALID Fan speed button is not working 07 EZ LOUVER SW & ☑ VALIO O INVALID ouver button is not working 08 @ TIMER SW එම VALID එම INVALID Timer button is not working 09 ESENSOR SET I⊜SENSOR OFF ESENSOR ON
ESENSOR +3.0%
ESENSOR +2.0% Remote sensor is working. Remote sensor is working, and to be set for producing +3.0°C increase in temperature. Remote sensor is working, and to be set for producing +2.0°C increase in temperature. Remote sensor is working, and to be set for producing +1.0°C increase in temperature. Remote sensor is working, and to be set for producing -1.0°C increase in temperature. SBNSOR - 1.0%
SBNSOR - 1.0%
SBNSOR - 2.0% Remote sensor is working, and to be set for producing -2.0°C increase in temperature ■SBNSOR -3.0 Remote sensor is working, and to be set for producing -3.0°C increase in temperature 10 AUTORESTART INVALID VALID 11 | VENTLINK SET NO VENT In case of Single split series, by connecting ventilation device to CnT of the indoor printed circuit board (in case of VRF series, by connecting it to CnD of the indoor printed circuit board), the operation of ventilation device is linked with the VENT LINK operation of indoor unit.

In case of Single split series, by connecting ventilation device to CnT of the indoor printed NO VENT LINK circuit board (in case of VRF series, by connecting it to CnD of the indoor printed circuit board), you can operate /stop the ventilation device independently by (VENT) button. 12 TEMP RANGE SET If you change the range of set temperature, the indication of set temperature will vary following the control.

If you change the range of set temperature, the indication of set temperature TNON CHANGE NO INDIN CHANG will not vary following the control, and keep the set temperature 13 II/UFAN Air flow of fan becomes of * 1- * 1 or the four speed of * 1- * 1. Air flow of fan becomes of * - * 1.
Air flow of fan becomes of * - * 1. Air flow of fan is fixed at one speed If you change the remote control function "14 与PISITION", you must change the indoor function "04 与PISITION" accordingly. You can select the louver stop position in the four. 14 [호근POSITION 4POSITION STOP The louver can stop at any position. 15 MODEL TYPE COOLING ONLY 16 EXTERNAL CONTROL SET If you input signal into CnT of the indoor printed circuit board from external, the INDIVIDUAL indoor unit will be operated independently according to the input from external. If you input into CnT of the indoor printed circuit board from external, all units which connect to the same remote control are operated according to the input from external. FOR ALL UNIT: 17 ROOM TEMP INDICATION SET INDICATION OFF In normal working indication, indoor unit temperature is indicated instead of air flow. (Only the master remote control can be indicated.) 18 🐲 INDICATION INDICATION ON INDICATION OF Heating preparation indication should not be indicated. 19 ℃/°FSET Temperature indication is by degree C Temperature indication is by degree F To next page

Note *The mark cannot use SRK series.


ON/OFF button (finished)

Note 1: The initial setting marked "%" is decided by connected indoor and outdoor unit, and is automatically defined as following table,

Function No.	Item	Default	Model
Remote control	ALITO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
function02		AUTO RUN OFF	Indoor unit without "Auto-RUN" mode
Remote control	ESEIFAN SPEED S₩	6절 VALID	Indoor unit with two or three step of air flow setting
function06		িজ্ঞ INVALID	Indoor unit with only one of air flow setting
Remote control	EZZI LOUYER SW	©EZI VALID	Indoor unit with automatically swing louver
function07		& ☑ INVALID	Indoor unit without automatically swing louver
Remote control	1/U FAN	HI-MED-LO	Indoor unit with three step of air flow setting
function13		нт⊣ш	Indoor unit with two step of air flow setting
		HI-MED	
		1 FAN SPEED	Indoor unit with only one of air flow setting
Remote control	MODEL TYPE	HEAT PUMP	Heat pump unit
function15		COOLING ONLY	Exclusive cooling unit

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.

But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION/PROH

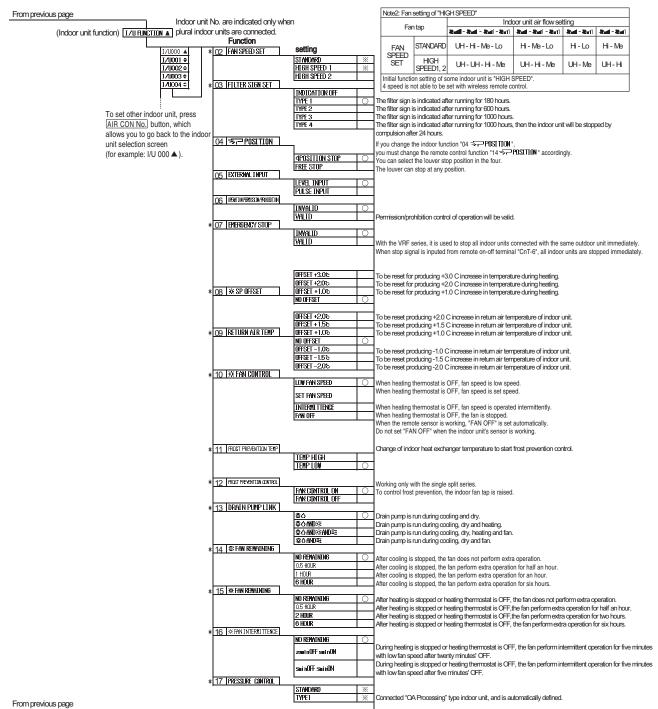

Note * The mark cannot use SRK series.

How to set function

Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the
"FUNCTION SET ▼" will be displayed.



- 2. Press (SET) button.
- Make sure which do you want to set, "

 FUNCTION ▼"

 (remote control function) or "I/U FUNCTION ▲" (indoor unit function).
- Press ▲ or ▼ button.
 Selecct "■ FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).




5. Press O (SET) button.


- 6. [On the occasion of remote control function selection]
 - ① "DATA LOADING" (Indication with blinking)

 ↓

 Display is changed to "01 ₺₩₩ €\$₽ \$€Ţ".
 - Press ▲ or ▼ button. *No. and function*are indicated by turns on the remote control function table, then you can select from them. (For example)

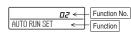

Press ()(SET) button. The current setting of selected function is indicated. (for example) "AUTO RUN ON" — If "02 AUTO RUN SET" is selected

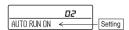

Press or button. Select the setting.




⑤ Press 〇 (SET)

"SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, Set as the same procedure if you want to set continuously ,and if to finish, go to 7.



7. Press ON/OFF button. Setting is finished.

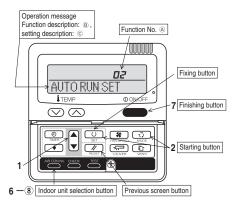

[On the occasion of indoor unit function selection]

"DATA LOADING" (Blinking for 2 to 23 seconds to read the data)
 ↓
 Indication is changed to "02 FAN SPEED SET".
 Go to ②.

 
[Note]

 If plural indoor units are connected to a remote control, the indication is "I/U 000" (blinking) ← The lowest number of the indoor unit connected is indicated.




- (2) Press ▲ or ▼ button. Select the number of the indoor unit you are to set If you select "ALL UNIT ▼", you can set the same setting with all unites.
- (3) Press (SET) button.
- ② Press ▲ or ▼ button.

"No. and function" are indicated by turns on the indoor unit function table, then you can select from them.
(For example)



③ Press O (SET) button.

 The current setting of selected function is indicated. (For example) "STANDARD" ← If "02 FAN SPEED SET" is selected.



- ④ Press ▲ or ▼ button. Select the setting.
- Press (SET) button. "SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, set as the same procedure if you want to set continuously , and if to finish, go to 7.



When plural indoor units are connected to a remote control, press the AIR CON No. button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 ▲")

...

**

When plural indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control, press the AIR CON No.

**

Indoor units are connected to a remote control units

- It is possible to finish by pressing ON/OFF button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (//)(RESET) button, you return to the previous screen.
- Setting is memorized in the control and it is saved independently of power failure.

[How to check the current setting]

When you select from "No. and function" and press set button by the previous operation, the "Setting" displayed first is the current setting.

(But, if you select "ALL UNIT f v ", the setting of the lowest number indoor unit is displayed.)

(2) Interface kit (SC-BIKN2-E)

RKZ012A099

Accessories included in package

Be sure to check all the accessories included in package

No.	Part name	Quantity
1	Indoor unit's connection cable (cable length: 1.8m)	1
2	Wood screws (for mounting the interface: φ 4x 25)	2
3	Tapping screws (for the cable clump and the interface mounting bracket)	3
4	Interface mounting bracket	1
⑤	Cable clamp (for the indoor unit connection cable)	1
6	CnT terminal connection cable (total cable length: 0.5m)	1

Safety precautions

Before use, please read these Safety precautions thoroughly before installation.

● All the cautionary items mentioned below are important safety related items to be taken into consideration, so be sure to observe them at all times

Incorrect installation could lead to serious consequences such as death, major **∴**Warning injury or environmental destruction.

Symbols used in these precautions



Always go along these instruction.

 After completed installation, carry out trial operation to confirm no anomaly, and ask the user to keep this installation manual in a good place for future reference.

<u>/</u>!\

Warnings




- Installation must be carried out by a qualified installer.
- If you install it by yourself, it may cause an electric shock, fire and personal injury, as a result of a system malfunction.
- Install it in full accordance with the installation manual.

Incorrect installation may cause an electric shock, fire and personal injury.


- Electrical work must be carried out by a qualified electrician in accordance with the technical standard for electrical equipment, the indoor wiring standard and this installation manual. Incorrect installation may cause an electric shock, fire and personal injury.
- Duse the specific cables for wiring. And connect all the cables to terminals or connectors securely and clamp them with cable clamps in order for external forces not to be transmitted to the terminals directly.
 - Incomplete connection may cause malfunction, and lead to heat generation and fire.
- Use the original accessories and specified components for installation. If the parts other than those prescribed by us are used, it may cause an electric shock, fire and sersonal injury.

Connecting the indoor unit connection cable to the interface ①Remove the upper case of the interface.

- Remove 2 screws from the interface casing before removal of upper casing.
- ②Connect the indoor unit connection cable to the interface.
 - Connect the connector of the indoor unit connection cable to the connector on the interface circuit board.
- (3) Fix the indoor unit connection cable with the cable clamp.
 - Cable can be brought in from the top or from the back.
 - Cut out the punch-outs for the connection cables running into the casing with cutter.
- (4) Connect the indoor unit connection cable to the indoor control PCB.
 - Connect the indoor unit connection cable to the indoor control PCB securely.
 - · Clamp the connection cable to the indoor control box securely with the cable clamp provided as an accessory.
 - · Regarding the cable connection to the indoor unit, refer to the installation manual for

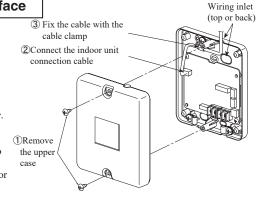

Name of each part of the interface

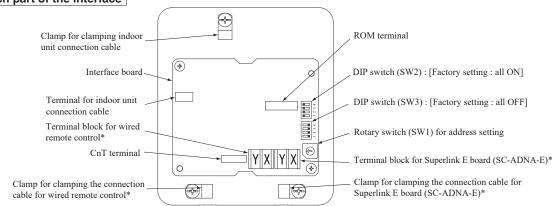

*Either the connection cables of Superlink E board (SC-ADNA-E) or of wired remote control is connectable.

Switch	Setting	Function	Switch	Setting	Function
SW2-1	ON**	CnT level input	SW2-3	ON**	External input (CnT input)
3 W Z-1	OFF	CnT pulse input		OFF	Operation permission/prohibition (CnT input)
SW2-2	ON**	Wired remote control : Enable	SW2-4	ON**	Annual cooling : Enable***
3 W 2-2	OFF	Wired remote control : Disable		OFF	Annual cooling : Disable***

^{**} Factory setting

*** Indoor fan control at low outdoor air temperature in cooling


Wiring inlet

Installation of the interface

- Install the interface within the range of the connection cable length (approximately 1.3m) from the indoor unit.
- Be sure not to extend the connection cable on site. If the connection cable is extended, malfunction may occur.
- Fix the interface on the wall, pillar or the like.
- Don't install the interface and wired remote control at the following places.
 - OPlaces exposed to direct sunlight
 - OPlaces near heating devices
 - OHigh humidity places
 - OSurfaces where are enough hot or cold to generate condensation
 - OPlaces exposed to oil mist or steam directly
 - OUneven surface


Mounting the interface directly on a wall

- ①Mount the lower casing of the interface on a flat surface with wood screws provided as standard accessory.
- 2 Mount the upper casing.

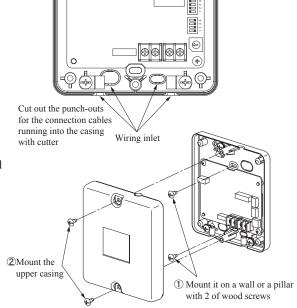


Recessing the interface in the wall

- ①Recess the electrical box (procured locally) and connection cables in the wall.
- ②Mount the lower casing of the interface to the electrical box with M4 screws (procured locally).
- 3 Mount the upper casing.

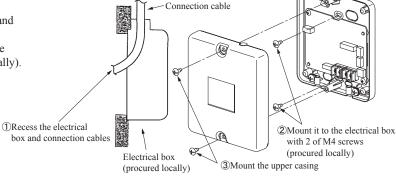

Mounting the interface with the mounting bracket

- ①Mount the upper casing.
- ②Mount the mounting bracket to the interface with tapping screws provided as standard accessory.
- 3 Mount the mounting bracket on wall or the like with wood screws provided as standard accessory.

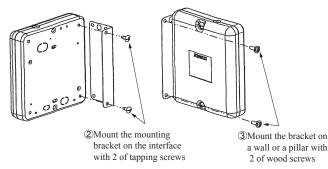


Installation check items

- ☐ Are the connection cables connected securely to the terminal blocks and connectors?
- ☐ Are the thickness and length of the connection cables conformed with the standard?

Functions of CnT connector

It is available to operate the air-conditioner and to monitor the operation status with the external control unit (remote display) by sending the input/output signal through CnT connector on the indoor control PCB.


- ①Connect a external remote control unit (procured locally) to CnT terminal.
- ②In case of the pulse input, switch OFF the DIP switch SW2-1 on the interface PCB.
- When setting operation permission/prohibition mode, switch OFF the DIP switch SW2-3 on the interface PCB.

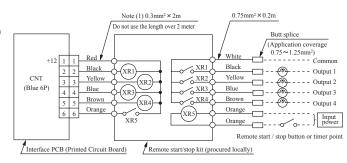

- Output signal Input/ Function Content Relay ON/OFF Output 1 Operation output XR₁ ON During air-conditioner operation Output 2 | Heating output XR₂ ON During heating operation Output 3 | Compressor operation output XR₃ ON During compressor running Output 4 Malfunction output XR₄ ON During anomalous stop
- ■XR₁₋₄ are for the DC 12V relay
- XR5 is a DC 12/24V or AC 220-240V relay
- ●CnT connector (local) maker, model

Connector	Molex	5264-06
Terminals	Molex	5263T

Immut/		SW2-1				SW2-3	Air-	Operation by	
Input/ Output	Function		Setting	Setting	Input signal		Content	conditioner	remote control
Output			Setting	Setting	Level/Pulse	XR5		conditioner	remote control
				ON*		OFF→ON	External input	ON	
			N* Level input		Level	$\text{ON} {\rightarrow} \text{OFF}$	1	OFF	Allowed
				OFF		OFF→ON	Operation permission	OFF	
Input	control					ON→OFF	Operation prohibition	OFF	Not allowed
	input		OFF Pulse input	ON*	Pulse	OFF→ON	Ft	OFF→ON	
		OEE				OFF-ON	External input	ON→OFF	Allowed
		OFF		OFF	Level	OFF→ON	Operation permission	ON	
						ON→OFF	Operation prohibition	OFF	Not allowed

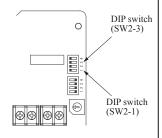

In case of the eco touch remote control (RC-EX3 or later model), the external outputs (1-4) and the external input can be changed using the function setting of eco touch remote control. For the setting method, refer to the installation manual. Also refer to the technical manual to know how it is adapted to the function setting for the external outputs and input, at the indoor unit side.


Connection of Superlink E board

Regarding the connection of Superlink E board, refer to the installation manual of Superlink E board. For electrical work, power source for all of units in the Superlink system


must be turned OFF.

①Switch ON the DIP switch SW2-2 (Factory setting: ON) on the interface PCB.

Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

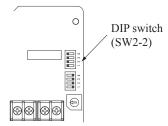

 ②Wiring connection between the interface and the Superlink E board.



No.	Names of recommended signal wires
1	Shielded wire
2	Vinyl cabtyre round cord
3	Vinyl cabtyre round cable
4	Vinyl insulated wire vinyl sheathed cable for control

Within 200 m $0.5 \text{ mm}^2 \times 2 \text{ cores}$ Within 300 m $0.75 \text{ mm}^2 \times 2 \text{ cores}$

Within 400 m $1.25 \text{ mm}^2 \times 2 \text{ cores}$

Within 600 m $2.0 \text{ mm}^2 \times 2 \text{ cores}$

3Clamp the connection cables with cable clamps.

^{*} Factory setting

DIP suitch

(SW2-2)

0

Connection of wired remote control

Regarding the connection of wired remote control, refer to the installation manual of wired remote control.

①Switch ON the DIP switch SW2-2 (Factory setting: ON) on the interface PCB.

Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

②Wiring connection between the interface and the wired remote control.

Installation and wiring of wired remote control

- (A) Install the wired remote control with reference to the attached installation manual of wired remote control.
- $\bigcirc 0.3$ mm² \times 2 cores cable should be used for the wiring of wired remote control.
- © Maximum length of wiring is 600m.

If the length of wiring exceeds 100m, change the size of cable as mentioned below. 100m-200m: $0.5mm^2 \times 2$ cores, 300m or less: $0.75mm^2 \times 2$ cores, 400m or less: $1.25mm^2 \times 2$ cores, 600m or less: $2.0mm^2 \times 2$ cores However, cable size connecting to the terminal of wired remote control should not exceed $0.5mm^2$. Accordingly if the size of connection cable exceeds $0.5mm^2$, be sure to downsize it to $0.5mm^2$ at the nearest section of the wired remote control and waterproof treatment should be done at the connecting section in order to avoid contact failure.

- Don't use the multi-core cable to avoid malfunction.
- (E) Keep the wiring of wired remote control away from grounding (Don't touch it to any metal frame of building, etc.).
- © Connect the connection cables to the terminal blocks of the wired remote control and the interface securely (no polarity).
- 3 Clamp the connection cables with cable clamps.

Control of multiple units by a single wired remote control

Multiple units (up to 16) can be controlled by a single wired remote control. In this case, all units connected with a single wired remote control will operate under the same mode and same setting temperature.

- ①Connect all the interface with 2 cores cables of wired remote control line.
- ②Set the address of indoor unit for remote control communication from "0" to "F" with the rotary switch SW1 on the interface PCB.
- ③ After turning the power ON, the address of indoor unit can be displayed by pressing AIR CON No. button on the wired remote control.

 Make sure all indoor units connected are displayed in order by pressing

 or □ button.

Master/Slave setting wired when 2 of wired remote control are used

Maximum two wired remote control can be connected to one indoor unit (or one group of indoor units)

- ①Set the DIP switch SW1 on the wired remote control to "Slave" for the slave remote control. (Factory setting: Master)
 - O Caution: Remote control sensor of the slave remote control is invalid.
- When using the wireless remote control in parallel with the wired remote control; Since temperature setting range of wired remote control is different from that of wireless remote control, please adjust the setting range of wired remote control to be the same setting range of wireless remote control by following procedure. (The set temperature may not be displayed correctly on the wireless remote control, unless change of temperature setting range is done.)
 Changing procedure of temperature setting range is as follows.

How to set upper and lower limit of temperature setting range

- 1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for 3 seconds or more.
 - The indication changes to "FUNCTION SET▼"
- 2. Press ♥ button once, and change to the "TEMP RANGE ▲" indication.
- 3. Press (SET) button, and enter the temperature range setting mode.
- 4. Confirm that the "Upper limit ▼" is shown on the display.
- 5. Press (SET)button to fix.
- 6. ①Indication: "ⓑ∨∧SET UP"→"UPPER 28°C ∨∧"
 - ②Select the upper limit value 30°C with temperature setting button □."UPPER30°C∨" (blinking)
 - ③Press (SET) button to fix. "UPPER 30°C" (Displayed for two seconds)


 After the fixed upper limit value displayed for two seconds, the indication will returm to "UPPER LIMIT ▼".
- 7. Press button once, "LOWER LIMIT ▲ " is selected, press (SET) button to fix.

 ①Indication: "♠∨ ∧ SET UP" → "LOWER 20°C ∨ ∧"
 - ②Select the lower limit value 18°C with temperature setting button ☑."LOWER18°C ∧" (blinking)
 - ③Press (SET) button to fix. "LOWER 18°C" (Displayed for two seconds)

 After the fixed lower limit value displayed for two seconds, the indication will returm to "LOWER LIMIT▼"
- 8. Press ON/OFF button to finish.

Temperature setting range

F	
Mode	Temperature setting range
Cooling, Heating, Dry, Auto	18-30°C

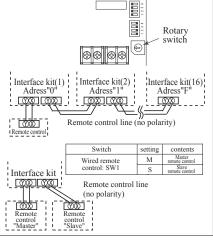


• It is possible to quit in the middle by pressing <u>ON/OFF</u> button, but the change of setting is incompleted.

Previous button

IIIIII

  During setting, if pressing (RESET) button, it returns to the previous screen.



TEMP RANGE

(3) Superlink E board (SC-ADNA-E)



- Read and understand the instructions completely before starting installation.
- Refer to the instructions for both indoor and outdoor units.

Safety precautions

- Carefully read "Safety precautions" first. Follow the instructions for installation.
- Precautions are grouped into "Warning 🗥 and "Caution 🗥". The "Warning 🗥 group includes items that may lead to serious injury or death if not observed. The items included
- in the "Caution A" group also may lead to serious results under certain conditions. Both groups are crucial for safety installation. Read and understand them carefully.

 After installation, conduct the test operation of the device to check for any abnormalities. Describe how to operate the device to the customer following the installation instruction manual. Instruct the customer to keep this installation instruction for future reference.

∕.\Warning

- This device should be installed by the dealer where you purchase the device or a licensed professional shop. If the device is incorrectly installed by the
- customer, it may result in electric shock or fire.

 Install the device carefully following the installation instruction. If the device is incorrectly installed, it may result in electric shock or fire.
- Use the accessory parts and specified parts for installation. If any parts that do not match the specifications are used, it may result in electric shock or fire.
- A person with the electrical service certification should conduct the service based on the "Technical standards for electrical facilities", "Electrical Wiring Code", and the installation instruction. If the work is done incorrectly, it may result in electric shock or fire.
- Wiring should be securely connected using the specified types of wire. No external force on the wire should be applied to any terminals. If a secure connection is not achieved, it may result in electric shock or fire.

1 Application

Indoor-to-outdoor three core communication specification type 3 (since

Accessories

SL E board	Metal box	Metal cover	Screw for ground
	[9]	· ·	M4×8 2 pieces
Pan head screws	Locking supports	Binding band	Grommet
ø4×8 2 pieces	To secure the print board and the metal box Made of nylon 4 pieces	68	

3 Function

Allowing the central control SL1N-E, SL2NA-E, and SL4-AE3/BE3 to control and monitor the commercial air-conditioner unit.

4 Control switching

Settings can be changed by the DIP switch SW3 on the SL E board as in the following.

Switch	Symbol	Switch	Remark			
		ON	Master			
		OFF (default)	Slave			
		ON	Fixed previous protocol			
	2	OFF (default)	Automatic adjustment of Superlink protocol			
SW3	3	ON	Indicates the forced operation stop when abnormality has occurred.			
	3	OFF (default)	Indicates the status of running/stop as it is, when abnormality has occurred.			
	4	ON	The hundredth address activated "1"			
	4	OFF (default)	The hundredth address activated "0"			

.↑Caution


- Provide ground connection.
- The ground line should never be connected to the gas supply piping, the water supply piping, the lightning conductor rod, nor the telephone ground. If the grounding is improper, it may result in electric shock.
- Do not install the device in the following locations.
 - 1.Where there is mist/spray of oil or steam such as kitchens. 2.Where there is corrosive gases such as sulfurous acid gas.

 - 3. Where there is a device generating electromagnetic waves These may interfere with the control system resulting in the device becoming uncontrollable.
 - 4.Where flammable volatile materials such as paint thinner and gasoline may exist or where they are handled. This may cause a fire.

5 Connection outline

Note for setting the address

- Set the address between 00 and 47 for the previous Superlink connection and between 000 and 127 for the new Superlink connection. (*1)
- Do not set the address overlapping with those of the other devices in the network. (The default is 000.)

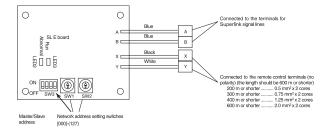


(*1) Whether the actual link is either the new Superlink or the previous Superlink depends on the models of the connected outdoor and indoor units. Consult the agent or the dealer.

Signal line specification

Communication method	Previous Superlink	New Superlink
Line type	MVVS	MVVS
Line diameter	0.75 - 1.25mm ²	0.75/1.25mm ²
Signal line (total length)	up to 1000m	up to 1500/1000m (*2)
Signal line (maximum length)	up to 1000m	up to 1000m

- (*2) Up to 1500m for 0.75mm², and up to 1000m for 1.25mm². Do not use 2.0mm2. It may cause an error.
- (*3) Connect grounding on both ends of the shielding wire. For the grounding method, refer to the section "6 Installation".


- Set the Superlink network address with SW1 (tens place), SW2 (ones place), and SW3 (hundreds place).
- (2) Set the SL E board SW3-1 to be ON (Master) when using this without any remote control (no wired remote controller nor wireless remote control).
- (3) Set up the plural master/slave device using the DIP switches on the indoor unit board.
- (4) Set up the remote control master/slave device using the slide switch on the remote control board.
- (5) Set up "0" to "F" using the address rotary switch on the indoor unit board when controlling the indoor unit with the multiple remote control.

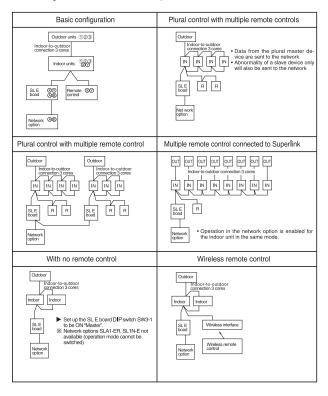

6 Installation

- 1. When using the metal box (mounted on the indoor unit / mounted on the back of the remote control):
 - (1) Mount the SL E board in the metal box using the locking supports.
 - (2) Wiring should go through the provided grommet since then through the wiring to the hole on the Metal box.

 
Secure the grommet after inserting the grommet into the Metal box as shown in below figure, then tie the wiring at the outlet of the unit using a binding band.




▲ When installed outside the indoor unit, put the metal cover on.



 
▲ When installed on the back of the remote control, mount it directly on the remote control bottom case.



 Connect grounding. Connect grounding for the power line to Ground ①, and grounding for the signal line to Ground ② or to the Ground on the indoor unit control box.



- 2. When connecting to the indoor unit control box (ceiling-concealed type and FDT type only):
 - (1) Mount the SL E board in the control box using the locking supports.
 - (2) Remove 6 bands from the box and put the wiring through the bands to be secured.

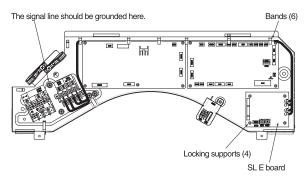

Electrical shock hazard make sure to turn the power off for servicing. Be cautious so that no abnormal force should be applied to the wiring. Do not let the SL E board hung by the wiring. Do not damage the board with a screwdriver.

The board is sensitive to static electricity. Release the static electricity of your body before servicing.

(You can do this by touching the control board which is grounded.)

Location of installation

Install the device at the location where there are no electromagnetic waves nor where there is water and dust. The specified temperature range of the device is 0 to 40°C. Install the device at the location where the ambient temperature stays within the range. If it exceeds the specification, make sure to provide solution such as installing a cooling fan. When used outside of the range, it may cause abnormal operation.

7 Indicator display

Check the LED 3 (green) and LED 2 (red) on the SL E board for flashing.

SL E boa	ard LEDs		Display on the
Red	Green	Inspection mode	integrated network control device
Off	Flashing	Normal communication	
Off	Off	Disconnection in the remote control communication line (X or Y) Short-circuit in the remote control communication line (between X and Y) Faulty indoor unit remote control power Faulty remote control communication circuit Faulty CPU on SL E board	No corresponding unit number
One flash	Flashing	Disconnection in the Superlink signal line (A or B) Short-circuit in the Superlink signal line (between A and B) Faulty Superlink signal circuit	
Two flashes	Flashing	Faulty address setting for the SL E board (Set up the address for previous SL E board : more than 48 new SL E board : more than 128)	
Three flashes	Flashing	SL E board parent not set up when used without a remote control Faulty remote control communication circuit	E1
Four flashes	Flashing	Address overlapping for the SL E board and the Superlink network connected indoor unit	E2
Off	Flashing	Number of connected devices exceeds the specification for the multiple indoor unit control	E10

16. TECHNICAL INFORMATION

Model SRK20ZT-WA

Information to identify the model(s) to w	hich the infor	mation rel	ates to:	If function includes heating: Indicate the	heating se	eason the	
Indoor unit model name	SRK20ZT-V		atoo to.	information relates to. Indicated values			
Outdoor unit model name	SRC20ZT-V	VA		heating season at a time. Include at leas			Average'.
	•			-			
Function(indicate if present)				Average(mandatory)	Yes		
cooling	Yes			Warmer(if designated)	Yes		
heating	Yes			Colder(if designated)	Yes		
l			.,				
Item	symbol	value	unit	Item	symbol	value	class
Design load cooling	Pdesignc	2.00	kW	Seasonal efficiency and energy efficient cooling	SEER	9.00	A+++
heating / Average	Pdesignh	2.60	kW	heating / Average	SCOP/A	4.90	A++
heating / Average	Pdesignh	3.40	kW	heating / Warmer	SCOP/W		A+++
heating / Warrier	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
nouting / coluct	. accigiiii			au.ig / coide.	000.70	1	unit
Declared capacity at outdoor temperatu	re Tdesianh			Back up heating capacity at outdoor ten	nperature 7	desianh	unit
heating / Average (-10°C)	Pdh	2.60	kW	heating / Average (-10°C)	elbu	0.00	kW
heating / Warmer (2°C)	Pdh	3.40	kW	heating / Warmer (2°C)	elbu	0	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
,							
Declared capacity for cooling, at indoor	temperature	27(19)℃ a	and	Declared energy efficiency ratio, at indo	or tempera	ture 27(19)	°C and
outdoor temperature Tj			_	outdoor temperature Tj			
Tj=35°C	Pdc	2.00	kW	Tj=35°C	EERd	5.26	-
Tj=30°C	Pdc	1.50	kW	Tj=30°C	EERd	8.31	-
Tj=25°C	Pdc	1.10	kW	Tj=25°C	EERd	12.52	-
Tj=20°C	Pdc	1.10	kW	Tj=20°C	EERd	19.80	-
				15			
Declared capacity for heating / Average		idoor		Declared coefficient of performance / A		son, at inde	oor
temperature 20°C and outdoor temperat		2 25	kW	temperature 20°C and outdoor tempera	ture IJ COPd	2 40	i
Tj=-7°C Tj=2°C	Pdh Pdh	2.35 1.35	kW		COPd	3.19 4.90	_
Tj=7°C	Pdh	1.00	kW		COPd	6.30	-
Tj=12°C	Pdh	1.00	⊣kW		COPd	8.14	-
1 *	Pdh	2.60	kW	11 7	COPd	2.61	-
Tj=bivalent temperature Tj=operating limit	Pdh	2.60	kW	Tj=bivalent temperature Tj=operating limit	COPd	2.61	_
Tj-operating limit	Full	2.00	LVV	rj-operating limit	COFU	2.01	
Declared capacity for heating / Warmer	season at in	door		Declared coefficient of performance / W	armer sea	son at indo	or
temperature 20°C and outdoor temperat		aooi		temperature 20°C and outdoor tempera		Join, at mac	,01
Tj=2°C	Pdh	3.40	kW	Tj=2°C	COPd	3.14	-
Ti=7°C	Pdh	2.20	kW	Ti=7°C	COPd	5.40	_
Tj=12°C	Pdh	1.20	kW	Tj=12°C	COPd	8.14	-
Tj=bivalent temperature	Pdh	3.40	kW	Tj=bivalent temperature	COPd	3.14	_
Tj=operating limit	Pdh	3.40	kW	Tj=operating limit	COPd	3.14	-
			1				
Declared capacity for heating / Colder s	eason, at ind	oor		Declared coefficient of performance / C	older seaso	on, at indoc	r
temperature 20°C and outdoor temperat	ure Tj			temperature 20°C and outdoor tempera	ure Tj		
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-	-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	-
Tj=-15℃	Pdh	-	kW	Tj=-15°C	COPd	-	-
				115			
Bivalent temperature	The	- 40	٦٠٥	Operating limit temperature	T-1	- 40	loo.
heating / Average	Tbiv	-10	_\°C	heating / Average	Tol	-10	°C
heating / Warmer	Tbiv	2	°C	heating / Warmer	Tol	2	°C
heating / Colder	Tbiv	0	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc		kW	for cooling	EERcyc	_	l_
for heating	Pcych	-	kW	for heating	COPcyc	-	
To reading	1 Cycli		ICVV	ior ricating	OOI Cyc		
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	7-	heating	Cdh	0.25	-
			1				
Electric power input in power modes oth	er than 'activ	e mode'		Annual electricity consumption			
off mode	Poff	5	W	cooling	Qce	78	kWh/a
standby mode	Psb	5	W	heating / Average	Qhe	743	kWh/a
thermostat-off mode	1 30						kWh/a
	Pto(cooling)	11	W	heating / Warmer	Qhe	781	kWh/a
crankcase heater mode	Pto(cooling) Pto(heating)	11 15	W	heating / Warmer heating / colder	Qhe Qhe	781	KVVII/G
Cranicase neater mode	Pto(cooling)	11	_1				KVVII/G
	Pto(cooling) Pto(heating) PCK	11 15	W	heating / colder			KVVII/U
Capacity control(indicate one of three or	Pto(cooling) Pto(heating) PCK	11 15	W	heating / colder Other items	Qhe	-	
	Pto(cooling) Pto(heating) PCK	11 15	W	heating / colder Other items Sound power level(indoor)	Qhe	- 48	dB(A)
Capacity control(indicate one of three o	Pto(cooling) Pto(heating) Pck Otions)	11 15	W	heating / colder Other items Sound power level(indoor) Sound power level(outdoor)	Qhe Lwa Lwa	- 48 57	dB(A) dB(A)
Capacity control(indicate one of three of fixed	Pto(cooling) Pto(heating) Pck Dtions)	11 15	W	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Qhe	- 48 57 675	dB(A) dB(A) kgCO₂eq.
Capacity control(indicate one of three	Pto(cooling) Pto(heating) Pck Dtions)	11 15	W	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor)	Qhe Lwa Lwa GWP	- 48 57 675 558	dB(A) dB(A) kgCO ₂ eq. m ³ /h
Capacity control(indicate one of three of fixed	Pto(cooling) Pto(heating) Pck Dtions)	11 15	W	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Qhe Lwa Lwa	- 48 57 675	dB(A) dB(A) kgCO₂eq.
Capacity control(indicate one of three of fixed staged variable	Pto(cooling) Pto(heating) Pck Dtions) No No Yes	11 15 0	W	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor)	Qhe Lwa Lwa GWP	- 48 57 675 558	dB(A) dB(A) kgCO ₂ eq. m ³ /h
Capacity control(indicate one of three of fixed staged variable Contact details for obtaining Name ar	Pto(cooling) Pto(heating) Pck Otions) No No Yes d address of	11 15 0	W	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor)	Qhe Lwa Lwa GWP	- 48 57 675 558	dB(A) dB(A) kgCO ₂ eq. m ³ /h
Capacity control(indicate one of three of fixed staged variable Contact details for obtaining more information Name ar (EU)MHIA	Pto(cooling) Pto(heating) Pck Otions) No No Yes d address of	the manu	W W	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative.	Qhe Lwa Lwa GWP -	- 48 57 675 558 1668	dB(A) dB(A) kgCO2eq. m³/h m³/h
Capacity control(indicate one of three of fixed staged variable Contact details for obtaining more information Name ar (EU)MHI/Heriker	Pto(cooling) Pto(heating) Pck Otions) No No Yes d address of KE SERVICES bergweg 238,	the manu B.V. Luna Aren.	facturer or	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative. Amsterdam, Netherlands. P.O.Box 23393 110	Qhe Lwa Lwa GWP -	- 48 57 675 558 1668	dB(A) dB(A) kgCO2eq. m³/h m³/h
Capacity control(indicate one of three	Pto(cooling) Pto(heating) Pck ptions) No No Yes d address of the SERVICES bergweg 238, bishi Heavy In	the manu B.V. Luna Aren dustries Ai	facturer or A, 1101 CM	heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative.	Qhe Lwa Lwa GWP -	- 48 57 675 558 1668	dB(A) dB(A) kgCO2eq. m³/h m³/h

Model SRK25ZT-WA

Information to identify the model(s) to w	hich the infor	mation rel	ates to:	If function includes heating: Indicate the	heating se	ason the	
Indoor unit model name	SRK25ZT-V		atoo to.	information relates to. Indicated values			
Outdoor unit model name	SRC25ZT-V			heating season at a time. Include at leas			Average'.
	-!			1		•	J
Function(indicate if present)				Average(mandatory)	Yes		
cooling	Yes			Warmer(if designated)	Yes		
heating	Yes			Colder(if designated)	Yes		
Item	symbol	value	unit	Item	symbol	value	class
Design load			٦	Seasonal efficiency and energy efficiency			
cooling	Pdesignc	2.50	kW	cooling	SEER	9.10	A+++
heating / Average	Pdesignh	2.70	kW	heating / Average	SCOP/A	4.90	A++
heating / Warmer	Pdesignh	3.40	kW	heating / Warmer	SCOP/W	6.20	A+++
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
Declared conscitu at outdoor temporatu	ro Tdooignb			Back up heating capacity at outdoor ten	anoroturo T	dooignh	unit
Declared capacity at outdoor temperatu heating / Average (-10°C)	Pdh	2.70	kW	heating / Average (-10°C)	elbu	0.00	kW
heating / Average (-10 C)	Pdh	3.40	kW	heating / Warmer (2°C)	elbu	0.00	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	0	kW
Tleating / Colder (-22 C)	T GIT		KVV	rieding / Colder (-22 C)	Cibu		IV A A
Declared capacity for cooling, at indoor	temperature	27(19)°C :	and	Declared energy efficiency ratio, at indo	or tempera	ture 27/10)°C and
outdoor temperature Tj	temperature .	27(13)00	and	outdoor temperature Tj	or tempera	ture Zr (15) O ana
Ti=35°C	Pdc	2.50	kW	Ti=35°C	EERd	4.72] -
Tj=30°C	Pdc	1.85	kW	Tj=30°C	EERd	7.31	-
Tj=25°C	Pdc	1.15	kW	Tj=25°C	EERd	12.78	i-
Tj=20°C	Pdc	1.10	kW	Tj=20°C	EERd	19.80	-
			*	,			
Declared capacity for heating / Average		ndoor		Declared coefficient of performance / Av		son, at inde	oor
temperature 20°C and outdoor temperat			-	temperature 20°C and outdoor temperat			
Tj=-7°C	Pdh	2.50	kW	Tj=-7°C	COPd	2.86	-
Tj=2°C	Pdh	1.45	kW	Tj=2°C	COPd	4.98	-
Tj=7°C	Pdh	1.00	kW	Tj=7°C	COPd	6.40	-
Tj=12°C	Pdh	1.20	kW	Tj=12°C	COPd	8.15	-
Tj=bivalent temperature	Pdh	2.70	kW	Tj=bivalent temperature	COPd	2.64	-
Tj=operating limit	Pdh	2.70	kW	Tj=operating limit	COPd	2.64	-
Declared conscitution beating / Marray		daau		Declared coefficient of newformance (M			
Declared capacity for heating / Warmer temperature 20°C and outdoor temperat		door		Declared coefficient of performance / W temperature 20°C and outdoor temperature		son, at muc	001
Tj=2°C	Pdh	3.40	kW	Tj=2°C	COPd	3.27	1_
Tj=7°C	Pdh	2.20	kW	Ti=7°C	COPd	5.56	_
Ti=12°C	Pdh	1.20	kW	Tj=12°C	COPd	8.15	_
Tj=bivalent temperature	Pdh	3.40	kW	Tj=bivalent temperature	COPd	3.27	_
Tj=operating limit	Pdh	3.40	kW	Tj=operating limit	COPd	3.27	_
- j operating in the		0		i j oporazing iii ii	00. 0	V.2.	
Declared capacity for heating / Colder s	eason, at ind	oor		Declared coefficient of performance / Co	older seaso	n, at indoc	r
temperature 20°C and outdoor temperat				temperature 20°C and outdoor temperature		,	
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	-
Tj=12°C	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-]-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-]-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	-
Bivalent temperature			70-	Operating limit temperature			lo-
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-10	°C
heating / Warmer	Tbiv	2	°C	heating / Warmer	Tol	2	°C
heating / Colder	Tbiv	0	°C	heating / Colder	Tol	0	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	ī
for heating	Pcych		kW	for heating	COPcyc		[
To reading	1 Cycli		KVV	ioi rieating	COI Cyc		-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	7-	heating	Cdh	0.25	1-
				, <u> </u>			
Electric power input in power modes oth	er than 'activ	e mode'	_	Annual electricity consumption			1
Electric power input in power modes oth off mode	er than 'activ Poff	e mode' 5	W	Annual electricity consumption cooling	Qce	97	kWh/a
off mode standby mode			W W		Qce Qhe	97 772	kwh/a kWh/a
off mode	Poff	5 5 11	w w	cooling heating / Average heating / Warmer			1
off mode standby mode thermostat-off mode	Poff Psb Pto(cooling) Pto(heating)	5 5 11 15	W W W	cooling heating / Average	Qhe	772	kWh/a
off mode standby mode	Poff Psb Pto(cooling)	5 5 11	w w	cooling heating / Average heating / Warmer	Qhe Qhe	772 768	kWh/a kWh/a
off mode standby mode thermostat-off mode crankcase heater mode	Poff Psb Pto(cooling) Pto(heating) Pck	5 5 11 15	W W W	cooling heating / Average heating / Warmer heating / colder	Qhe Qhe	772 768	kWh/a kWh/a
off mode standby mode thermostat-off mode	Poff Psb Pto(cooling) Pto(heating) Pck	5 5 11 15	W W W	cooling heating / Average heating / Warmer heating / colder	Qhe Qhe Qhe	772 768 -	kWh/a kWh/a kWh/a
off mode standby mode thermostat-off mode crankcase heater mode	Poff Psb Pto(cooling) Pto(heating) Pck	5 5 11 15	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor)	Qhe Qhe Qhe	772 768 -	kWh/a kWh/a kWh/a dB(A)
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of	Poff Psb Pto(cooling) Pto(heating) Pck ptions)	5 5 11 15	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor)	Qhe Qhe Qhe Lwa Lwa	772 768 - 50 58	kWh/a kWh/a kWh/a dB(A)
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed	Poff Psb Pto(cooling) Pto(heating) Pck ptions)	5 5 11 15	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Qhe Qhe Qhe	772 768 - 50 58 675	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO ₂ eq.
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed staged	Poff Psb Pto(cooling) Pto(heating) Pck ptions)	5 5 11 15	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor)	Qhe Qhe Qhe Lwa Lwa GWP	772 768 - - 50 58 675 594	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO ₂ eq. m ³ /h
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed	Poff Psb Pto(cooling) Pto(heating) Pck ptions)	5 5 11 15	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Qhe Qhe Qhe Lwa Lwa	772 768 - 50 58 675	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO ₂ eq.
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed staged variable	Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes	5 5 11 15 0	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor)	Qhe Qhe Qhe Lwa Lwa GWP	772 768 - - 50 58 675 594	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO ₂ eq. m ³ /h
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed staged variable Contact details for obtaining Name and staged sta	Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes	5 5 11 15 0	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor)	Qhe Qhe Qhe Lwa Lwa GWP	772 768 - - 50 58 675 594	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO ₂ eq. m ³ /h
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed staged variable Contact details for obtaining more information Name an (EU)MHIA	Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes and address of AE SERVICES	5 5 11 15 0	W W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor)	Qhe Qhe Qhe Lwa Lwa GWP	772 768 - 50 58 675 594 1668	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h m ³ /h
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of the staged variable Contact details for obtaining more information Name and (EU)MHI/2 Heriker	Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes d address of KE SERVICES bergweg 238,	5 5 11 15 0 the manu B.V. Luna Aren.	W W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative.	Qhe Qhe Qhe Lwa Lwa GWP	772 768 - 50 58 675 594 1668	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h m ³ /h
off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of the staged variable Contact details for obtaining more information Name and Heriker (UK)Mitsu	Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes and address of AE SERVICES bergweg 238, ubishi Heavy In	5 5 11 15 0 the manu B.V. Luna Aren dustries Ai	W W W W facturer or A, 1101 CM r-Conditionin	cooling heating / Average heating / Warmer heating / Colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative. Amsterdam, Netherlands. P.O.Box 23393 110	Qhe Qhe Qhe Lwa Lwa GWP	772 768 - 50 58 675 594 1668	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h m ³ /h

INVERTER WALL MOUNTED TYPE RESIDENTIAL AIR-CONDITIONERS



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo, 100-8332, Japan http://www.mhi-mth.co.jp/en/