

TECHNICAL MANUAL

INVERTER RESIDENTIAL AIR-CONDITIONERS

Wi-Fi option model (SRK only)

(Split system, air to air heat pump type)

Wall mounted type

SRK20ZS-W, -WB, -WT/SRC20ZS-WA

SRK25ZS-W, -WB, -WT/SRC25ZS-WA2

SRK35ZS-W, -WB, -WT/SRC35ZS-WA2

Floor standing type

SRF25ZS-W/SRC25ZS-WA2 SRF35ZS-W/SRC35ZS-WA2

Ceiling concealed type

SRR25ZS-W/SRC25ZS-WA2 SRR35ZS-W/SRC35ZS-WA2

4-way ceiling cassette type FDTC25VH1/SRC25ZS-WA2 FDTC35VH1/SRC35ZS-WA2

Note:

- (1) SRK series in this technical manual will have the service code "/A".
 - SRK20ZS-W, -WB, -WT \rightarrow SRK20ZS-W/A, -WB/A, -WT/A
 - SRK25ZS-W, -WB, -WT→ SRK25ZS-W/A, -WB/A, -WT/A
 - SRK35ZS-W, -WB, -WT \rightarrow SRK35ZS-W/A, -WB/A, -WT/A
- (2) SRC25/35ZS-WA2 and SRC25/35ZS-WA have the same specifications, so SRK25/35ZS-W can also be connected to SRC25/35ZS-WA. However, SRF/SRR/FDTC cannot be connected to SRC25/35ZS-WA.

MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

CONTENTS

1.	SPE	CIFICATIONS	4
	(1)	Wall mounted type (SRK)	4
	(2)	Floor standing type (SRF)	13
	(3)	Ceiling concealed type (SRR)	15
	(4)	4-way ceiling cassette type (FDTC)	17
2.	EXT	ERIOR DIMENSIONS	19
	(1)	Indoor units	
	(2)	Outdoor units	
	(3)	Remote control	
3.		CTRICAL WIRING	
	(1)	Indoor units	
	(2)	Outdoor units	
4.		SE LEVEL	
	(1)	Wall mounted type (SRK)	
	(2)	Floor standing type (SRF)	
	(3)		
	(4)	, , ,	
5.		ARACTERISTICS OF FAN	
6.		ING SYSTEM	
7.		NGE OF USAGE & LIMITATIONS	
8.		PACITY TABLES	
		Wall mounted type (SRK)	
	(2)	Floor standing type (SRF)	
	(3)	Ceiling concealed type (SRR)	
	(4)		
		PLICATION DATA	
9		nstallation of indoor unit	
		Wall mounted type (SRK)	
	(2)		
		Ceiling concealed type (SRR)	
•	(4)	<i>y y y y y y y y y y</i>	
_		nstallation of outdoor unit	
		Safety precautions in handling air-conditioners with flammable refrigerants JTLINE OF OPERATION CONTROL BY MICROCOMPUTER	
1		SRK, SRF & SRR series	
	(1)		
	(2)		
	(3)	Auto restart function	122

(4)	Installing two air-conditioners in the same room	122
(5)	Selection of the annual cooling function	123
(6)	Heating only function (SRK series only)	124
(7)	High power operation	124
(8)	Economy operation	124
(9)	Flap and louver control (SRK and SRF series only)	125
(10)	Air outlet selection (SRF series only)	126
(11)	3D auto operation (SRK series only)	127
(12)	Timer operation	128
(13)	Silent mode	129
(14)	Night setback	129
(15)	Air flow range setting (SRK series only)	129
(16)	Display brightness adjustment (SRK series only)	130
(17)	Wireless LAN connection function (SRK series only)	130
(18)	Fan control during heating thermostat OFF (SRK series only)	130
(19)	Outline of heating operation	131
(20)	Outline of cooling operation	133
(21)	Outline of dehumidifying (DRY) opertaion	133
(22)	Outline of automatic operation	134
(23)	Protective control function	
(24)	Defrost heater control	
10.2	Models FDTC25VH1, 35VH1	
10.2	.1 Remote control (Option parts)	142
10.2	op	
10.2	,	
	4 Operation control function by the outdoor control	
	NTENANCE DATA	
	SRK, SRF & SRR series	
(1)	Cautions	
(2)	Items to check before troubleshooting	
(3)	Troubleshooting procedure (If the air-conditioner does not run at all)	
(4)	Troubleshooting procedure (If the air-conditioner runs)	
(5)	Self-diagnosis table	
(6)	Service mode (Trouble mode access function)	
(7)	Inspection procedures corresponding to detail of trouble	
(8)	Phenomenon observed after short-circuit, wire breakage on sensor	
(9)	Checking the indoor electrical equipment	
(10)	How to make sure of wireless remote control	
(11)	Inspection procedure for blown fuse on the indoor and outdoor unit PCB	
(12)	Outdoor unit inspection points	192

11.2	FDTC series	194					
11.2	.1 Diagnosing of microcomputer circuit	194					
(1)	Selfdiagnosis function	194					
(2)	0 1						
(3)	Troubleshooting at the indoor unit						
(4)	Troubleshooting at the outdoor unit						
(5)	Check of anomalous operation data with the remote control						
(6)	Inverter checker for diagnosis of inverter output	203					
(7)	Outdoor unit inspection points	204					
11.2	.2 Troubleshooting flow	206					
` '	List of troubles						
(2)	Troubleshooting	207					
12. OP	TION PARTS	249					
12.1	Wired remote control	249					
12.2	Simple wired remote control (RCH-E3)	261					
12.3	Wireless kit (FDTC only)	267					
12.4	Motion sensor kit (FDTC only)	275					
12.5							
12.6	Superlink E board (SC-ADNA-E)	285					
12.7	Ceiling concealed type (SRR) option parts	287					
12.8	OA spacer (FDTC only)	290					
12.9	Duct joint (FDTC only)	294					
13. TEC	HNICAL INFORMATION	295					
(1)	Wall mounted type (SRK)	295					
(2)	Floor standing type (SRF)	304					
(3)	31 ()	306					
(4)	4-way ceiling cassette type (FDTC)	308					
	■How to read the model name						
	Example: SRR 25 Z S-W						
	Series code						
	Boiles code						
	Inverter type						
	Inverter type Product capacity (Cooling capacity)						
	Product capacity (Cooling capacity) Model name SRK : Wall mounted type SRF : Floor standing type SRR : Ceiling concealed type						
	Product capacity (Cooling capacity) Model name SRK : Wall mounted type SRF : Floor standing type						
	Product capacity (Cooling capacity) Model name SRK : Wall mounted type SRF : Floor standing type SRR : Ceiling concealed type						
	Product capacity (Cooling capacity) Model name SRK: Wall mounted type SRF: Floor standing type SRR: Ceiling concealed type SRC: Outdoor unit						

1. SPECIFICATIONS

(1) Wall mounted type (SRK)

			Model	SRK20	ZS-W		
Item				Indoor unit SRK20ZS-W	Outdoor unit SRC20ZS-WA		
Power source	e			1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz		
	Nominal cooling capacity (range) Nominal heating capacity (range) Heating capacity (H2)		kW	2.0 (0.9 (Min.) - 2.9 (Max.))			
			kW	, ,	.) - 4.3 (Max.))		
			kW				
	ricuming supporty (riz)	Cooling	IXVV	0.44 (0.19 - 0.80)			
	Power consumption	Heating	kW	,	20 - 1.40)		
	Power consumption		KVV	,			
		Heating (H2)			_		
	Max power consumption				65		
	Running current	Cooling			220/ 230/ 240V)		
		Heating	Α	3.2 / 3.0 / 2.9 (220/ 230/ 240V)		
Operation	Inrush current, max current			3.2 / 3.0 / 2.9 (220/	230/ 240V) Max. 9		
data	Power factor	Cooling	06	% 79			
	1 Ower factor	Heating	70	8	35		
	EER	Cooling		4.	55		
	200	Heating	1 i	4.	58		
	COP	Heating (H2)	i i	-	_		
		Cooling		48	56		
	Sound power level	Heating	1	50	56		
		Cooling	dB(A)	Hi: 34 Me: 25 Lo: 22 ULo: 19	45		
	Sound pressure level	Heating		Hi: 36 Me: 29 Lo: 23 ULo: 19	45		
	Silent mode sound pressure I				Cooling:42 / Heating:43		
Exterior dim	ensions (Height x Width x Dept		mm	290 x 870 x 230	540 x 780(+62) x 290		
		')	111111		Stucco white		
Exterior app	earance color : Munsell, RAL)			Fine snow (Pure white) (8.0Y 9.3/0.1) , (9003)	(4.2Y 7.5/1.1), (7044)		
Net weight	COIOI : Warisell, TIAL)		ka	9.5	31.5		
Compressor type & Quantity			kg	9.0			
			1.347		RM-C5077SBE71(Rotary type) x 1		
Compressor motor (Starting method)			kW	_	0.75 (Inverter driven)		
Refrigerant oil (Amount, type)			L	_	0.30 (DIAMOND FREEZE MB75)		
Refrigerant (Type, amount, pre-charge length)			kg	,	ne amount for the piping of 15m)		
Heat exchan	<u> </u>			Louver fins & inner grooved tubing	M fins & inner grooved tubing		
Refrigerant of	control				tronic expansion valve		
Fan type & C				Tangential fan x 1	Propeller fan x 1		
Fan motor (S	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)		
Air flow		Cooling	m³/min	Hi: 9.3 Me: 7.0 Lo: 5.9 ULo: 5.0	27.4		
All llow		Heating]	Hi: 10.0 Me: 8.5 Lo: 6.5 ULo: 5.9	23.6		
Available ext	ternal static pressure		Pa	0	0		
Outside air ii	ntake			Not possible	_		
Air filter. Qua	ality / Quantity			Polypropylene net (Washable) x 2	_		
	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)		
Electric heat				— Defrost heater 230V 1			
	Remote control			Wireless re	note control		
Operation	Room temperature control						
control	Operation display			Microcomputer thermostat			
	Operation display			RUN: Green, TIMER: Yellow Compressor overheat protection, Overcurrent protection,			
Safety equip	oments			Frost protection, Serial signal error prot	ection, Indoor fan motor error protection, ure control), Cooling overload protection		
	Refrigerant piping size (O.D)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")		
	Connecting method			Flare connection	Flare connection		
	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_		
Installation	Insulation for piping				ides), independent		
data	Refrigerant line (one way) len	ath	m	* `	x.20		
	Vertical height diff. between 0		m		/ Max.10 (Outdoor unit is lower)		
	Drain hose	7.0. and 1.0.	111	Hose connectable (VP 16)	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pc		
Duala				, ,			
Drain pump, max lift height			mm				
Recommended breaker size			Α	16			
,	ed rotor ampere)		Α		220/ 230/ 240V)		
Interconnect	ting wires Size x Core	number		, ,	ole) / Terminal block (Screw fixing type)		
IP number				IPX0 Mounting kit, Clean filter (Allergen clear filter x 1	IPX4 I, Photocatalytic washable deodorizing filter x 1		
Standard ac	cessories			Outdoor : Not included Dr	ain grommet and Drain elbow		
					SC-BIKN2-E)		

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Staridards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

⁽²⁾ This air-conditioner is manufactured and tested in conformity with the ISO.(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.(4) Select the breaker size according to the own national standard.

			Model	SRK2	5ZS-W	
Item				Indoor unit SRK25ZS-W	Outdoor unit SRC25ZS-WA2	
Power source	e			1 Phase, 220 - 240\	V, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (rang	e)	kW	2.5 (0.9 (Min	.) - 3.1 (Max.))	
	Nominal heating capacity (rang	<u> </u>	kW	` `	.) - 4.5 (Max.))	
	Heating capacity (H2)		kW	_		
		Cooling		0.62 (0.1	9 - 0.90)	
	Power consumption	Heating	kW		20 - 1.42)	
		Heating (H2)	-	`	_	
	Max power consumption	1		1.	65	
	·	Cooling			220/ 230/ 240V)	
	Running current	Heating	A	,	220/ 230/ 240V)	
Operation	Inrush current, max current	1 3	1	`	230/ 240V) Max. 9	
data		Cooling			36	
	Power factor	Heating	- %	9	00	
	EER	Cooling		4.	03	
		Heating	1	4.	32	
	COP	Heating (H2)	1		- -	
		Cooling		50	56	
	Sound power level	Heating	1	53	58	
		Cooling	dB(A)	Hi: 36 Me: 28 Lo: 23 ULo: 19	46	
	Sound pressure level	Heating	()	Hi: 39 Me: 30 Lo: 24 ULo: 19	46	
	Silent mode sound pressure lev		1	_	Cooling:42 / Heating:43	
Exterior dim	ensions (Height x Width x Depth)		mm	290 x 870 x 230	540 x 780(+62) x 290	
Exterior app	1 7			Fine snow (Pure white)	Stucco white	
	color : Munsell, RAL)			(8.0Y 9.3/0.1), (9003)	(4.2Y 7.5/1.1), (7044)	
Net weight			kg	9.5	31.0	
Compressor	type & Quantity			_	RM-C5077SBE71(Rotary type) x 1	
Compressor	motor (Starting method)		kW	_	0.75 (Inverter driven)	
Refrigerant of	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)	
Refrigerant (Type, amount, pre-charge length)	kg	R32 0.62 in outdoor unit (Incl. th	ne amount for the piping of 15m)	
Heat exchar	iger			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant of	control			Capillary tubes + Elec	tronic expansion valve	
Fan type & C	Quantity			Tangential fan x 1	Propeller fan x 1	
Fan motor (S	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)	
A: (I		Cooling	3, .	Hi: 9.9 Me: 8.0 Lo: 5.9 ULo: 5.0	27.4	
Air flow		Heating	m³/min	Hi: 11.3 Me: 8.7 Lo: 6.7 ULo: 5.9	23.6	
Available ex	ternal static pressure	'	Pa	0	0	
Outside air i	ntake			Not possible	-	
Air filter, Qua	ality / Quantity			Polypropylene net (Washable) x 2	_	
Shock & vib	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heat	er			_	Defrost heater 230V 110W	
0	Remote control			Wireless rer	note control	
Operation control	Room temperature control			Microcomput	er thermostat	
COLLEGE	Operation display			RUN: Green ,	TIMER: Yellow	
				Compressor overheat protect	ction, Overcurrent protection	
Safety equip	ments				ection, Indoor fan motor error protection	
	Pofrigorant piping size (O.D)		mm	Heating overload protection (High pressi Liquid line: φ6.35 (1/4")	ure control), Cooling overload protection	
	Refrigerant piping size (O.D)		mm	, , , ,	Gas line: ϕ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
Installation	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47		
data	Insulation for piping Refrigerant line (one way) leng	th		Necessary (Both sides), independent Max.20		
			m			
	Vertical height diff. between O/U and I/U		m	,	/ Max.10 (Outdoor unit is lower)	
Drain num-	Drain hose		mm	Hose connectable (VP16) Hole size φ 20 x 2 pcs., Hole size φ 16 x		
Drain pump, max lift height			mm	_		
Recommended breaker size L.R.A. (Locked rotor ampere)			A		6	
		umbar	A	`	220/ 230/ 240V)	
Interconnect	ing wires Size x Core n	umber		` ~	ole) / Terminal block (Screw fixing type)	
IP number				IPX0	IPX4	
Standard ac			-		I, Photocatalytic washable deodorizing filter x 1)	
Option parts				Interface kit (SC-BIKN2-E)		

Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

			Model	SRK3	5ZS-W	
Item			5001	Indoor unit SRK35ZS-W	Outdoor unit SRC35ZS-WA2	
Power source				1 Phase, 220 - 240V, 50Hz / 220V, 60Hz		
	Nominal cooling capacity (rang	je)	kW	3.5 (0.9 (Min	i.) - 4.0 (Max.))	
	Nominal heating capacity (rang	je)	kW	4.0 (0.9 (Min.) - 5.0 (Max.))		
	Heating capacity (H2)		kW			
		Cooling		,	17 - 1.24)	
	Power consumption	Heating	kW	0.94 (0.	19 - 1.45)	
		Heating (H2)			_	
	Max power consumption	10 11			.65	
	Running current	Cooling			(220/ 230/ 240V) (220/ 230/ 240V)	
Oneveties	Inrush current, max current	Heating	A		/ 230/ 240V) Max. 9	
Operation data	illiusii current, max current	Cooling		,	92	
aata	Power factor	Heating	%		93	
	EER	Cooling			.93	
		Heating			.26	
	COP	Heating (H2)	1			
		Cooling		54	61	
	Sound power level	Heating	1	56	61	
	Sound pressure level	Cooling	dB(A)	Hi: 40 Me: 30 Lo: 26 ULo: 19	50	
	Sourid pressure level	Heating		Hi: 41 Me: 36 Lo: 25 ULo:19	48	
	Silent mode sound pressure lev			_	Cooling:45 / Heating:44	
	ensions (Height x Width x Depth)		mm	290 x 870 x 230	540 x 780(+62) x 290	
Exterior app				Fine snow (Pure white)	Stucco white	
(Equivalent color : Munsell, RAL)			lea	(8.0Y 9.3/0.1), (9003) 9.5	(4.2Y 7.5/1.1), (7044)	
Net weight	type & Quantity		kg	9.5	RM-B5077SBE2(Rotary type) x 1	
<u> </u>	motor (Starting method)		kW		0.90 (Inverter driven)	
· ·	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)	
	Type, amount, pre-charge length)	kg	B32 0.78 in outdoor unit (Incl. t	he amount for the piping of 15m)	
Heat exchan	***	,	1.19	Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant of	<u> </u>				etronic expansion valve	
Fan type & C	Quantity			Tangential fan x 1	Propeller fan x 1	
Fan motor (S	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)	
Air flam		Cooling	m³/min	Hi: 11.3 Me: 8.7 Lo: 7.0 ULo: 5.0	31.5	
Air flow		Heating	m /min	Hi: 12.3 Me: 11.0 Lo: 7.0 ULo: 5.6	27.8	
Available ext	ternal static pressure		Pa	0	0	
Outside air ir				Not possible	-	
	ality / Quantity			Polypropylene net (Washable) x 2	_	
	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heat	1			_	Defrost heater 230V 110W	
Operation	Remote control Room temperature control				mote control	
control					ter thermostat TIMER: Yellow	
	Operation display				ction, Overcurrent protection	
Safety equip	ments			Frost protection, Serial signal error prot	ection, Indoor fan motor error protection ure control), Cooling overload protection	
	Refrigerant piping size (O.D)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
la stallation	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_	
Installation data	Insulation for piping				sides), independent	
	Refrigerant line (one way) leng		m		x.20	
	Vertical height diff. between O/U and I/U		m	,	/ Max.10 (Outdoor unit is lower)	
Drain hose			Hose connectable (VP16)	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs.		
Drain pump, max lift height			mm	_		
Recommended breaker size			A		16	
L.R.A. (Locked rotor ampere)			Α		(220/ 230/ 240V)	
Interconnect	ing wires Size x Core n	urriber		1.5mm ⁻ x 4 cores (Including earth cal	ole) / Terminal block (Screw fixing type)	
IP number Standard acc	cessories				IPX4 1, Photocatalytic washable deodorizing filter x 1)	
Option parts	· · · · · · · · · · · · · · · · · · ·				SC-BIKN2-E)	
Option parts				intende kit (OO DIINKE L J	

(.)	The pipe length is Sin.				
Item Indoor air temperature			Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

			Model	SRK20	ZS-WB	
Item				Indoor unit SRK20ZS-WB	Outdoor unit SRC20ZS-WA	
Power sourc	e			1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (ran	ge)	kW	2.0 (0.9 (Min	.) - 2.9 (Max.))	
	Nominal heating capacity (ran	ge)	kW	2.7 (0.9 (Min	.) - 4.3 (Max.))	
	Heating capacity (H2)		kW			
		Cooling		0.44 (0.1	9 - 0.80)	
	Power consumption	Heating	kW	0.59 (0.2	20 - 1.40)	
	Heating (H2)		i i	-		
	Max power consumption			1.	65	
		Cooling		2.6 / 2.5 / 2.4 (220/ 230/ 240V)	
	Running current	Heating	A		220/ 230/ 240V)	
Operation	Inrush current, max current	1 3	i i	,	230/ 240V) Max. 9	
data	· ·	Cooling		,	79	
	Power factor	Heating	%	85		
	EER	Cooling			55	
		Heating	1		58	
	COP	Heating (H2)	-		_	
		Cooling		48	56	
	Sound power level	Heating	-	50	56	
		Cooling	4D(V)	Hi: 34 Me: 25 Lo: 22 ULo: 19	45	
	Sound pressure level		dB(A)		45	
	Cilent media accord measure la	Heating		Hi: 36 Me: 29 Lo: 23 ULo: 19	1.5	
End and an altern	Silent mode sound pressure le				Cooling:42 / Heating:43	
	ensions (Height x Width x Depth)	mm	290 x 870 x 230	540 x 780(+62) x 290	
Exterior appe (Equivalent of	earance color : Munsell, RAL)			Fine snow (8.0Y 9.3/0.1) , (9003) Black (4.0PB 2.44/0.25) , (9011)	Stucco white (4.2Y 7.5/1.1), (7044)	
Net weight	,		kg	9.5	31.5	
Compressor type & Quantity			9		RM-C5077SBE71(Rotary type) x 1	
	motor (Starting method)		kW	_	0.75 (Inverter driven)	
	oil (Amount, type)		L		0.30 (DIAMOND FREEZE MB75)	
	Type, amount, pre-charge lengtl	1)	kg	R32 0.62 in outdoor unit (Incl. th	ne amount for the piping of 15m)	
Heat exchan	***	.,	9	Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant o	<u>* </u>				tronic expansion valve	
Fan type & C				Tangential fan x 1	Propeller fan x 1	
	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)	
Tarrinotor (C	nating method)	Cooling	**	Hi: 9.3 Me: 7.0 Lo: 5.9 ULo: 5.0	27.4	
Air flow		Heating	m³/min	Hi: 10.0 Me: 8.5 Lo: 6.5 ULo: 5.9	23.6	
Available ext	ernal static pressure	1.1009	Pa	0	0	
Outside air ir	· · · · · · · · · · · · · · · · · · ·			Not possible	_	
	ility / Quantity			Polypropylene net (Washable) x 2	_	
	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heat				—	Defrost heater 230V 110W	
Licetile fieat	Remote control			Wireless ren	mote control	
Operation	Room temperature control				ter thermostat	
control	Operation display				TIMER: Yellow	
	Operation display			· · · · · · · · · · · · · · · · · · ·	ction, Overcurrent protection,	
Safety equip	ments			Frost protection, Serial signal error prote	ection, Indoor fan motor error protection, ure control), Cooling overload protection	
	Refrigerant piping size (O.D)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_	
Installation data	Insulation for piping			Necessary (Both s	ides), independent	
udia	Refrigerant line (one way) len	gth	m	Max	x.20	
	Vertical height diff. between O	.U. and I.U.	m	Max.10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)	
	Drain hose			Hose connectable (VP 16)	Hole size φ20 x 2 pcs., Hole size φ16 x 9 pcs.	
Drain pump, max lift height		mm	— — — — —			
Recommended breaker size			Α			
L.R.A. (Locked rotor ampere)			Α	3.2 / 3.0 / 2.9 (220/ 230/ 240V)		
Interconnecting wires Size x Core number					ble) / Terminal block (Screw fixing type)	
IP number				IPX0	IPX4 1, Photocatalytic washable deodorizing filter x 1)	
Standard acc				Outdoor : Not included Dr	ain grommet and Drain elbow	
Option parts			1	Interface kit (SC-BIKN2-E)		

Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

			Model	SRK25	ZS-WB	
Item				Indoor unit SRK25ZS-WB	Outdoor unit SRC25ZS-WA2	
Power source	e			1 Phase, 220 - 240\	V, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (rang	e)	kW	2.5 (0.9 (Min	.) - 3.1 (Max.))	
	Nominal heating capacity (range)		kW	` `	.) - 4.5 (Max.))	
	Heating capacity (H2)		kW	_		
		Cooling		0.62 (0.1	9 - 0.90)	
	Power consumption	Heating	kW		20 - 1.42)	
		Heating (H2)	1	`	_	
	Max power consumption	1		1.	65	
	·	Cooling		3.3 / 3.1 / 3.0 (220/ 230/ 240V)	
	Running current	Heating	A	,	220/ 230/ 240V)	
Operation	Inrush current, max current	1 0	1	3.7 / 3.6 / 3.4 (220/	230/ 240V) Max. 9	
data		Cooling			36	
	Power factor	Heating	- %	9	00	
	EER	Cooling		4.	03	
		Heating	1	4.	32	
	COP	Heating (H2)	1	-	_	
		Cooling		50	56	
	Sound power level	Heating	1	53	58	
		Cooling	dB(A)	Hi: 36 Me: 28 Lo: 23 ULo: 19	46	
	Sound pressure level	Heating	1	Hi: 39 Me: 30 Lo: 24 ULo: 19	46	
	Silent mode sound pressure lev	/el	1	_	Cooling:42 / Heating:43	
Exterior dime	ensions (Height x Width x Depth)		mm	290 x 870 x 230	540 x 780(+62) x 290	
Exterior app	earance			Fine snow (8.0Y 9.3/0.1), (9003)	Stucco white	
(Equivalent of	color : Munsell, RAL)			Black (4.0PB 2.44/0.25), (9011)	(4.2Y 7.5/1.1) , (7044)	
Net weight			kg	9.5	31.0	
Compressor	type & Quantity			_	RM-C5077SBE71(Rotary type) x 1	
Compressor	motor (Starting method)		kW	_	0.75 (Inverter driven)	
Refrigerant of	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)	
Refrigerant (Type, amount, pre-charge length))	kg	R32 0.62 in outdoor unit (Incl. th	ne amount for the piping of 15m)	
Heat exchan	ger			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant of	control			Capillary tubes + Elec	tronic expansion valve	
Fan type & C				Tangential fan x 1	Propeller fan x 1	
Fan motor (S	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)	
Air flow		Cooling	m³/min	Hi: 9.9 Me: 8.0 Lo: 5.9 ULo: 5.0	27.4	
All HOW		Heating	/	Hi: 11.3 Me: 8.7 Lo: 6.7 ULo: 5.9	23.6	
Available ext	ternal static pressure		Pa	0	0	
Outside air ii	ntake			Not possible	_	
	ality / Quantity			Polypropylene net (Washable) x 2	_	
	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heat	er			 Defrost heater 230V 110 		
Operation	Remote control				mote control	
control	Room temperature control				ter thermostat	
	Operation display			,	TIMER: Yellow	
Safety equip	ments			Frost protection, Serial signal error prote	ction, Overcurrent protection ection, Indoor fan motor error protection ure control), Cooling overload protection	
	Refrigerant piping size (O.D)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
lastall-#	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_	
Installation data	Insulation for piping			Necessary (Both s	ides), independent	
uuu	Refrigerant line (one way) leng		m	Max.20		
	Vertical height diff. between O/	U and I/U	m	Max.10 (Outdoor unit is higher) / Max.10 (Outdoor unit is lower)		
Drain hose			Hose connectable (VP16)	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs.		
Drain pump, max lift height			mm	_	_	
Recommended breaker size			Α		6	
L.R.A. (Lock	ed rotor ampere)		Α	3.7 / 3.6 / 3.4 (220/ 230/ 240V)	
Interconnect	ing wires Size x Core n	umber		` ~	ole) / Terminal block (Screw fixing type)	
IP number				IPX0	IPX4	
Standard ac				Mounting kit, Clean filter (Allergen clear filter x 1, Photocatalytic washable deodorizing filter x 1)		
Option parts				Interface kit (SC-BIKN2-E)		

()	The pipe length is on.				
Ite	m Indoor air t	Indoor air temperature		temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

			Model	SRK35	ZS-WB	
Item			5001	Indoor unit SRK35ZS-WB	Outdoor unit SRC35ZS-WA2	
Power source	e			1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (rang	je)	kW	3.5 (0.9 (Min	.) - 4.0 (Max.))	
	Nominal heating capacity (range	je)	kW	4.0 (0.9 (Min.) - 5.0 (Max.))		
	Heating capacity (H2)		kW	_		
		Cooling		0.89 (0.1	7 - 1.24)	
	Power consumption	Heating	kW	0.94 (0.1	9 - 1.45)	
		Heating (H2)		-	_	
	Max power consumption				65	
	Running current	Cooling		`	220/ 230/ 240V)	
		Heating	Α	,	220/ 230/ 240V)	
Operation	Inrush current, max current	0 15		,	230/ 240V) Max. 9	
data	Power factor	Cooling	- %		2	
	EER	Heating			3 93	
	EER	Cooling Heating	-		93 26	
	COP	Heating (H2)	-		_	
		Cooling		54	61	
	Sound power level	Heating	1	56	61	
		Cooling	dB(A)	Hi: 40 Me: 30 Lo: 26 ULo: 19	50	
	Sound pressure level	Heating	GD(A)	Hi: 41 Me: 36 Lo: 25 ULo:19	48	
	Silent mode sound pressure le		-		Cooling:45 / Heating:44	
Exterior dime	ensions (Height x Width x Depth)		mm	290 x 870 x 230	540 x 780(+62) x 290	
Exterior app		<u>'</u>		Fine snow (8.0Y 9.3/0.1), (9003)	Stucco white	
(Equivalent color : Munsell, RAL)			Black (4.0PB 2.44/0.25), (9011)	(4.2Y 7.5/1.1), (7044)		
Net weight	Net weight		kg	9.5	34.5	
Compressor type & Quantity			_	RM-B5077SBE2(Rotary type) x 1		
Compressor motor (Starting method)		kW	_	0.90 (Inverter driven)		
Refrigerant oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)		
Refrigerant (Type, amount, pre-charge length)	kg	R32 0.78 in outdoor unit (Incl. th	ne amount for the piping of 15m)	
Heat exchan	ger			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant of	control			Capillary tubes + Elec	tronic expansion valve	
Fan type & C	Quantity			Tangential fan x 1	Propeller fan x 1	
Fan motor (S	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)	
Air flow		Cooling	m³/min	Hi: 11.3 Me: 8.7 Lo: 7.0 ULo: 5.0	31.5	
All HOW		Heating	111 /111111	Hi: 12.3 Me: 11.0 Lo: 7.0 ULo: 5.6	27.8	
	ternal static pressure		Pa	0	0	
Outside air ii				Not possible	_	
	ality / Quantity			Polypropylene net (Washable) x 2	_	
	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heat	1			Defrost heater 230V 110		
Operation	Remote control				mote control	
control	Room temperature control			·	er thermostat	
	Operation display				TIMER: Yellow	
Safety equip	ments			Frost protection, Serial signal error prote	ction, Overcurrent protection ection, Indoor fan motor error protection ure control), Cooling overload protection	
	Refrigerant piping size (O.D)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
In a tall of	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_	
	Installation Insulation for piping			Necessary (Both s	ides), independent	
Refrigerant line (one way) length Vertical height diff. between O/U and I/U Drain hose		th	m	Max	x.20	
		m	Max.10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)		
			Hose connectable (VP16)	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs.		
Drain pump, max lift height		mm	_	_		
Recommended breaker size		Α		6		
L.R.A. (Lock	ed rotor ampere)		Α	4.6 / 4.4 / 4.2 (220/ 230/ 240V)	
Interconnect	ing wires Size x Core n	umber			le) / Terminal block (Screw fixing type)	
IP number				IPX0	IPX4	
Standard ac	cessories			Mounting kit, Clean filter (Allergen clear filter x 1	, Photocatalytic washable deodorizing filter x 1)	
Option parts				Interface kit (SC-BIKN2-E)	

(.)	The pipe length is Sin.				
Iter	n Indoor air t	emperature	Standards		
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

			Model	SRK202	ZS-WT		
Item				Indoor unit SRK20ZS-WT	Outdoor unit SRC20ZS-WA		
Power source	е			1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz		
	Nominal cooling capacity (rang	je)	kW	2.0 (0.9 (Min.	.) - 2.9 (Max.))		
	Nominal heating capacity (range)			2.7 (0.9 (Min.	.) - 4.3 (Max.))		
	Heating capacity (H2)		kW				
		Cooling		0.44 (0.1	9 - 0.80)		
	Power consumption	Heating	kW	0.59 (0.2	20 - 1.40)		
		Heating (H2)		-	_		
	Max power consumption	•		1.	65		
	Dt	Cooling		2.6 / 2.5 / 2.4 (220/ 230/ 240V)		
	Running current	Heating	Α	3.2 / 3.0 / 2.9 (220/ 230/ 240V)		
Operation	Inrush current, max current			3.2 / 3.0 / 2.9 (220/	230/ 240V) Max. 9		
data		Cooling		,	9		
	Power factor	Heating	%	8	5		
	EER	Cooling			- 55		
		Heating			58		
	COP	Heating (H2)			-		
		Cooling		48	56		
	Sound power level	Heating		50	56		
		Cooling	dB(A)	Hi: 34 Me: 25 Lo: 22 ULo: 19	45		
	Sound pressure level	Heating	UB(A)	Hi: 36 Me: 29 Lo: 23 ULo: 19	45		
	Silent mode sound pressure le	0		HI. 36 IVIE. 29 LO. 23 OLO. 19	Cooling:42 / Heating:43		
Estavia v dina	<u> </u>				9 9		
	ensions (Height x Width x Depth)	1	mm	290 x 870 x 230	540 x 780(+62) x 290		
` '	earance color : Munsell, RAL)			Titanium gray (1.6Y 6.59/0.63) , (7048) Black (4.0PB 2.44/0.25) , (9011)	Stucco white (4.2Y 7.5/1.1), (7044)		
Net weight			kg	9.5	31.5		
<u> </u>	Compressor type & Quantity				RM-C5077SBE71(Rotary type) x 1		
Compressor	motor (Starting method)		kW	_	0.75 (Inverter driven)		
Refrigerant oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)			
Refrigerant (Type, amount, pre-charge length)	kg	R32 0.62 in outdoor unit (Incl. th	ne amount for the piping of 15m)		
Heat exchan	ger			Louver fins & inner grooved tubing	M fins & inner grooved tubing		
Refrigerant of	control			Capillary tubes + Elec	tronic expansion valve		
Fan type & C	Quantity			Tangential fan x 1	Propeller fan x 1		
Fan motor (S	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)		
A : #1		Cooling	m³/min	Hi: 9.3 Me: 7.0 Lo: 5.9 ULo: 5.0	27.4		
Air flow		Heating	m /min	Hi: 10.0 Me: 8.5 Lo: 6.5 ULo: 5.9	23.6		
Available ext	ernal static pressure		Pa	0	0		
Outside air ir	ntake			Not possible	_		
Air filter, Qua	llity / Quantity			Polypropylene net (Washable) x 2	_		
Shock & vibr	ation absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)		
Electric heat	er				Defrost heater 230V 110W		
	Remote control			Wireless rer	note control		
Operation	Room temperature control			Microcomput	er thermostat		
control	Operation display			RUN: Green,	TIMER: Yellow		
Safety equip	ments			Frost protection, Serial signal error prote	ction, Overcurrent protection, ection, Indoor fan motor error protection, ure control), Cooling overload protection		
	Refrigerant piping size (O.D)		mm	Liquid line: 66.35 (1/4")	Gas line: φ 9.52 (3/8")		
	Connecting method			Flare connection	Flare connection		
	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_		
Installation	Insulation for piping			· · · · · · · · · · · · · · · · · · ·	l ides), independent		
Refrigerant line (one way) length		m		x.20			
	Vertical height diff. between O.		m	Max.10 (Outdoor unit is higher)			
Drain hose		111	Hose connectable (VP 16)	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs.			
		mm	-				
Drain pump, max lift height		mm ^					
Recommended breaker size		A					
•	ed rotor ampere)		Α		220/ 230/ 240V)		
Interconnect IP number	ing wires Size x Core n	umber		IPX0	le) / Terminal block (Screw fixing type) IPX4		
Standard ac	cessories			Mounting kit, Clean filter (Allergen clear filter x 1, Photocatalytic washable deodorizing filter) Outdoor: Not included Drain grommet and Drain elbow			
Option parts							
Option parts				Interface kit (SC-BIKN2-E)			

Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

			Model	SRK25	ZS-WT	
Item			5001	Indoor unit SRK25ZS-WT	Outdoor unit SRC25ZS-WA2	
Power source	e			1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (rang	je)	kW	2.5 (0.9 (Min.	.) - 3.1 (Max.))	
	Nominal heating capacity (rang	je)	kW	3.2 (0.9 (Min.) - 4.5 (Max.))		
	Heating capacity (H2)		kW			
		Cooling		0.62 (0.1	9 - 0.90)	
	Power consumption	Heating	kW	0.74 (0.2	0 - 1.42)	
		Heating (H2)		-	_	
	Max power consumption				65	
	Running current	Cooling		`	220/ 230/ 240V)	
		Heating	Α	3.7 / 3.6 / 3.4 (· · · · · · · · · · · · · · · · · · ·	
Operation	Inrush current, max current	0 15		3.7 / 3.6 / 3.4 (220/	,	
data	Power factor	Cooling	- %	8		
	EER	Heating		9	0	
	EER	Cooling	-		32	
	COP	Heating (H2)	-		52 -	
		Cooling		50	56	
	Sound power level	Heating	1	53	58	
		Cooling	dB(A)	Hi: 36 Me: 28 Lo: 23 ULo: 19	46	
	Sound pressure level	Heating	GD(A)	Hi: 39 Me: 30 Lo: 24 ULo: 19	46	
	Silent mode sound pressure le		-		Cooling:42 / Heating:43	
Exterior dim	ensions (Height x Width x Depth)		mm	290 x 870 x 230	540 x 780(+62) x 290	
Exterior app		<u>'</u>		Titanium gray (1.6Y 6.59/0.63), (7048)	Stucco white	
	(Equivalent color : Munsell, RAL)			Black (4.0PB 2.44/0.25), (9011)	(4.2Y 7.5/1.1), (7044)	
Net weight	Net weight		kg	9.5	31.0	
Compressor type & Quantity			_	RM-C5077SBE71(Rotary type)		
Compressor motor (Starting method)		kW	_	0.75 (Inverter driven)		
Refrigerant of	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)	
Refrigerant (Type, amount, pre-charge length)	kg	R32 0.62 in outdoor unit (Incl. th	ne amount for the piping of 15m)	
Heat exchar	iger			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant of	control			Capillary tubes + Elec	tronic expansion valve	
Fan type & C	Quantity			Tangential fan x 1	Propeller fan x 1	
Fan motor (S	Starting method)		W	42 x1 (Direct drive)	24 x1 (Direct drive)	
Air flow		Cooling	m³/min	Hi: 9.9 Me: 8.0 Lo: 5.9 ULo: 5.0	27.4	
All llow		Heating	111 /111111	Hi: 11.3 Me: 8.7 Lo: 6.7 ULo: 5.9	23.6	
Available ex	ternal static pressure		Pa	0	0	
Outside air i	ntake			Not possible	_	
	ality / Quantity			Polypropylene net (Washable) x 2	_	
	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heat	1			_	Defrost heater 230V 110W	
Operation	Remote control			Wireless rer		
control	Room temperature control			·	er thermostat	
	Operation display			RUN: Green ,		
Safety equip	ments				ction, Overcurrent protection ection, Indoor fan motor error protection ure control), Cooling overload protection	
	Refrigerant piping size (O.D)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
14-11 **	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_	
	Installation Insulation for piping			Necessary (Both s	ides), independent	
Refrigerant line (one way) length Vertical height diff. between O/U and I/U Drain hose		th	m	Max	k.20	
		m	Max.10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)		
			Hose connectable (VP16)	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs.		
Drain pump, max lift height		mm				
Recommended breaker size		Α	1	6		
L.R.A. (Lock	ed rotor ampere)		Α	3.2 / 3.0 / 2.9 (220/ 230/ 240V)	
Interconnect	ing wires Size x Core n	umber		1.5mm ² x 4 cores (Including earth cab	le) / Terminal block (Screw fixing type)	
IP number				IPX0	IPX4	
Standard ac	cessories			Mounting kit, Clean filter (Allergen clear filter x 1	, Photocatalytic washable deodorizing filter x 1)	
Option parts				Interface kit (SC-BIKN2-E)	
N						

Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

			Model	SRK35	ZS-WT	
Item				Indoor unit SRK35ZS-WT	Outdoor unit SRC35ZS-WA2	
Power source	ce			1 Phase, 220 - 240\	/, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (rang	ge)	kW	3.5 (0.9 (Min.	.) - 4.0 (Max.))	
	Nominal heating capacity (rang	ge)	kW	4.0 (0.9 (Min.) - 5.0 (Max.))		
	Heating capacity (H2)		kW	-		
		Cooling		0.89 (0.1	7 - 1.24)	
	Power consumption	Heating	kW	0.94 (0.1	9 - 1.45)	
		Heating (H2)		-	_	
	Max power consumption			1.9	65	
	Running current	Cooling		4.4 / 4.2 / 4.0 (220/ 230/ 240V)	
	Harring Current	Heating	Α	4.6 / 4.4 / 4.2 (220/ 230/ 240V)	
Operation	Inrush current, max current			4.6 / 4.4 / 4.2 (220/	230/ 240 V) Max. 9	
data	Power factor	Cooling	%	9	2	
	1 Ower ractor	Heating	70	9	3	
	EER	Cooling		3.9	93	
	COP	Heating		4.:	26	
	COF	Heating (H2)		-	_	
	Sound power level	Cooling		54	61	
	Souria power level	Heating		56	61	
	Sound pressure level	Cooling	dB(A)	Hi: 40 Me: 30 Lo: 26 ULo: 19	50	
	Sourid pressure level	Heating		Hi: 41 Me: 36 Lo: 25 ULo:19	48	
	Silent mode sound pressure le	vel		_	Cooling:45 / Heating:44	
Exterior dim	ensions (Height x Width x Depth)	mm	290 x 870 x 230	540 x 780(+62) x 290	
Exterior app				Titanium gray (1.6Y 6.59/0.63), (7048)	Stucco white	
` '	(Equivalent color : Munsell, RAL)			Black (4.0PB 2.44/0.25), (9011)	(4.2Y 7.5/1.1), (7044)	
Net weight		kg	9.5	34.5		
Compressor type & Quantity			_	RM-B5077SBE2(Rotary type) x 1		
Compressor motor (Starting method)		kW	_	0.90 (Inverter driven)		
	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)	
	Type, amount, pre-charge length	1)	kg	R32 0.78 in outdoor unit (Incl. th		
Heat exchar	<u> </u>			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant					tronic expansion valve	
Fan type & 0			141	Tangential fan x 1	Propeller fan x 1	
Fan motor (Starting method)	1	W	42 x1 (Direct drive)	24 x1 (Direct drive)	
Air flow		Cooling	m³/min	Hi: 11.3 Me: 8.7 Lo: 7.0 ULo: 5.0	31.5	
		Heating		Hi: 12.3 Me: 11.0 Lo: 7.0 ULo: 5.6	27.8	
	ternal static pressure		Pa	0	0	
Outside air i				Not possible	_	
	ality / Quantity			Polypropylene net (Washable) x 2	_	
Electric heat	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor) Defrost heater 230V 110W	
Electric nea	Remote control			- Window you		
Operation	Room temperature control				mote control er thermostat	
control	Operation display			·	TIMER: Yellow	
	Operation display				ction, Overcurrent protection	
Safety equip	oments				ection, Indoor fan motor error protection	
outory oquip				, , , , , , , , , , , , , , , , , , , ,	ure control), Cooling overload protection	
	Refrigerant piping size (O.D)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method		Ì	Flare connection	Flare connection	
	Attached length of piping		m	Liquid line: 0.54 / Gas line: 0.47	_	
Installation data	Insulation for piping			Necessary (Both s	ides), independent	
uaia	Refrigerant line (one way) leng	jth	m	Max	x.20	
	Vertical height diff. between O	/U and I/U	m	Max.10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)	
Drain hose			Hose connectable (VP16)	Hole size φ 20 x 2 pcs., Hole size φ 16 x 9 pcs.		
Drain pump, max lift height		mm				
Recommended breaker size		Α	16			
L.R.A. (Locked rotor ampere)		Α	4.6 / 4.4 / 4.2 (2	220/ 230/ 240 V)		
Interconnec	ting wires Size x Core r	umber		1.5mm ² x 4 cores (Including earth cab	ole) / Terminal block (Screw fixing type)	
IP number	·			IPX0 IPX4		
Standard ac	cessories			Mounting kit, Clean filter (Allergen clear filter x 1	, Photocatalytic washable deodorizing filter x 1)	
Option parts	3			Interface kit (SC-BIKN2-E)	

(1) 1110 data al 0 1110a0a	The pipe length is 311.				
Item	Indoor air temperature		Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
 (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
 (4) Select the breaker size according to the own national standard.

(2) Floor standing type (SRF)

			Model	Indoor unit	Outdoor unit	
Item				SRF25ZS-W	SRC25ZS-WA2	
Power source	1		1	,	V, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (rang	•	kW		n.) - 3.1 (Max.))	
	Nominal heating capacity (rang	je)	kW	2.9 (0.8 (Min.) - 3.7 (Max.))		
	Heating capacity (H2)		kW			
		Cooling		,	19 - 0.89)	
Power consumption		Heating	kW	0.66 (0.	20 - 1.14)	
		Heating (H2)			_	
	Max power consumption			1	.65	
	Running current	Cooling		3.1 / 3.0 / 2.9	(220/ 230/ 240 V)	
	Transing current	Heating	Α	3.4 / 3.3 / 3.1	(220/ 230/ 240 V)	
Operation	Inrush current, max current				Max. 9	
data	Power factor	Cooling	%		86	
	1 ower factor	Heating	/"		88	
	EER	Cooling		4	.24	
	COP	Heating		4	.39	
	COF	Heating (H2)			_	
	Sound power level	Cooling		50	59	
	Souria power level	Heating		51	60	
	Cound procesure level	Cooling	dB(A)	Hi: 38 Me: 32 Lo: 29 ULo: 25	45	
	Sound pressure level	Heating	1	Hi: 39 Me: 35 Lo: 33 ULo: 29	47	
	Silent mode sound pressure le	vel	1	_	Cooling:41 / Heating:42	
Exterior dim	ensions (Height x Width x Depth)		mm	600 × 860 × 238	540 × 780(+62) × 290	
Exterior app	pearance			Fine snow	Stucco white	
(Equivalent color)			Munsell: (8.0Y 9.3/0.1), RAL: 9003	(4.2Y 7.5/1.1), (7044)		
Net weight		kg	18	31.0		
Compresso	Compressor type & Quantity			_	RM-C5077SBE71(Rotary type) × 1	
Compressor motor (Starting method)		kW	_	0.75 (Inverter driven)		
Refrigerant	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)	
Refrigerant	(Type, amount, pre-charge length)	kg	R32 0.62 in outdoor unit (Incl. t	he amount for the piping of 10m)	
Heat exchar	nger			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant	control			Capillary tubes + Elec	ctronic expansion valve	
Fan type & 0	Quantity			Turbo fan x 1	Propeller fan × 1	
Fan motor (Starting method)		W	40 ×1 (Direct drive) 24 ×1 (Direct drive)		
A ! fl		Cooling	3 /	Hi: 9.0 Me: 7.6 Lo: 6.7 ULo: 5.8	27.4	
Air flow		Heating	m³/min	Hi: 10.5 Me: 8.2 Lo: 7.7 ULo: 6.6	27.4	
Available ex	ternal static pressure		Pa	0	0	
Outside air i	ntake			Not possible	_	
Air filter, Qua	ality / Quantity			Polypropylene net (Washable) × 2	_	
Shock & vib	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric hea	ter			_	Defrost heater 230V 110W	
	Remote control			Wireless re	mote control	
Operation	Room temperature control			Microcompu	ter thermostat	
control	Operation display			RUN: Green, TIME	R: Yellow, ECO: Blue	
Safety equip	oments			Frost protection, Serial signal error pro-	ction, Overcurrent protection, tection, Indoor fan motor error protection, sure control), Cooling overload protection	
	Refrigerant piping size (O.D.)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
م منام المعمدا	Attached length of piping		m	_	_	
Installation data	Insulation for piping			Necessary (Both :	sides), independent	
data	Refrigerant line (one way) leng	th	m	Ma	x.20	
	Vertical height diff. between O/	U and I/U	m	Max.10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)	
	Drain hose			Hose connectable (VP16)	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs	
Drain pump, max lift height		mm	_	_		
	ded breaker size		А		16	
	sed rotor ampere)		Α	3	3.6	
Interconnec	<u>'</u>	umber			ble) / Terminal block (Screw fixing type)	
IP number	1 2 3			IPX0	IPX4	
Standard ac	cessories				Photocatalytic washable deodorizing filter × 1)	
Option parts					(SC-BIKN2-E)	
, p					· /	

Notes (1) The data are measured at the following conditions.

()					
Ite	ndoor air	temperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19℃	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2


- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
- (4) Select the breaker size according to the own national standard.



			Model	Indoor unit	Outdoor unit	
Item				SRF35ZS-W	SRC35ZS-WA2	
Power source	ce			1 Phase, 220 - 240\	V, 50Hz / 220V, 60Hz	
	Nominal cooling capacity (ran	ge)	kW	3.5 (0.9 (Min	.) - 4.1 (Max.))	
	Nominal heating capacity (ran	ge)	kW	4.5 (0.8 (Min	.) - 5.2 (Max.))	
	Heating capacity (H2)		kW	-	_	
		Cooling		0.82 (0.1	18 - 1.33)	
	Power consumption	Heating	kW	1.12 (0.1	19 - 1.53)	
		Heating (H2)	1		-	
	Max power consumption	, ,		1.	65	
		Cooling		4.1 / 3.9 / 3.7 (220/ 230/ 240 V)	
	Running current	Heating	Α	,	220/ 230/ 240 V)	
Operation	Inrush current, max current	1		,	Max. 9	
data	,	Cooling			02	
	Power factor	Heating	%		95	
	EER	Cooling			27	
		Heating	ł		02	
	COP	Heating (H2)		7-	_	
		Cooling		51	63	
	Sound power level	Heating	-	52	64	
		Cooling	4D(V)	Hi: 40 Me: 35 Lo: 33 ULo: 29	50	
	Sound pressure level	Heating	dB(A)	Hi: 41 Me: 36 Lo: 35 ULo: 33	51	
	Ciloret manda annual munanium la			HI. 41 IVIE. 30 LO. 33 OLO. 33	· ·	
Cutaviau dina	Silent mode sound pressure le ensions (Height x Width x Depth			600 × 860 × 238	Cooling:44 / Heating:43 540 × 780(+62) × 290	
)	mm		` '	
Exterior app				Fine snow Munsell: (8.0Y 9.3/0.1), RAL: 9003	Stucco white (4.2Y 7.5/1.1), (7044)	
Net weight	(Equivalent color)		ka	19	34.5	
	thing ? Quantity		kg	· ·	RM-B5077SBE2(Rotary type) × 1	
	Compressor type & Quantity		kW	_	0.90 (Inverter driven)	
Compressor motor (Starting method)			_	,		
Refrigerant oil (Amount, type)		L	— — — — — — — — — — — — — — — — — — —	0.30 (DIAMOND FREEZE MB75)		
	Type, amount, pre-charge length	1)	kg	,	ne amount for the piping of 15m)	
Heat exchar	<u> </u>			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant					tronic expansion valve	
Fan type & 0			147	Turbo fan × 1	Propeller fan × 1	
Fan motor (Starting method)	1	W	40 ×1 (Direct drive)	24 ×1 (Direct drive)	
Air flow		Cooling	m³/min	Hi: 9.2 Me: 7.8 Lo: 7.3 ULo: 6.4	31.5	
		Heating	_	Hi: 10.7 Me: 8.3 Lo: 8.1 ULo: 7.4	31.5	
	ternal static pressure		Pa	0	0	
Outside air i				Not possible	_	
	ality / Quantity			Polypropylene net (Washable) × 2	_	
	ration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heat				_	Defrost heater 230V 110W	
Operation	Remote control				note control	
control	Room temperature control			·	ter thermostat	
-	Operation display				R: Yellow, ECO: Blue	
Safety equip	oments			Frost protection, Serial signal error prot	ction, Overcurrent protection, ection, Indoor fan motor error protection, sure control), Cooling overload protection	
	Refrigerant piping size (O.D.)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
1 1 1 1 2	Attached length of piping		m	_	_	
Installation data	Insulation for piping			Necessary (Both sides), independent		
uaia	Refrigerant line (one way) leng	gth	m	Max.20		
	Vertical height diff. between O		m	Max.10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)	
Drain hose			Hose connectable (VP16)	Hole size φ 20 x 2 pcs., Hole size φ 16 x 9 pcs		
Drain pump, max lift height		mm				
Recommended breaker size		Α				
	ed rotor ampere)		Α		.4	
Interconnec		number	<u> </u>		ble) / Terminal block (Screw fixing type)	
IP number	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1			IPX0	IPX4	
Standard ac	cessories				1, Photocatalytic washable deodorizing filter × 1)	
Option parts						
Option parts				Interface kit (SC-BIKN2-E)		

,		5			- -
Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.(4) Select the breaker size according to the own national standard.

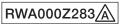

(3) Ceiling concealed type (SRR)


Item			Model		5ZS-W
Power source				Indoor unit SRR25ZS-W	Outdoor unit SRC25ZS-WA2
Power source	1		134/	,	- 240V, 50Hz
	Nominal cooling capacity (rang		kW	` `	.) - 3.2 (Max.))
	Nominal heating capacity (range	ge)	kW	2.9 (0.9 (Min	.) - 4.4 (Max.))
	Heating capacity (H2)	To "	kW	0.00 (0.00	
		Cooling	,	,	9 - 0.99)
	Power consumption Heating		kW	0.65 (0.7	9 - 1.32)
		Heating (H2)		-	_
	Max power consumption	Ta ::	-		65
	Running current	Cooling		<u> </u>	220/ 230/ 240V)
		Heating	Α	'	220/ 230/ 240V)
	Inrush current, max current	To "		,	(230/ 240V) Max. 9
	Power factor	Cooling	%		37
Operation		Heating			88
data	EER	Cooling			03
	COP	Heating	1		46
		Heating (H2)			_
	Sound power level	Cooling	1	56	58
		Heating		59	58
	Sound pressure level (1)	Cooling		Hi: 37 Me: 33 Lo: 30 ULo: 24	47
		Heating		Hi: 40 Me: 37 Lo: 34 ULo: 28	47
	Sound pressure level ②	Cooling	dB(A)	Hi: 31 Me: 28 Lo: 26 ULo: 21	47
	Courte processio tovor (s)	Heating]	Hi: 33 Me: 30 Lo: 28 ULo: 23	47
	Sound pressure level ③	Cooling]	Hi: 39 Me: 35 Lo: 32 ULo: 25	47
	Courta pressure level &	Heating]	Hi: 44 Me: 41 Lo: 38 ULo: 31	47
	Silent mode sound pressure le	vel		_	Cooling:41 / Heating:42
Exterior dimensions (Height x Width x Depth)			mm	200 x 750 x 500	540 x 780(+62) x 290
Exterior appe				_	Stucco white
•	color : Munsell, RAL)				(4.2Y 7.5/1.1), (7044)
Net weight			kg	20.5	31.0
	type & Quantity			_	RM-C5077SBE71(Rotary type) x 1
	motor (Starting method)		kW	_	0.75 (Inverter driven)
	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)
Refrigerant (7	Type, amount, pre-charge length)	kg	R32 0.62 in outdoor unit (Incl. the	ne amount for the piping of 15m)
Heat exchanger				Louver fins & inner grooved tubing	M fins & inner grooved tubing
Refrigerant control				Capillary tubes + Elec	tronic expansion valve
Fan type & Quantity				Centrifugal fan x 2	Propeller fan x 1
Fan motor (S	Starting method)		W	51 x1 (Direct drive)	24 x1 (Direct drive)
Air flow		Cooling	m³/min	Hi: 9.5 Me: 8.0 Lo: 6.5 ULo: 4.5	27.4
-II IIOW		Heating		Hi: 10.0 Me: 9.0 Lo: 8.0 ULo: 6.0	23.6
Available external static pressure			Pa	35 (Initial static pressure with air filter:5Pa)	0
Outside air intake				Not possible	_
Air filter, Quality / Quantity				Polypropylene net x 1	_
ar tiiter, Qua	ility / Quaritity				_
	ration absorber			Cushion rubber (for fan motor)	Rubber sleeve (for fan motor & compressor
	ration absorber			Cushion rubber (for fan motor) —	Rubber sleeve (for fan motor & compressor Defrost heater 230V 110W
Shock & vibra Electric heate	ration absorber				,
Shock & vibra Electric heate Operation	ration absorber er			— Wireless re	
Shock & vibra	ration absorber er Remote control			— Wireless rer Microcomput	Defrost heater 230V 110W mote control
Shock & vibra Electric heate Operation	ration absorber er Remote control Room temperature control Operation display			— Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Over Frost protection, Serial signal error prot	Defrost heater 230V 110W mote control ter thermostat
Shock & vibra Electric heate Operation control	ration absorber er Remote control Room temperature control Operation display		mm	— Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Over Frost protection, Serial signal error prot	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection
Shock & vibra Electric heate Operation control	ration absorber er Remote control Room temperature control Operation display ments		mm	— Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overous troots the protection, Serial signal error protection and protection are protection.	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection
Shock & vibric leater of the state of the st	ration absorber er Remote control Room temperature control Operation display ments Refrigerant piping size (O.D.)		mm	— Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overe Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4")	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: ϕ 9.52 (3/8")
Shock & vibriclectric heater Operation control Safety equiprication in the standard section in the s	ration absorber er Remote control Room temperature control Operation display ments Refrigerant piping size (O.D.) Connecting method			— Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overe Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: ϕ 9.52 (3/8")
Shock & vibriclectric heater Operation control Safety equiprication in the standard section in the s	ration absorber er Remote control Room temperature control Operation display ments Refrigerant piping size (O.D.) Connecting method Attached length of piping	ıth		— Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overe Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection — Necessary (Both s	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection
Shock & vibricelectric heater Operation control Safety equipores Operation control	ration absorber er Remote control Room temperature control Operation display ments Refrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping	·	m	- Wireless rer Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overc Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection - Necessary (Both s	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green surrent protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — iddes), independent
Shock & vibricelectric heater Operation control Safety equipores Operation control	Remote control Room temperature control Operation display Merrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng	·	m m	- Wireless rer Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overc Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection - Necessary (Both s	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green surrent protection, Drain error protection ection, Indoor fan motor error protection urre control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — iddes), independent x.20
Shock & vibriclectric heater Operation control Safety equipressessing the second control control Safety equipressessing the second control con	Remote control Room temperature control Operation display Merrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng Vertical height diff. between O.	·	m m	— Wireless rer Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overo Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection — Necessary (Both s Ma Max.10 (Outdoor unit is higher)	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green purrent protection, Drain error protection ection, Indoor fan motor error protection urre control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — ides), independent x.20 / Max.10 (Outdoor unit is lower)
Shock & vibriclectric heater Operation control Safety equiprices Installation data Orain pump,	Remote control Room temperature control Operation display Merita Refrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng Vertical height diff. between O. Drain hose max lift height	·	m m m	— Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overo Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection — Necessary (Both s Ma Max.10 (Outdoor unit is higher) Hose connectable (VP25) Built-in, MAX600	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection urre control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — ides), independent x.20 / Max.10 (Outdoor unit is lower) Hole size \$\phi\$ 20 x 2 pcs., Hole size \$\phi\$ 16 x 9 p
Shock & vibra- Electric heater Operation control Safety equips Installation data Orain pump, Recommend	Remote control Room temperature control Operation display Ments Refrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng Vertical height diff. between O. Drain hose max lift height led breaker size	·	m m m	- Wireless rer Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overo Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection - Necessary (Both s Ma Max.10 (Outdoor unit is higher) Hose connectable (VP25) Built-in, MAX600	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — dides), independent x.20 / Max.10 (Outdoor unit is lower) Hole size \$\phi\$ 20 x 2 pcs., Hole size \$\phi\$ 16 x 9 p — 6
Chock & vibrated Electric heater Control Contr	Remote control Room temperature control Operation display Ments Refrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng Vertical height diff. between O. Drain hose max lift height ded breaker size ed rotor ampere)	/U and I/U	m m m	- Wireless ren Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overd Frost protection, Serial signal error prot Heating overload protection (High press Liquid line: φ6.35 (1/4") Flare connection - Necessary (Both s Ma Max.10 (Outdoor unit is higher) Hose connectable (VP25) Built-in, MAX600	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — dides), independent x.20 / Max.10 (Outdoor unit is lower) Hole size \$\phi\$ 20 x 2 pcs., Hole size \$\phi\$ 16 x 9 p — 6 220/ 230/ 240V)
Chock & vibra- Electric heater Deperation control Safety equiper Installation lata Drain pump, Recommend I.R.A. (Lockenterconnections)	Remote control Room temperature control Operation display Ments Refrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng Vertical height diff. between O. Drain hose max lift height ded breaker size ed rotor ampere)	/U and I/U	m m m	Wireless rer Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overous Frost protection, Serial signal error protection, Serial signal error protection (High press Liquid line: φ6.35 (1/4") Flare connection Necessary (Both s Ma Max.10 (Outdoor unit is higher) Hose connectable (VP25) Built-in, MAX600	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — ides), independent x.20 / Max.10 (Outdoor unit is lower) Hole size \$\phi\$ 20 x 2 pcs., Hole size \$\phi\$ 16 x 9 p — 6 220/ 230/ 240V) ble) / Terminal block (Screw fixing type)
Chock & vibra- Electric heater Deperation control Safety equipates Drain pump, Recommend Recommend R.A. (Lockenterconnection P number	Remote control Room temperature control Operation display Meering and piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng Vertical height diff. between O. Drain hose max lift height led breaker size ed rotor ampere) ing wires Size x Core reserved.	/U and I/U	m m m	Wireless rer Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overous Frost protection, Serial signal error protection, Serial signal error protection (High press Liquid line: φ6.35 (1/4") Flare connection Necessary (Both s Ma Max.10 (Outdoor unit is higher) Hose connectable (VP25) Built-in, MAX600	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — ides), independent x.20 / Max.10 (Outdoor unit is lower) Hole size \$\phi\$ 20 x 2 pcs., Hole size \$\phi\$ 16 x 9 p — 6 220/ 230/ 240V) ble) / Terminal block (Screw fixing type)
Shock & vibra- Electric heater Operation control Safety equips Installation data Orain pump, Recommend	Remote control Room temperature control Operation display Ments Refrigerant piping size (O.D.) Connecting method Attached length of piping Insulation for piping Refrigerant line (one way) leng Vertical height diff. between O. Drain hose max lift height ded breaker size ed rotor ampere) ing wires Size x Core rocessories	/U and I/U	m m m	Wireless rei Microcomput RUN: Green, TIMER: Yellow, HI Compressor overheat protection, Overo Frost protection, Serial signal error prot Heating overload protection(High press Liquid line: φ6.35 (1/4") Flare connection Necessary (Both s Ma Max.10 (Outdoor unit is higher) Hose connectable (VP25) Built-in, MAX600	Defrost heater 230V 110W mote control ter thermostat POWER: Green, ECONO: Green current protection, Drain error protection ection, Indoor fan motor error protection ure control), Cooling overload protection Gas line: \$\phi\$ 9.52 (3/8") Flare connection — ides), independent x.20 / Max.10 (Outdoor unit is lower) Hole size \$\phi\$ 20 x 2 pcs., Hole size \$\phi\$ 16 x 9 p — 6 220/ 230/ 240V) ble) / Terminal block (Screw fixing type)

Outdoor air temperature Indoor air temperature Standards Operation DB WB DB WB Cooling 27°C 19℃ 35°C 24°C ISO5151-T1 ISO5151-H1 Heating 20°C 7°C 6°C Heating (H2) 20°C 2°C 1°C ISO5151-H2

(2) This air-conditioner is manufactured and tested in conformity with the ISO.

(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

(4) Select the breaker size according to the own national standard.

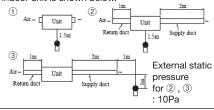



					Model				SRR3	5ZS-W		
Item						ı	ndoor unit S	SRR35		Outdoor uni	t SRC35ZS	3-WA2
Power sourc) - 240V, 50Hz		
		ling capacity	, , ,		kW	-			, ,	.) - 4.1 (Max.))		
	Heating capa	ting capacity	(range)		kW kW				4.2 (1.0 (Min	.) - 5.2 (Max.))		
	neating capa	acity (nz)	Coolir		KVV				0.93 (0.1			
	Power consu	ımntion	Heatin		kW					20 - 1.45)		
				ng (H2)					(0.2	_		
	Max power of	consumption	1100000	·3 (· ·-/					1.	65		
	D. maria a a sum		Coolir	ıg					4.5 / 4.3 / 4.2 (220/ 230/ 240V)		
	Running curr	rent	Heatir	ıg	Α				4.9 / 4.7 / 4.5 (220/ 230/ 240V)		
	Inrush currer	nt, max currer	nt					4.9 /	/ 4.7 / 4.5 (220/	230/ 240V) Max. 9)	
	Power factor		Coolir	ıg	%				9	93		
Operation			Heatir	_	/0					94		
data	EER		Coolir		ļ					76		
	COP		Heatir							16		
				ig (H2)				_		-		
	Sound powe	r level	Coolir				5				62 62	
			Heatir		-	Li. c	8 Me: 34		LII or OF		50	
	Sound press	ure level ①	Coolir Heatir		-	Hi: 3	2 Me: 38				50	
			Coolir		dB(A)		3 Me: 30				50	
	Sound press	ure level 2	Heatir		1 ap(A)		4 Me: 32				50	
			Coolir		1		0 Me: 37				50	
	Sound press	ure level ③	Heatir		1		5 Me: 42				50	
	Silent mode	sound pressu			1		_			Cooling:	15 / Heating	:43
Silent mode sound pressure level Exterior dimensions (Height x Width x Depth)			mm		200 x 75	50 x 50	0	540 x 7	80(+62) x 29	90		
Exterior appearance						_		Stu	cco white			
(Equivalent color : Munsell, RAL)								(4.2Y 7.5	5/1.1),(70	44)		
Net weight					kg		20				34.5	
	type & Quanti	<u> </u>				ļ				RM-B5077SB		. ,
•	motor (Startin	, ,			kW	1				,	verter drive	,
	oil (Amount, typ				L	-				0.30 (DIAMO		
	Type, amount,	pre-charge le	ength)		kg	1			•	ne amount for the pi		
Heat exchan Refrigerant of						Louv	er fins & inne			M fins & inn tronic expansion val		tubing
Fan type & C							Centrifug		•		eller fan x 1	
Fan motor (Starting method)			W	+	51 x1 (Dir			· ·	Direct drive	<u></u>		
Cooling				Hi: 10	0 Me: 8.5			ZTAT	31.5)		
Air flow Heating			m³/mir		5 Me: 9.5				27.8			
Available external static pressure			Pa	_			h air filter:5Pa)		0			
Outside air intake				<u> </u>	Not po	ssible	•		_			
Air filter, Quality / Quantity					Polypropyle	ene net	t x 1		_			
Shock & vibration absorber				Cus	hion rubber	(for fa	n motor)	Rubber sleeve (for	fan motor &	compressor)		
Electric heater					-	-		Defrost he	ater 230V 1	10W		
Operation	Remote cont								Wireless rer	mote control		
control	ontrol Room temperature control				Microcomputer thermostat							
	Operation dis	splay					RUN: Green, TIMER: Yellow, HI POWER: Green, ECONO: Green					
Safety equipments				Frost	Compressor overheat protection, Overcurrent protection, Drain error protection Frost protection, Serial signal error protection, Indoor fan motor error protectic Heating overload protection (High pressure control), Cooling overload protection			rotection				
		piping size (O.	.D.)		mm	1			e: φ6.35 (1/4")	Gas line: φ 9.52	,	
	Connecting r						Flare cor		on	Flare	connection	
Installation		gth of piping			m	1	_		/5 ::	Idea VIII II II II	_	
data	Insulation for		\			-		Nec		sides), independent		
		line (one way)) length en O/U and I/I	1	m m	1	May 10 / C	Jutdoo		x.20 / Max.10 (Outdoor	unit ie lowe	r)
	Drain hose	it uiii. Detwe	on O/O and I/		1111	<u> </u>	ose connect			Hole size φ 20 x 2 p		
Drain pump	max lift height	<u> </u>			mm	 	Built-in, I				_	. + 10 x 0 pos
	led breaker siz				Α		,			6		
	ed rotor amper				A	<u> </u>				220/ 230/ 240V)		
Interconnect	<u>.</u>		ore number			1.5	nm² x 4 cor			ole) / Terminal block	(Screw fixin	g type)
IP number							IP	•	<u> </u>		IPX4	/
Standard acc	cessories								Mounting kit, Joi	nt for drain piping		
Option parts							Wired remot	e conti	rol, Interface kit	(SC-BIKN2-E), Bot	tom air inle	t kit
Notes (1)	The data are n	neasured at	the following	condit	ions.	The	pipe length is :	5m.		ions of measureing		ssure level
	Item	Indoor air t	emperature	Outdo	or air te	mperature	Ctanal		of indoor u	ınit is shown below	lm	2m
Operation		DB	WB	DE		WB	Standards	'	①	- Unit + Air+		

Cooling 27°C 19°C 35°C 24°C ISO5151-T1 20°C ISO5151-H1 Heating 7℃ 6°C Heating (H2) 20°C 2°C 1°C ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.

 (4) Select the breaker size according to the own national standard.

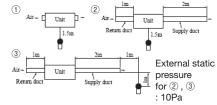

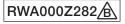

(4) 4-way ceiling cassette type (FDTC)

Nomi Heati Power Runn Operation data Power EER COP Soun Silent Exterior dimensions Exterior appearance (Equivalent color : Net weight Compressor type & Compressor motor Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Outside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation control Refrigerant Safety equipments	OP ound power level ound pressure level ilent mode sound pressure level	Cooling Heating (H2) Cooling Heating Cooling Heating Cooling Heating Cooling Heating Heating Heating Heating Heating	kW kW kW kW	2.5 (0.9 (Min 2.9 (0.9 (Min - 0.61 (0.1 0.71 (0.1 - 1. 3.2 / 3.1 / 3.0 (3.6 / 3.4 / 3.3 (3.6 / 3.4 / 3.3 (220/	Outdoor unit SRC25ZS-WA2 - 240V, 50Hz .) - 3.2 (Max.)) .) - 4.0 (Max.)) - 8 - 0.98) 9 - 1.31) - 65 220/ 230/ 240 V) 230/ 240 V) 230/ 240V) Max. 9	
Nomi Nomi Heati Powe Max y Runn Operation data Powe EER COP Soun Soun Silent Exterior dimensions Exterior appearance (Equivalent color : N Net weight Compressor type & Compressor motor Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Outside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Remo Operation Control Refrigerant Remo Roor Operation Control Refrigerant Refrigerant Remo Roor Operation Control Refrigerant Refrigerant Refrigerant Remo Roor Refrigerant Remo Roor Refrigerant Remo Roor Refrigerant Refrigerant Remo Roor Refrigerant Refr	ominal heating capacity (rangleating capacity (H2) ower consumption lax power consumption unning current urush current, max current ower factor ER OP ound power level ound pressure level illent mode sound pressure level	Cooling Heating (H2) Cooling Heating Cooling Heating Cooling Heating Cooling Heating Heating Heating Heating Heating	kW kW kW	2.5 (0.9 (Min 2.9 (0.9 (Min - 0.61 (0.1 0.71 (0.1 - 1. 3.2 / 3.1 / 3.0 (3.6 / 3.4 / 3.3 (3.6 / 3.4 / 3.3 (220/	.) - 3.2 (Max.)) .) - 4.0 (Max.)) - 8 - 0.98) 9 - 1.31) - 65 220/ 230/ 240 V)	
Nomi Heati Power Runn Operation data Power EER COP Soun Solent Exterior dimensions Exterior appearance (Equivalent color : Not weight Compressor type & Compressor motor Refrigerant (Type, a Heat exchanger Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Outside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Refrigerant Control Refrigerant Safety equipments	ominal heating capacity (rangleating capacity (H2) ower consumption lax power consumption unning current urush current, max current ower factor ER OP ound power level ound pressure level illent mode sound pressure level	Cooling Heating (H2) Cooling Heating Cooling Heating Cooling Heating Cooling Heating Heating Heating Heating Heating	kW kW kW	2.9 (0.9 (Min	2.) - 4.0 (Max.)) - 8 - 0.98) 9 - 1.31) - 65 220/ 230/ 240 V)	
Heati Powe Max I Runn Operation data Powe EER COP Soun Soun Silent Exterior dimensions Exterior appearance (Equivalent color : N Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan motor (Starting Air flow Available external s Outside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Remo Refrigerant Remo Refrigerant Refrigerant Remo Refrigerant Refrigerant Refrigerant Refrigerant Remo Refrigerant Refrigera	eating capacity (H2) ower consumption lax power consumption unning current rush current, max current ower factor ER OP ound power level ound pressure level illent mode sound pressure level	Cooling Heating (H2) Cooling Heating Cooling Heating Cooling Heating Cooling Heating Heating Heating Heating	kW kW	0.61 (0.1 0.71 (0.1 0.71 (0.1 1. 3.2/3.1/3.0 (2 3.6/3.4/3.3 (220/ 3.6/3.4/3.3 (220/	8 - 0.98) 9 - 1.31) - 65 220/ 230/ 240 V)	
Heati Power Max I Runn Departion Inrusi data Power EER COP Soun Soun Silent Exterior dimensions Exterior appearance Equivalent color: Note weight Compressor type & Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Departion Control Refrigerant Remo Control Refrigerant Remo Control Refrigerant Remo Control Refrigerant Remo Refrigerant Remo Refrigerant Refrigerant Remo Refrigerant Remo Refrigerant Refrigerant Remo Refrigerant Ref	eating capacity (H2) ower consumption lax power consumption unning current rush current, max current ower factor ER OP ound power level ound pressure level illent mode sound pressure level	Cooling Heating (H2) Cooling Heating Cooling Heating Cooling Heating Cooling Heating Heating Heating Heating	kW kW	0.61 (0.1 0.71 (0.1 0.71 (0.1 1. 3.2/3.1/3.0 (2 3.6/3.4/3.3 (220/ 3.6/3.4/3.3 (220/	8 - 0.98) 9 - 1.31) - 65 220/ 230/ 240 V)	
Power Max I Runn Power EER COP Soun Soun Silent Exterior dimensions Exterior appearance Equivalent color: Note weight Compressor type & Compressor motor Refrigerant oil (Amore Refrigerant (Type, and Heat exchanger) Refrigerant control Fan type & Quantity Fan motor (Starting) Air flow Available external sountside air intake Air filter, Quality / Qu	ower consumption lax power consumption unning current urush current, max current ower factor ER OP ound power level ound pressure level illent mode sound pressure level	Heating (H2) Cooling Heating Cooling Heating Cooling Heating Cooling Heating Heating Heating Heating	kW	0.71 (0.1 - 1. 3.2/3.1/3.0 (2 3.6/3.4/3.3 (220/ 3.6/3.4/3.3 (220/	9 - 1.31) - 65 220/ 230/ 240 V) 220/ 230/ 240 V)	
Deperation Inrust Inrus	lax power consumption unning current urush current, max current ower factor ER OP ound power level ound pressure level illent mode sound pressure level	Heating (H2) Cooling Heating Cooling Heating Cooling Heating Cooling Heating Heating Heating Heating	A	0.71 (0.1 - 1. 3.2/3.1/3.0 (2 3.6/3.4/3.3 (220/ 3.6/3.4/3.3 (220/	9 - 1.31) - 65 220/ 230/ 240 V) 220/ 230/ 240 V)	
Deperation data Deperation de	lax power consumption unning current urush current, max current ower factor ER OP ound power level ound pressure level illent mode sound pressure level	Cooling Heating Cooling Heating Cooling Heating Cooling Heating	A	1. 3.2/3.1/3.0 (2 3.6/3.4/3.3 (220/ 3.6/3.4/3.3 (220/	- 65 220/ 230/ 240 V) 220/ 230/ 240 V)	
Runn Departion data Power EER COP Soun Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor motor Refrigerant oil (Amo Refrigerant (Type, a) Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external si Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Departion Control Refrigeration Control Refrigeration Refriger	unning current rush current, max current ower factor ER OP ound power level ound pressure level ilent mode sound pressure level	Cooling Heating Cooling Heating Cooling Heating		1. 3.2 / 3.1 / 3.0 (2 3.6 / 3.4 / 3.3 (2 3.6 / 3.4 / 3.3 (220/	65 220/ 230/ 240 V) 220/ 230/ 240 V)	
Runn Operation data Power EER COP Soun Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external si Outside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigeration Control Refrigeration Refrig	unning current rush current, max current ower factor ER OP ound power level ound pressure level ilent mode sound pressure level	Heating Cooling Heating Cooling Heating Heating Heating Heating (H2)		3.2/3.1/3.0 (2 3.6/3.4/3.3 (2 3.6/3.4/3.3 (220/	220/ 230/ 240 V) 220/ 230/ 240 V)	
Departion data Departion data	rush current, max current ower factor ER OP ound power level ound pressure level ilent mode sound pressure level	Heating Cooling Heating Cooling Heating Heating Heating Heating (H2)		3.6 / 3.4 / 3.3 (2 3.6 / 3.4 / 3.3 (220/	220/ 230/ 240 V)	
Departion data Departion data	rush current, max current ower factor ER OP ound power level ound pressure level ilent mode sound pressure level	Cooling Heating Cooling Heating Heating (H2)		3.6 / 3.4 / 3.3 (220/		
EER COP Soun Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor type & Compressor type & Compressor type, a Heat exchanger Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrig Safety equipments	ower factor ER OP ound power level ound pressure level ilent mode sound pressure level	Heating Cooling Heating Heating (H2)	% -	· · · · · · · · · · · · · · · · · · ·	230/ 240V) Max. 9	
EER COP Soun Soun Silent Exterior dimensions Exterior appearance Equivalent color: Note weight Compressor type & Compressor motor Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant R	ER OP ound power level ound pressure level ilent mode sound pressure level	Heating Cooling Heating Heating (H2)	% -	8	·	
EER COP Soun Soun Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external st Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Remo Refrigerant Remo Roon Refrigerant Remo Roon Refrigerant Remo Roon Refrigerant Remo Refrigerant Remo Refrigerant Remo Refrigerant Remo Refrigerant Remo Refrigerant Refr	ER OP ound power level ound pressure level ilent mode sound pressure level	Cooling Heating Heating (H2)	,,,		6	
Soun Soun Soun Soun Soun Soun Soun Soun	OP ound power level ound pressure level ilent mode sound pressure level	Heating Heating (H2)] [9	0	
Soun Soun Soun Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external si Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrig Ref	ound power level ound pressure level ilent mode sound pressure lev	Heating (H2)		4.	10	
Soun Soun Soun Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external si Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigeraton Refrigera	ound power level ound pressure level ilent mode sound pressure lev] [4.	08	
Soun- Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan motor (Starting Air flow Available external st Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigeration Refrigerat	ound pressure level	0 1:] [-	- -	
Soun Silent Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan motor (Starting Air flow Available external st Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrig Refrig Refrig Refrigerant Refrig	ound pressure level	Cooling		51	58	
Silent Exterior dimensions Exterior appearance Equivalent color: Note weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control) Fan type & Quantity Fan motor (Starting Air flow Available external stoutside air intake Air filter, Quality / Quantity / Quantit	ilent mode sound pressure lev	Heating	1 1	52	59	
Silent Exterior dimensions Exterior appearance Equivalent color: Note weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external st Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Refrigera	ilent mode sound pressure lev	Cooling	dB(A)	P-Hi: 38 Hi: 34 Me: 30 Lo: 27	47	
Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external st Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Ref	•	Heating	()	P-Hi: 39 Hi: 36 Me: 32 Lo: 28	47	
Exterior dimensions Exterior appearance Equivalent color: Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external st Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Refrigerant Refrigerant Refrigerant Refrigerant Control Refrigerant Control Refrigerant	•		 		Cooling:41 / Heating:42	
Exterior appearance Equivalent color: Note weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan motor (Starting Air flow Available external s Outside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Remo Refrigerant Remo Refrigerant Remo Refrigerant Remo Refrigerant Remo Refrigerant Refrigerant Remo Refrigerant Refrigerant Refrigerant Refrigerant Remo Refrigerant Refrigeran		, CI		Unit 248 x 570 x 570	Occinig.417 Heating.42	
Equivalent color: Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Refrigerant Color Refrigerant (Type, a Refrigerant (Type,	ions (Height x Width x Depth)		mm	Panel 10 x 620 x 620	540 x 780(+62) x 290	
Equivalent color: Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Departion Control Refrigerant R	ance			Fine snow	Stucco white	
Net weight Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Ean type & Quantity Ean motor (Starting Air flow Available external s Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Operation Safety equipments Refrig				(8.0Y 9.3/0.1) near equivalent	(4.2Y 7.5/1.1), (7044)	
Compressor type & Compressor motor Refrigerant oil (Amo Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external structure of the Air filter, Quality / Quality / Quantity / Quality / Quali			kg	Unit 13.5 Panel 2.5	31.0	
Compressor motor Refrigerant oil (Amo Refrigerant oil (Amo Refrigerant (Type, a Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external s Dutside air intake Air filter, Quality / Q Shock & vibration a Electric heater Deperation Control Refrigerant Control Refrigerant (Refrigerant Control Refrigerant (Type, a Refrigera	oo & Ougatity		ING	OTHE 10.0 T drief 2.0	RM-C5077SBE71(Rotary type) x 1	
Refrigerant oil (Amo Refrigerant (Type, a Refrigerant (Type, a Refrigerant control Refrigerant (Refrigerant Cyperation Control Refrigerant (Refrigerant Cyperation Cyperat			kW		` 331 /	
Refrigerant (Type, a Heat exchanger Refrigerant control Ean type & Quantity Ean motor (Starting Air flow Available external structure of the Air filter, Quality / Quantity / Qu	, ,		_	_	0.75 (Inverter driven)	
Heat exchanger Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external structure of the starting Dutside air intake Air filter, Quality / Qualit			L		0.30 (DIAMOND FREEZE MB75)	
Refrigerant control Fan type & Quantity Fan motor (Starting Air flow Available external structure of the starting Dutside air intake Air filter, Quality / Q	e, amount, pre-charge length)		kg	R32 0.62 in outdoor unit (Incl. th		
Fan type & Quantity Fan motor (Starting Air flow Available external starting Dutside air intake Air filter, Quality / Quality				Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Available external son Dutside air intake Air filter, Quality / Qu	trol			Capillary tubes + Elec	tronic expansion valve	
Air flow Available external so Dutside air intake Air filter, Quality / Qua	Fan type & Quantity			Tangential fan x 1	Propeller fan x 1	
Available external structure of the control of the	ting method)		W	50 (Direct line start)	24 x1 (Direct drive)	
Available external structure of the stru		Cooling	3,	P-Hi: 8.5 Hi: 7.5 Me: 7.0 Lo: 6.0	27.4	
Outside air intake Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Caperation Control Refrig	Air flow Heating		m³/min	P-Hi: 9.5 Hi: 8.5 Me: 7.5 Lo: 6.5	27.4	
Air filter, Quality / Q Shock & vibration a Electric heater Operation Control Contr	Available external static pressure			0	0	
Shock & vibration a Electric heater Departion Room Control Operation Gafety equipments Refrig	Outside air intake			Possible	_	
Chock & vibration a Electric heater Deperation Room Control Capera Safety equipments Refrig	Air filter, Quality / Quantity			Pocket plastic net x 1 (Washable)	_	
Department of the second of th	Shock & vibration absorber			Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor	
Operation Control Remore Room Operation Refrig				_	Defrost heater 230V 110W	
Operation Control Room Operation Operation Refriç	Remote control			(Ontion) Wired: RC-EX3A RC-E5 E	RCH-E3 Wireless: RCN-TC-5AW-E3	
Opera Safety equipments Refrig	oom temperature control			Thermostat by electronics		
Safety equipments	· · · · · · · · · · · · · · · · · · ·				-	
	Operation display Safety equipments			Compressor overheat protection, Serial signal error protection	ction, Overcurrent protection ection, Indoor fan motor error protection ure control), Cooling overload protection	
	efrigerant piping size (O.D.)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	onnecting method			Flare connection	Flare connection	
	ttached length of piping		m	riare connection Flare connection		
netallation ——			m	Necessary (Dath with a) in the last		
iaia ———	sulation for piping	LIA.	-	Necessary (Both sides), independent		
`	efrigerant line (one way) lengt		m		k.20	
	ertical height diff. between O/	U and I/U	m	Max.10 (Outdoor unit is higher)	,	
	rain hose			, , ,	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 p	
Drain pump, max lif			mm	Built-in drain pump, 850	_	
Recommended brea	breaker size		А	1	6	
R.A. (Locked roto	Recommended breaker size			3.7 / 3.6 / 3.4 (220/ 230/ 240V)	
nterconnecting wire		umber	A		le) / Terminal block (Screw fixing type)	
P number	rotor ampere)			IPX0	IPX4	
Standard accessori	rotor ampere)				t, Drain hose	
Option parts	rotor ampere) wires Size x Core no				D-E, Motion sensor : LB-TC-5W-E	

Notes (1) The data are measured at the following conditions.

Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7℃	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.
- (3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.
- (4) Select the breaker size according to the own national standard.

Item Power sourc			Model		35VH1	
Power source				Indoor unit FDTC35VH1	Outdoor unit SRC35ZS-WA2	
	ce			1 Phase, 220	- 240V, 50Hz	
	Nominal cooling capacity (ran	ge)	kW	3.5 (0.9 (Min	.) - 4.3 (Max.))	
	Nominal heating capacity (ran	ige)	kW	4.25 (0.9 (Mir	n.) - 4.6 (Max.))	
	Heating capacity (H2)		kW	-		
		Cooling		0.91 (0.1	8 - 1.37)	
	Power consumption	Heating	kW	1.15 (0.1	9 - 1.33)	
		Heating (H2)	1 1	-		
	Max power consumption	, ,		1.	65	
		Cooling		4.4 / 4.3 / 4.1 (220/ 230/ 240 V)	
	Running current	Heating	l a l		220/ 230/ 240 V)	
Operation	Inrush current, max current	1.10419	1 ' 1	,	(230/ 240V) Max. 9	
data	in don danoni, max danoni	Cooling		,	3	
<i>_</i>	Power factor	Heating	- %		95	
	EER	Cooling			85	
	LLN	Heating			70	
	COP		-		70 _	
		Heating (H2)				
	Sound power level	Cooling	-	52	62	
		Heating	,,	53	62	
	Sound pressure level	Cooling	dB(A)	P-Hi: 39 Hi: 36 Me: 32 Lo: 29	50	
	·	Heating]]	P-Hi: 41 Hi: 38 Me: 34 Lo: 30	50	
	Silent mode sound pressure l	evel			Cooling:45 / Heating:43	
Exterior dimensions (Height x Width x Depth)			mm	Unit 248 x 570 x 570 Panel 10 x 620 x 620	540 x 780(+62) x 290	
Exterior app				Fine snow	Stucco white	
(Equivalent color : Munsell, RAL)			(8.0Y 9.3/0.1) near equivalent	(4.2Y 7.5/1.1) , (7044)		
Net weight			kg	Unit 13.5 Panel 2.5	34.5	
Compressor	r type & Quantity			_	RM-B5077SBE2(Rotary type) x 1	
Compressor	r motor (Starting method)		kW	_	0.90 (Inverter driven)	
Refrigerant	oil (Amount, type)		L	_	0.30 (DIAMOND FREEZE MB75)	
Refrigerant	(Type, amount, pre-charge lengt	h)	kg	R32 0.78 in outdoor unit (Incl. the	ne amount for the piping of 15m)	
Heat exchar	nger			Louver fins & inner grooved tubing	M fins & inner grooved tubing	
Refrigerant o	control			Capillary tubes + Elec	tronic expansion valve	
Fan type & (Quantity			Tangential fan x 1	Propeller fan x 1	
Fan motor (Starting method)		W	50 (Direct line start)	24 x1 (Direct drive)		
<u>`</u>	,	Cooling	3	P-Hi: 9.0 Hi: 8.0 Me: 7.5 Lo: 6.5	31.5	
Air flow Heating		m³/min	P-Hi: 10.0 Hi: 9.0 Me: 8.0 Lo: 7.0	31.5		
Available external static pressure		Pa	0	0		
Outside air intake				Possible	_	
Air filter, Quality / Quantity				Pocket plastic net x 1 (Washable)	_	
Shock & vibration absorber				Rubber sleeve (for fan motor)	Rubber sleeve (for fan motor & compressor)	
Electric heater				-	Defrost heater 230V 110W	
Remote control			(Ontion) Wired: RC-EX3A RC-E5 E	RCH-E3 Wireless: RCN-TC-5AW-E3		
Operation	Room temperature control			, , ,	by electronics	
control	· · · · · · · · · · · · · · · · · · ·			memostat t		
Operation display Safety equipments			Frost protection, Serial signal error prot Heating overload protection(High press	ction, Overcurrent protection ection, Indoor fan motor error protection ure control), Cooling overload protection		
	Refrigerant piping size (O.D.)		mm	Liquid line: φ6.35 (1/4")	Gas line: φ 9.52 (3/8")	
	Connecting method			Flare connection	Flare connection	
	Attached length of piping		m	_	_	
natalleties	Insulation for piping			Necessary (Both sides), independent		
Installation			m	Ma	x.20	
Installation data	Refrigerant line (one way) len	5 77 5		Max.10 (Outdoor unit is higher) / Max.10 (Outdoor unit is lower)		
		·	m	Max. 10 (Outdoor unit is higher)	/ Max.10 (Outdoor unit is lower)	
	Refrigerant line (one way) len	·	m	Hose connectable with VP25 (O.D.32)	/ Max.10 (Outdoor unit is lower) Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs	
data	Refrigerant line (one way) len Vertical height diff. between C	·	m			
data Drain pump	Refrigerant line (one way) len Vertical height diff. between C Drain hose	·	mm	Hose connectable with VP25 (O.D.32) Built-in drain pump, 850	Hole size ϕ 20 x 2 pcs., Hole size ϕ 16 x 9 pcs	
data Drain pump	Refrigerant line (one way) len Vertical height diff. between C Drain hose , max lift height ded breaker size	·	mm A	Hose connectable with VP25 (O.D.32) Built-in drain pump, 850	Hole size φ 20 x 2 pcs., Hole size φ 16 x 9 pcs —	
Drain pump Recommend L.R.A. (Lock	Refrigerant line (one way) len Vertical height diff. between C Drain hose n, max lift height ded breaker size ked rotor ampere))/U and I/U	mm	Hose connectable with VP25 (O.D.32) Built-in drain pump, 850 1 4.6 / 4.4 / 4.2 (Hole size φ 20 x 2 pcs., Hole size φ 16 x 9 pcs — 6 220/ 230/ 240V)	
Drain pump Recommend L.R.A. (Lock Interconnec	Refrigerant line (one way) len Vertical height diff. between C Drain hose n, max lift height ded breaker size ked rotor ampere))/U and I/U	mm A	Hose connectable with VP25 (O.D.32) Built-in drain pump, 850 1 4.6 / 4.4 / 4.2 (1.5mm² x 4 cores (Including earth cab	Hole size φ 20 x 2 pcs., Hole size φ 16 x 9 pcs — 6 220/ 230/ 240V) Jee / Terminal block (Screw fixing type)	
Drain pump. Recommend L.R.A. (Lock Interconnec IP number	Refrigerant line (one way) len Vertical height diff. between C Drain hose n, max lift height ded breaker size ked rotor ampere) sting wires Size x Core)/U and I/U	mm A	Hose connectable with VP25 (O.D.32) Built-in drain pump, 850 1 4.6 / 4.4 / 4.2 (1.5mm² x 4 cores (Including earth cab	Hole size φ 20 x 2 pcs., Hole size φ 16 x 9 pcs — 6 220/ 230/ 240V) Je) / Terminal block (Screw fixing type) IPX4	
Drain pump Recommend L.R.A. (Lock Interconnec	Refrigerant line (one way) len Vertical height diff. between C Drain hose n, max lift height ded breaker size ked rotor ampere) sting wires Size x Core)/U and I/U	mm A	Hose connectable with VP25 (O.D.32) Built-in drain pump, 850 1 4.6 / 4.4 / 4.2 (1.5mm² x 4 cores (Including earth cab IPX0 Mounting ki	Hole size φ 20 x 2 pcs., Hole size φ 16 x 9 pc: - 6 220/ 230/ 240V) Jee / Terminal block (Screw fixing type)	


Item	Indoor air t	emperature	Outdoor air	temperature	Standards
Operation	DB	WB	DB	WB	Standards
Cooling	27°C	19°C	35°C	24°C	ISO5151-T1
Heating	20°C	_	7°C	6°C	ISO5151-H1
Heating (H2)	20°C	_	2°C	1°C	ISO5151-H2

- (2) This air-conditioner is manufactured and tested in conformity with the ISO.(3) Sound level indicates the value in an anechoic chamber. During operation these values are somewhat higher due to ambient conditions.(4) Select the breaker size according to the own national standard.


2. EXTERIOR DIMENSIONS

- (1) Indoor units
 - (a) Wall mounted type (SRK)


Models SRK20ZS-W, 25ZS-W, 35ZS-W SRK20ZS-WB, 25ZS-WB, 35ZS-WB SRK20ZS-WT, 25ZS-WT, 35ZS-WT

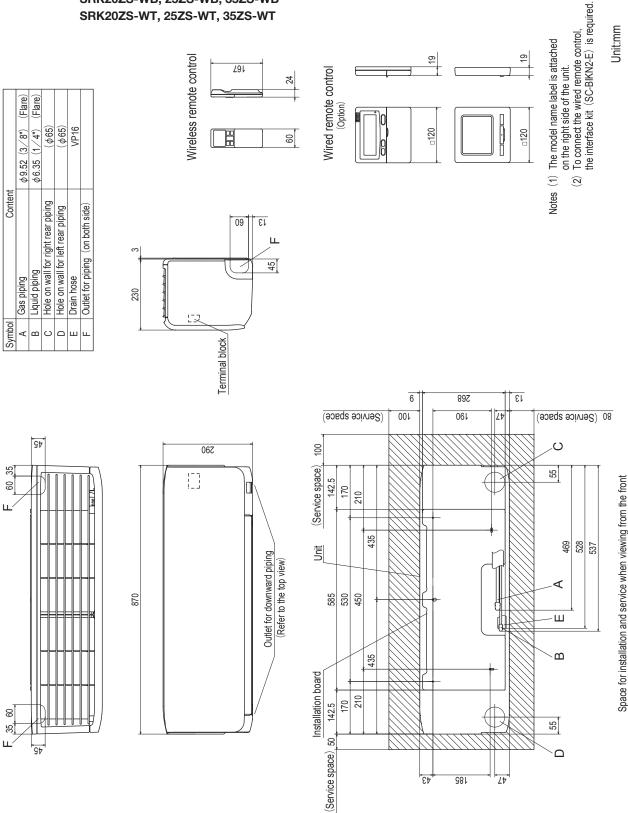

(b) Floor standing type (SRF) Models SRF25ZS-W, 35ZS-W

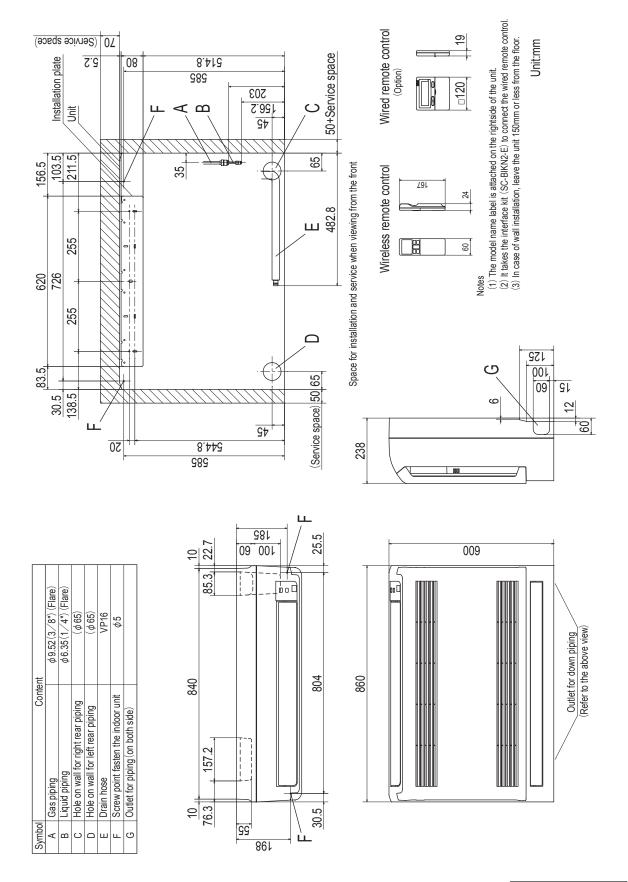


(c) Ceiling concealed type (SRR) Models SRR25ZS-W, 35ZS-W

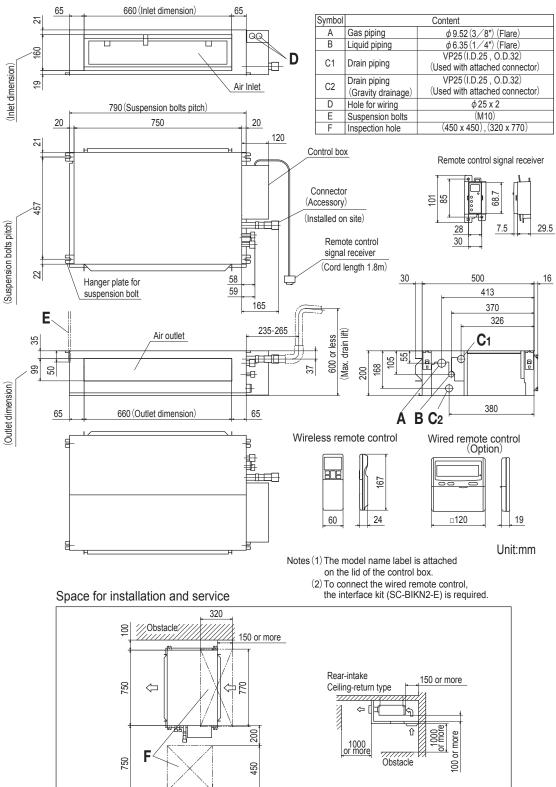

View from top side of the unit

Obstacle /////

450

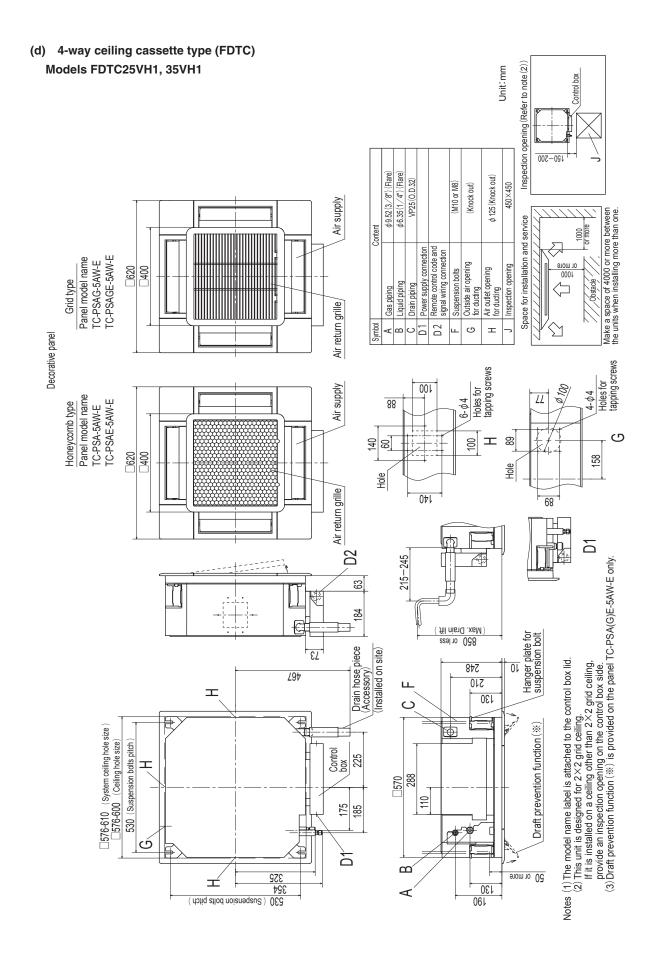

(2) Outdoor units Models SRC20ZS-WA, 25ZS-WA2, 35ZS-WA2

Notes


(1) The unit must not be surrounded by walls on the four sides.
(2) The unit must be fixed with anchor bolts. An anchor bolt must not protude more than 15mm.
(3) If the unit is installed in the location where there is a possibility of strong winds, place the unit such that the direction of air from the outlet gets perpendicular to the wind direction.


(4) Leave 200mm or more space above the unit.(5) The wall height on the outlet side should be 1200mm or less.(6) The model name label is attached on the right side of the unit.

		11111.	
	(Service)		
N da		\Box	
E .			
2	企豐		
1111111	<i></i>		

|--|

	φ9.52(3/8") (Flare)	φ6.35(1/4") (Flare)		ϕ 20 × 2places	ϕ 16 × 9places	M10-12 × 4places
Content	Service valve connection (gas side)	Service valve connection (liquid side)	Pipe/cable draw-out hole	Drain discharge hole	Drain discharge hole	Anchor bolt hole
Symbol	A	m	ပ	ō		Е

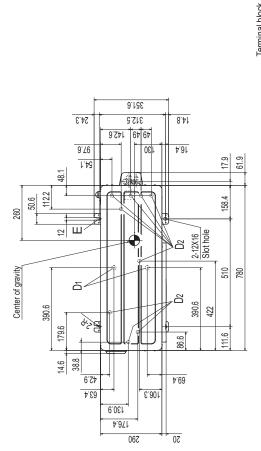

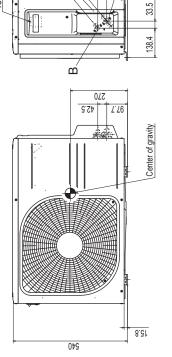



Space for installation and service when viewing from the front

(3) Remote control


(a) Wireless remote control Models SRK, SRF, SRR (Standard part)


Unit:mm

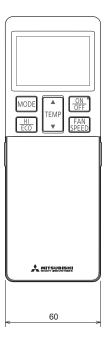

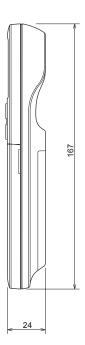

Model FDTC (Option part)

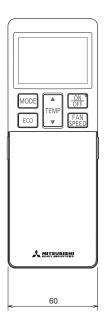

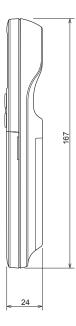


(b) Wired remote control (Option parts)


Interface kit (SC-BIKN2-E) is required to use the wired remote control.

Model RC-EX3A

Dimensions (Viewed from front)

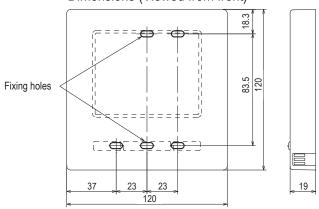

Installation space

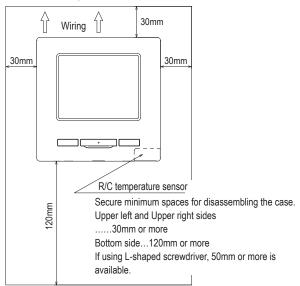

• Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
 - · Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - · Where the surface is not flat
 - · Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - · Place with high humidity where condensation occurs on the remote control
 - · Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - · Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large
- (4) When you are using the automatic grille up and down panel in the IU, you may not be able to confirm the up and down motion.
 - · Where the IU cannot be visually confirmed

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could


The influences transmitted from the remote control to medical or communication equipment co disrupt medical activities, video broadcasting or cause noise interference.

R/C cable:0.3mm² x 2 cores

When the cable length is longer than 100 m, the max size for wires used in the R/C case is $0.5~\text{mm}^2$. Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≦ 200 m	0.5 mm ² x 2 cores
≤ 300m	0.75 mm ² x 2 cores
≤ 400m	1.25 mm ² x 2 cores
≤ 600m	2.0 mm ² x 2 cores

Adapted RoHS directive

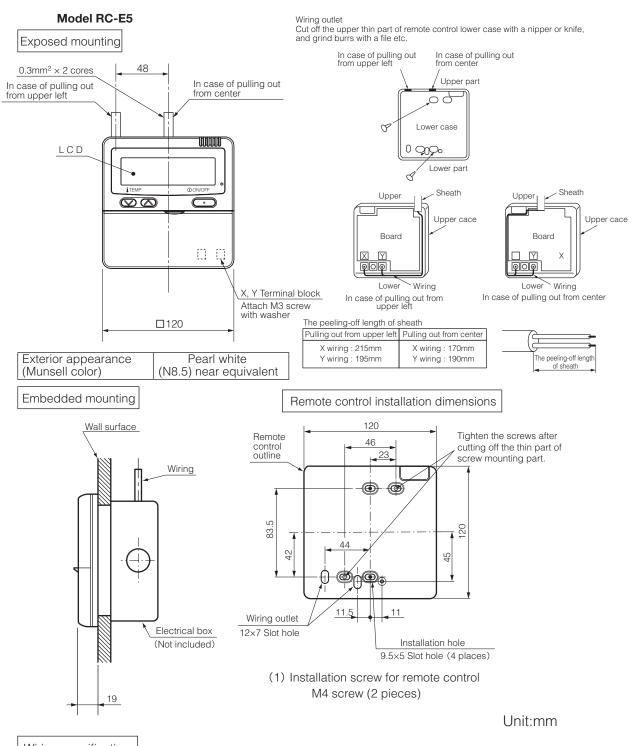

Wiring specifications

(1) If the prolongation is over 100m, change to the size below. But, wiring in the remote control case should be under 0.5mm²

But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm ² × 2 cores
Under 300m	0.75mm ² × 2 cores
Under 400m	1.25mm ² × 2 cores
Under 600m	2.0mm ² × 2 cores

PJZ000Z295


3. ELECTRICAL WIRING

- (1) Indoor units
 - (a) Wall mounted type (SRK)

 Models SRK20ZS-W, 25ZS-W, 35ZS-W

 SRK20ZS-WB, 25ZS-WB, 35ZS-WB


 SRK20ZS-WT, 25ZS-WT, 35ZS-WT

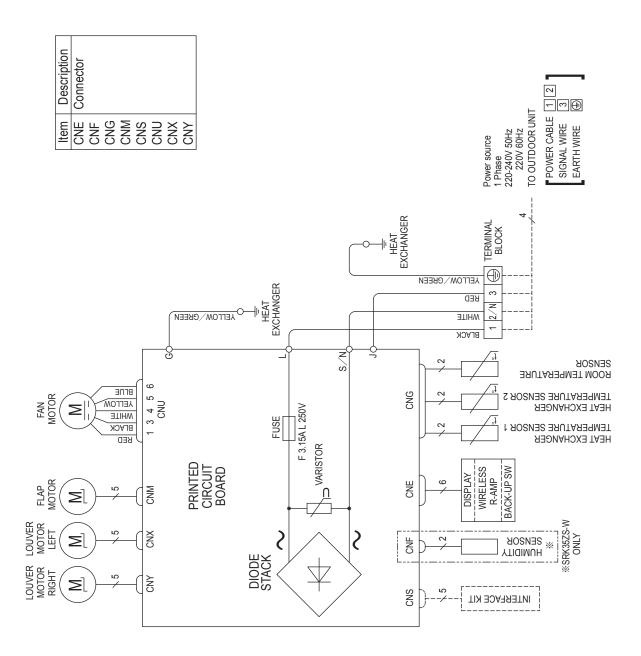

(b) Floor standing type (SRF) Models SRF25ZS-W, 35ZS-W

Varistor



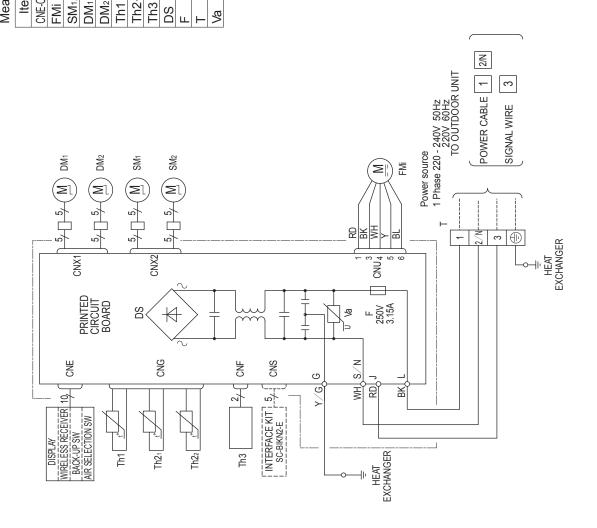

(c) Ceiling concealed type (SRR) Models SRR25ZS-W, 35ZS-W

Meaning of marks	Description	Connector				Fan motor	Room temperature sensor	Heat exchanger temperature sensor	Diode stack Fuse	Terminal block	Drain pump motor	Float switch	Varistor				_	Mark Color BK Black		RD Red		ו מוסמו סופמו
Meani	Item	CNE	ON C	CNC	S S	ΕM	Th1	Th2 _{1,2}	با 5	TB	ΜQ	FS	Va							2/N		_
																		TOWER SOURCE 1 PHASE 220-240V 50Hz	TO OUTDOOR UNIT	POWER CABLE 1	SIGNAL WIRE 3	EARTH WIRE
														9/1/0				ı	MH BK	1 2/N 3 (=)	· · ·	TO OUTDOOR UNIT
i Milling			BE MH BK BK BD	13456 CNII	2		H	PRINTED CIRCUIT BOARD	_			- w \\ \p		F2 F 3.15A L 250V		CNG	BK BK		2/2/2/] 1 1 1 1 2 1 2 2 1 2 2 3 1 2 3 1 3 1 2 3 1 3 1
					SNO	2			F 0.16A	2002	ONMO	\	/ SO		CNY	CNE	8		10	BK	DISPLAY	RECEIVER
					INTERFACE KIT					>		2		RD	Z{	FS						

(d) 4-way ceiling cassette type (FDTC) Models FDTC25VH1, 35VH1

Meaning of marks	of marks
Item	Description
AM1 - 4	Draft prevention function motor
CNB-Z	Connector
DM	Drain pump motor
F1,2	Fuse
FMi	Fan motor
FS	Float switch
SH	Humidity sensor
LED·2	Indication lamp (Green-Nomal operation)
LED•3	Indication lamp (Red-Inspection)
LM1-4	Louver motor
PIS	Motion sensor
SW2	Remote control communication address
SW5	Plural units Master / Slave setting
9MS	Model capacity setting
SW7-1	Operation check, drain pump motor test run
TB1	Terminal block (Power source) (mark)
TB2	Terminal block (Signal line) (mark)
Thc	Temperature sensor (Remote control)
Thi-A	Temperature sensor (Return air)
Thi-R1,2,3	Temperature sensor (Heat exchanger)

Color	Color marks		
Mark	Color	Mark	Color
æ	Black	HM	White
BL	Blue	YE	Yellow
BR	Brown	СУ	Gray
OR	Orange	NE/GN	Yellow/Green
RD	Red		

Remote operation input (volt-free contact) (volt-free contact) Prepare on site 2	* * * * * * * * * * * * * * * * * * * *	CNI 2 RD Thi-R1 RD CNI 2 RD Thi-R1 R1 R	CN B B B B B B B B B B B B B B B B B B B	(23 4 4 5) (23 4 4 5) (M) (M) (M) (M) (M) (M) (M) (M) (M) (M
DM TRIP ON THI A ON T			1 2 3 4 5 6 7 8 9 11 6 18 8 18 18 18 18 18 18 18 18 18 18 18 1	122345123451 M1
FMi N N N N N N N N N	Powe	SW7 SW6	2 13 14 15 16 17 16 19 20 B. Bl. B. WHWH WHWH B. Bl. B. WHWHWHWHWHWH B. Bl. B. WHWHWHWHWHWHWHWHWHWHWHWHWHWHWHWHWHWHWH	12 3 4 5 12 3 5 12 3 3 5 12 3 3 3 3 3 3 3 3 3
The line between indoor unit and outdoor unit But Power source line TIE Signal		Remote control TB2 WH		

Notes (1) —— indicates wiring on site.

(2) See the wiring diagram of outdoor unit about the line between indoor unit and outdoor unit.

(3) Use twin core cord (0.3mm²) at remote control line.


See specification sheet of remote control in case that the total length is more than 100m.

(4) Do not put remote control line alongside power source line.

(5) Draft prevention function (※ 1) is provided on the panel TC-PSA (G) E-5AW-E only.

PJF000Z516 🛦

(2) Outdoor units Models SRC20ZS-WA, 25ZS-WA2, 35ZS-WA2

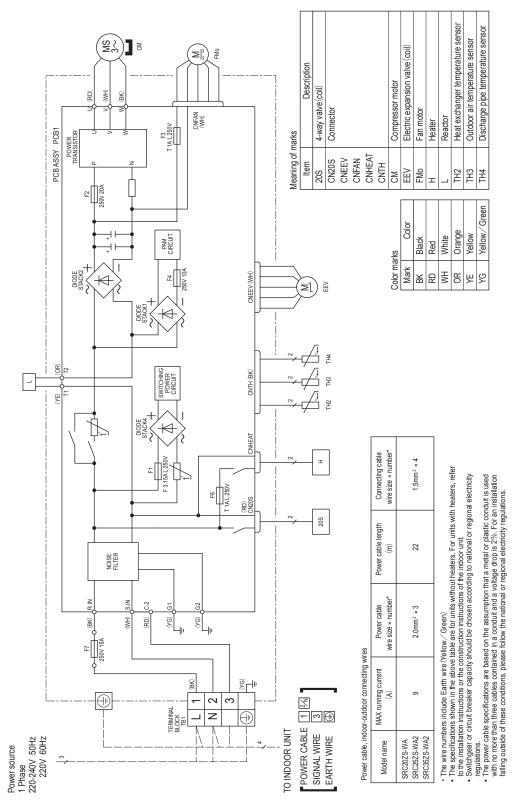


4. NOISE LEVEL

- (1) Wall mounted type (SRK)
 - (a) Sound power level Models SRK20ZS-W, -WB, -WT


	(Indoor	unit)	
l	Model	SRK	20ZS-W,WB,WT
ı	Noise	Cooling	48 dB(A)
ı	Level	Heating	50 dB(A)

Condition	IS05151 T1/H1
MODE	Rated capacity value

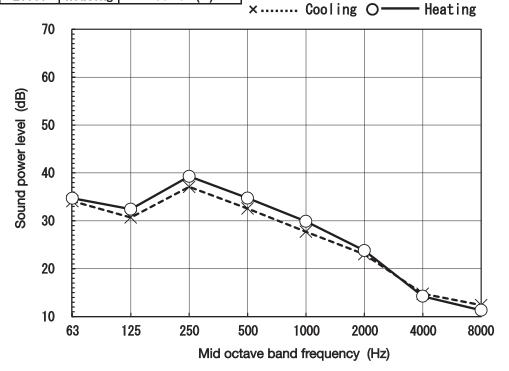

(Outdoor unit)


(00000	airr o/	
Model	S	RC20ZS-WA
Noise	Cooling	56 dB(A)
امعما	Heating	56 dR(A)

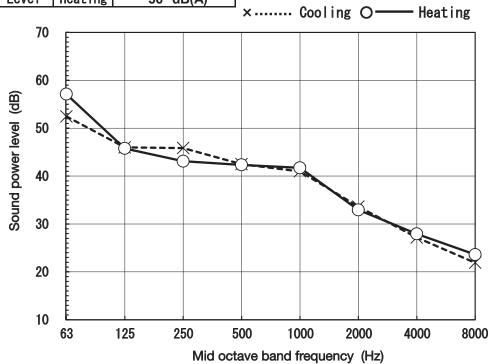

Models SRK25ZS-W, -WB, -WT


(Indoor unit) Model SRK25ZS-W,WB,WT Noise Cooling 50 dB(A)

Condition	IS05151 T1/H1
MODE	Rated capacity value

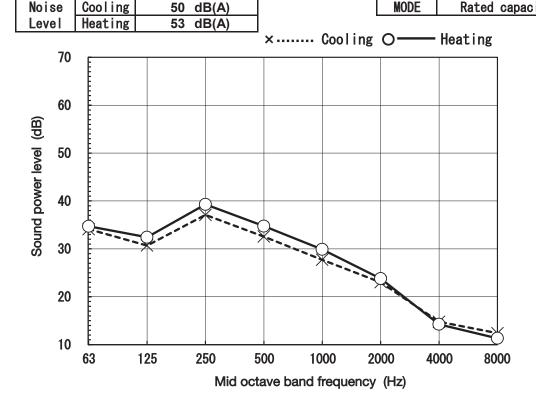

(Outdoor unit)


(00000		
Model	S	RC25ZS-WA2
Noise	Cooling	56 dB(A)
Level	Heating	58 dB(A)

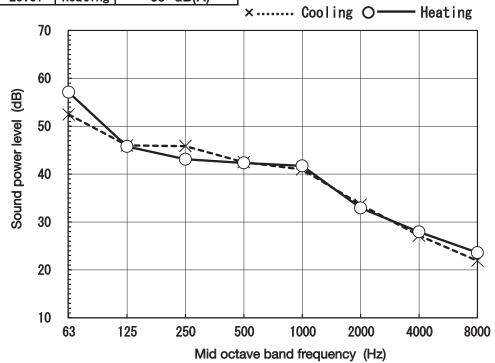

Models SRK35ZS-W, -WB, -WT


(Indoor	unit)		
Model	SRK	35ZS-W,V	VB,WT
Noise	Cooling	54	dB(A)
Level	Heating	56	dB(A)


Condition	IS05151 T1/H1
MODE	Rated capacity value

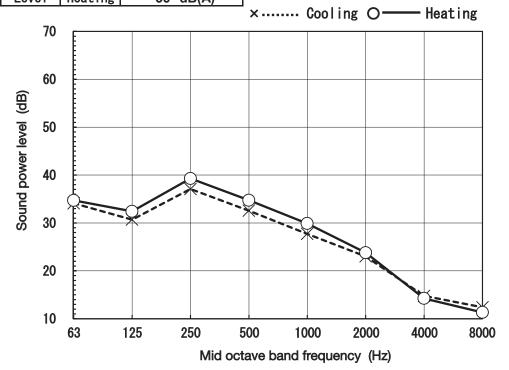

(Outdoor unit)

Model	SRC35ZS-WA2		
Noise	Cooling	61 dB(A)	
Level	Heating	61 dB(A)	

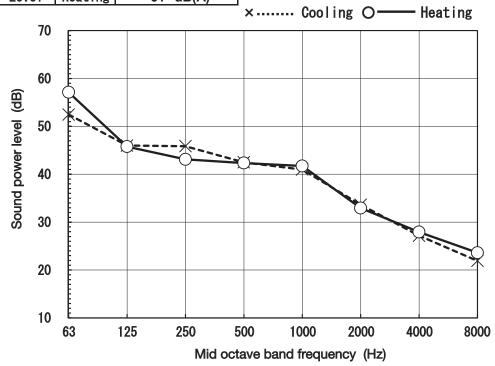

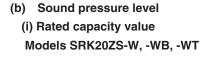


Condition	IS05151 T1/H1	
MODE	Rated capacity value	

(Indoor unit)

Model SRK20ZS-W,WB,WT

Noise Cooling 34 dB(A)
Level Heating 36 dB(A)




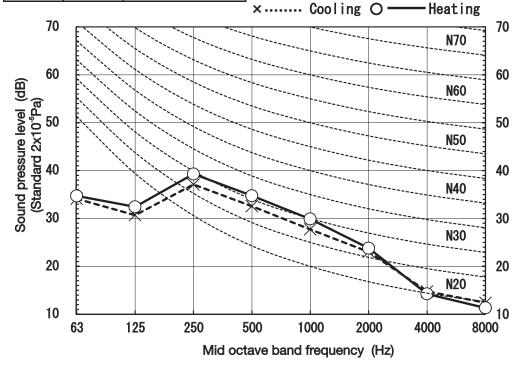


(Outdoor unit)

Model	SRC20ZS-WA	
Noise	Cooling	45 dB(A)
Level	Heating	45 dB(A)

 Mike position: at highest noise level in position as mentioned below Distance from front side 1m

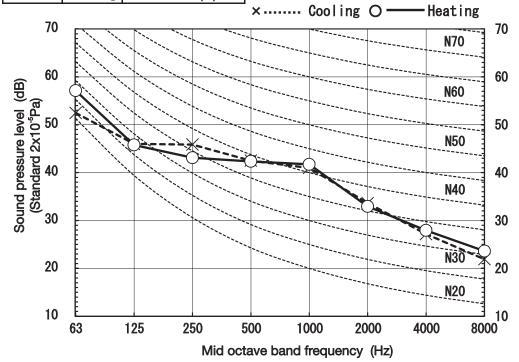


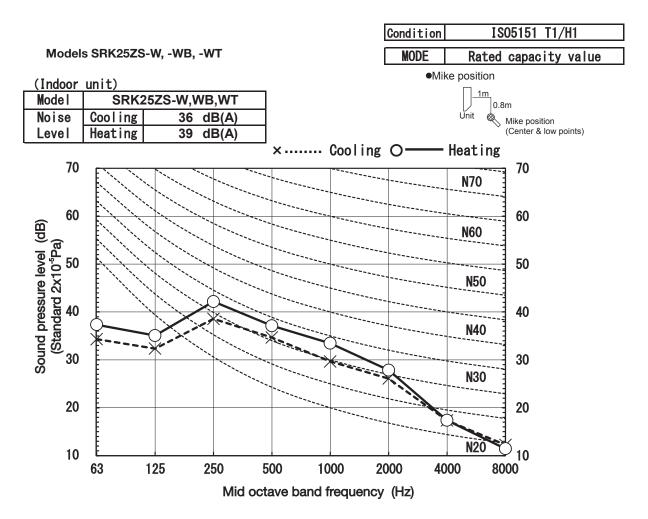


(Outdoor unit)

Model	SRC25ZS-WA2			
Noise	Cooling	46 dB(A)		
Level	Heating	46 dB(A)		

 Mike position: at highest noise level in position as mentioned below Distance from front side 1m

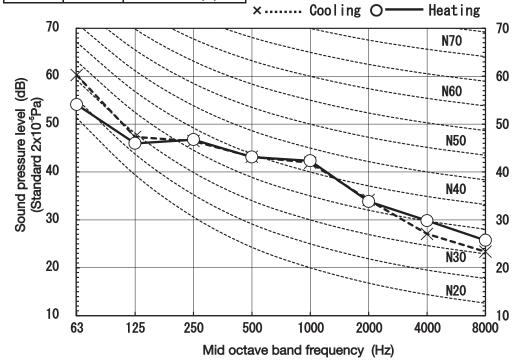


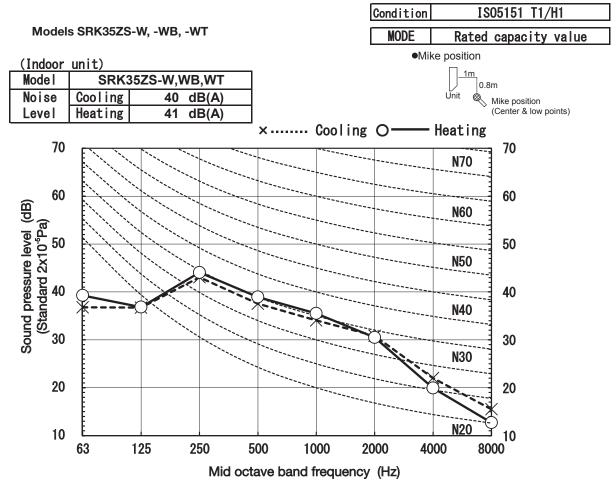



(Outdoor unit)


Model	SRC35ZS-WA2		
Noise	Cooling	50 dB(A)	
Level	Heating	48 dB(A)	


 Mike position: at highest noise level in position as mentioned below Distance from front side 1m

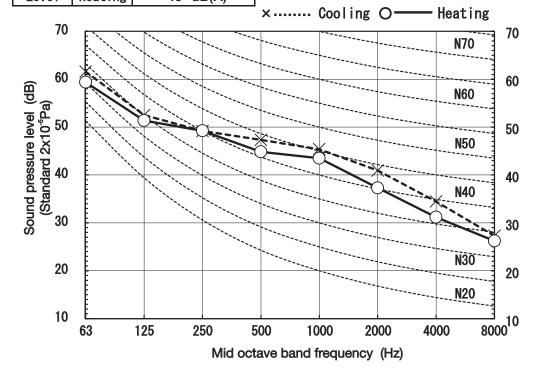


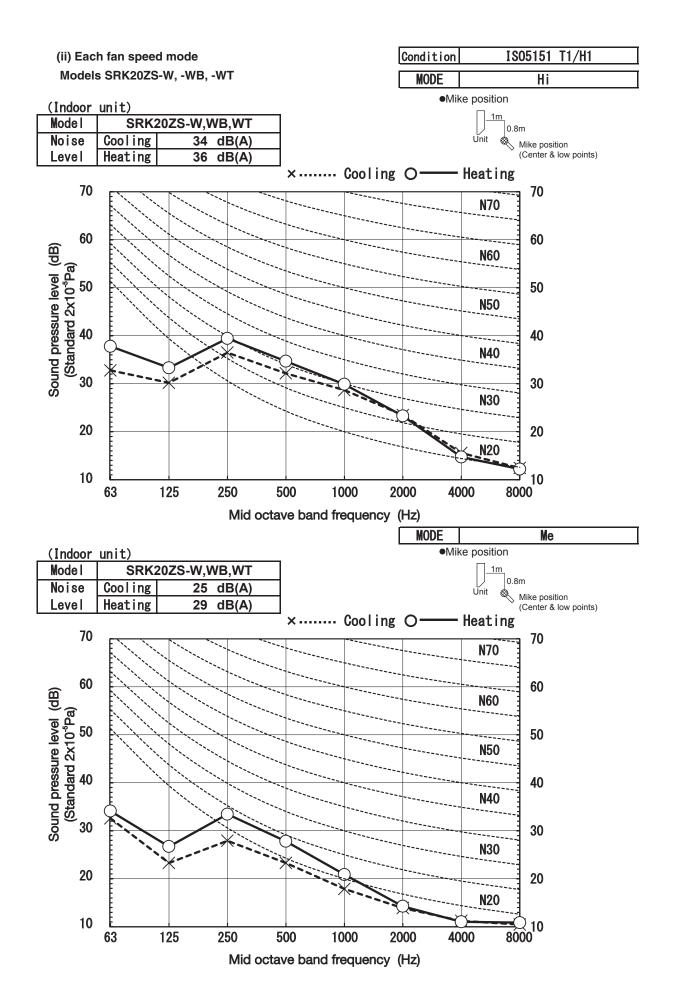


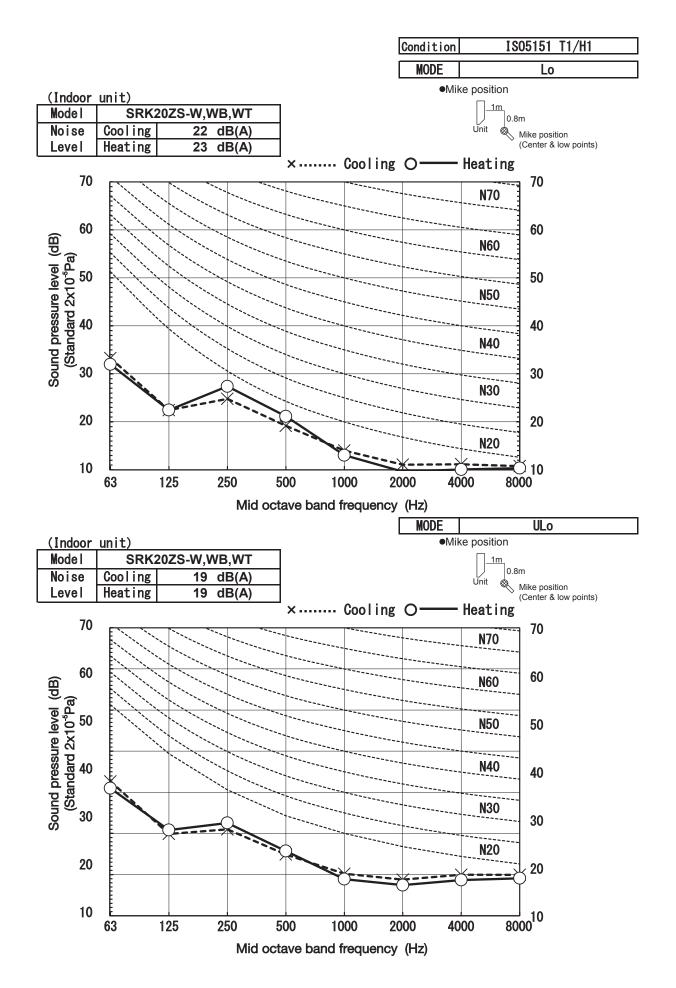

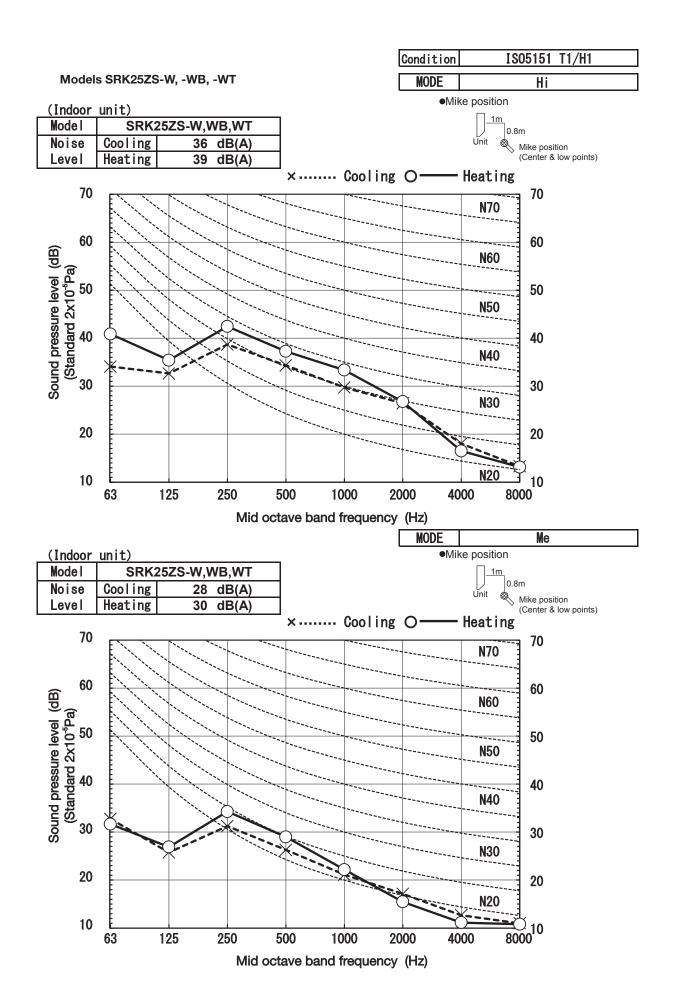

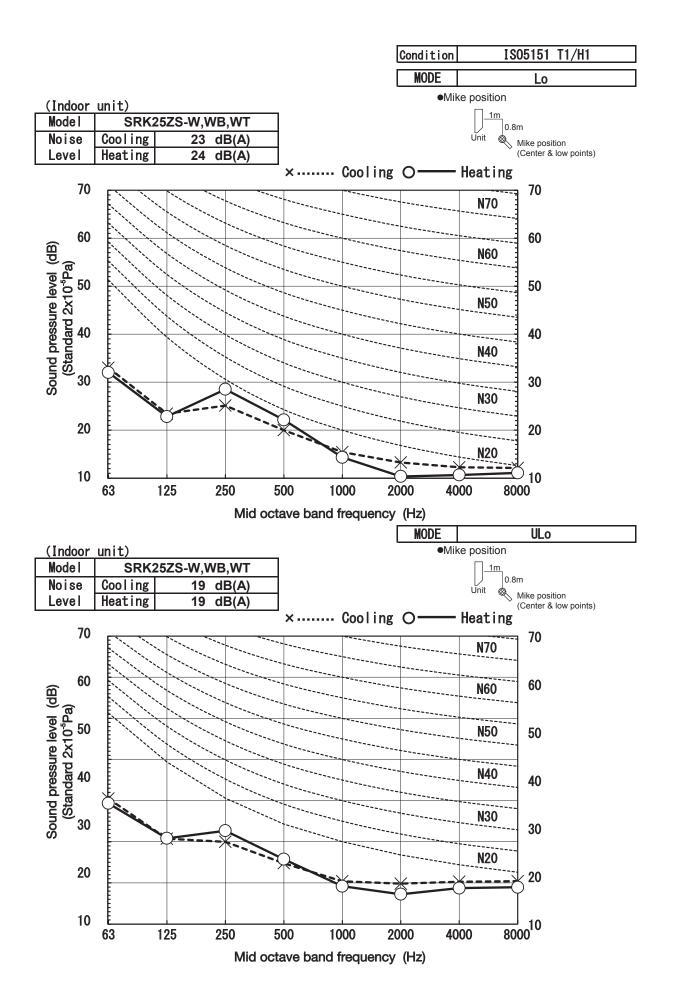

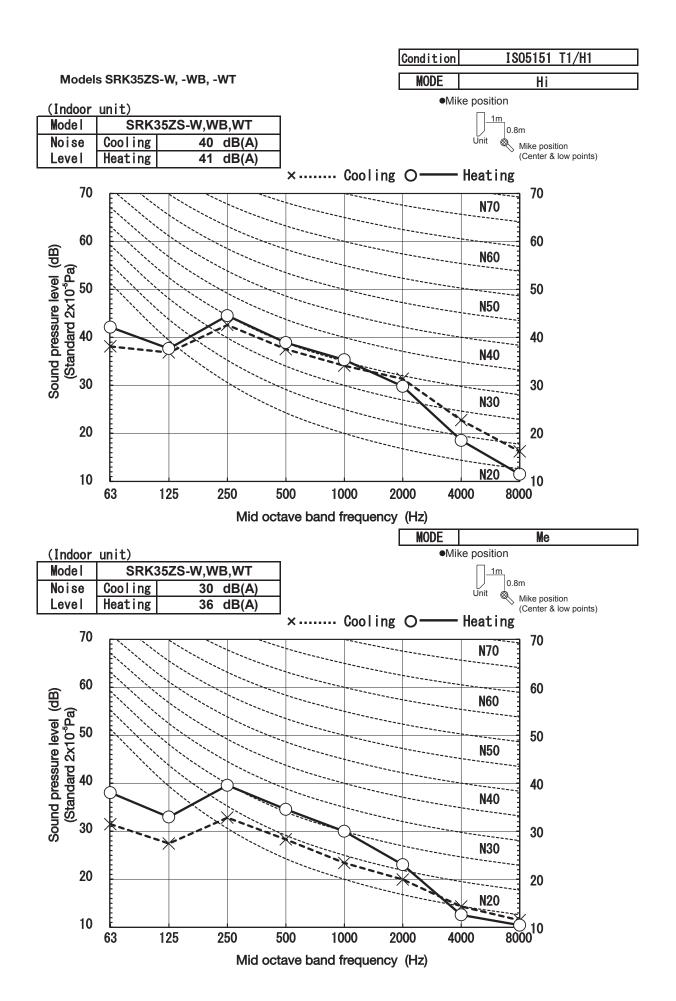

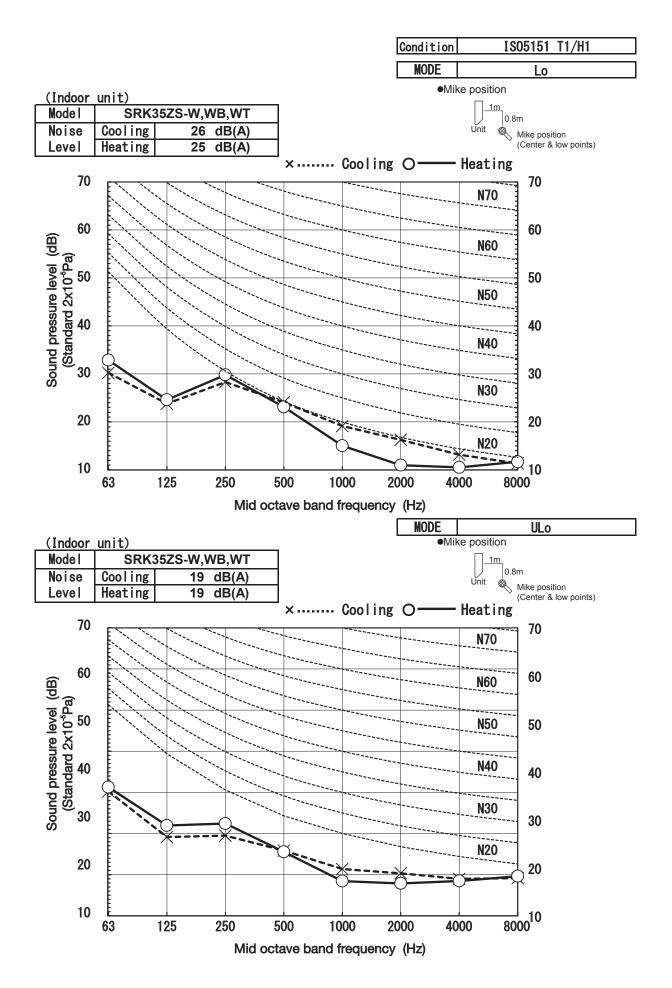

Condition IS05151 T1/H1

(Outdoor unit)

Model	SRC20ZS-WA			
Noise	Cooling	42 dB(A)		
Level	Heating	43 dB(A)		

Mike position: at highest noise level in position as mentioned below Distance from front side 1m

Noise	Cooling	42	dB(A)			HODE	T	0:1
Level	Heating	43	dB(A)	1		MODE		Silent
70			. , ,	′×	Cooling	0—	·Heating	
70							N70	70
<u>@</u> 60		1	******	************			N60	60
Sound pressure level (dB) (Standard 2x10 ⁻⁵ Pa) & & G								50
ure le 12x10	*						N50	
press ndarc 0			X-2-E				N40	40
ound (Sta		11111					1440	30
Ø .							N30	
20				******			Noo	20
10		105					N20	10
	63 125 250 500 1000 2000 4000 8000							
	Mid octave band frequency (Hz)							

(Outdoor unit)

(Ou Lucoi	(outdoor diffe)				
Model	SRC25ZS-WA2				
Noise	Cooling	42 dB(A)			
Level	Heating	43 dB(A)			

Mike position: at highest noise level in position as mentioned below Distance from front side 1m

MODE Silent ×····· Cooling Heating 70 70 N70 60 60 Sound pressure level (dB) (Standard 2x10⁻⁶Pa) **N60** 50 N50 40 **N40** 30 N30 20 20 **N20** 10 800010 63 125 250 500 1000 2000 4000 Mid octave band frequency (Hz)

Condition	IS05151	T1/H1
		,

(Outdoor unit)

Model	SRC35ZS-WA2			
Noise	Cooling	45 dB(A)		
Level	Heating	44 dB(A)		

Mike position: at highest noise level in position as mentioned below Distance from front side $\,$ 1m $\,$


Noise	Cooling	45 dB(A)		МОРЕ	0.1	. 1
Level	Heating	44 dB(A)		MODE	Sile	ent
70		. ()	× Cooling	s 0—	Heating 70	
_ 60					N70 60	
vel (dB) 7*Pa) 95					N60 50	
Sound pressure level (dB) (Standard 2x10*Pa) S S			Ŏ		N50 40	
ound pre (Stand					N40 30	
<i>တ</i> 20		******			N30 20	
10					N20 10	
63 125 250 500 1000 2000 4000 8000 Mid octave band frequency (Hz)						

(2) Floor standing type (SRF)

(a) Sound power level Model SRF25ZS-W


(Indoor unit)					
Model	SRF25ZS-W				
Noise	Cooling	50 dB(A)			
Level	Heating	51 dB(A)			

Condition	ISO5151 T1/H1
MODE	Rated canacity value (Hi)

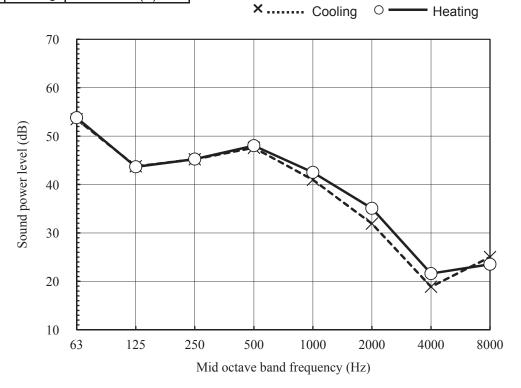

(Outdoor unit)

(Gatagor ariit)				
Model	SRC25ZS-WA2			
Noise	Cooling	59 dB(A)		
Level	Heating	60 dB(A)		

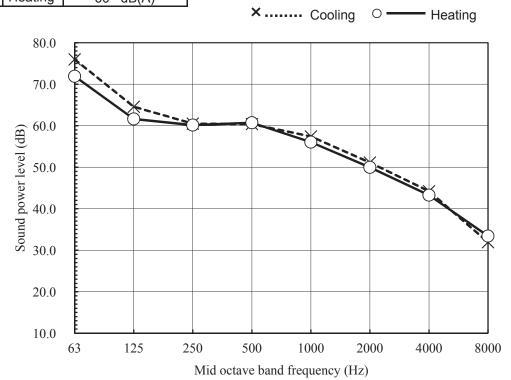


Model SRF35ZS-W


(Indoor unit)

Model	SRF35ZS-W		
Noise	Cooling	51 dB(A)	
Level	Heating	52 dB(A)	

Condition	ISO5151 T1/H1


MODE Rated capacity value (Hi)

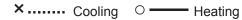

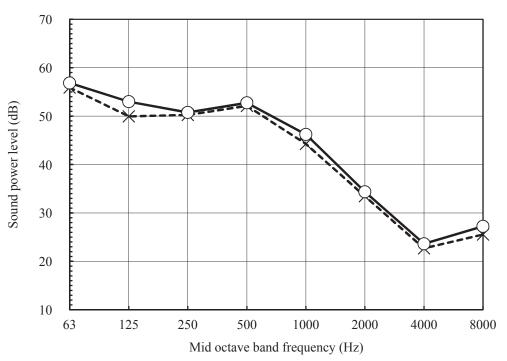

(Outdoor unit)

1001000	o	
Model	SI	RC35ZS-WA2
Noise	Cooling	63 dB(A)
Lovol	Heating	64 dB(A)

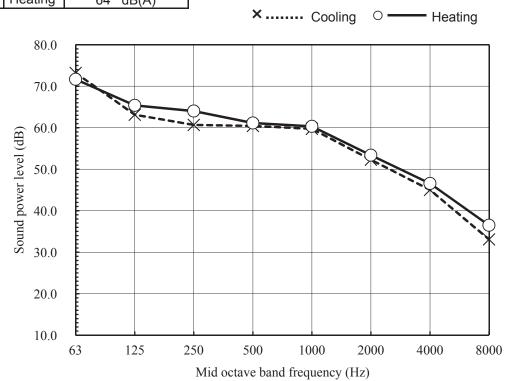

(b) Sound pressure level


(i) Rated capacity value (Hi) Model SRF25ZS-W


(Indoor unit)

`	,	
Model	(SRF25ZS-W
Noise	Cooling	38 dB(A)
Level	Heating	39 dB(A)

Condition	ISO5151 T1/H1
MODE	Rated capacity value (Hi)

Mike position

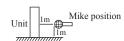


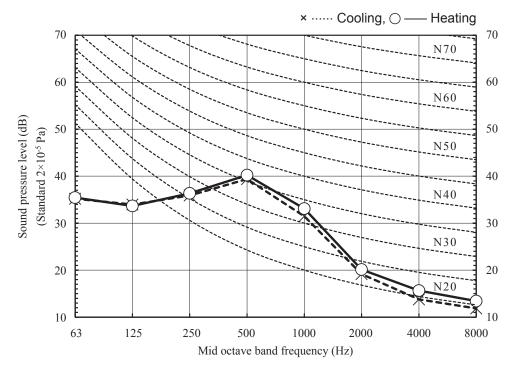


(Outdoor unit)

Model	S	RC25ZS-WA2
Noise	Cooling	45 dB(A)
Level	Heating	47 dB(A)

●Mike position: at highest noise level in position as mentioned below Distance from front side 1m

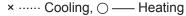

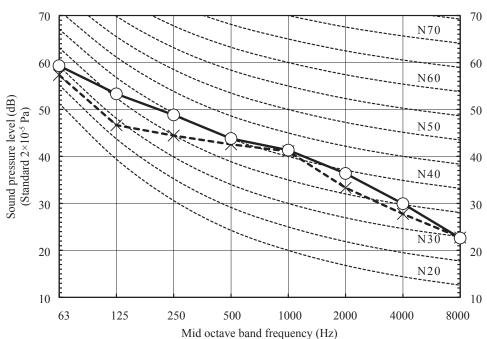

Model SRF35ZS-W


(Indoor unit)


Model		SRF35ZS-W
Noise	Cooling	40 dB(A)
Level	Heating	41 dB(A)

Condition ISO5151 T1/H1

MODE Rated capacity value (Hi)

Mike position

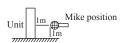


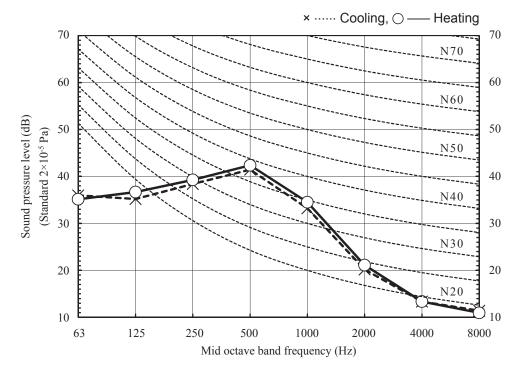


(Outdoor unit)

Model	S	RC35ZS-WA2
Noise	Cooling	50 dB(A)
Level	Heating	51 dB(A)

●Mike position: at highest noise level in position as mentioned below Distance from front side 1m

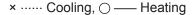


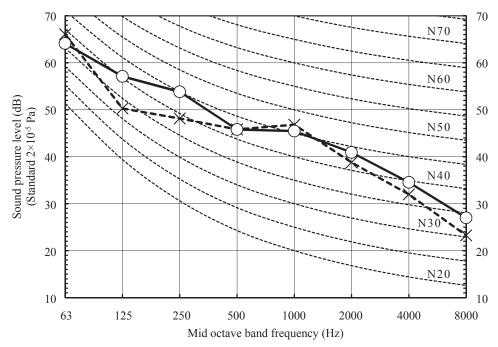


(c) Each fan speed mode Model SRF25ZS-W


(Indoor unit)

Model		SRF25ZS-W
Noise	Cooling	32 dB(A)
Level	Heating	35 dB(A)

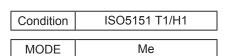

Mike position

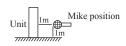

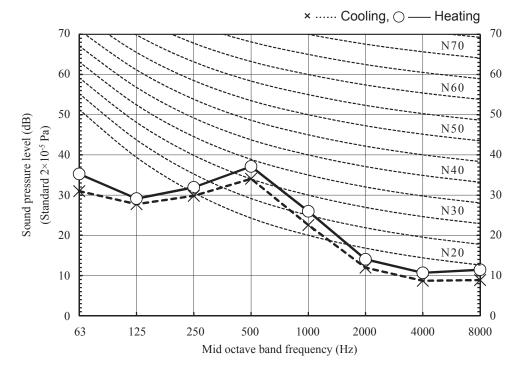


Condition ISO5151 T1/H1


MODE Lo


(Indoor unit)

Model	()	SRF25ZS-W
Noise	Cooling	29 dB(A)
Level	Heating	33 dB(A)

■Mike position

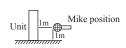


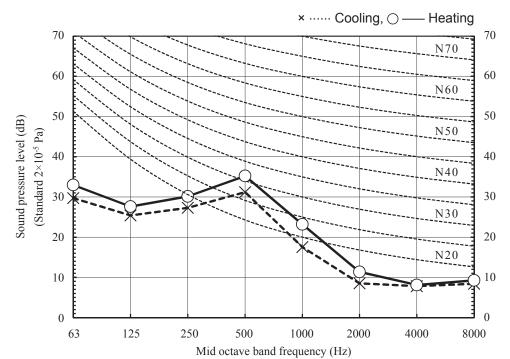

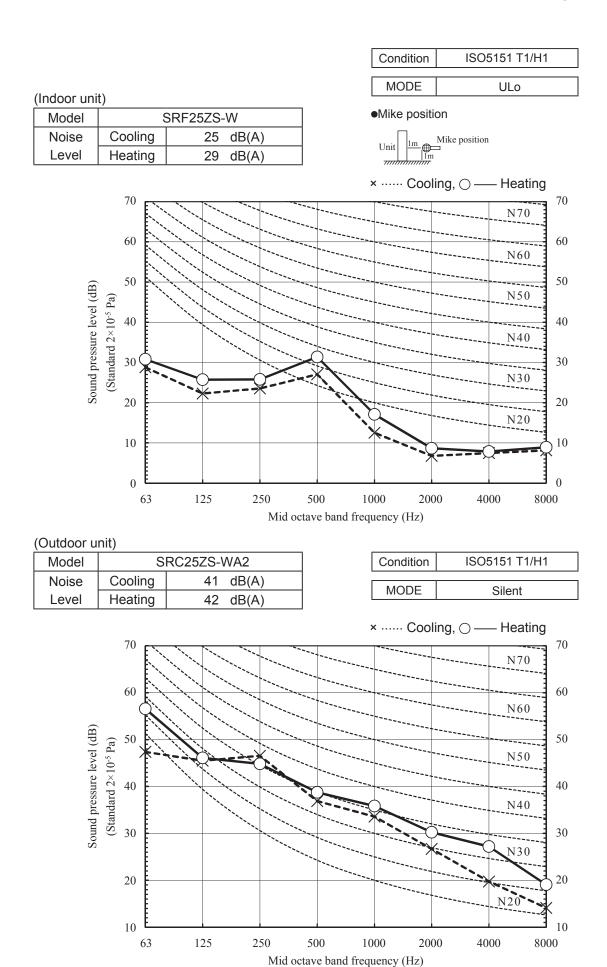

Model SRF35ZS-W ISO5151 T1/H1 Condition MODE Me (Indoor unit) ●Mike position SRF35ZS-W Model Mike position Cooling 35 dB(A) Noise Level Heating 36 dB(A) × Cooling, 🔾 - Heating 70 70 N70 60 60 N60 50 50 Sound pressure level (dB) (Standard 2×10⁻⁵ Pa) 40 40 30 30 N30 20 20 N20 10 10 0 63 125 250 500 1000 2000 4000 8000 Mid octave band frequency (Hz) Condition ISO5151 T1/H1 MODE Lo (Indoor unit) Mike position Model SRF35ZS-W Mike position Noise Cooling 33 dB(A) Level Heating 35 dB(A) × ····· Cooling, O - Heating 70 70 60 60 N60 50 50 Sound pressure level (dB) (Standard 2×10-5 Pa) N50 40 40 30 30 N30 20 20 10 10 0 0 63 125 250 500 1000 2000 4000 8000

Mid octave band frequency (Hz)

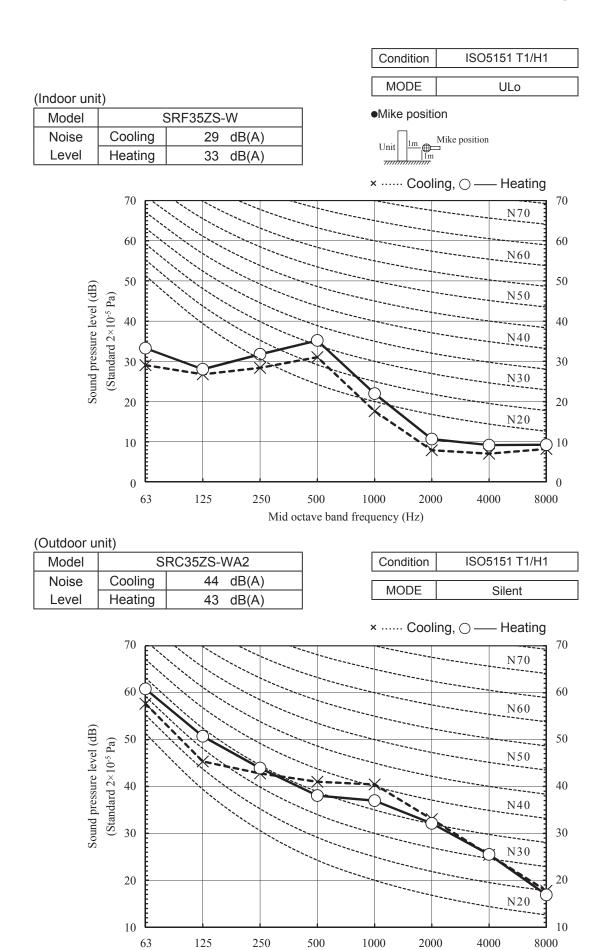

Mid octave band frequency (Hz)

(3) Ceiling concealed type (SRR)

(a) Sound power level

Model SRR25ZS-W

Non duct

(Indoor unit)


(1110001	airi c/	
Model	SRR25ZS-W	
Noise	Cooling	56 dB(A)
level	Heating	59 dB(A)

Condition ISO5151 T1/H1

MODE Rated capacity value (Hi)




×..... Cooling O — Heating

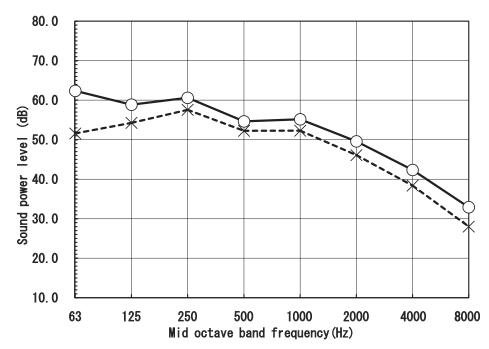

(Outdoor unit)

(Outdoor unit)			
	Model	SF	RC25ZS-WA2
	Noise	Cooling	58 dB(A)
	level	Heating	58 dB(Δ)



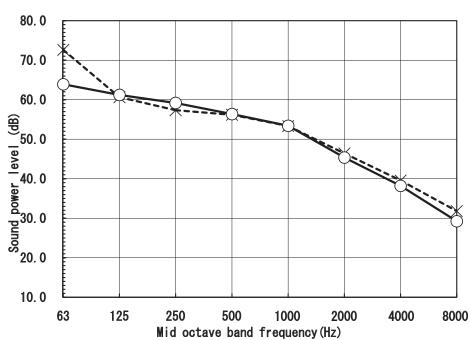



With duct

(Indoor unit)

(1114001		
Model	S	RR25ZS-W
Noise	Cooling	56 dB(A)
level	Heating	59 dB(A)

Condition ISO5151 T1/H1

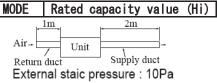

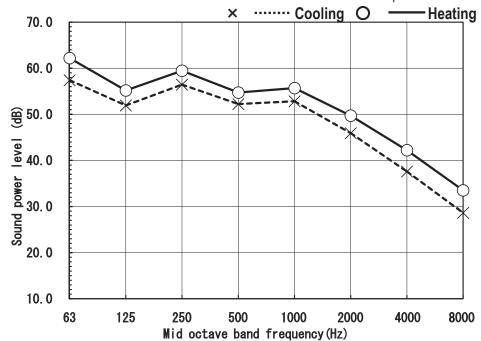

Model SRR35ZS-W

Non duct

(Indoor unit)


Model	S	RR35ZS-W
Noise	Cooling	56 dB(A)
level	Heating	58 dB(A)

Condition ISO5151 T1/H1	
-------------------------	--

MODE Rated capacity value (Hi)




×..... Cooling O—— Heating

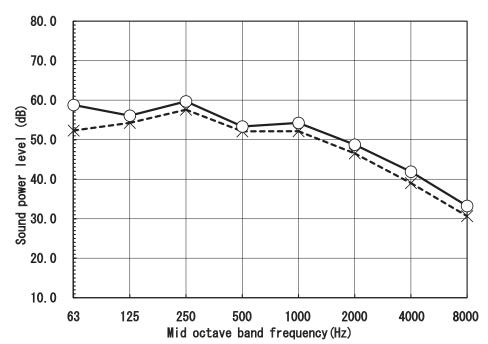

(Outdoor unit)

Model	SF	RC35ZS-WA2
Noise	Cooling	59 dB(A)
level	Heating	60 dB(A)



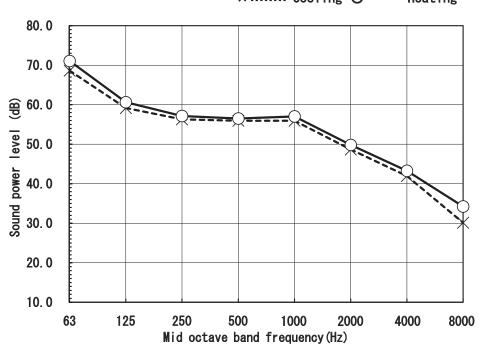


With duct

(Indoor unit)

(IIIdooi	uiii c/	
Mode I	S	RR35ZS-W
Noise	Cooling	57 dB(A)
level	Heating	60 dB(A)

Condition ISO5151 T1/H1	
-------------------------	--

Air 2m	MODE	Rated	capacity	value	(Hi)
A ir	ı-	lm,	2m		
Unit	Air +	Uni	t	-	
Return duct Supply duct	Return	duct	Supply	duct	

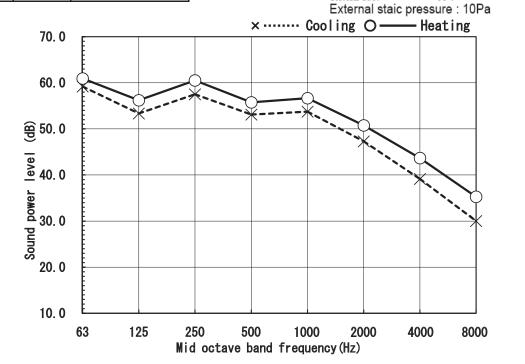

(b) Sound pressure level

(i) Rated capacity value (Hi)

Model SRR25ZS-W

•Sound pressure level ①

Sound pressure level (dB) (Standard 2×10-6Pa) 00 05 05

(Indoor unit) SRR25ZS-W Model 37 dB(A) Noise Cooling level Heating 40 dB(A)

70

60

20

10

0

63

125


250

500

Mid octave band frequency (Hz)

1000

Condition ISO5151 T1/H1			
	ndition	IS05151	T1/H1

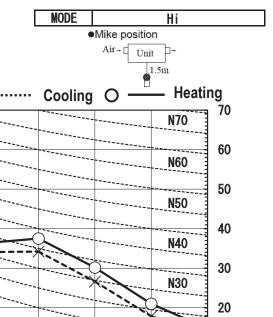

N20

4000

10


0


8000

(Uutdoor unit)		
Mode I	SF	RC25ZS-WA2
Noise	Cooling	47 dB(A)
level	Heating	47 dB(A)

× Cooling O-- Heating


2000

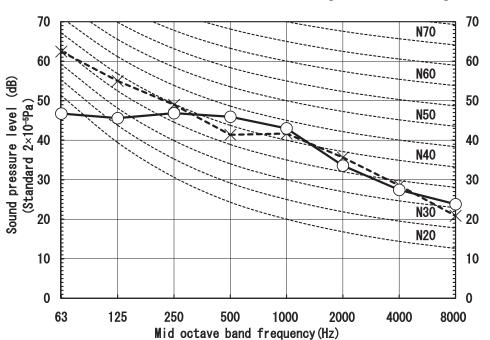


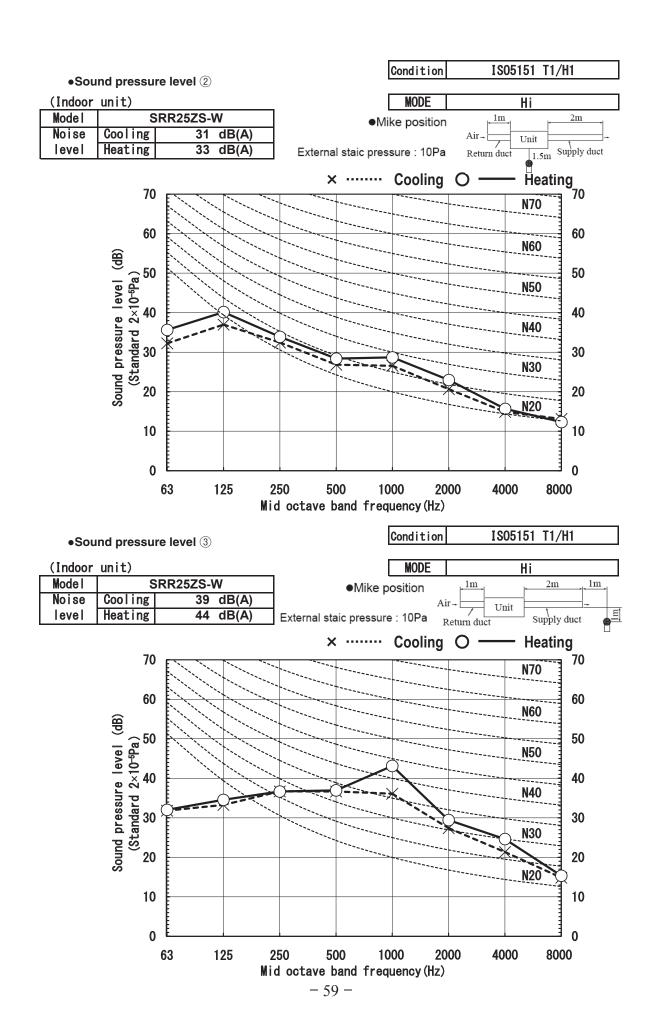



Model SRR35ZS-W Condition IS05151 T1/H1 •Sound pressure level ① MODE (Indoor unit) SRR35ZS-W Model Mike position 38 dB(A) Air - Unit Noise Cooling level Heating 42 dB(A) 1.5m Cooling Heating 70 70 N70 60 60 N60 Sound pressure level (dB) (Standard 2×10-6Pa) 6 05 05 50 N50 40 **N40** 30 N30 20 20 10 10 0 0 125 250 63 500 1000 2000 4000 8000 Mid octave band frequency (Hz)


(Outdoor unit)		
Mode I	SR	C35ZS-WA2
Noise	Cooling	50 dB(A)
اميرما	Heating	50 4B(A)

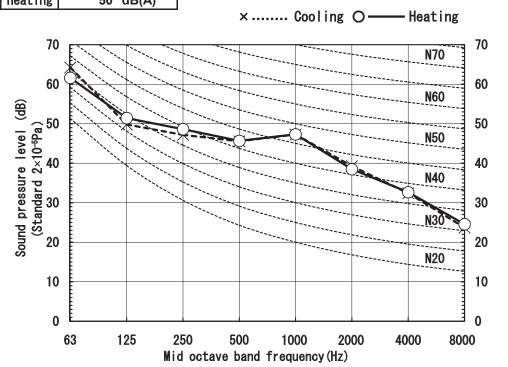


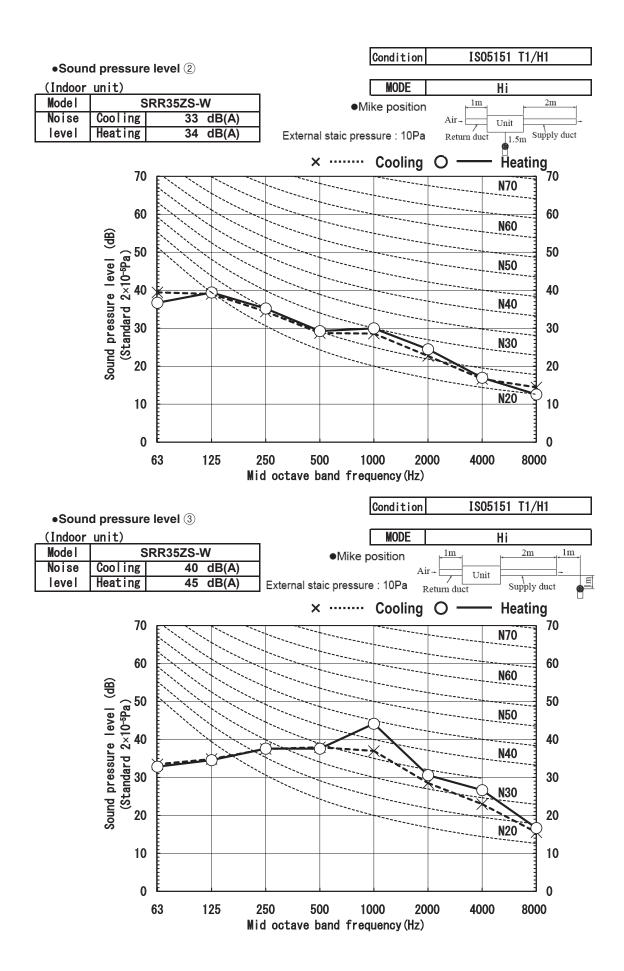


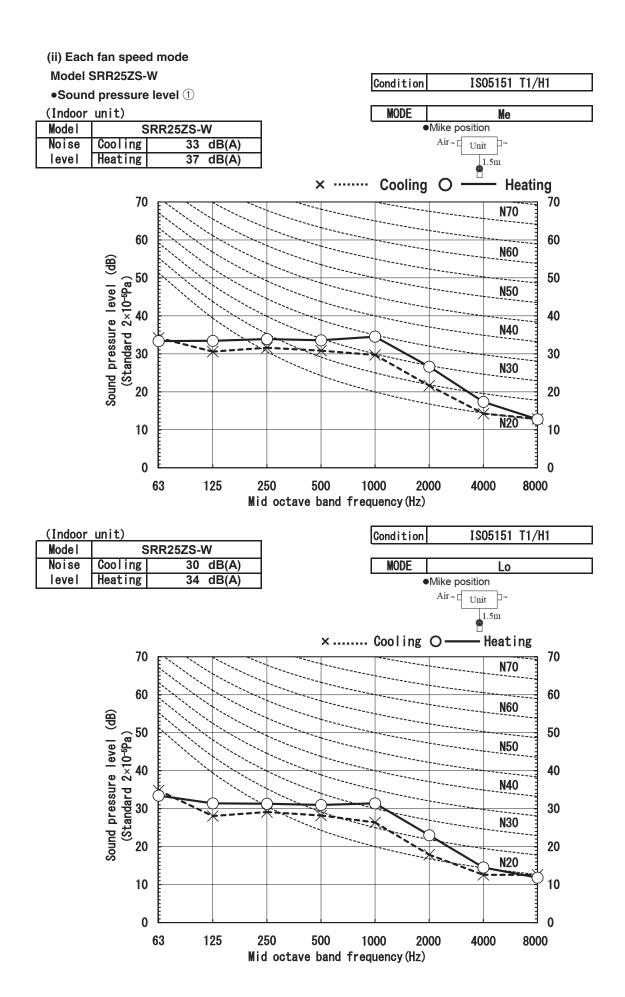


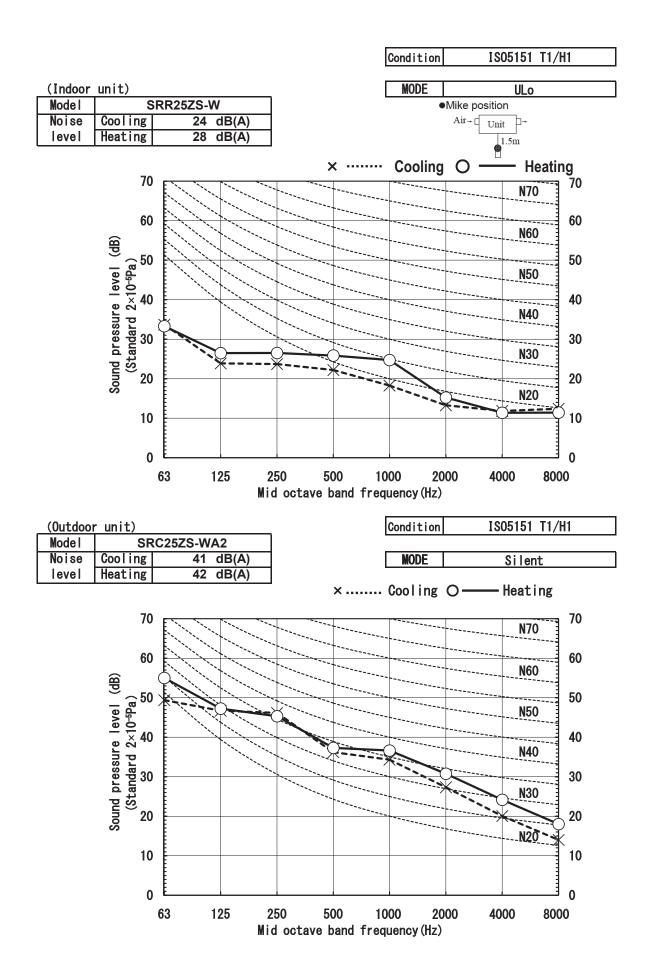


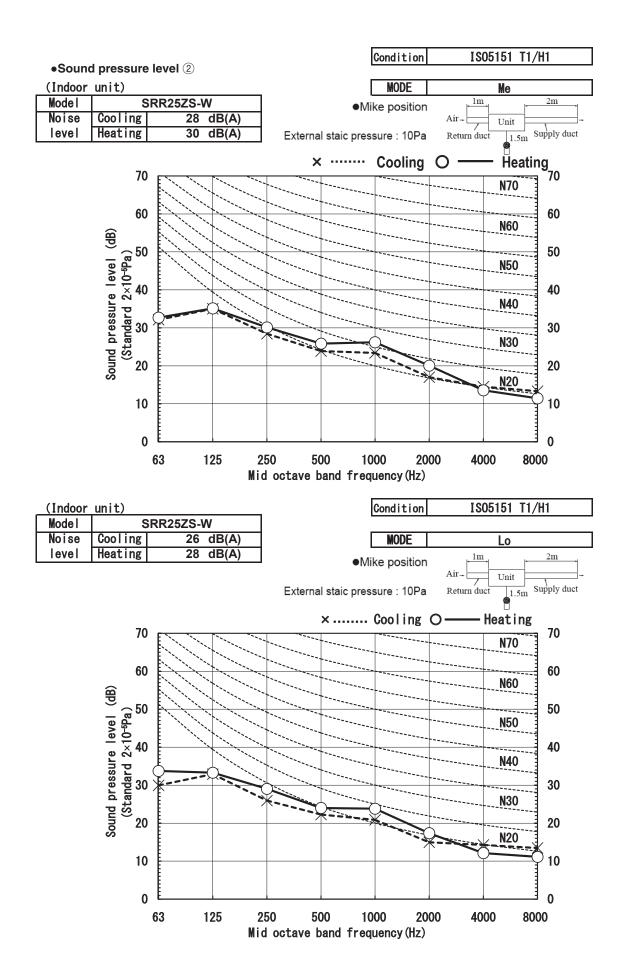


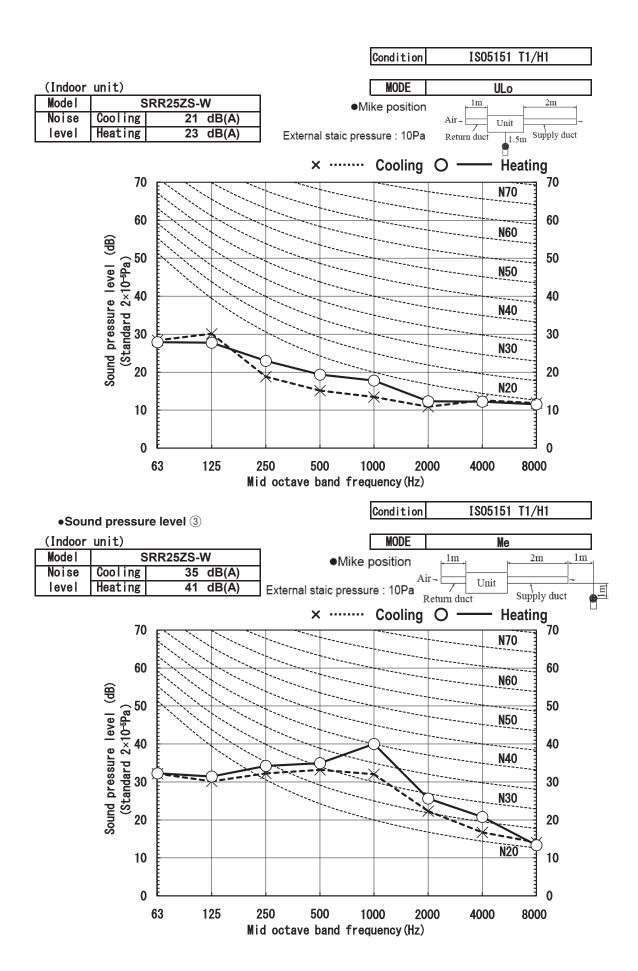


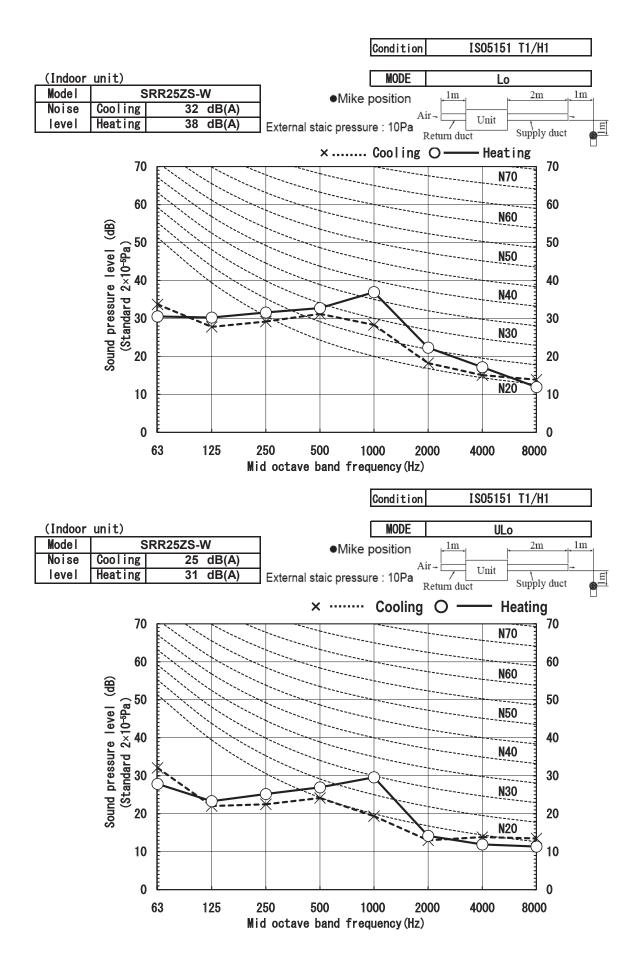


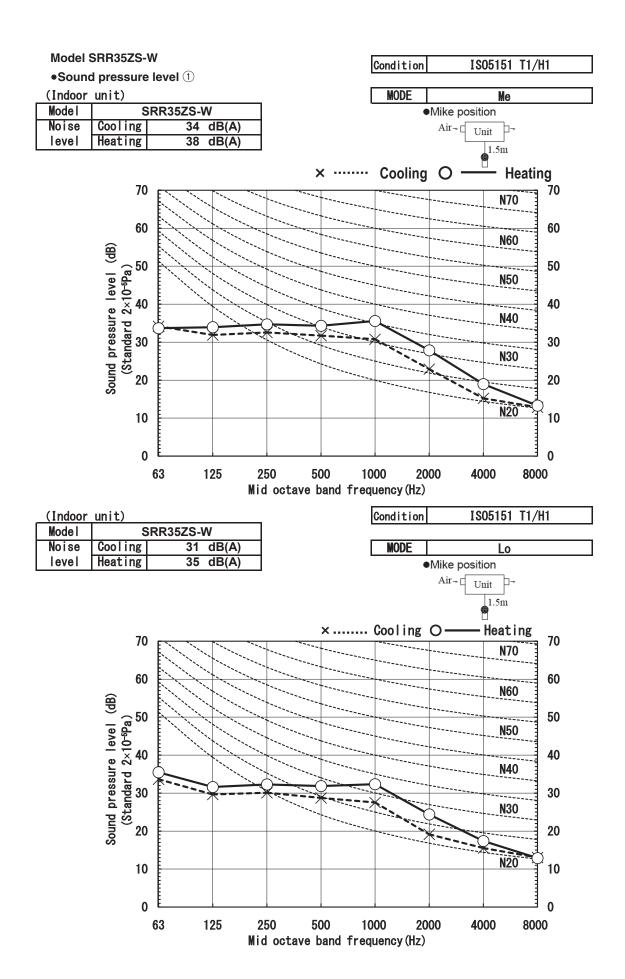

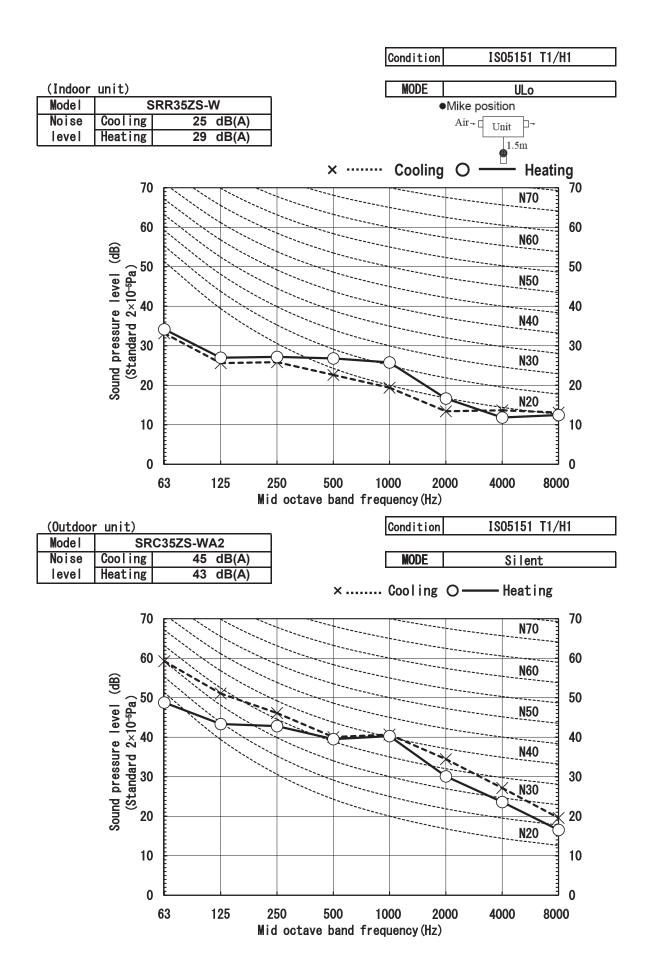

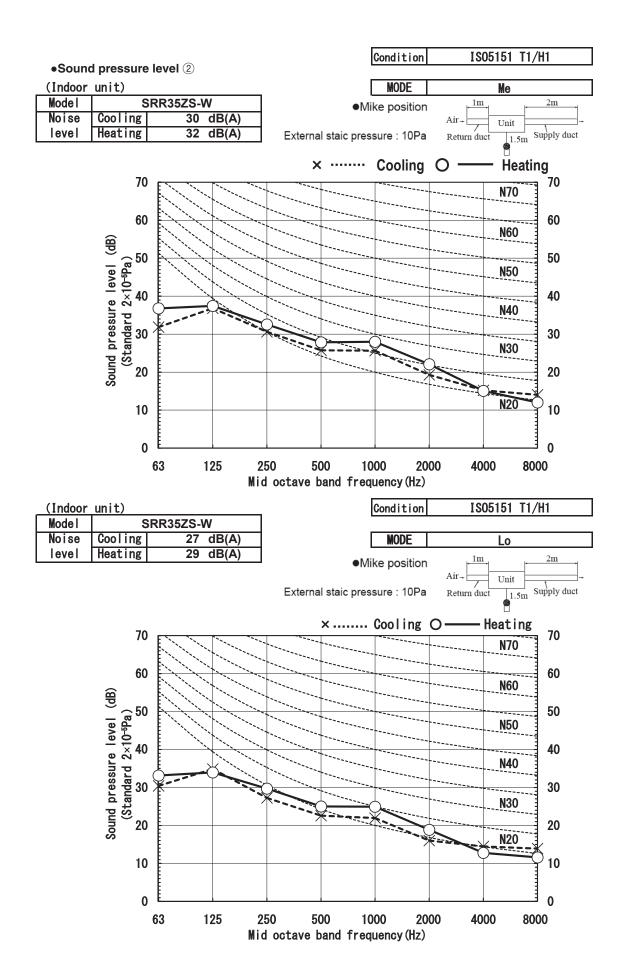

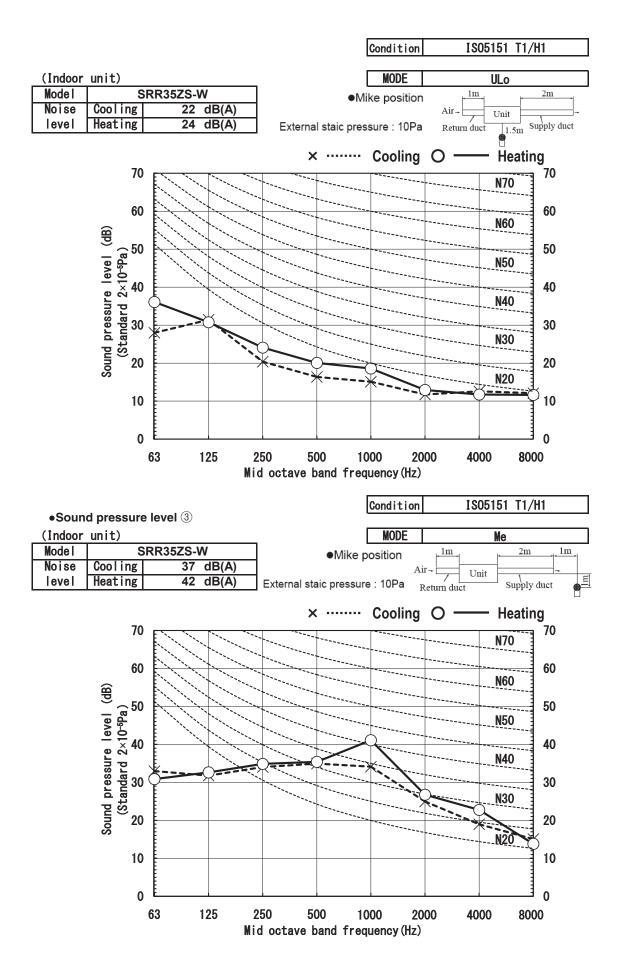

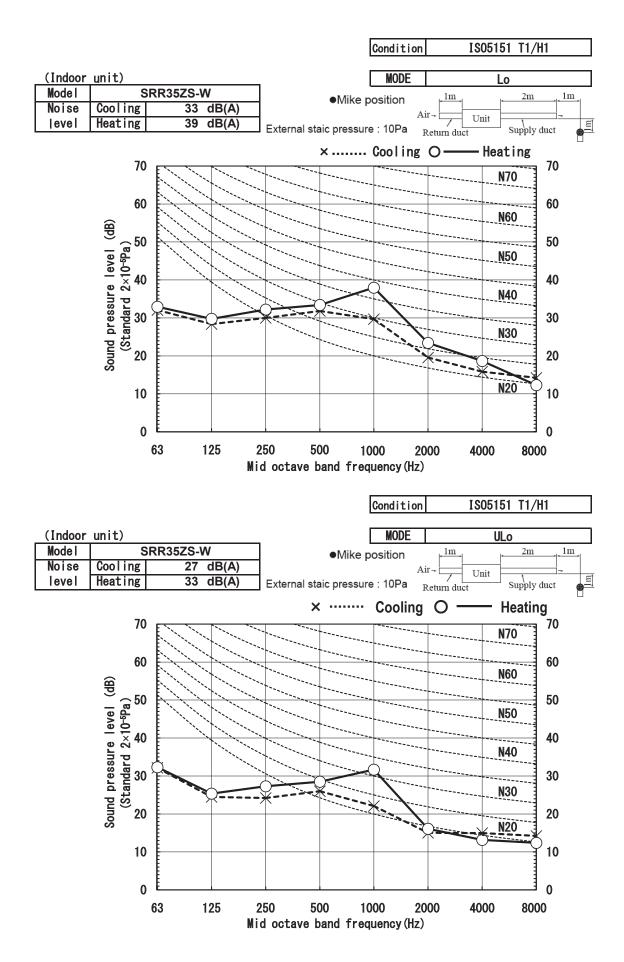

(4) 4-way ceiling cassette type (FDTC)

(a) Sound power level Model FDTC25VH1


(Indoor	unit)	
Model	F	DTC25VH1
Noise	Cooling	51 dB(A)
level	Heating	52 dB(A)

(Condition		IS05151	T1/H1	
Γ	MODE	Rated	capacity	value	(P-Hi)

×..... Cooling O — Heating Sound power level (dB) Mid octave band frequency (Hz)

10				
/ / 11	14-74	oor	uni	. + 1
		11111		
100			Q111	/

(00 2000) 4111 27								
Mode I	SRC25ZS-WA2							
Noise	Cooling	58 dB(A)						
level	Heating	59 dB(Δ)						

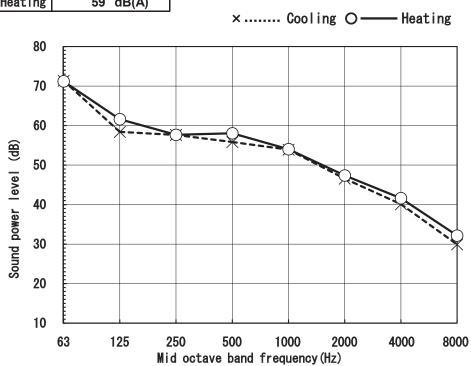

Model FDTC35VH1


 Model
 FDTC35VH1

 Noise
 Cooling
 52 dB(A)

 level
 Heating
 53 dB(A)


Condition		IS05151	T1/H1	
MODE	Rated	capacity	value	(P-Hi)

×..... Cooling O — Heating

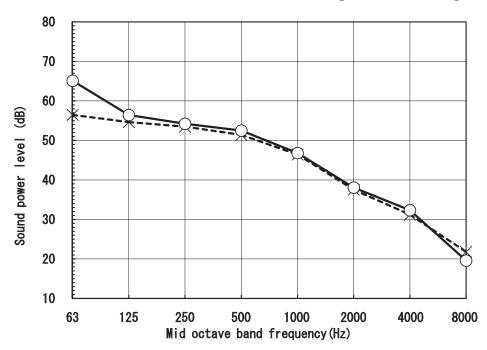

(Outdoor unit)

Model	SRC35ZS-WA2						
	Cooling	\ /					
level	Heating	62 dB(A)					

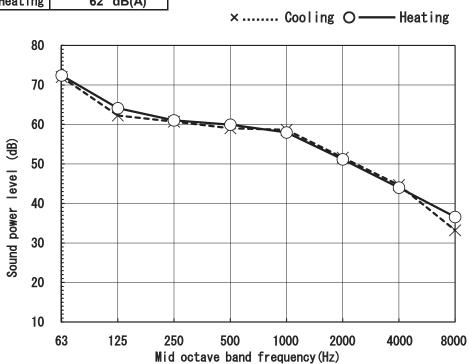

(b) Sound pressure level(i) Rated capacity valueModel FDTC25VH1

 (Indoor unit)

 Model
 FDTC25VH1

 Noise
 Cooling
 38 dB(A)

 level
 Heating
 39 dB(A)


Condition	ISO5151 T1/H1
MODE	Rated capacity value (P-Hi)
■Mike position	on
•	1.5m

×..... Cooling O-- Heating 70 70 N70 60 60 **N60** Sound pressure level (dB) (Standard 2×10-5Pa) 05 05 05 50 **N50** 40 **N40** 30 N30 20 20 N20 10 10 63 125 250 500 1000 2000 4000 8000 Mid octave band frequency (Hz)

(Outdoor unit)

Model	SRC25ZS-WA2						
Noise	Cooling	47 dB(A)					
level	Heating	47 dB(A)					



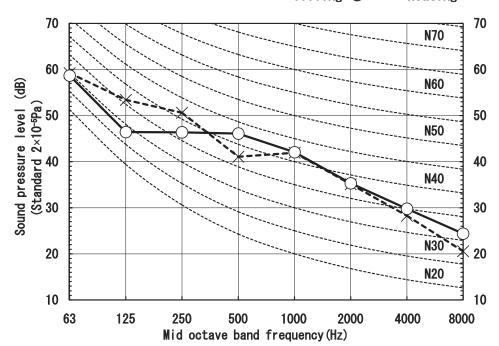

20

10

8000

Condition IS05151 T1/H1 **Model FDTC35VH1** MODE Rated capacity value (P-Hi) Mike position (Indoor unit) FDTC35VH1 Model Noise Cooling Mike position 39 dB(A) (Center & below unit) level Heating 41 dB(A) ×..... Cooling O-- Heating 70 70 N70 60 60 **N60** Sound pressure level (dB) (Standard 2×10-5Pa) 05 05 05 50 **N50** 40 **N40** 30 N30

(Outdoor unit)

(Vulluooi uiiill)									
Mode I	SF	SRC35ZS-WA2							
Noise	Cooling	50 dB(A)							
level	Heating	50 dB(A)							

20

10

63

125

250

500


Mid octave band frequency (Hz)


1000


× Cooling O — Heating


2000


4000

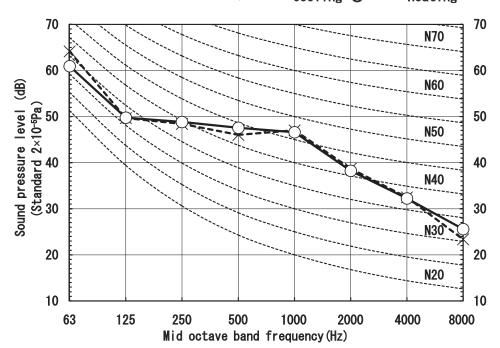

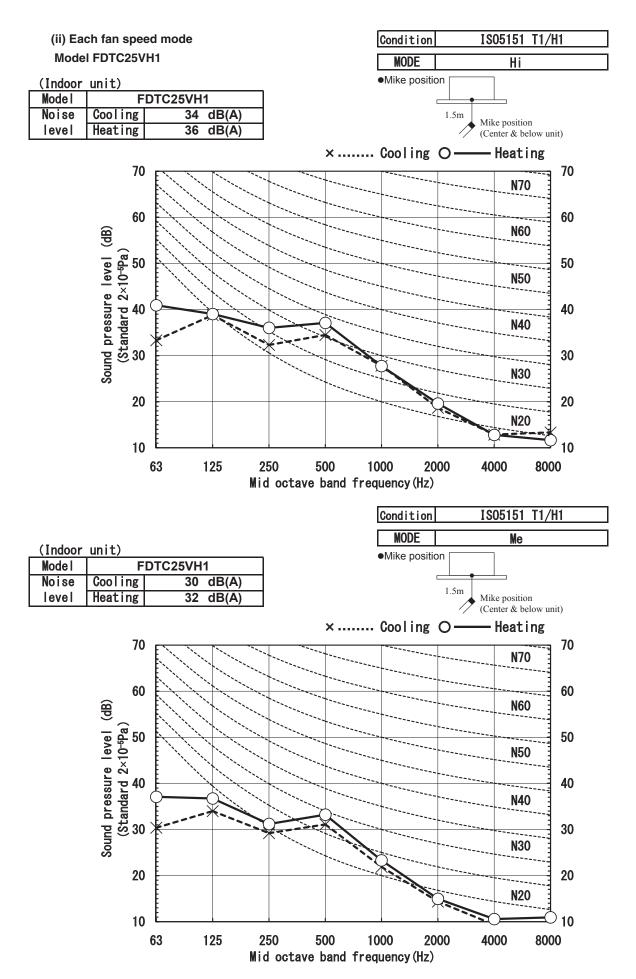

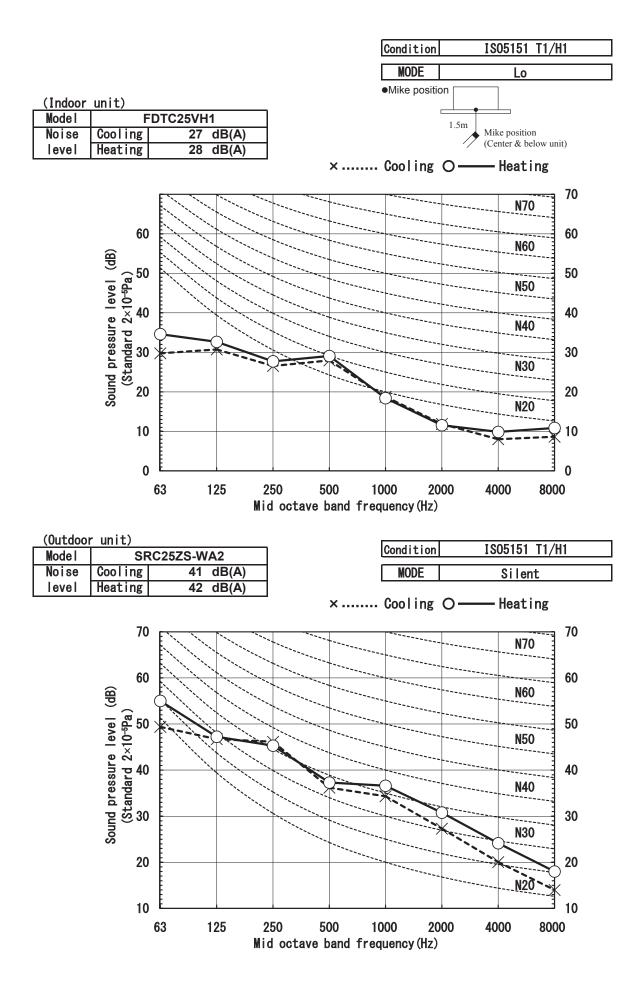


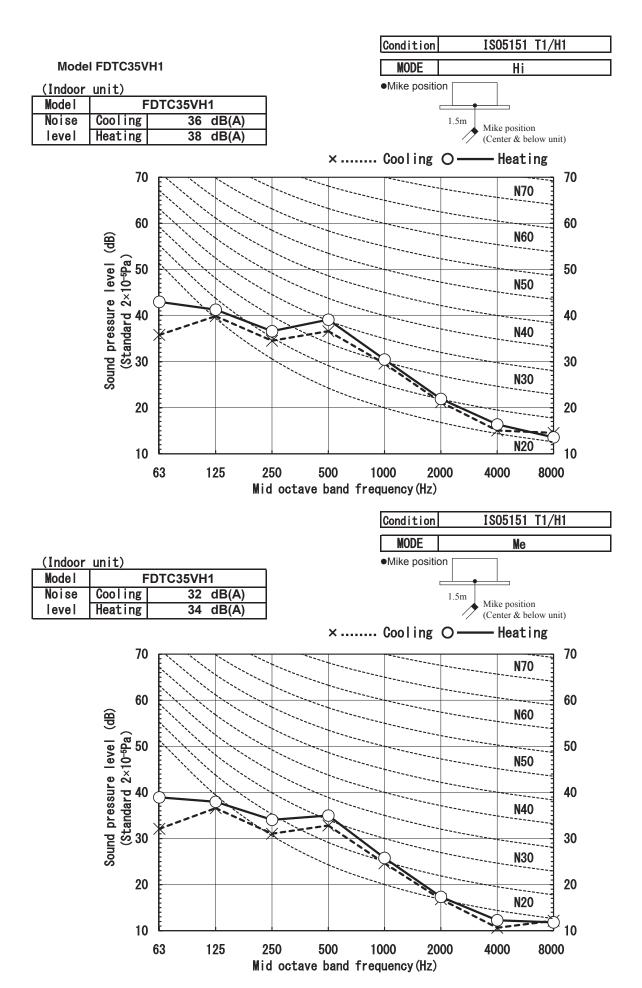


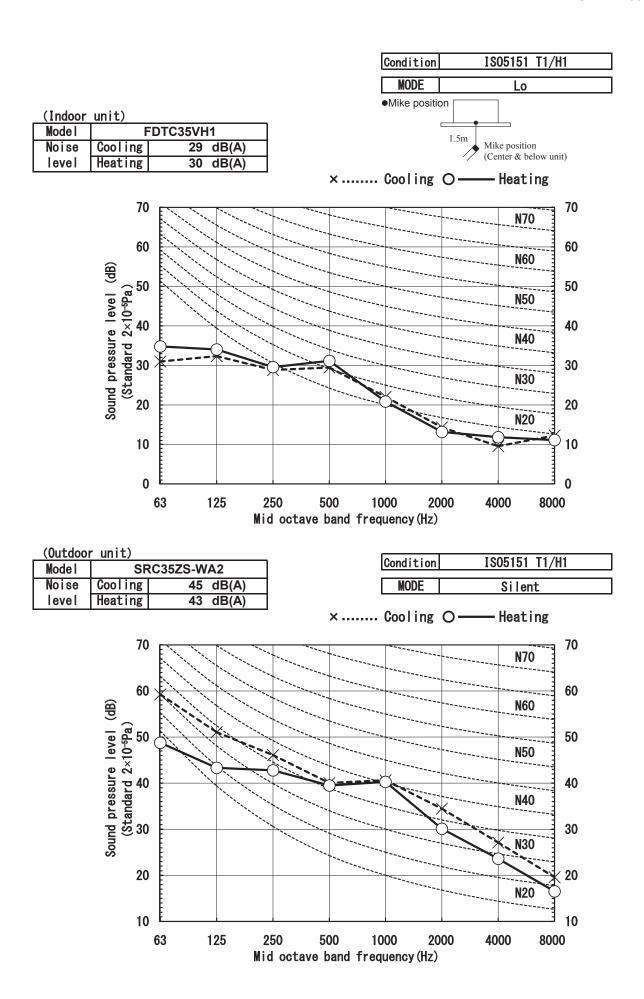


5. CHARACTERISTICS OF FAN


Model SRR25ZS-W

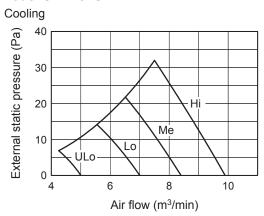

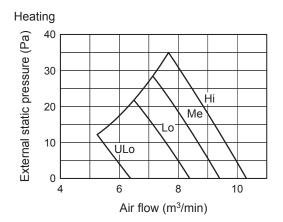


Model SRR35ZS-W

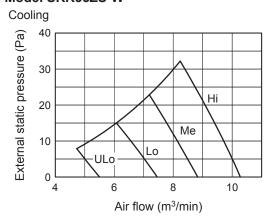

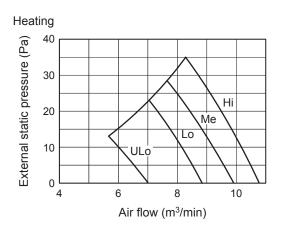


6. PIPING SYSTEM


Models SRK20ZS-W, -WB, -WT SRK25ZS-W, -WB, -WT SRK35ZS-W, -WB, -WT

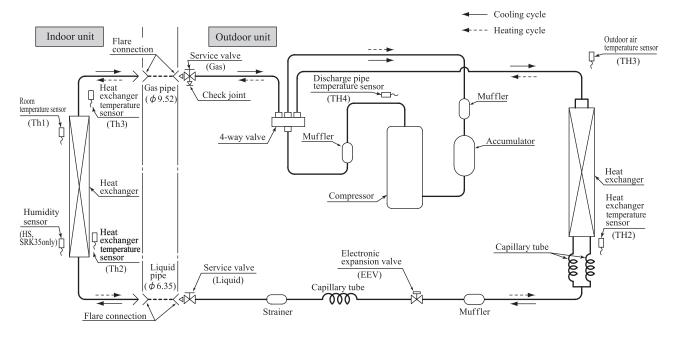


Models SRF25ZS-W, 35ZS-W

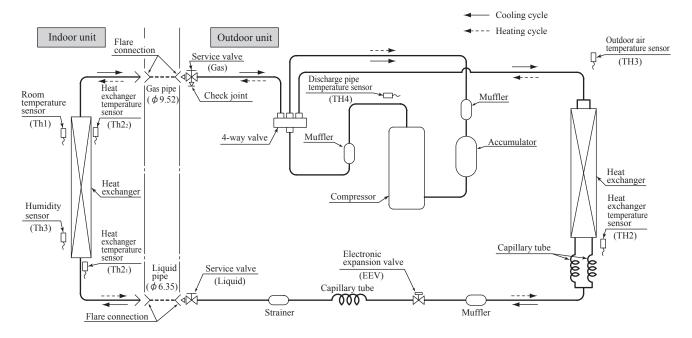

Models SRR25ZS-W, 35ZS-W

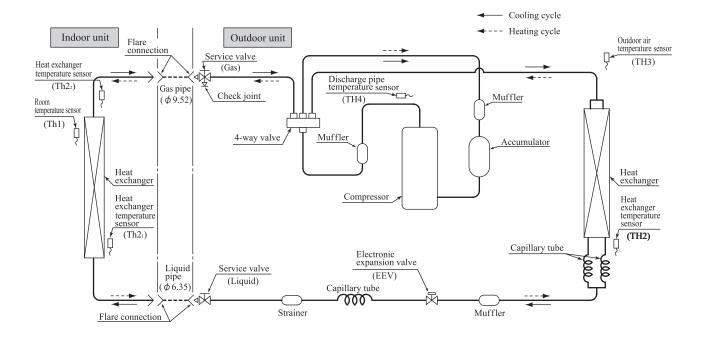

Models FDTC25VH1, 35VH1

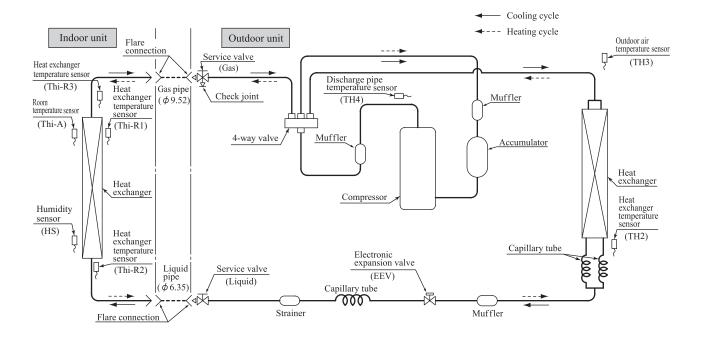

7. RANGE OF USAGE & LIMITAIONS


Model	SRK20ZS-W, -WB, -WT SRK25ZS-W, -WB, -WT SRK35ZS-W, -WB, -WT SRF25ZS-W, 35ZS-W SRR25ZS-W, 35ZS-W FDTC25VH1,FDTC35VH1
Indoor return air temperature (Upper, lower limits)	Cooling operation: Approximately 18 to 32℃ DB Heating operation: Approximately 10 to 30℃ DB (Refer to the selection chart.)
Outdoor air temperature (Upper, lower limits)	Cooling operation : Approximately -15 to 46°C DB Heating operation : Approximately -15 to 24°C DB (Refer to the selection chart.)
Refrigerant line (one way) length	Max. 20m
Vertical height difference between outdoor unit and indoor unit	Max. 10m (Outdoor unit is higher.) Max. 10m (Outdoor unit is lower.)
Power source voltage	Rating $\pm 10\%$
Voltage at starting	Min. 85% of rating
Frequency of ON-OFF cycle	Max. 4 times/h (Inching prevention 10 minutes)
ON and OFF interval	Min. 3 minutes

Selection chart

Correct the cooling and heating capacity in accordance with the conditions as follows. The net cooling and heating capacity can be obtained in the following way.

Net capacity = Capacity shown on specification \times Correction factors as follows

(1) Coefficient of cooling and heating capacity in relation to temperature

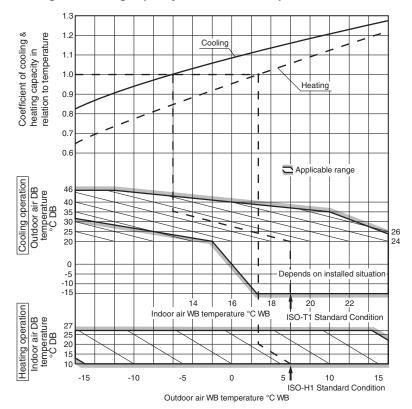

(2) Correction of cooling and heating capacity in relation to one way length of refrigerant piping

It is necessary to correct the cooling and heating capacity in relation to the one way piping length between the indoor and outdoor units.

Piping length [m]	7	10	15	20
Cooling	1.0	0.99	0.975	0.965
Heating	1.0	1.0	1.0	1.0


(3) Correction relative to frosting on outdoor heat exchanger during heating

In additions to the foregoing corrections (1), (2) the heating capacity needs to be adjusted also with respect to the frosting on the outdoor heat exchanger.

Air inlet temperature of outdoor unit in °CWB	-15	-10	-9	-7	-5	-3	-1	1	3	5 or more
Adjustment coefficient	0.95	0.95	0.94	0.93	0.91	0.88	0.86	0.87	0.92	1.00

How to obtain the cooling and heating capacity

Example : The net cooling capacity of the model SRR35ZS-W with the piping length of 15m, indoor wet-bulb temperature at 19.0° C and outdoor dry-bulb temperature 35° C is

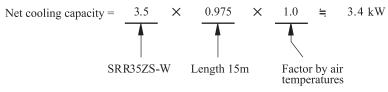

8. CAPACITY TABLES

(1) Wall mounted type (SRK)

Models SRK20ZS-W. -WB. -WT

viouei	SONNA		3- VV	, -vv	ь, -	VV I		Cooling mode Indoor air temperature DB 27°CDB 28°CDB 31°CI							(kW)
	Outdoor						Indo	or air t	empera	ture					
Air flow	air	21°0	DB	23°C	DB	26°0	CDB	27°C	DB	28°C	DB	31°0	DB	33°C	DB
All HOW	temperature	14°C	WB	16°C	WB	18°C	CWB	19°C	WB	20°C	WB	22°C	WB	24°C	WB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	2.25	2.11	2.36	2.08	2.45	2.19	2.49	2.17	2.53	2.15	2.60	2.25	2.67	2.20
	12	2.21	2.09	2.32	2.06	2.41	2.18	2.45	2.16	2.50	2.14	2.58	2.24	2.65	2.19
	14	2.17	2.06	2.28	2.04	2.38	2.17	2.42	2.15	2.47	2.12	2.55	2.23	2.62	2.18
	16	2.13	2.02	2.24	2.02	2.34	2.15	2.39	2.13	2.43	2.11	2.52	2.22	2.59	2.18
	18	2.08	1.98	2.19	2.01	2.30	2.14	2.35	2.12	2.40	2.10	2.49	2.21	2.56	2.17
	20	2.04	1.94	2.15	1.99	2.26	2.12	2.31	2.10	2.36	2.08	2.45	2.20	2.53	2.16
	22	1.99	1.89	2.10	1.97	2.22	2.10	2.28	2.09	2.32	2.07	2.42	2.19	2.50	2.14
Hi	24	1.94	1.85	2.05	1.95	2.18	2.07	2.24	2.08	2.28	2.06	2.38	2.18	2.47	2.14
9.3	26	1.90	1.80	2.01	1.91	2.14	2.03	2.20	2.06	2.24	2.04	2.35	2.17	2.43	2.13
(m³/min)	28	1.85	1.75	1.96	1.86	2.09	1.99	2.15	2.05	2.20	2.03	2.31	2.15	2.40	2.12
	30	1.79	1.70	1.90	1.81	2.05	1.94	2.11	2.01	2.16	2.01	2.27	2.14	2.36	2.09
	32	1.74	1.65	1.85	1.76	2.00	1.90	2.07	1.96	2.12	2.00	2.23	2.12	2.32	2.08
	34	1.69	1.60	1.80	1.71	1.95	1.85	2.02	1.92	2.07	1.97	2.19	2.08	2.28	2.07
	35	1.66	1.58	1.77	1.68	1.93	1.83	2.00	1.90	2.05	1.94	2.17	2.06	2.26	2.06
	36	1.63	1.55	1.74	1.65	1.90	1.81	1.98	1.88	2.02	1.92	2.15	2.04	2.24	2.05
	38	1.58	1.50	1.68	1.60	1.85	1.76	1.93	1.83	1.98	1.88	2.11	2.00	2.20	2.04
	39	1.55	1.47	1.66	1.57	1.83	1.74	1.91	1.81	1.95	1.85	2.08	1.98	2.18	2.04

		Heating mo	ode (HC)			(kW)						
Air flow	Outdoor air temperature		Indoo	or air temper	ature							
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB						
	-15	1.66	1.63	1.59	1.55	1.52						
	-10 1.88 1.85 1.82 1.78 1.74											
	-5	2.04	2.01	1.97	1.94	1.91						
Hi	0	2.13	2.10	2.07	2.04	2.01						
10.0	5	2.72	2.69	2.67	2.62	2.58						
(m³/min)	6	2.76	2.73	2.70	2.67	2.63						
	10	2.94	2.91	2.89	2.85	2.82						
	15	3.20	3.17	3.14	3.11	3.08						
	20	3.43	3.41	3.39	3.35	3.32						

Models SRK25ZS-W. -WB. -WT Cooling mode (kW)

wodei	S SHIVE		3- VV	, -vv	ь, -	AA I				Coolin	g moae	•			(KVV)
	Outdoor						Indo	or air t	empera	ture					\neg
A	air	21°0	CDB	23°0	CDB	26°0	CDB	27°C	CDB	28°0	CDB	31°0	CDB	33°C	CDB
Air flow	temperature	14°C	CWB	16°C	WB	18°C	CWB	19°C	CWB	20°C	CWB	22°C	WB	24°C	CWB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	2.82	2.45	2.95	2.41	3.06	2.54	3.11	2.51	3.16	2.48	3.26	2.59	3.34	2.52
	12	2.77	2.43	2.90	2.39	3.01	2.52	3.07	2.49	3.12	2.47	3.22	2.58	3.31	2.51
	14	2.71	2.41	2.85	2.37	2.97	2.50	3.03	2.48	3.08	2.45	3.18	2.56	3.28	2.50
	16	2.66	2.38	2.80	2.35	2.92	2.49	2.98	2.46	3.04	2.44	3.15	2.55	3.24	2.49
	18	2.60	2.36	2.74	2.33	2.88	2.47	2.94	2.45	2.99	2.42	3.11	2.54	3.20	2.48
	20	2.55	2.33	2.68	2.30	2.83	2.45	2.89	2.43	2.95	2.40	3.07	2.52	3.17	2.47
	22	2.49	2.31	2.63	2.28	2.78	2.42	2.84	2.41	2.90	2.38	3.02	2.51	3.13	2.45
Hi	24	2.43	2.28	2.57	2.26	2.72	2.40	2.80	2.39	2.85	2.37	2.98	2.49	3.08	2.44
9.9	26	2.37	2.25	2.51	2.23	2.67	2.38	2.74	2.37	2.80	2.35	2.93	2.48	3.04	2.43
(m³/min)	28	2.31	2.19	2.44	2.20	2.61	2.36	2.69	2.35	2.75	2.33	2.89	2.46	3.00	2.41
	30	2.24	2.13	2.38	2.17	2.56	2.34	2.64	2.33	2.70	2.31	2.84	2.44	2.95	2.40
	32	2.18	2.07	2.31	2.15	2.50	2.32	2.58	2.31	2.64	2.29	2.79	2.43	2.90	2.38
	34	2.11	2.00	2.25	2.12	2.44	2.29	2.53	2.29	2.59	2.27	2.74	2.41	2.85	2.37
	35	2.08	1.97	2.21	2.10	2.41	2.28	2.50	2.28	2.56	2.26	2.71	2.40	2.83	2.36
	36	2.04	1.94	2.18	2.07	2.38	2.26	2.47	2.27	2.53	2.25	2.69	2.40	2.80	2.36
	38	1.97	1.87	2.11	2.00	2.32	2.20	2.41	2.24	2.47	2.22	2.63	2.38	2.75	2.34
	39	1.94	1.84	2.07	1.97	2.28	2.17	2.38	2.23	2.44	2.21	2.61	2.37	2.72	2.33

		Heating mo	ode (HC)			(kW)
Air flow	Outdoor air temperature		Indoo	or air tempe	rature	
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB
	-15	1.97	1.93	1.88	1.84	1.80
	-10	2.23	2.19	2.16	2.10	2.06
	-5	2.41	2.38	2.33	2.30	2.27
Hi	0	2.53	2.49	2.45	2.42	2.38
11.3	5	3.22	3.19	3.17	3.10	3.06
(m³/min)	6	3.27	3.24	3.20	3.16	3.12
	10	3.48	3.45	3.42	3.38	3.34
	15	3.79	3.75	3.73	3.69	3.65
	20	4.07	4.04	4.02	3.97	3.94

Models SRK35ZS-W -WB, -WT

Model	s SRK	35 Z S	S-W	-W	B, -\	NT				Coolin	g mode	•			(kW)
	Outdoor						IIndo	or air t	empera	ature					
Air flow	air	21°0	CDB	23°0	CDB	26°0	CDB	27°C	DB	28°0	DB	31°0	DB	33°C	CDB
All HOW	temperature	14°C	CWB	16°C	CWB	18°C	CWB	19°C	WB	20°C	WB	22°C	WB	24°C	CWB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	3.94	3.19	4.13	3.14	4.28	3.27	4.35	3.22	4.43	3.18	4.56	3.29	4.68	3.20
	12	3.87	3.15	4.06	3.11	4.22	3.24	4.29	3.20	4.37	3.16	4.51	3.27	4.63	3.18
	14	3.80	3.12	3.99	3.07	4.16	3.21	4.24	3.17	4.31	3.14	4.46	3.26	4.59	3.16
	16	3.72	3.08	3.91	3.04	4.09	3.18	4.18	3.15	4.25	3.12	4.40	3.24	4.54	3.15
	18	3.65	3.04	3.84	3.00	4.03	3.16	4.11	3.13	4.19	3.09	4.35	3.21	4.49	3.13
	20	3.57	3.01	3.76	2.97	3.96	3.12	4.05	3.10	4.13	3.06	4.29	3.19	4.43	3.12
	22	3.49	2.96	3.68	2.93	3.89	3.10	3.98	3.07	4.06	3.04	4.23	3.17	4.38	3.10
Hi	24	3.40	2.93	3.59	2.89	3.81	3.07	3.91	3.05	3.99	3.02	4.17	3.15	4.32	3.08
11.3	26	3.32	2.89	3.51	2.86	3.74	3.03	3.84	3.01	3.92	2.98	4.11	3.13	4.26	3.06
(m³/min)	28	3.23	2.84	3.42	2.82	3.66	3.00	3.77	2.99	3.85	2.96	4.04	3.11	4.20	3.04
	30	3.14	2.80	3.33	2.78	3.58	2.97	3.70	2.96	3.78	2.93	3.98	3.08	4.13	3.02
	32	3.05	2.75	3.24	2.74	3.50	2.93	3.62	2.92	3.70	2.90	3.91	3.06	4.06	2.99
	34	2.95	2.71	3.14	2.69	3.41	2.90	3.54	2.89	3.62	2.87	3.84	3.03	4.00	2.97
	35	2.91	2.69	3.10	2.67	3.37	2.89	3.50	2.88	3.58	2.86	3.80	3.02	3.96	2.96
	36	2.86	2.67	3.05	2.65	3.33	2.87	3.46	2.87	3.54	2.84	3.76	3.01	3.92	2.95
	38	2.76	2.62	2.95	2.61	3.24	2.83	3.38	2.84	3.46	2.81	3.69	2.98	3.85	2.93
	39	2.71	2.57	2.90	2.59	3.20	2.81	3.33	2.81	3.42	2.79	3.65	2.97	3.81	2.92

		Heating mo	ode (HC)			(kW)
Air flow	Outdoor air temperature		Indoo	or air tempe	rature	
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB
	-15	2.46	2.41	2.35	2.30	2.25
	-10	2.79	2.74	2.70	2.63	2.58
	-5	3.02	2.97	2.91	2.88	2.83
Hi	0	3.16	3.12	3.06	3.02	2.98
12.3	5	4.03	3.98	3.96	3.88	3.83
(m³/min)	6	4.09	4.04	4.00	3.95	3.90
	10	4.35	4.31	4.28	4.22	4.18
	15	4.73	4.69	4.66	4.61	4.56
	20	5.09	5.05	5.02	4.96	4.92

(2) Floor standing type

Model SRF25ZS-W

	0		• ••												
Cooling r	node														(kW)
	Outdoor						Inde	oor air t	emperat	ture					
Air flow	air	21	°CDB	23	°CDB	26	°CDB	27	°CDB	28	°CDB	31	°CDB	33	°CDB
All HOW	temperature	14	°CWB	16	°CWB	18	°CWB	19	°CWB	20	°CWB	22	°CWB	24	°CWB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	2.82	2.48	2.95	2.44	3.06	2.56	3.11	2.53	3.16	2.50	3.26	2.61	3.34	2.54
	12	2.77	2.46	2.90	2.42	3.01	2.55	3.07	2.52	3.12	2.49	3.22	2.60	3.31	2.53
	14	2.71	2.43	2.85	2.40	2.97	2.53	3.03	2.50	3.08	2.47	3.18	2.59	3.28	2.52
	16	2.66	2.41	2.80	2.37	2.92	2.51	2.98	2.48	3.04	2.46	3.15	2.57	3.24	2.51
	18	2.60	2.38	2.74	2.35	2.88	2.49	2.94	2.47	2.99	2.44	3.11	2.56	3.20	2.50
	20	2.55	2.35	2.68	2.33	2.83	2.47	2.89	2.45	2.95	2.42	3.07	2.55	3.17	2.49
Hi	22	2.49	2.33	2.63	2.30	2.78	2.45	2.84	2.43	2.90	2.41	3.02	2.53	3.13	2.48
9.0	24	2.43	2.30	2.57	2.27	2.72	2.43	2.80	2.41	2.85	2.39	2.98	2.52	3.08	2.46
(m ³ /min)	26	2.37	2.25	2.51	2.25	2.67	2.41	2.74	2.39	2.80	2.37	2.93	2.50	3.04	2.45
	28	2.31	2.19	2.44	2.22	2.61	2.39	2.69	2.37	2.75	2.35	2.89	2.49	3.00	2.44
	30	2.24	2.13	2.38	2.19	2.56	2.36	2.64	2.35	2.70	2.33	2.84	2.47	2.95	2.42
	32	2.18	2.07	2.31	2.17	2.50	2.34	2.58	2.33	2.64	2.31	2.79	2.46	2.90	2.41
	34	2.11	2.00	2.25	2.13	2.44	2.32	2.53	2.31	2.59	2.29	2.74	2.44	2.85	2.39
	35	2.08	1.97	2.21	2.10	2.41	2.29	2.50	2.30	2.56	2.28	2.71	2.43	2.83	2.39
	36	2.04	1.94	2.18	2.07	2.38	2.26	2.47	2.29	2.53	2.27	2.69	2.42	2.80	2.38
	38	1.97	1.87	2.11	2.00	2.32	2.20	2.41	2.27	2.47	2.25	2.63	2.40	2.75	2.36
	40	1.90	1.81	2.03	1.93	2.25	2.14	2.35	2.23	2.41	2.23	2.58	2.38	2.70	2.35
	43	1.79	1.70	1.92	1.83	2.15	2.04	2.26	2.15	2.32	2.20	2.49	2.36	2.61	2.32
i	46	1.68	1.59	1.81	1.72	2.05	1.95	2.16	2.05	2.22	2.11	2.40	2.28	2.53	2.29

Heating r	node					(kW)
Air flow	Outdoor air temperature		Indoor	air tempe	erature	
	°CWB	16°C DB	18℃ DB	20°C DB	22°C DB	24°C DB
	-15	1.78	1.75	1.70	1.67	1.63
	-10	2.02	1.98	1.96	1.91	1.87
	-5	2.19	2.16	2.11	2.09	2.05
Hi	0	2.29	2.26	2.22	2.19	2.16
10.5	5	2.92	2.89	2.87	2.81	2.77
(m ³ /min)	6	2.97	2.93	2.90	2.86	2.83
	10	3.15	3.12	3.10	3.06	3.03
	15	3.43	3.40	3.38	3.34	3.31
	20	3.69	3.66	3.64	3.60	3.57

Model SRF35ZS-W

Cooling r	node														(kW
	Outdoor						Ind	oor air t	empera	ture					
Air flow	air	21	°CDB	23	°CDB	26	°CDB	27	°CDB	28	°CDB	31	°CDB	33	°CDB
7 til 110 ti	temperature	17	°CWB	16	°CWB	18	°CWB	19	°CWB	20	°CWB	22	°CWB	24	°CWB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	3.94	3.02	4.13	2.96	4.28	3.06	4.35	3.02	4.43	2.98	4.56	3.05	4.68	2.96
	12	3.87	2.98	4.06	2.93	4.22	3.03	4.29	2.99	4.37	2.95	4.51	3.04	4.63	2.94
	14	3.80	2.94	3.99	2.90	4.16	3.00	4.24	2.97	4.31	2.93	4.46	3.02	4.59	2.92
	16	3.72	2.90	3.91	2.86	4.09	2.98	4.18	2.94	4.25	2.90	4.40	2.99	4.54	2.91
	18	3.65	2.86	3.84	2.82	4.03	2.94	4.11	2.91	4.19	2.88	4.35	2.97	4.49	2.89
	20	3.57	2.82	3.76	2.79	3.96	2.91	4.05	2.89	4.13	2.85	4.29	2.95	4.43	2.86
Hi	22	3.49	2.78	3.68	2.74	3.89	2.88	3.98	2.86	4.06	2.83	4.23	2.93	4.38	2.84
9.2	24	3.40	2.74	3.59	2.71	3.81	2.85	3.91	2.83	3.99	2.80	4.17	2.90	4.32	2.82
(m ³ /min)	26	3.32	2.69	3.51	2.66	3.74	2.82	3.84	2.80	3.92	2.77	4.11	2.87	4.26	2.80
	28	3.23	2.65	3.42	2.62	3.66	2.78	3.77	2.77	3.85	2.74	4.04	2.85	4.20	2.78
	30	3.14	2.60	3.33	2.58	3.58	2.75	3.70	2.74	3.78	2.71	3.98	2.83	4.13	2.76
	32	3.05	2.56	3.24	2.54	3.50	2.71	3.62	2.70	3.70	2.68	3.91	2.80	4.06	2.74
	34	2.95	2.52	3.14	2.50	3.41	2.68	3.54	2.67	3.62	2.65	3.84	2.78	4.00	2.72
	35	2.91	2.49	3.10	2.48	3.37	2.66	3.50	2.66	3.58	2.63	3.80	2.76	3.96	2.70
	36	2.86	2.47	3.05	2.45	3.33	2.64	3.46	2.64	3.54	2.62	3.76	2.75	3.92	2.69
	38	2.76	2.42	2.95	2.41	3.24	2.60	3.38	2.61	3.46	2.59	3.69	2.72	3.85	2.67
	40	2.66	2.37	2.85	2.36	3.15	2.57	3.29	2.57	3.37	2.55	3.61	2.70	3.78	2.65
	43	2.51	2.30	2.69	2.30	3.01	2.51	3.16	2.52	3.24	2.50	3.49	2.66	3.66	2.61
	46	2.35	2.23	2.53	2.23	2.87	2.45	3.03	2.47	3.11	2.45	3.36	2.61	3.54	2.57

Heating r	node					(kW)
Air flow			Indoor	air tempe	erature	
	°CWB	16°C DB	18℃ DB	20°C DB	22°C DB	24℃ DB
	-15	2.77	2.71	2.65	2.59	2.53
	-10	3.13	3.08	3.04	2.96	2.90
	-5	3.39	3.34	3.28	3.24	3.19
Hi	0	3.56	3.51	3.44	3.40	3.35
10.7	5	4.53	4.48	4.46	4.37	4.30
(m ³ /min)	6	4.61	4.55	4.50	4.44	4.39
	10	4.89	4.85	4.82	4.75	4.70
	15	5.33	5.28	5.24	5.18	5.14
	20	5.72	5.68	5.65	5.59	5.54

Notes(1) These data show average statuses.
Depending on the system control, there may be ranges where the operation is not conducted continuously.
These data show the case where the operation frequency of a compressor is fixed.

(2) Capacities are based on the following conditions.
Corresponding refrigerant piping length :5m
Level difference of Zero.

(3) Symbols are as follows.
TC : Total cooling capacity (kW)
SHC : Sensible heat capacity (kW)
HC : Heating capacity (kW)

(3) Ceiling concealed type (SRR)

Model SRR25ZS-W

Model	SRR25	ZS-	-W							Coolin	g mode	•			(kW)
	Outdoor						Indo	or air t	empera	ature					\neg
Air flow	air	21°0	CDB	23°0	DDB	26°0	DDB	27°C	DB	28°0	CDB	31°0	CDB	33°C	CDB
Air ilow	temperature	14°C	CWB	16°C	CWB	18°C	CWB	19°C	WB	20°C	WB	22°C	WB	24°C	CWB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	2.82	2.34	2.95	2.31	3.06	2.41	3.11	2.38	3.16	2.35	3.26	2.43	3.34	2.37
	12	2.77	2.32	2.90	2.28	3.01	2.39	3.07	2.36	3.12	2.34	3.22	2.42	3.31	2.36
	14	2.71	2.29	2.85	2.26	2.97	2.37	3.03	2.34	3.08	2.32	3.18	2.41	3.28	2.35
	16	2.66	2.27	2.80	2.24	2.92	2.35	2.98	2.33	3.04	2.30	3.15	2.40	3.24	2.34
	18	2.60	2.24	2.74	2.21	2.88	2.33	2.94	2.31	2.99	2.28	3.11	2.38	3.20	2.32
	20	2.55	2.22	2.68	2.19	2.83	2.31	2.89	2.29	2.95	2.27	3.07	2.37	3.17	2.31
	22	2.49	2.19	2.63	2.16	2.78	2.29	2.84	2.27	2.90	2.25	3.02	2.35	3.13	2.30
	24	2.43	2.16	2.57	2.14	2.72	2.27	2.80	2.25	2.85	2.23	2.98	2.34	3.08	2.29
Hi	26	2.37	2.12	2.51	2.11	2.67	2.25	2.74	2.23	2.80	2.21	2.93	2.33	3.04	2.27
9.5	28	2.31	2.10	2.44	2.07	2.61	2.22	2.69	2.21	2.75	2.19	2.89	2.31	3.00	2.26
(m³/min)	30	2.24	2.07	2.38	2.05	2.56	2.20	2.64	2.19	2.70	2.17	2.84	2.29	2.95	2.25
	32	2.18	2.04	2.31	2.02	2.50	2.18	2.58	2.17	2.64	2.15	2.79	2.28	2.90	2.23
	34	2.11	2.00	2.25	2.00	2.44	2.16	2.53	2.15	2.59	2.13	2.74	2.26	2.85	2.22
	35	2.08	1.97	2.21	1.98	2.41	2.14	2.50	2.14	2.56	2.12	2.71	2.25	2.83	2.21
	36	2.04	1.94	2.18	1.96	2.38	2.13	2.47	2.13	2.53	2.11	2.69	2.24	2.80	2.20
	38	1.97	1.87	2.11	1.94	2.32	2.11	2.41	2.10	2.47	2.09	2.63	2.22	2.75	2.18
	40	1.90	1.81	2.03	1.90	2.25	2.07	2.35	2.08	2.41	2.07	2.58	2.20	2.70	2.17
	43	1.79	1.70	1.92	1.83	2.15	2.03	2.26	2.04	2.32	2.02	2.49	2.17	2.61	2.14
	46	1.68	1.59	1.81	1.72	2.05	1.95	2.16	2.00	2.22	1.99	2.40	2.14	2.53	2.11

		Heating mo	ode (HC)			(kW)
Air flow	Outdoor air temperature		Indoo	or air tempe	rature	
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB
	-15	1.78	1.75	1.70	1.67	1.63
	-10	2.02	1.98	1.96	1.91	1.87
	-5	2.19	2.16	2.11	2.09	2.05
Hi	0	2.29	2.26	2.22	2.19	2.16
10.0	5	2.92	2.89	2.87	2.81	2.77
(m³/min)	6	2.97	2.93	2.90	2.86	2.83
	10	3.15	3.12	3.10	3.06	3.03
	15	3.43	3.40	3.38	3.34	3.31
	20	3.69	3.66	3.64	3.60	3.57

Model SRR35ZS-W

Cooling mode	(kW

	Outdoor	l					Indo	or air t	empera	iture					- 1
Air flow	air	21°0	CDB	23°0	DB	26°0	DB	27°C	DB	28°C	DB	31°0	CDB	33°0	DB
All llow	temperature	14°C	CWB	16°C	WB	18°C	WB	19°C	WB	20°C	WB	22°C	WB	24°C	WB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	3.94	2.93	4.13	2.87	4.28	2.96	4.35	2.92	4.43	2.88	4.56	2.94	4.68	2.84
	12	3.87	2.89	4.06	2.85	4.22	2.93	4.29	2.90	4.37	2.85	4.51	2.92	4.63	2.82
	14	3.80	2.85	3.99	2.81	4.16	2.91	4.24	2.87	4.31	2.83	4.46	2.90	4.59	2.79
	16	3.72	2.81	3.91	2.77	4.09	2.87	4.18	2.84	4.25	2.80	4.40	2.88	4.54	2.78
	18	3.65	2.77	3.84	2.74	4.03	2.84	4.11	2.81	4.19	2.78	4.35	2.86	4.49	2.76
	20	3.57	2.73	3.76	2.69	3.96	2.81	4.05	2.78	4.13	2.75	4.29	2.82	4.43	2.75
	22	3.49	2.69	3.68	2.66	3.89	2.78	3.98	2.76	4.06	2.72	4.23	2.80	4.38	2.73
	24	3.40	2.64	3.59	2.61	3.81	2.74	3.91	2.72	3.99	2.69	4.17	2.79	4.32	2.71
Hi	26	3.32	2.60	3.51	2.57	3.74	2.71	3.84	2.69	3.92	2.66	4.11	2.76	4.26	2.69
10.0	28	3.23	2.55	3.42	2.53	3.66	2.68	3.77	2.66	3.85	2.63	4.04	2.74	4.20	2.67
(m³/min)	30	3.14	2.51	3.33	2.49	3.58	2.64	3.70	2.63	3.78	2.60	3.98	2.71	4.13	2.64
	32	3.05	2.46	3.24	2.44	3.50	2.60	3.62	2.60	3.70	2.57	3.91	2.68	4.06	2.62
	34	2.95	2.42	3.14	2.40	3.41	2.57	3.54	2.56	3.62	2.54	3.84	2.66	4.00	2.60
	35	2.91	2.39	3.10	2.38	3.37	2.55	3.50	2.54	3.58	2.52	3.80	2.64	3.96	2.59
	36	2.86	2.36	3.05	2.36	3.33	2.53	3.46	2.53	3.54	2.50	3.76	2.63	3.92	2.57
	38	2.76	2.32	2.95	2.30	3.24	2.49	3.38	2.49	3.46	2.47	3.69	2.60	3.85	2.53
	40	2.66	2.27	2.85	2.26	3.15	2.45	3.29	2.45	3.37	2.43	3.61	2.56	3.78	2.51
	43	2.51	2.20	2.69	2.19	3.01	2.39	3.16	2.40	3.24	2.38	3.49	2.52	3.66	2.48
	46	2.35	2.12	2.53	2.12	2.87	2.33	3.03	2.35	3.11	2.33	3.36	2.48	3.54	2.44

		Heating mo	ode (HC)			(kW)
Air flow	Outdoor air temperature		Indoo	or air tempe	rature	
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB
	-15	2.58	2.53	2.47	2.42	2.36
	-10	2.92	2.87	2.83	2.76	2.70
	-5	3.17	3.12	3.06	3.02	2.97
Hi	0	3.32	3.27	3.21	3.18	3.13
10.5	5	4.23	4.18	4.16	4.07	4.02
(m³/min)	6	4.30	4.25	4.20	4.15	4.10
	10	4.57	4.52	4.49	4.43	4.39
	15	4.97	4.93	4.89	4.84	4.79
	20	5.34	5.30	5.27	5.21	5.17

Notes(1) These data show average statuses.

Depending on the system control, there may be ranges where the operation is not conducted continuously.

These data show the case where the operation frequency of a compressor is

These data show the case where the operation of fixed.

(2) Capacities are based on the following conditions. Corresponding refrigerant piping length :5m Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW)

SHC: Sensible heat capacity (kW)

HC: Heating capacity (kW)

(4) 4-way ceiling cassette type (FDTC)

2.04 1.94 1.97 1.87

36 38

Model FDTC25VH1 Cooling mode (kW) Outdoor Indoor air temperature 26°CDB 27°CDB 28°CDB 31°CDB 18°CWB 19°CWB 20°CWB 22°CWB 21°CDB 23°CDB 33°CDB 16°CWB °CDB TC SHC 2.82 2.40 2.95 2.36 3.06 2.47 3.11 2.44 3.16 2.41 3.26 2.51 3.34 2.44 2.77 2.37 2.90 2.34 3.01 2.45 3.07 2.43 3.12 2.40 3.22 2.50 3.31 2.43 2.71 2.35 2.85 2.31 2.97 2.43 3.03 2.41 3.08 2.38 3.18 2.48 3.28 2.42 10 2.71 2.35 2.68 2.31 2.97 2.43 3.03 2.41 3.08 2.36 1.56 2.46 3.26 2.42 2.60 2.32 2.80 2.29 2.92 2.41 2.98 2.39 3.04 2.37 3.15 2.47 3.24 2.41 2.60 2.30 2.74 2.27 2.88 2.39 2.94 2.37 2.99 2.35 3.11 2.46 3.20 2.40 2.55 2.27 2.68 2.24 2.83 2.37 2.89 2.35 2.95 2.33 3.07 2.44 3.17 2.38 2.49 2.24 2.63 2.22 2.78 2.35 2.84 2.30 2.90 2.31 3.02 2.43 3.13 2.37 16 18 2.49 2.24 2.63 2.22 2.78 2.35 2.84 2.33 2.90 2.31 2.85 2.29 2.98 2.41 3.08 2.36 2.37 2.19 2.51 2.67 2.31 2.74 2.30 2.80 2.81 2.27 2.93 2.90 2.81 2.77 2.93 2.93 3.04 2.34 2.31 2.16 2.16 2.67 2.29 2.89 2.27 2.93 2.99 2.38 3.04 2.34 2.31 2.16 2.14 2.20 2.29 2.28 2.77 2.20 2.99 2.38 3.04 2.34 2.31 2.16 2.17 2.29 2.28 2.75 2.26 2.89 2.38 3.00 2.33 2.24 2.33 2.36 2.21 2.24 2.24 2.24 2.84 2.36 2.30 2.34 2.24 2.33 2.36 2.31 2.26 2.27 2.24 24 26 28 8.5 (m³/min) 2.31 2.08 2.50 2.24 2.58 2.23 2.64 2.22 2.79 2.35 2.25 2.05 2.44 2.22 2.53 2.21 2.21 2.04 2.41 2.21 2.50 2.20 2.59 2.20 2.74 2.33 2.56 2.19 2.71 2.32 34 35 2.00

 2.18
 2.03
 2.38
 2.20
 2.47
 2.19
 2.53
 2.17
 2.69
 2.31

 2.11
 2.00
 2.32
 2.17
 2.41
 2.17
 2.47
 2.15
 2.63
 2.29

 1.90
 1.81
 2.03
 1.93
 2.25
 2.14
 2.35
 2.15
 2.41
 2.13
 2.58
 2.28
 2.70
 2.24

 1.79
 1.70
 1.92
 1.83
 2.15
 2.04
 2.26
 2.11
 2.32
 2.10
 2.49
 2.25
 2.61
 2.21
 1.59 1.81 1.72 2.05 1.95 2.16 2.05 2.22 2.06 2.40

2.80

		Heating mo	ode (HC)			(kW)
Air flow	Outdoor air temperature		Indoo	or air tempe	rature	
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB
	-15	1.78	1.75	1.70	1.67	1.63
	-10	2.02	1.98	1.96	1.91	1.87
	-5	2.19	2.16	2.11	2.09	2.05
Hi	0	2.29	2.26	2.22	2.19	2.16
9.5	5	2.92	2.89	2.87	2.81	2.77
(m³/min)	6	2.97	2.93	2.90	2.86	2.83
	10	3.15	3.12	3.10	3.06	3.03
	15	3.43	3.40	3.38	3.34	3.31
	20	3.69	3.66	3.64	3.60	3.57

Model	FDTC	35VI	H1							Coolin	g mode	•			(kW)
	Outdoor						Indo	or air t	empera	ture					\neg
Air flow	air	21°0	CDB	23°0	DB	26°0	DB	27°C	DB	28°C	DB	31°0	CDB	33°0	CDB
All HOW	temperature	14°C	CWB	16°C	WB	18°C	CWB	19°C	CWB	20°C	WB	22°C	CWB	24°C	CWB
	°CDB	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC	TC	SHC
	10	3.94	3.00	4.13	2.94	4.28	3.04	4.35	3.00	4.43	2.95	4.56	3.02	4.68	2.93
	12	3.87	2.96	4.06	2.91	4.22	3.01	4.29	2.97	4.37	2.93	4.51	3.01	4.63	2.91
	14	3.80	2.92	3.99	2.87	4.16	2.98	4.24	2.94	4.31	2.90	4.46	2.99	4.59	2.89
	16	3.72	2.88	3.91	2.84	4.09	2.95	4.18	2.92	4.25	2.88	4.40	2.97	4.54	2.88
	18	3.65	2.84	3.84	2.80	4.03	2.92	4.11	2.89	4.19	2.86	4.35	2.94	4.49	2.86
	20	3.57	2.80	3.76	2.76	3.96	2.89	4.05	2.86	4.13	2.83	4.29	2.92	4.43	2.84
	22	3.49	2.76	3.68	2.73	3.89	2.86	3.98	2.83	4.06	2.80	4.23	2.90	4.38	2.82
	24	3.40	2.71	3.59	2.68	3.81	2.83	3.91	2.80	3.99	2.77	4.17	2.88	4.32	2.79
Hi	26	3.32	2.67	3.51	2.64	3.74	2.79	3.84	2.78	3.92	2.75	4.11	2.86	4.26	2.77
9.0	28	3.23	2.62	3.42	2.60	3.66	2.76	3.77	2.74	3.85	2.71	4.04	2.82	4.20	2.75
(m³/min)	30	3.14	2.58	3.33	2.56	3.58	2.72	3.70	2.71	3.78	2.69	3.98	2.79	4.13	2.73
	32	3.05	2.54	3.24	2.51	3.50	2.69	3.62	2.68	3.70	2.66	3.91	2.77	4.06	2.71
	34	2.95	2.49	3.14	2.47	3.41	2.65	3.54	2.65	3.62	2.62	3.84	2.74	4.00	2.69
	35	2.91	2.47	3.10	2.45	3.37	2.63	3.50	2.63	3.58	2.61	3.80	2.73	3.96	2.67
	36	2.86	2.45	3.05	2.43	3.33	2.62	3.46	2.61	3.54	2.59	3.76	2.72	3.92	2.66
	38	2.76	2.40	2.95	2.39	3.24	2.58	3.38	2.58	3.46	2.56	3.69	2.69	3.85	2.64
	40	2.66	2.35	2.85	2.34	3.15	2.54	3.29	2.55	3.37	2.53	3.61	2.67	3.78	2.62
	43	2.51	2.28	2.69	2.27	3.01	2.48	3.16	2.49	3.24	2.47	3.49	2.62	3.66	2.58
	46	2.35	2.20	2.53	2.20	2.87	2.42	3.03	2.44	3.11	2.42	3.36	2.58	3.54	2.54

		Heating mo	ode (HC)			(kW)
Air flow	Outdoor air temperature		Indoo	or air tempe	rature	
	°CWB	16°CDB	18°CDB	20°CDB	22°CDB	24°CDB
	-15	2.61	2.56	2.50	2.45	2.39
	-10	2.96	2.91	2.87	2.79	2.74
	-5	3.20	3.16	3.09	3.06	3.01
Hi	0	3.36	3.31	3.25	3.21	3.17
10.0	5	4.28	4.23	4.21	4.12	4.07
(m³/min)	6	4.35	4.30	4.25	4.20	4.15
	10	4.62	4.58	4.55	4.49	4.44
	15	5.03	4.99	4.95	4.90	4.85
	20	5.41	5.36	5.34	5.28	5.23

Depending on the system control, there may be ranges where the operation

is not conducted continuously.

These data show the case where the operation frequency of a compressor is

(2) Capacities are based on the following conditions.

Corresponding refrigerant piping length :5m Level difference of Zero.

(3) Symbols are as follows.

TC: Total cooling capacity (kW) SHC: Sensible heat capacity (kW) HC: Heating capacity (kW)

þe

APPLICATION DATA

9.1 Installation of indoor unit

Wall mounted type (SRK) Models SRK20ZS-W, -WB, -WT SRK25ZS-W, -WB, -WT SRK35ZS-W, -WB, -WT

RLF012A105

Model SRK20,25,35,50ZS R32/R410A REFRIGERANT USED

SAFETY PRECAUTIONS

• This installation manual deals with an indoor unit installation only. For an outdoor unit installation, refer to page 113.

This unit is designed for R32 or R410A. See a label on the outdoor unit to check refrigerant information

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installat- Be sure to confirm no operation problem on the equipment after completing the installation. If unusual noise can be heard during the test run, consult the dealer.
- · Be sure to explain the operating methods as well as the maintenance methods of this equipment to the

 Be sure to keep the installation manual together with user's manual at a place where it is easily accessi. ble to the user any time. Moreover, ask the user to hand the manuals to a new user, whenever required

user according to the user's manual. ACAUTION Indicates a potentially hazardous situation which, if not avoided, can result in personal in-Indicates a potentially hazardous situation which, if not avoided, can result in serious con-· The precautionary items mentioned below are distinguished into two levels, 🖄 WARNING and 🔼 CAUTION. Both mention the important items to protect your health and safety. Therefore, strictly follow them by any means.

sequences such as death or severe injury.

tion work in order to protect yourself.

☆ WARNING

If this unit is installed in inferior environment such as machine shop, vehicle (like ship), warehouse, Be sure to use only for residential purpose.

installation must be carried out by the qualified installer completely in accordance with the installation manual

Installation by non qualified person or incorrect installation can cause serious troubles such as water electric shock, fire and personal injury

Be sure to wear protective goggles and gloves while performing installation work. safety measures can result in personal inju-

Do not install the unit near the location where leakage of flammable gases can occur. Use the original accessories and the specified components for the installation. Jsing parts other than those prescribed may cause water leak, electric shock, fire and personal injury. If leaked gases accumulate around the unit, it can cause fire resulting in property damage and personal injury.

When installing the unit in small rooms, make sure that refrigerant density does not exceed the limit (Reference: ISO5149) in the event of leakage. If refrigerant density exceeds the limit, consult the dealer and install the ventilation system.

Install the unit in a location where unit will remain stable, horizontal and free Otherwise lack of oxygen can occur resulting in serious accident of any vibration transmission.

Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to Jusuitable installation location can cause the unit to fall resulting in material damage and personal injury. Do not run the unit with removed panels or protections.

entrapment, burn or electric shock

This unit is designed specifically for R32 or R410A.

Using any other refrigerant can cause unit failure and personal injury.

Make sure that no air enters the refrigerant circuit when the unit is installed **Do not Vent R32 or R410A into atmosphere.**R32 is a fluorinated greenhouse gas with a Global Warming Potential(GWP)=675.
R410A is a fluorinated greenhouse gas with a Global Warming Potential(GWP)=2088.

and removed.

If air enters the refrigerant circuit, the pressure in the refrigerant circuit will become too high, which can cause burst and personal injury.

Be sure to use the prescribed pipes, flare nuts and tools for R32 or R410A. personal injury. Be sure to connect both liquid and gas connecting pipes properly before op-

Do not open the liquid and gas service valves before completing piping erating the compressor work, and evacuation.

service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure result-If the compressor is operated when connecting pipes are not connected and

Be sure to tighten the flare nuts to specified torque using the torque wrench. Tightening flare nuts with excess torque can cause burst and refrigerant leakage after a long period.

During pump down work, be sure to stop the compressor before closing service valves and removing connecting pipes.

If the connecting pipes are removed when the compressor is in operation and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure resulting in burst or personal injury

· In the event of refrigerant leakage during installation, be sure to ventilate the f the refrigerant comes into contact with naked flames, poisonous gases will be produced working area properly.

Electrical work must be carried out by the qualified electrician, strictly in accordance with national or regional electricity regulations. Incorrect installation can cause electric shock, fire or personal

 Make sure that earth leakage breaker and circuit breaker of appropriate ca-Circuit breaker should be able to disconnect all poles under over current. Absence of appropriate pacities are installed.

Be sure to switch off the power source in the event of installation, mainte-If the power source is not switched off, there is a risk of electric shock, unit failure or personal injury breakers can cause electric shock, personal injury or property damage. nance or service.

Be sure to tighten the cables securely in terminal block and relieve the bles properly to prevent overloading the terminal blocks.

Loose connections or cable mountings can cause anomalous heat production or fire.

Do not process, splice or modify the power cable, or share the socket with improper power cable or power plug can cause fire or electric shock due to poor connection, insuf ficient insulation or over-current other power plugs.

Be sure to clamp the cables properly so that they do not touch any internal Do not perform any change in protective device or its setup condition yourself Changing protective device specifications can cause electric shock, fire or burst.

f cables touch any internal component, it can cause overheating and fire. Be sure to install service cover properly component of the unit.

improper installation can cause electric shock or fire due to intrusion of dust or water

Using improper cables can cause electric leak or fire.

This appliance must be connected to main power source by means of a circuit breaker or switch with a contact separation of at least 3mm. Be sure to use the prescribed power and connecting cables for electrical work. Using existing parts (for R22 or R407C) can cause refrigerant circuit burst resulting in unit failure and

 When plugging this unit, a plug conforming to the standard IEC60884-1 must mproper electrical work can cause unit failure or personal injury used.

Using improper plug can cause electric shock or fire.

Be sure to connect the power source cable with power source properly. Improper connection can cause intrusion of dust or water resulting in electric shock or fire.

△ CAUTION

Take care when carrying the unit by hand.

If the unit weight is more than 20kg, it must be carried by two or more persons. Do not carry the unit by the plastic straps. Always use the carry handle.

Do not install the outdoor unit in a location where insects and small animals can inhabit.

If the outdoor unit is installed at height, make sure that there is enough space Insects and small animals can enter the electrical parts and cause damage resulting in fire or personal injury. Instruct the user to keep the surroundings clean.

for installation, maintenance and service.

Do not install the unit near the location where neighbours are bothered by Insufficient space can result in personal injury due to falling from the height. noise or air generating from the unit.

It can affect surrounding environment and cause a claim.

Do not install in the locations where unit is directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty atmosphere.

Equipment such as inverters, standby generators, medical high frequency equipments and telecom-The system can also affect medical equipment and telecommunication equipment, and obstruct its munication equipments can affect the system, and cause malfunctions and breakdowns. waves and/or high-harmonic waves.

· Do not install the unit in the locations where: There are heat sources nearby.

 Unit is directly exposed to rain or sunlight.
 There is any obstacle which can prevent smooth air circulation from inlet and outlet side of the unit. Unit is directly exposed to oil mist and steam such as kitchen.

 Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will generate or accumulate. Drain water can not be discharged properly.
 TV set or radio receiver is placed within 1m.

Height above sea level is more than 1000m.

It can cause performance degradation, corrosion and damage of components, unit malfunction and fire.

Packing materials contain nails and wood which can cause personal injury. · Dispose of all packing materials properly.

Keep the polybag away from children to avoid the risk of suffocation Do not put anything on the outdoor unit.

Aluminium fin temperature is high during heating operation. Touching fin can cause burn. It can cause corrosion of heat exchanger and damage to plastic parts.

Uppect may fall causing property damage or personal minuty.

Do not install the unit close to the equipments that generate electromagnetic • Do not touch the aluminum fin of the outdoor unit.

• Do not touch any refrigerant pipe with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition. Touching pipes can cause personal injury like burn (hot/cold).

· Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.

The isolator should be locked in OFF state in accordance with EN60204-1.

arred parts

bc)

I. ACCESSORIES AND TOOLS

function or cause jamming.

	Standard	accessori	us) se	ija	Standard accessories (supplied with indoor unit)				Locally procu
L				-	,	Š		٣	(a) Sleeve (1pc)
\overline{z}	(1) Installation board		1pc	9	1pc (6) Batteries [R03 (AAA, Micro) 1.5V]	E Constitution of the cons	2pcs		(b) Sealing plate (1pc)
								ت	(c) Inclination plate (1
(2	(2) Remote control	E E	1pc	(7)	高り 1pc (7) Air-cleaning filters		2pcs	۳	(d) Putty
		E						۳	(e) Connecting cable
<u>ෆ</u>	(3) Remote control holder		1pc	8	1pc (8) Filter holders	2pcs	2pcs	_	(f) Drain hose (extens
		}						L	Pining cover
9	(4) Tapping screws		5pcs	(6)	5pcs (9) Insulation (#486 50 X 100 t3)		100	٣	(9) (for insulation of co
	(tor installation board ø4 X 25mm)	}	<u>.</u>	ì) L		Clamp and screw
(5	Wood screws		2000					=_	work)
2	/ (for remote control holder ø3.5 X 16mm)	b	2004					_	(i) Electrical tape

		Tools for	Tools for installation Work
		Plus headed driver	Hole core drill (65mm in diameter)
		Vaifo	Mronoh (Doccon) [4mm]
			Wielidi key (Hexagon) [4000]
Γ		Saw	Flaring tool set*
	•	Tape measure	Gas leak detector*
Г		Torque wrench	Pipe bender
	=-1	(14.0-62.0N·m (1.4-6.2kgr·m))	
6	_	Plier	Gauge for projection adjustment
			(Used when flare is made by using
		Pipe cutter	conventional flare tool)
Т	'	* Design	* Designed specifically for R32 or R410A

connection piping

sion hose)

(for finishing

Improper adjustment of the installation board can cause water leakage.

2. SELECTING INSTALLATION LOCATION

After getting customer's approval, select installation location according to following guidelines.

1. Indoor unit

Where there is no obstruction to the air flow and where the cooled and heated air can be evenly
distributed.

- A solid place where the unit or the wall will not vibrate.
 A place where there will be enough space for servicing. (Where space mentioned on the right side can be secured.)

 - Where it is easy to conduct wiring and piping work.
 A place where unit is not directly exposed to sunlight or street light.
 A place where it can be easily drained.
- A place separated at least 1m away from the television or the radio. (To prevent interference to im-

양

Be sure that the flap of outlet should not touch any obstacles.

(a) Sleeve

Remote control

Remote control holder

Obstacle such

as curtain

Installation example

10 cm minimum from the ceiling

Indoor unit

10 cm minimum from the wall

Installation board

5 cm minimum from the wall

- ages and sounds.)

 A place where this unit is not affected by the high frequency equipment or electric equipment.

 Avoid installing this unit in place where there is much oil mist.

 A place where there is no electric equipment or household.

Install the indoor unit on the wall where the height from the floor to the bottom of the unit is more than

2. Remote control

- A place where the air-conditioner can receive the signal surely during operating the remote control.
 A place where it is not affected by the TV, radio etc.
 Do not place where it is exposed to direct sunlight or near heat devices such as a stove.


180 cm minimum from the floor Wood screws


3. INSTALLING INSTALLATION BOARD


Installation board should be installed on the wall which can support the weight of the indoor unit.
 Adjustment of the installation board in the horizontal direction is to be conducted with five screws in a

temporary tightened state.

• With the standard hole as a center, adjust the board and level it.

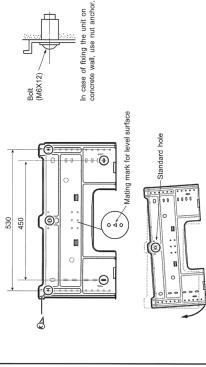


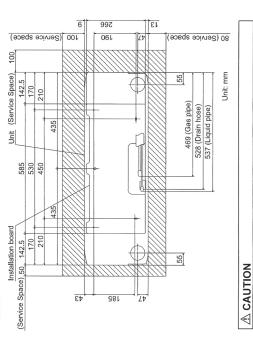


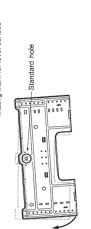

4. DRILLING HOLE AND FIXTURE OF SLEEVE

When drilling the wall that contains a metal lath, wire lath or metal plate, be sure to use sealing plate, sleeve and inclination plate (Locally procured parts).

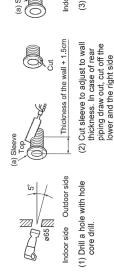

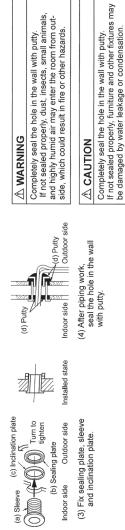

lower and the right side portions of the sleeve collar.

Before installation, make sure that the power source complies with the air-conditioner's power speci-

5. ELECTRICAL WIRING WORK

Carry out electrical wiring work according to following guidelines

1. Preparing cable

(1) Selecting cable

- 2. Connecting cable

 (1) Open the air inlet panel.
 (2) Remove the lid.
 (3) Remove the cable clamp.
 (4) Connect the connecting wires to the terminal block.
 (5) Fx the connecting cable by cable clamp.
 (6) Fix the lid.
 (7) Close the air inlet panel.

Select the connecting cable in accordance with the specifications mentioned below. 4-core* 1.5mm² conformed with 60245 IEC57 * 1 Earth wire is included (Yellow/Green).

(2) Arrange each wire length as shown below. Make sure that each wire is stripped 10mm from the end.

- 92 **-**


<Wire end>

<Connecting cable>

30mm or more

NOTE

Take care not to confuse the terminal numbers for indoor and outdoor connections.

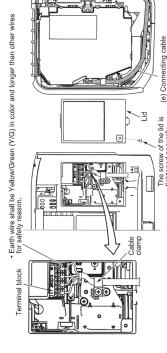

The screw of the lid is tightened securely.

Incorrect wiring connection can cause malfunction or fire.










(3) Attach round crimp-type terminal to each wire as shown in the below. Select the size of round crimp-type terminal after considering the specifications of terminal block





40mm or more

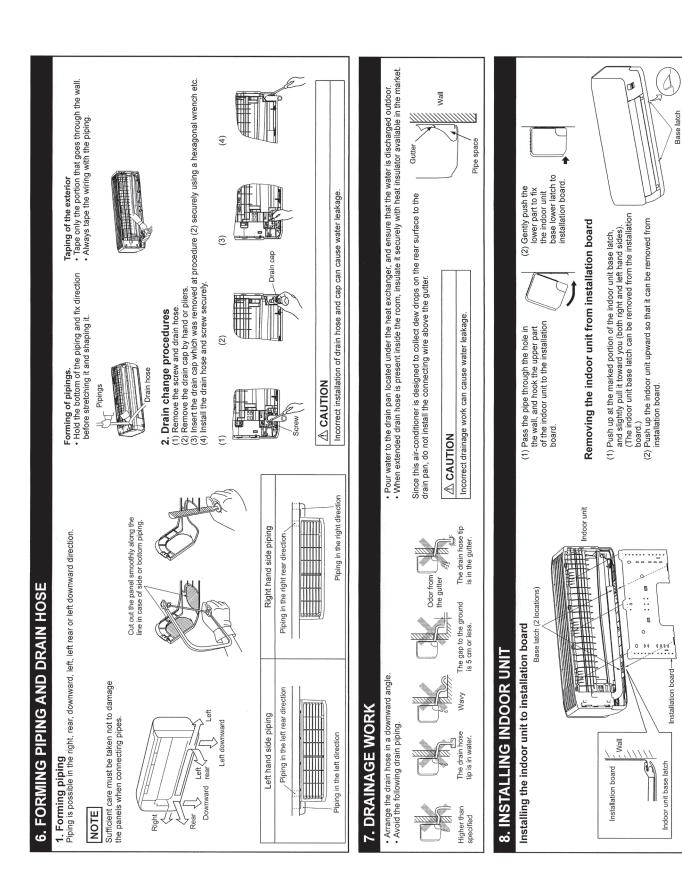

9. CONNECTING PIPING WORK

1. Preparation of connecting pipe

1.1. Selecting connecting pipe

Select connecting pipe according to the following table.

	Model SRK20/25/35	Model SRK50
Gas pipe	ø9.52	ø12.7
Liquid pipe	ø6.35	ø6.35


Pipe wall thickness must be greater than or equal to 0.8 mm.
 Pipe material must be O-type (Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30).

- Cut the connecting pipe to the required length with pipe cutter.
 Hold the pipe downward and remove the burrs. Make sure that no foreign material enters the pipe.
 Cover the connecting pipe ends with the tape. 1.2. Cutting connecting pipe


2. Piping work


2.1. Flaring pipe

- (1) Take out flare nuts from the service valves of indoor unit and engage them onto connecting pipes. (2) Flare the pipes according to table and figure shown below.
- Flare the pipes according to table and figure shown below. Flare themselven for R22 are different from those for conventional refrigerant. Flare dimensions for R22 are different from those for conventional refrigerant. Although it is recommended to use the flaring tools designed specifically for R32 or R410A, conventional flaring tools can also be used by adjusting the dimension B with a flare adjustment

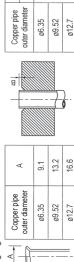

R32 or R410A | Conventional B [Rigid (clutch) type] 0-0.5

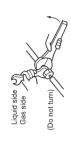

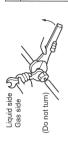

△ CAUTION


Do not apply refrigerating machine oil to the flared surface. It can cause refrigerant leakage.
 Do not apply excess torque to the flared nuts. The flared nuts may crack resulting in refrigerant leakage.

- Heating and condensation prevention
 Dress the connecting pipes (both liquid and gas pipes) with insulation to prevent it from heating and Use the heat insulating material which can withstand 120°C or higher temperature. Make sure that insudew condensation.
 - (2) Wrap the refrigerant pipings of indoor unit with indoor unit heat insulation using tape.
 (3) Cover the flare-connected joints (indoor side) with the indoor unit heat insulation and wrap it with an inlation is wrapped tightly around the pipes and no gap is left between them
 - (4) Wrap the connecting pipes, connecting cable and drain hose with the tape sulation pad (standard accessory provided with indoor unit)

Insulation pad

ල

(5)

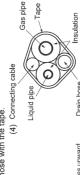

osition it so that the slit area faces upward.

Locations where relative humidity exceeds 70%, both liquid and gas pipes need to be dressed with 20mm or

Q

thicker heat insulation materials

Condensate can leak or drip causing damage to household property.

• Poor heat insulating capacity can cause pipe outer surface to reach high temperature during heating operation. It can cause cable deterioration and personal injury. Improper insulation can cause condensate (water) formation during cooling operation **△** CAUTION

4. Finishing work

1.0-1.5

- (1) Make sure that the exterior portion of connecting pipes, connecting cable and drain hose is wrapped properly with tape. Shape the connecting pipes to match with the contours of the pipe assembly route.
- (2) Fix the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5m or less to isolate the vibration.

Pipe assembly (h)Clamp

o

(3) Install the service cover securely. Water may enter the unit if service cover not installed properly, resulting in unit malfunction and failure.

♠ WARNING (only for R32)

must/shall be installed outdoors.
• Reusable mechanical connectors and flared joints are not To avoid the risk of fire or explosion, the flared connection

allowed indoors.

unit

Flared joint outside

Wall

Seal hole with putty

Wall hole cover

Make sure that the connecting pipes do not touch the components within the unit. If pipes touch the internal components, it may generate abnormal sounds and/or vibrations.

2.2 Connecting pipes(1) Connect pipes on both liquid and gas sides.(2) Tighten nuts to specified torque shown in the table below.

Tightening torque (N·m)

Service valve size (mm)

ø6.35 (1/4") ø9.52 (3/8") ø12.7 (1/2")

14-18 34-42 49-61

HOW TO OPEN, CLOSE, REMOVE AND INSTALL THE AIR INLET PANEL 10. HOW

Pull the air inlet panel at both ends of lower part and release latches, then pull up the panel until you feel resistance. (The panel stops at approx. 70° open position)

Hold the panel at both ends of lower part, lower it downward slowly, then push it slightly until the 2. Close

3. Removing latch works.

Open the panel by 90° (as shown in the right illustration) and then pull it forward.

tion, hold the panel at both ends of lower part, lower it downward slowly, then push it slightly Insert the panel arm into the slot on the front panel from the position shown in right illustrauntil the latch works. 4. Installing

Approx. 90° Air inlet panel Panel arm

TO REMOVE AND INSTALL THE BOTTOM AND FRONT PANEI 11. HOW

Front panel

1. Bottom panel

1.1. Removing(1) Remove the 2 screws (in the cap).(2) Remove the 2 hooks of left and right side and then bottom panel can be removed.

1.2. Installing

(1) Install the 2 hooks of left and right side. (2) Secure the bottom panel with the 2 screws

(in the cap).

2. Front panel

Bottom panel

2.1. Removing (1) Remove the air inlet panel, the air filters and the bottom panel

(2) Remove the 2 screws. (3) Remove the 4 upper latches and then front

panel can be removed.

2.2. Installing (1) Cover the unit with the front panel and fix 4

the air filters.

Screw (in the cap) upper latches. (2) Secure the front panel with the 2 screws. (3) Install the bottom panel, the air inlet panel and

13. TERMINAL CONNECTION FOR AN INTERFACE

To install wired remote control, superlink etc., interface kit is needed.

Installing remote control holder (1) Select the place where the unit can receive

12. INSTALLING REMOTE CONTROI

signals. (2) Fix the holder to pillar or wall with wood

screws.

(Fit he poles with the indication marks + & -) (3) Set the cover again.

Do not use new and old batteries together.
 In case the unit is not operated for a long time, take out the batteries

NOTE

Control cover

Indoor unit PCB


(1) Remove the air inlet panel, bottom panel and front panel.(2) Remove the control cover.

(Remove the screw.) (3) There is a terminal


(respectively marked with CNS) While connecting an interface, connection kit SC-BIKN-E and SC-BIKN2-E" and fasten the connection harness supplied connection harness onto the for the indoor control board. indoor control box with the terminal securely with the with an optional "Interface connect to the respective

clamp and screw supplied with the kit. user's manual of "Interface connection kit SC-BIKN-E and SC-BIKN2-E". For more details, refer to the

Clamp CNS terminal Screw Ţ

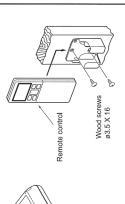



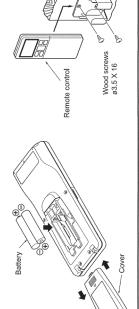

(1) Slide and take out the cover of backside. (2) Mount the batteries [R03 (AAA, Micro),

Mount the batteries

x2 pieces] in the body properly.


14. INSTALLING TWO AIR-CONDITIONERS IN THE SAME ROOM

In case two air-conditioners are installed in the same room, apply this setting so that one unit can be operated with only one remote control.

Setting one remote control

- Slide and take out the cover and batteries.
 Cut the switching line next to the battery
 - with wire cutters.


 (3) Set the batteries and cover again.

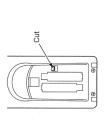

- Setting one indoor unit
 (1) Turn off the power source and turn it on after 1 minute.
- on the remote control that was set according to the procedure described on the left side. (2) Send the signal by pressing the ACL switch (3) Check that the reception buzzer sound
 - "Peep" is emitted from the indoor unit. Since the signal is sent about 6 seconds after the ACL switch is pressed, point the remote control to the indoor unit for a while.

NOTE

If no reception buzzer is emitted, restart the setting from the beginning.

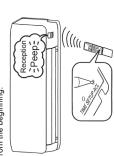

After finishing the installation work, check the following points again before turning on the power. Conduct a test run and ensure that the unit operates properly. At the same time, explain to the customer how to use the unit and how to take care of the unit following the user's manual. NOTE Indoor unit receives signal of remote control. **Test run** Check following points during test run. Air-conditioning operation is normal. There is no abnormal noise. Water drains out smoothly. Power source voltage complies with the rated voltage of air-conditioner. Power cable and connecting cable are securely fixed to the terminal block. Earth leakage breaker and circuit breaker are installed

Before test run, check following points.

Before test run

Explain the operating and maintenance methods to the user according to the user's manual. Keep this installation manual together with user's manual.

15. PUMP DOWN WORK

For the environmental protection, be sure to pump down when relocating or disposing of the unit. Pump down is the method of recovering refrigerant from the indoor unit to the outdoor unit before the connecting pipes are removed from the unit. When pump down is carried out, forced cooling operation is needed.

- least 5 seconds. Then operation will start.

Unit ON/OFF button

16. INSTALLATION CHECK AND TEST RUN

Display of remote control is normal. Both liquid and gas service valves are fully open.

After test run

Indoor and outdoor side pipe joints have been insulated.

Hole on the wall is completely sealed with putty.

Drain hose and cap are installed properly.

Screw of the lid is tightened securely.

No gas leaks from the joints of the service valves.

Forced cooling operation (1) Turn off the power source and turn it on

again after 1 miniute.
(2) Press the ON/OFF button continuously for at

For the detail of pump down, refer to the installation manual of outdoor unit.

During restart or change in operation mode, the unit will not start operating for approximately 3 minutes. This is to protect the unit and it is not malfunction.

Floor standing type (SRF) Models SRF25ZS-W, 35ZS-W

- RFB012A008B 🗥
- A wived renote control unit is supplied separately as an option part. When install the unit, be sure to check whether the selection of installation place, power source specifications, usage limitation (piping inergh, height differences between interpoor and outdoor units, power source witage and etc.) and installation spaces. This installation manual illustrates the method of installing an indoor For outdoor unit installation and refrigerant piping, please refer to page 113. unit. For electrical wiring work, please see instructions set out on the

SAFETY PRECAUTIONS

any user can read at any time. Moreover if necessary, ask to hand them to a Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly • Keep the installation manual together with user's manual at a place where

new user. pecautionary items mentioned below are distinguished into two levels, MARNING and M.CAUTION. WARNING : Wrong installation would cause serious conservations.

follow it during the installation work in order to protect yourself.

- Wrong installation would cause serious consequences such : Wrong installation might cause serious consequences
- If unusual noise can be heard during operation, consult the dealer. The meanings of "Marks" used here are shown as follows: Both mention the important items to protect your health and safety so strictly
- Pay attention not to fall down the tools, etc. when installing the unit at the Before starting the installation work, proper precautions (using suitable protective clothing, groves etc.) should be taken by qualified installer. high position.



△ WARNING Be sure to confirm no anomaly on the equipment by commissioning after completed installation and explain the operating methods as well as the maintenance methods

of this equipment to the user according to the user's manual.

depending on circumstances. as injuries or death.

△CAUTION

follow them by any means.

Always do it according to the instruction.

Tighten the flare nut by torque wrench with specified method.
 If the flare nuts were lightened with excess torque, this may cause burst and refrigant leakage after a long period.
 The electrical installation must be carried out by the qualified electrician in accordance with "the norm for electrical work" and

restribution must be carried out by the qualified installer.
If you install the system by yourself, if may cause serious trouble such as water leaks, electric shocks, fire and personal injury, as a result of a system maltundron. Do not carry out the installation and maintenance work except the by qualified installer.

Install the system in full accordance with the installation manual.

Incorrect installation may cause bursts, personal injury, water leaks,

Insufficient space can result in accident such as personal injury due to failing from the installation place. Take care when carrying the unit by hand:
Take care when carrying the unit by hand:
If the unit weights more than 20 kg, it must be carried by two or more fifthe unit weights more than 20 kg, it must be carried by two or more propose 20 not carry by the plastic situates, always use the carry handle peace.

Do not install the unit in the locations listed below.
 Locations where carbon fiber, metal powder or any powder is floating.
 Locations where any substances that can affect the unit such as sulphide

Locations where cosmetic or special sprays are often used

machine plant

are used.

gas, chloride gas, acid and alkaline can occur.

• Vehicles and ships.

"national wiring regulation", and the system must be connected to the dedicated circuit.

Power source with insufficient capacity and incorrect function done by Be sure to shut off the power before starting electrical work. improper work can cause electric shocks and fire.

electric shocks and fire.

Be sure to use only for household and residence.

If this appliance is installed in inferior environment such as machine shop

If parts other than those prescribed by us are used, It may cause water

and etc., it can cause malfunction.
Use the original accessories and the specified components for installation.

leaks, electric shocks, fire and personal injury.

Install the unit in a location with good support.

Unsuitable installation locations can cause the unit to fall resulting in

Failure to shut off the power can cause electric shocks, unit failure or incorrect function of equipment.

 Be sure to use the cables conformed to safety standard and cable Unconformable cables can cause electric leak, anomalous heat ampacity for power distribution work.

production or fire.

• This appliance must be connected to main power source by means of a circuit breaker or switch (fuse::16 A) with a contact separation of

at least 3 mm.

Use the prevaled cables for electrical connection, tighten the cables securely in terminal block and relieve the cables correctly to prevent overloading the terminal blocks.

Lose connections or cable mountings can cause anomalous heat production or rable mountings can cause anomalous heat production or rable mountings in the control box so that it cannot be pushed up further into the box. Install the service parent correctly.

refrigerant comes into contact with naked flames, poisonous gas is

during installation. If the refrigerant com

material damage and personal injury.

Ventilate the working area well in the event of refrigerant leakage

Locations where the unit is exposed to chimney smoke.

snow hood mentioned in the manual).

Locations at high altitude (more than 1000 m high).

Locations without good air circulation.

installation).

Incorrect installation may result in overheating and fire.

Be sure to switch off the power source in the event of installation,

inspection or servicing.
If the power source is not shut off, there is a risk of electric shocks, unit

If the earth leakage breaker is not installed, it can cause electric shocks failure or personal injury due to the unexpected start of fan.

• Be sure to wear protective goggles and gloves while at work.

• Earth leakage breaker must be installed. when installing in small rooms, take prevention measures not to exceed the density limit of refrigerant in the event of leakage, referred by the formula (accordance with 1805449).

If the density of refrigerant exceeds the limit, consult the dealer and install the ventilation system, otherwise lack of oxygen can occur, which is a cause serious acodem.

After completing installation, check that no refrigerant leaks from the system.

The refrigerant leaks into the room and comes into contact with an over or firefigerant leaks from it freit gleant leaks into the room and comes into contact with an over or firefigerant leaks from it freit gleant leaks from it freit gleant leaks from the system.

Use the prescribed pipes, flare nuts and tools for R32 or R410A.

Using existing parts (for R22 or R407C) can cause the unit failure and serious accderise due to burst of the enfigerant circuit mittellure and the serious accderise the system.

 Do not bundle or wind or process the power cable. Do not deform the power cable by treading it.

This may cause fire or healting.

 Do not vorit R32 or R410A lino atmosphere.

Stals a fluctured greenhouse gas with a Global Warming Potential (GWP) = 675. R410A is a flucturated greenhouse gas with a Global Warming Potential (GWP) = 2088. Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulphide gas can occur.
 Poisonous gases will flow into the room through drainage pipe and

corrosion of the indoor unit and a resultant unit failure or refrigerant leak.

seriously affect the user's health and safety. This can also cause the

0

 Do not run the unit with removed panels or protections.
 Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shocks. If air enters in the refrigerant circuit, the pressure in the refrigerant circuit becomes too high, which can cause burst and personal injury.

Do not process or splice the power cable, or share the socket with Ensure that no air enters in the refrigerant circuit when the unit is installed and removed.

יויה וטיטט uperation by snort-circuiting protective device of pressure switch and temperature control or the use of non specified component can cause fire or burst. Do not perform any change of protective device itself or its setup condition. The forced operation by short-circuiting protective device of pressure switch a other power plugs.

This may cause fire or electric shock due to defecting contact, defecting insulation and over-current etc.

· Carry out the electrical work for ground lead with care.

Do not connect the ground lead to the gas line, water line, lighthing conductor or telephone line's ground lead. Incorrect grounding can cause unit faults such as electric shocks due to short-circuiting.

Dispose of any packing materials correctly. Using the incorrect one could cause the system failure and fire. Install isolator or disconnect switch on the power source wiring in

when carrying the unit by hand. Use gloves to minimize the risk of cuts by the aluminum fins.

Use the circuit breaker of correct capacity. Circuit breaker should be able to disconnect all poles under over current.

Any remaining packing metrials can cause personal injury as it contains a final and wood. And to avoid denger of sufficient, be sure to keep the plastic wrapper away from children and to dispose after tear it up.

• For installation work, be careful not to garden and the fact it up.

• For installation work, be careful not to garden and the fact it up.

• For installation work, be careful not to garden and the fact it up.

• For installation work, be careful not to garden and the fact in the acceptance, plant garden are portion or screws atc.

• For sure to insulate the refrigerant pipes so as not to condense the archeritation or cause condensation, which can lead to insulative or many faction and the careful and the archeritation and the condition or operation (cooling or drying to operation) in which ventilator is installed in the room in this rese, using the air-conditioner in parallel with the ventilator, there is the possibility that drain water may backflow in accordance with the room in a such that the proportate to eventilation (for example; Open the door a fittle). In addition, just as above, so set up the opening port if the room lapse into megative pressure status due to register of the wind for the high accordance with the local codes and regulations.

The isolator should be locked in OFF state in accordance with
EN80204-1.

Be sure to install indoor unit property according to instruction
manual so that drainage can run off smoothly.

Be manual so that drainage can run off smoothly.

Improper installation of indoor unit can cause dropping water into the installation of indoor unit drainage securely according to the installation manual.

Incorrect installation of the drainage pipe can cause dropping water into open the room and damaging personal property.

Be sure to install the drainage pipe with descending slope of 1/100.

Propose and not for make traps and air-bleedings.

Check if the drainage runs off securely during commissioning and ensure open. the space for inspection and maintenance.

A After maintenance, all whiring wind pig sa and the like, should be returned to their original state and wining route, and the necessary clearance from all metal parts should be secured.

Secure a space for or installation, inspection and maintenance specified in the manual.

· Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work. If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can occur, which can cause rise apartment etc. serious accidents. Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances are handled.

Since the indoor unit is not waterproof, it can cause electric shocks and fire. Corrosive gas can cause corrosion of heat exchanger, breakage of plastic parts and etc. And combustible gas can cause fire.

• Do not use the indoor unit at the place where water splashes may occur such as in laundries. Locations where any machines which generate high frequency harmonics · Locations with direct exposure of oil mist and steam such as kitchen and

equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns. The system can also affect medical Do not install nor use the system close to the equipment that generates electromagnetic fields or high frequency harmonics. Equipment such as inverters, standby generators, medical high frequency equipment and telecommunication equipment, and obstruct its function or Locations with salty atmospheres such as coastlines.
 Locations with heavy snow (if installed, be sure to provide base flame and

• Do not place any variables which will be damaged by getting wet under the indoor unit. Locations with ammonic atmospheres (e.g. organic fertilizer).
 Locations with calcium chloride (e.g. snow melting agent).
 Locations where heat radiation from other heat source can affect the unit.

When the relative humidity is higher than 80 % or drainage pipe is cloggec condensation or drainage water can drop and it can cause the damage of Do not install the remote control at the direct sunlight. Locations with any obstacles which can prevent inlet and outlet air of the unit.
 Locations where short-circuit of air can occur (in case of multiple units)

It can cause malfunction or deformation of the remote control.

• Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or It can cause the damage of the items. Locations where strong air blows against the air outlet of outdoor unit.
 Locations where something located above the unit could fall.
 It can cause remarkable decrease in performance, corrosion and damage of components, malfunction and file.

Do not install the indoor until in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation).

 Do not use any materials other than a fuse with the correct rating in the location where fuses are to be used.

Connecting the circuit with copper wire or other metal thread can cause unit. Locations with any obstacles which can prevent inlet and outlet air of the

cold depending the operating condition, and it can cause burn injury or frost Do not touch any refrigerant pipes with your hands when the system During operation the refrigerant pipes become extremely hot or extremely failure and fire.

• Do not touch any buttons with wet hands. It can cause electric shocks. unit.
• Locations where vibration can be amplified due to insufficient strength of structure.
• Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam (in case of the infrared specification unit).

Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 1 m).

Water leakage and permanent damage may result. Electrical hazard exists. injury.

Do not wash the inside of the air-conditioner.

Locations where drainage cannot run off safely.
It can affect performance or function and etc.
Do not install the unit near the location where leakage of combustible gases can occur.
It leaked gases accumulate around the unit, it can cause fre.

ACAUTION Go through all installation steps and check if the drainage is all right. Otherwise water leak may occur.

Pour water to the drain pan located under the heat exchanger, and ensure that
the water is discharged outdoor.
 When the extended drain hose is indoor, securely insulate it with a heat insulator
available in the market.

The gap to the ground The drain hose tip is 5 cm or less is in the gutter

The drain hose

Higher than specified

Arrange the drain hose in a downward angle.Avoid the following drain piping.

Drainage

Left downward

Odor from the gutter

may cause abnormal noise and vibration.

BEFORE INSTALLATION

OBefore installation check that the power source matches the air-conditioner.

Installation board

② Wireless remote control ③ Remote control holder

© Wood screws


U)	Standard accessories (Installation kit) Accessories for indoor unit	Qʻty
Θ	Installation board (Attached to the rear of the indoor unit)	-
0	Wireless remote control	-
6	Remote control holder	-
4	Tapping screws (for installation board ø4 X 25 mm)	6
9	Wood screws (for remote control switch holder ø3.5 X 16 mm)	2
0	Battery [R03 (AAA, Micro) 1.5 V]	2
0	Air-cleaning filters	2
∞	Filter holders (Attached to the front panel of indoor unit)	2
6	Pipe cover (200 mm)	-
9	Band	2

	Locally procured parts	Q'ty
(a)	Sealing plate	-
9	Sleeve	-
0	Inclination plate	-
9	Putty	-
(0)	Drain hose (extension hose)	-
Θ	Piping cover (for insulation of connection piping)	-

	(10) Illsaration of collifection piping)
	Necessary tools for the installation work
-	Plus headed driver
2	Knife
3	Saw
4	Tape measure
5	Hammer
9	Spanner wrench
7	Torque wrench $\begin{pmatrix} 14.0-61.0 \text{ N·m} \\ (1.4-6.1 \text{ kgf·m}) \end{pmatrix}$
8	Hole core drill (65 mm in diameter)
6	Wrench key (Hexagon) [4 mm]
10	Flaring tool set (Designed specifically) for R32 or R410A
=	Gas leak detector (Designed specifically) for R32 or R410A
12	Gauge for projection adjustment (Used when flare is made by using) conventional flare tool
13	Pipe bender

Son + Service Space (30 cm) Be careful not to stress the connecting refrigerant pipes. (Do not pull with a force of larger than 5 kgf.) If improperty installed, it O Tape only the portion that goes through the wall. O Always tape the wiring with the piping. Sleeve (sold separately) In case of piping in the right rear direction putty Indoor side Installing the support of piping Sufficient care must be taken not to damage the panel when connecting pipes. cm minimum from the ceiling A WARNING Completely seal the hole in the wall with purly. If not seaded properly, dust, insects, small animals, and highly furnid air may enter the room fighly furnid air may enter the room from useds, which could result in fre or other hazards. A CAUTION Completely seal the hole in the wall with putby. If not sealed property, furniture and other fixtures may be demaged by water feakage or conclensation. Right bottom piping For Right or Left bottom piping Taping of the exterior 15 cm or below from the floor Installed state When drilling the wall that contains a metal lath, wire lath or metal plate, be sure to use pipe hole sleeve sold separately For Right or Left piping 9L* OWhere there is no obstructions to the air flow and where the cooled and heated air can be evenly distributed. A solid place where the unit or the wall will not whate. A solid place where the will be mough space it or servicing (Where space mentioned right can be secured) Where wring and the place where there will be enough space it or servicing (Where space mentioned right can be secured) Where wring and the place place space in or secured in the place where the place where it can be assign dailined. A place where it can be assign dailined. A place where the unit or act appead to the direct rays of the sun or the streat lighting. Places where the unit in call effected by the fight frequency equipment or electric equipment. A wold installing this in this no electric equipment or mouth oil mist. Places where these in one electric equipment or household under the installing unit. Turn to Indoor side Outdoor side The screw of the lid is tightened OA place where the air-conditioner can be received the signal surely during operating the wireless remote control. O Places where there is no affected by the TV and ratiol etc. Ob not place where exposed to direct surigif or near heat devices such as a stove. Right rear piping SELECTION OF INSTALLATION LOCATION (Install at location that meets the following conditions, after getting approval from the customer) 97 For Right or Left rear piping Themove the air inlet panel. The set screws. The set screws. If the altches in the upper section. If the altches are difficult to remove, push the latch portion out using a screw diver, for example. Drilling of holes and fixture of sleeve (Locally procured parts) O In case of rear piping draw out, cut off the lower and the right side portions of the sleeve collar. Thickness of the wall + 1.5 cm **NSTALLATION OF INDOOR UNIT** 18.5 9p Left rear piping Open and detachment of the air inlet panel O To open, pull the panel at both ends of upper part and release latches, and undo the strings. Then remove the panel. Piping is possible in the rear, left, left rear, left downward, right or downward direction. △CAUTION When removing the air inlet panel, be careful not to drop it on your feet. How to remove the front panel Indoor unit piping direction Outdoorside O Drill a hole with whole core drill. Wireless remote control Left rear 7 / W under section. Right 1/7 Indoor side Indoor unit Rear


Wiring holder

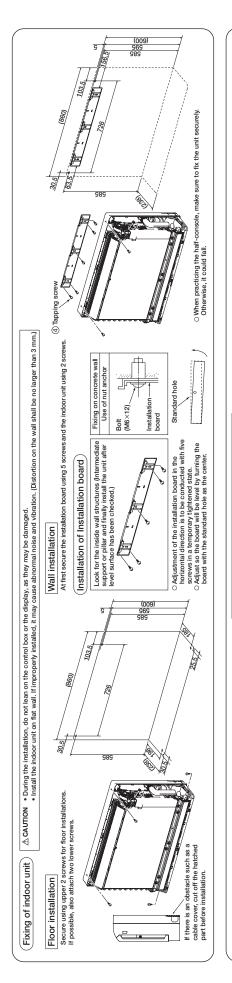

CONNECTION OF REFRIGERANT PIPINGS

Keep the openings of the pipes covered with tapes etc. to prevent dust, sand, etc. from entering them. Preparation

Indoor

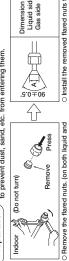

Dimension A (mm)
Liquid side \$\phi 6.35 : 9.1
Gas side \$\phi 9.52 : 13.2
\$\phi 12.7 : 16.6\$

O Install the removed flared nuts to the pipes to be connected, then flared the pipes.

 Δ CAUTION Do not apply refrigerating machine oil to the flared surface.

Flaring work

Wing nut type 1.5 - 2.0 Use a flare tool designed for R32, R410A or a conventional flare tool. Note that measurement B (protuzion from the flaffing block) wall vary depending on the type of a flare tool in use. If a conventional flare tool is used, use a copper pipe gauge or a similar instrument to check protusion so that you can keep measurement to check protusion so that you can keep Conventional (R22) flare tool 1.5 - 2.0 2.0 - 2.5 Measurement B (mm) Clutch type flare tool Conventional for R32 or R410A Clutch type 1.0 - 1.5 1.0 - 1.5 1.0 - 1.5 0.0 - 0.5 0.0 - 0.5 0.0 - 0.5 Copper pipe diameter φ6.35 ϕ 9.52 φ12.7

Copper pipe

Do not apply excess torque to the flared nuts. Otherwise, the flared nuts may check depending. O Connect the pipes on both liquid and gas sides.

O Tighten the nuts to the following torque.

Liquid side (\$6.39): 14.0 - 18.0 Nm (1.4 - 1.8 kgf+n)
Gas side (\$6.39): 3.40. - 42.0 Nm (3.4 - 4.2 kgf+n)
(\$6.27]: 3.40.0 - 61.0 Nm (4.9 - 61.1 kgf+n) \triangle CAUTION Be careful not to stress the connecting refrigerant pipes. (Do not pull with a force of larger than 5 kgt,) **△** CAUTION (Do not turn) S.B Liquid side Gas side Connection Indoor

Cover the exterior portion with outer tape and shape the piping so it will match the contours of the route that the piping to take. Also fix the wiring and pipings to the wall with clamps.

Connection wiring, Earth wiring

(O)

Refrigerant piping - Outer tape Drain hose Wood screw Clamp

Finishing work and fixing

Cover the coupling with insulator and then cover it with tapes. Insulation of the connection portion

130 155 45 Pass the refrigerant pipe through the piping hole to indoor side.

Arrange the pipes according to the direction of piping.

@ Pipe cover Refrigerant pipe Use an attached @ pipe cover for heat insulation. Tape @band Add Refrigerant pipe Position it so that the slit area faces upward Sii | Refrigerant | pipe Siit

 Cover the indoor unit's flare-connected joints, after they are checked for a gas leak, with an indoor unit heat insulating material and then wrap them with a tape with an attached (® pipe cover placed over the heat insulating material's slif area. ▲ CAUTION If heat insulation is insufficient, water leakage may occur. In addition, the room temperature sensor may give a false alert due to heat radiation from the pipes.

Terminal block

Use cables for interconnection wiring to avoid loosening of the wires. CENELEC code for cables Required field cables. In case of faulty wiring connection, the indoor unit stops, and then the run lamp turns on and the timer lamp blinks. H05RNR4G1.5 (example) or 245IEC57

ELECTRICAL WIRING WORK

Mounting of connecting wires

Preparation of indoor unit

Polychloroprene rubber conductors insulation Natural-and/or synth, rubber wire insulation 300/500 volts

Number of conductors Stranded core

One conductor of the cable is the earth conductor (yellow/green) Section of copper wire (mm²)

display, as they may be damaged.

• Pass the connecting wire securely through the wining holder. If it passeson the sensor, it may not detect suction temperature and/or humidity. $\underline{\mathbb{A}}$ CAUTION • During installation, do not lean on the control box or the

Sensor Fixing screw Earth wire shall be Yellow/Green (Y/G) – in color and longer than other AC wires for safety reason.

> (i) Remove the fixing screw of clamp.
> (iii) Connect the connecting wire securely to the terminal block.
> 1) Connect the connection wire securely to the terminal block. If the wire is not affixed completely, contact will be poor, and it is dangerous as the terminal block may heat up and catch fire. and outdoor connections.

Fix the connecting wire by wining clamp.
 Pass the connecting wire through the wiring holder


gas sides)





- Open the air inlet panel and remove the air filters.
- 2. Install the air-cleaning filter in the filter holders, and then install the filter
- holders in the air-conditioner.
 Each air-cleaning filter can be installed in the upper or lower filter
- holder. Install the air filters and close the inlet




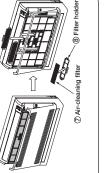

INSTALLING TWO AIR-CONDITIONERS IN THE SAME ROOM

Setting the remote control

Dull out the cover and take out batteries.
 Discomerct the switching line next to the battery with wire cutters.
 Insert batteries, Close the cover.

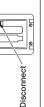

Setting an indoor unit

(i) Tum off the power source, and tum it on after 1 minute.

(iii) Four the remote control that was set according to the procedure described on the left side at the indoor unit and send a signal by pressing the ACL switch on the remote control. Since the signal is sent in about 6 seconds after the ACL switch is pressed, point the remote control at the indoor unit for some time.

③ Check that the reception buzzer sound "peep" is emitted from the Indoor unit.
At completion of the setting, the indoor unit emits a buzzer sound "peep". (If no reception tone is emitted, start the setting from the beginning again.)

When two air conditioners are installed in the same room, use this setting when the two air-conditioners are not operated with one remote control. Set the remote control and indoor unit.

CONNECTION FOR AN INTERFACE CONCERNING TERMINAL

1 Remove the front panel and lid of control. 2 There is a terminal (respectively marked with CNS) for the indoor control

with the connection harness supplied with an option "Interface connection kit SC-BIKN2-E" and fasten the connection harness onto the In connecting an interface, connect to the respective terminal securely indoor control box with the clamp supplied with the kit. For more details, please refer to the user's manual of your "Interface connection kit SC-BIKN2-E".

5 cm or more 5 cm or more

HOW TO RELOCATE OR DISPOSE OF THE UNIT

INSTALLATION OF WIRELESS REMOTE CONTROL

6 Battery

⊕2

Ouncover the wireless remote control, and mount the batteries [R03 (AAA, Micro), × 2 pieces] in the body regularly.

(Fit the poles with the indication marks, \bigoplus & \bigcirc without fail)

Do not use new and old batteries together.

Mounting method of battery

JP171 CUSTOM
JP170 (AUTORESTART
JP173 (AUTORESTART
JP172 (COOL OMLY

incorrect installation may cause problems such as non-cooling, non-warming, and condensation water leaking into the room.

right figure.

② Do not let the horizontal bar obstruct wind from blowing out upward/downward or reception from the remote control.

(3) The lattice size should be 70 % or greater of the open rate.

(4) Cut the jumper cable (JPT/3) on the indoor circuit board to control the blow-out angle.

Install the indoor unit according to the following instructions. Secure the upper, right, and left spaces according to the

Concealed installation

Oll order to protect the environment, be sure to pump down Proced cooling operation (recovery of refrigerant).

Tum on a power source again after a while after tum off a power source. (recovery of refrigerant).

Then press continually the ON/OFF button 5 seconds or more. (recovery of refrigerant).

O Pump down is the method of recovering refrigerant from the indoor unit to the outdoor unit when the pipes are removed from the unit.

<How to pump down>

 Connect charge hose to service port of outdoor unit.
 Didging disc: Close the liquid valve with hexagon wrench key.
 Gas side: Fully open the gas valve
 Carry out cooling operation. (If indoor temperature is low, operate forced cooling operation.)

(3) After low pressure gauge become 0.01 MPa, stop cooling operation and close the gas valve.

⑤Wood screws ^ੴ ø3.5 X 16 ∞

② Wireless remote control

○Conventionally, operate the wireless remote control by holding in your hand. ○Avoid installing it on a clay wall etc.

Fixing to pillar or wall

Unit ON/OFF button - [%]

Check the following points again after completion of the installation, and before turning on the power. Conduct a test run again and ensure that the unit operates properly. At the same time, explain to the customer how to use the unit and how to take care of the unit following the user's manual. **NSTALLATION TEST CHECK POINTS**

Cover

Power cables and crossover wires are securely fixed to the terminal board. The power source voltage is correct as the rating. No gas leaks from the joints of the service valve. After installation
The power sou

The screw of the lid is tightened securely.

Air-conditioning operation is normal. Water drains smoothly. No abnormal noise. Fest run The pipe joints for indoor and outdoor pipes have been insulated. Service valve is fully open.

The remote control is normal. Protective functions are not working.

When the air-conditioner is restarted or when changing the operation, the unit will not start operating Operation of the unit has been explained to the customer. (Three-minutes restart preventive timer) for approximately 3 minutes. This is to protect the unit and it is not a malfunction.

Ceiling concealed type (SRR) Models SRR25ZS-W, 35ZS-W

RJJ012A003F△

FOR MODEL SRR SERIES R32/R410A REFRIGERANT USED

A wired remote control unit is supplied separately as an optional part. While installing the unit, be sure to check the selection of installation place, power source specifications, usage limitation (piping length, height differences between indoor and outdoor units, power source voltage etc.)

This installation manual illustrates the method of installing an indoor unit.
 For electrical wiring work, see instructions set out on the backside.
 For outdoor unit installation and refrigerant piping, refer to Page 113.

SAFETY PRECAUTIONS

Bedrece intaliation, read the "SAFETY PRECALTIONS" carefully and strictly or Bedrece integrates and strictly or Bedrece integrates and strictly or the strictl

depending on droumstances. If unusual noise can be heard during operation, consult the dealer. Both mention the important items to protect your health and safety so strictly • The meanings of "Maris" used here are shown as follows:

6	Never do it under any	U		ΑŅ
<u> </u>	circumstances.	•	D	ins

ways do it according to the struction.

conformable cables can cause electric leak, anomalous heat

refrigerant comes into contact with naked flames, poisonous gas is material damage and personal injury.

Ventilate the working area well in the event of refrigerant leakage

When hydging this appliance, a plug conforming to the norm
IEC5084-4 must be used to relectrical connection, tighten the
Use the prescribed cables for electrical connection, tighten the
cables securely in terminal block and relieve the cables connectly to
prevent overloading the ferminal blocks.
Loses connections or cable mountings can cause anomalous heat
poduction or fine in the control box so that it cannot be pushed up when the box. Install the service panel correctly. When installing in small rooms, take prevention measures not to exceed the density line in orfergeant in the event of leake age, referred by the formula (accordance with ISOS) exists of leake and itself the density of refigerant exceeds the limit, consult the dealer and prinsal the verifiation specim, otherwise act of experience occur, which is a criticals serious scudent.

refrigerant less to the front and comes into contact with an oven or other hot suffers, poisones gas is produced. Use the prescribed pipes, first nuts and lools for R32 or R410A. Use the prescribed pipes, first nuts and lools for R32 or R410A stage exting place (from F32 or F410A). The cause is expected to the product of the refrigerant crount.

Do not put the drainage pipe directly into drainage channels where poleonous gases such as supplied gase no cours per an occur of the power cord by treading the power cord by treading

0

correction of the indoor unit and a resultant unit failure or refigerant leak. R22 is internated genetious gas with a debath Warming Potential (OWP) = 1.05 a functionated greenhouse gas with a clicbal Warming Potential (OWP) = 2.08 internated and remove in the refigerant circuit when the unit is processor in the refigerant circuit (OWP) = 2.09 in the refigerant circuit, the pressure in the refigerant circuit (OWP) = 2.09 in the refigerant circuit (OWP) = 2.09 in the refigerant circuit, the pressure in the refigerant circuit (OWP) = 2.09 in ordinal removed panels or protective device circuit (OWP) = 2.09 in the refigerant circuit (OWP) = 2.09 in ordinal removed panels or protective device itself or deservice for the service of the removed panels or protective device itself or deservice for the service or deservice or deservice for the service or deservice for the service or deservice for the service or

 MARNING
 follow them by any means.

Be sure to confirm no anomaly on the equipment by commissioning after completed institution and explain the operating methods as well as the maintenance methods of this equipment to the user according to the owner's manual.

I installation must be carried out by the qualified installer.

If you install the system by Quartef, I may be assessed assessed as selected to the system and the system of yourseff, I may be assessed as selected to the system and the system of the system and the system of the sys

production or fire.

• This appliance must be connected to main power source by means of a circuit breaker or switch (fuse:16A) with a contact separation of at least 3mm. incorrect function of equipment.
 Be sure to use the cables conformed to safety standard and cable ampacity for power distribution work.

installation.
If parts other than those prescribed by us are used, it may cause water

leaks, electric shocks, fire and personal injury.

Install the unit in a location with good support.

Unsuitable installation locations can cause the unit to fall resulting in

concret installation may result in overheating and fire.

• Be sure to switch off the power source in the event of installation, impaction or servicing, in the power source in the event of the event of the fire is a risk of electric shocks, unit failure or presonal rijury due to the unexpected start of fain. Be sure to wear protective goggles and gloves while at work.
 Earth leakage breaker must be installed.
 If the earth leakage breaker is not installed, it can cause electric shocks.

cause personal injury due to entrapment, burn or electric shocks.

• Do not perform any change of protective device itself or its setup

temperature controller or the use of non specified component can cause fire or burst.

 Locations where drainage cannot run off safely.
It can affect performance or function and etc.
Do not install the unit near the location where leakage of combustible gases can occur. If leaked gases accumulate around the unit, it can cause fire

carry out the electrical work for ground lead with care.
 Do ndo connect the good made and the season in a season of the season of

△ CAUTION

when carrying the unit by hand. Use gloves to minimize the risk of cuts by the autumni fins.

Dispose of any packing materials cornectly.

Dispose of any packing materials cornectly.

Any remaining packing materials can cause personel injury as it contains mals and wood. And to avoid dather of sufficiency be sure to keep the pastic whence and wood. And to avoid dather of sufficiency as earth of pastic whence is and wood. And to avoid dather it uposes the pastic whence it is not known to pind fine the parties of the pastic whence is an infent air mosters on the order sould be a modern and an ambient air mosters on the modern and in the room. In this case, when perform the art-conditioner coparation (conting or drying operation) in which wentfler or is instained in the room in this case, using the air-conditioner to paration it coloring or drying operation) in which wentfler or is installed in the room in that may apportant to ventilation (For example: Open the door a fitting, in addition, last sa above, so set up the open important etc.

Be sure to perform air githness test by pressurizing with nitrogen gas after completed with the went of refrigerant face sequences are the search of the small room, lack of parties of the small room, lack of the sanger of the case, which can cause services of the small room, lack and the small room, lack of operation in the small room, lack of others are constanted for the small room, which can cause services services and the small room, lack of operation in the small room, lack of others. Use the circuit breaker of correct capacity. Circuit breaker should whe be able to disconnect all posts under over current.

Using the incorrect nor could cause the system failure and fire.

Using the incorrect nor could cause the system failure and fire.

Install isolator of disconnect switch on the power source wiring in accordance with the local codes and regulations.

Fine isolator should be locked in OFF state in accordance with particles of the sure to install into current property seconding to instruction and sampling personal property.

Fine sure in the standard indoor unit can cause dropping water into the installation of indoor unit can cause dropping water into the installation of indoor unit can cause dropping water into the installation of the drainage pipe can cause dropping water into opin incord installation of the drainage pipe or run of drainage specurely according to most the misstallation of the drainage pipe with descending slope of 1/100 post incord installation of the drainage pipe with descending slope of 1/100 post of more, and not for make a traps and drainage pipe or manifestions of more and maintenance all winds, whing ties and the like, should be addrained by space for installation pibe.

Secure as specified in the manual.

If the latting from the installation pibe.

Take can when carrying the unit by the secured.

If the latting from the installation pibe.

Take can when carrying the unit by the carried by two or more persons. Do not carry by the plastic straps, always use the carry handle

Do not install the unit where corrosive gas (such as sulfurous acid gas etc.) or combustible gas (such as thinner and petroleum gases) can accumulate or collect, or where volatile combustible substances aren handled.

our residue gas can cause connesion of heat exchanger, breakage of plastic parts and effect And our state flows.

On not use the indoor unit at the place where water splashes may occur start as in mandoor unit at the place where water splashes may occur start as in mandoor unit is not water place or the equipment that one on threat nor has yet more one or the agent modes or the equipment that one or threat nor has yet modes or the equipment that a place and the system can be accompanied falled or high frequency harmonics. Aduption start is surface the start of the place Do not insell be until the the carloons listed below.

 Uncontained the properties of the carloons listed below.

 Uncalloon where any substances that can affect the unit such as suphible of contained where any substances that can affect the unit such as suphible of the substances and sell and safety of any affection of the contained where conserved and stall near the contained where contained any affective and the contained and the contained which discuss the contained which generate high frequency harmonics is are used.
 Locations with salty atmospheres such as coastlines.
 Locations with heavy snow (if installed, be sure to provide base flame and

 Do not place any variables which will be damaged by getting wet under the indoor unit.
 When the restlaven unitially is higher than 90% or drainage pipe is clogged owndersalion or drainage water can drop and it can cause the damage of snow hood mentioned in the manual,

Locations where the unit is exposed to chimney smake.

Locations where the unit is exposed to chimney smake.

Locations with admonthed most phese (e.g. organic fertilizer).

Locations with admonthed most phese (e.g. snow melting agent).

Locations with admonthed most phese (e.g. snow melting agent).

Locations with any obstantion from other heat source can affect the unit.

Locations within any obstantion melting mention.

Locations within any obstantiation.

It can cause the damage of the items.

• Do not use any marked as other than a fuse with the correct rating in the location where fuses are to be used.

Connecting the circuit with copper wire or other metal thread can cause unit Do not install the remote control at the direct sunlight.
It can cause malfunchiour or deformation of the remote control.
 Do not use the unit for special purposes such as storing foods, cooling precision instruments and preservation of animals, plants or Locations with any obstacles which can prevent interest of the country of the components and the components are components mattered and the components mattered on the locations listed below (Be sure to its stall the indoor unit and components mattered on the components of the

During progression the refrigerant pipes become extremely hot or extremely oold depending the operating condition, and it can cause burn injury or frost Do not touch any refrigerant pipes with your hands when the system · Do not touch any buttons with wet hands. Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam (in case of the infrared specification unit).
 Locations where an equipment affected by high harmonics is placed (TV set or radio receiver is placed within 1m). · Locations where vibration can be amplified due to insufficient strength of

Do not wash the inside of the air-conditioner.
 Water leakage and permanent damage may result.
 Electrical hazard exists.

Check before installation work

- Model name and power source
 Refrigerant piping length
 Piping, wiring and miscellaneous small parts

Indoor unit

Q'ty	1	1	1	1	2	c
Standard accessories (installation kit) Accessories for indoor unit	Wireless remote control	Remote control holder	Remote control signal receiver	Installation frame (for remote control signal receiver)	Wood screws (for remote control holder ø3.5 X 16mm)	Rattery (DO3 / AAA Micro) 1 5\/1
	Θ	0	ම	⊕	9	@

Wireless enrore control of Remote control of Remote control signal record installation signal record installation signal record installation signal record installation signal record who of screen secontrol holder (in termine control holder (in termine control holder (in termine control holder (in termine control holder (in termine signal record in the control si	Standard accessories (installation kit) Accessories for indoor unit	Q'ty
	lote control	-
	rol holder	-
	Remote control signal receiver	-
	Installation frame (for remote control signal receiver)	1
	Wood screws (for remote control holder ø3.5 X 16mm)	2
	Battery [R03 (AAA, Micro) 1.5V]	2
	n hose)	1
	Clamp (for drain hose) (big:1, small:1)	2
-	Washer (for suspension bolt M10)	8
	Flat head machine screw (for remote control signal receiver M3.5x10)	2
_	(-
	ig:1, small:1)	2
(3) Band		4

	Locally procured parts	Ď,
(4)	Sealing plate	-
(m)	Sleeve	-
0	Inclination plate	-
0	Putty	-
(H)	Drain hose (VP25)	-
(E)	Suspension bolts (M10)	4
0	Nuts (M10)	8
(Spring lock washers (M10)	4

Space for installation and service


Wireless remote control


Drain pipe, refrigerant gas and refrigerant liquid pipe

⇒

	Necessary tools for the installation work
-	Plus headed driver
2	Knife
3	Saw
4	Tape measure
2	Hammer
9	Spanner wrench
7	Torque wrench [14.0~62.0N·m (1.4~6.2kgf·m)]
80	Hole core drill (65mm in diameter)
6	Wrench key (Hexagon) [4mm]
10	Flaring tool set (Designed specifically for R32 or R410A)
1	Gas leak detector (Designed specifically for R32 or R410A)
12	Gauge for projection adjustment (Used when flare is made by using conventional flare tool)
13	Pipe bender

Inspection opening (2) Not Use Not Use Ose Use Ose Ose Use Use Completely seat the hole in the wall with purity. If not sealed property, furniture and other fixtures may be damaged by water leakage or condensation. Inspection opening (1) Not Use Not Use Not Use Not Use Not Use Not Use Use Nse Inspection opening for services Connecting wire (between indoor and outdoor) Clamping of the flare of required and gas refrigerant pipe Unit display section (Remote control signal receiver) installation and removal of blower Replace heat exch sensor Service Remote control holder S Wood screws Drain pipe connection Replace drain pump ① Wireless remote control Replace air filter Control box The minimum dimensions when used Bottom air inlet kit (Option parts) are shown in parentheses. Where there is no obstructions to the air flow and where the cooled and heated air can be evenly distributed. Where there is no obstructions to the air flow and where the cooled and heated air can be evenly distributed. A firm closurous that may suitain the weight of the unit, and no thought of the celling to Worlade. A place where there will be enough space for sevringing (Where space mentioned below can be secured) Where with and the place which will be easy to conduct. The place where it can be easyly distinct. The beginning the conduct and the sound in the distribution of the distribution of the distribution of obstance of the distribution of obstance where the celling the state of the light frequency of the major flow of the major and the celling, the entire inside of celling acts as an air suction dut so that the capacity is closured in the state of the state of the celling, the entire inside of celling acts as an air section dut so that the capacity is closured in the state of the state of the celling. The entire inside of celling acts as an air section dut so that the capacity is closured in the state of the celling, the entire inside of celling acts as an air section dut so that the capacity is closured in the state of an deather fundingly brunding condition and sound 32 or and eather fundingly brunding condition and the capacity is closured and celling acts and celling acts and condition of 10 to 20mm thick for entire surface of indoor unit, engage for the major of the second connected to effect the connected to effect as in thate condition and external state pressure caces are affected to effect of insufficient performence due to less an forward in the received as in the products with a few means seem through the received as in the connected to effect as in thate or at browned, the risk programs are confirmed to a few means and the products with a service confirmed to effect as in the products with a few means of the products with a connected to effect as in the connected to effect as in the con ₩ **<** 270 or more A place where the air-conditioner can be received the signal surely during operating the wireless remote control of faces where there is no affected by the Tand Tadlo the Top Control Place where there exposed to direct samilgit or near heat devices such as a stove. 150(50) or more SELECTION OF INSTALLATION LOCATION 100(80) or more *Dimensions of the opening on the ceiling after removing inspection opening (1) 720

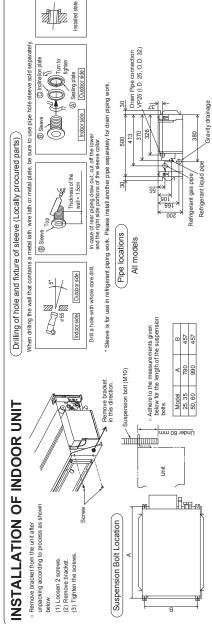

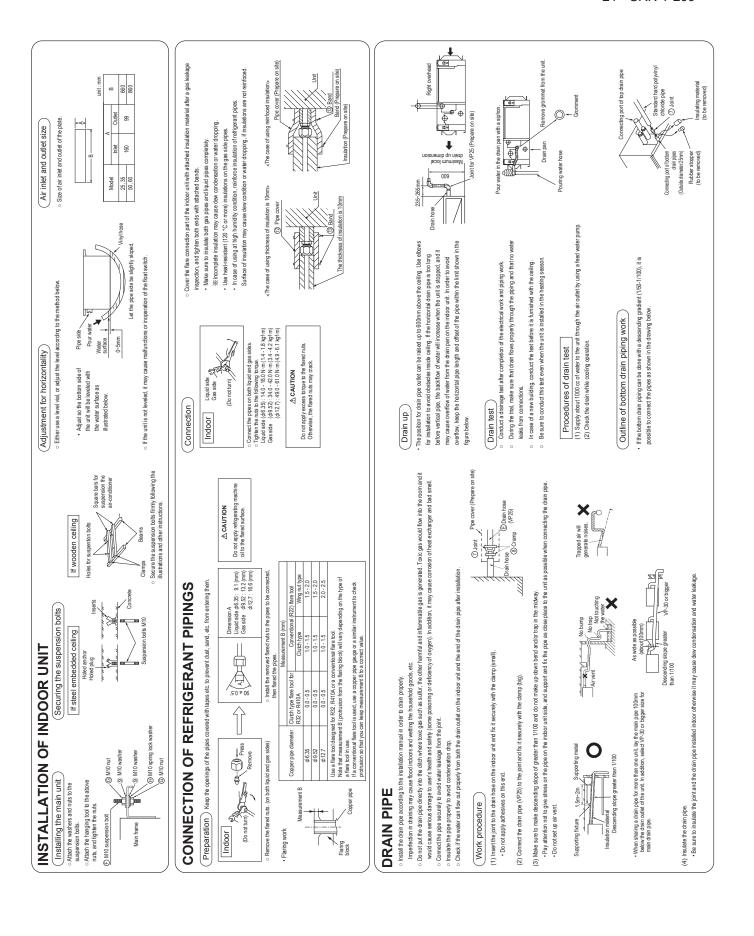



INSTALLING TWO AIR-CONDITIONERS IN THE SAME ROOM When two air-conditioners are installed in the same room, use this setting when the two air-conditioners are not operated with one remote control. Set the remote control and indoor unit.

Setting an indoor unit

 Pull out the cover and take out batteries.
 Disconnect the switching line next to the battery with wire cutters. Setting the remote control

Preparation of indoor unit) o In case of faulty wing connection, indoor unit does not operate. Then, run lamp turns on and finer lamp blinks.

Mounting of connecting wires

05 30090 vate 6 year Nativa end or synth, rubber wire insulation R Nativa end or synth, rubber wire insulation R Nativa end or synth, rubber wire insulation R Stemed core not on the conductor insulation G Over conductor of the cable is the earth conductor G Over conductor of the cable is the earth conductor (yellow/green) Section of copper wire (mm²)

The screw of the lid is tightened securely

o In order to protect the environment, be sure b pump clown (recovery of refigerant). Forced cooling operation

- Pump down is the method of recovering defigerant from the indoor unit it bits

- Turn of power source. Turn on power source again after a white. Then, press the

- OWOFF button continuously for at less \$5 seconds. (The operation will start).

OWOFF button continuously for at less \$5 seconds. (The operation will start).

O TIMER OHPONER

Unit ON/OFF button

forced cooling operation.)

(3) After low pressure gauge become 0.01MPa, stop cooling operation and close the gas valve.

(1) Connect charge hase to check joint of outdoor unit.
Cl. Liquid side: Close the liquid valve with heagon wench key.
Gas side: Fully operation in tigas valve.
Gars valu coding operation. (If indoor temperature is low, operate

<How to pump down>

HOW TO RELOCATE OR DISPOSE OF THE UNIT


At completion of the setting, the indoor unit emits a buzzer sound "Peep", (if no reception tone is emitted, start the setting from the beginning again.) some time. (3) Check that the reception buzzer sound "Peep" is emitted from the

Insert batteries. Close the cover

(((((**(()**

(1) Tunn of the power source and tun it on after 1 minute.
(2) Pour the remote control fast uses set according to the promodure described on the filt sole at the unit tagically section man sexual as graine by pressing the ACL swilch on the remote control.

Shore he signal is sent in about its accorda after the ACL swilch or so have a signal is sent in about its accorda after the ACL swilch or pressed, point the entrole control at the unit display according

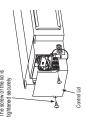

(1) Open a through-hole on the wall to install the reception face for the remote control signal receiver (3).

 Insert the remote control signal receiver (3) in the installation frame (4). and fix the calking section.

(3) Fix the installation frame 4 on the wall using the flat head machine screws 9.

(4) Fix the plate (display) \oplus on the installation frame \oplus using the flat head nachine screws packed together with the plate (display) (II).

TERMINAL CONNECTION FOR AN INTERFACE

(1) Remove the control (I (Remove the screw)
(2) There is a termind (respectively market with CNS) for the indoor control board
(2) There is a termind (respectively market of with CNS) for the indoor control board
(3) There is a termind (respectively market with CNS) for the indoor control board
(4) There is a termind (respectively market by the indoor control board in the indoor control board with the kill.
(5) CNA(KA) E and Issuella the connection the indoor control board with the kill.
(6) The indoor connection in the indoor control board the indoor control board in the kill.
(7) For more dealts, please refer to the user's manual of your free indoor connection in (3) CBRA's E and (3) CBRA's

INSTALLATION TEST CHECK POINTS

Dheck the following points again after completion of the installation, and before tuning on the power. Conducta test run again and ensure that the unit operates properly expensive the customen how to use the unit and how to take care of the unit following the installation manual.

Power cables and connecting wires are securely fixed to the terminal block. (Both indoor and outdoor)

After installation

The pipe joints for indoor and outdoor pipes have been insulated

No gas leaks from the joints of the service valve.

The power source voltage is correct as the rating. The drain hose is fixed securely. Service valve is fully open

No abnormal noise. Test run

Protective functions are not working

Operation of the unit has been explained to the customer. (Three-minutes restart preventive timer.)
When the air-conditioner is restarted or when changing the operation, the unit will not start operating for approximately 3 minutes. This is to protect the unit and it is not a mafunction. Water drains smoothly.

Use cables for interconnection wiring to avoid loose CENELEC code for cables Required field cables. H05RNR4G1.5 (example) or 245IEC57 5. Wiring of the remote control signal receiver connections. (4) Fix the comment by wiring clamp. (5) Canned, the comment of the remote control singnal receiver to the relay wiring. (6) Attach the control lid. (2) Remove the control ids. (3) Commet the swing damp. (3) Commet the connecting wire to the terminal block. (3) Commet the connecting wire to the terminal block. (3) Commet the connection wire sometime that on the terminal block may heat up or next will be port, and it is diagnose as the terminal block may heat up. Earth wire shall be Yellow/Green (Y/G) in color and longer than other AC wires for safety reason. section if it interferes with the wall. and catch fire. 2) Take care not to confuse the terminal numbers for indoor and outdoor Wiring Clamp Connecting wire Terminal block Be sure to connect 0 O 0

3 Remote control signal receiver Cut off this section if it interferes with the wall. Securing the remote control signal receiver

INSTALLATION OF WIRELESS REMOTE CONTROL Fixing to pillar or wall Mounting method of battery

(Fit the poles with the indication ma (Fit the poles with the indication ma (A) (A) without fall) (Do not use new and old batteries tog Pull out the cover and mount the [R03 (AAA, Micro),× 2 pieces] in t

Conventionally, operate the wireles remote control by holding in your I	Avoid installing it on a clay wall et		9
lery (%)			Je.
oatteries (6) Battery he body	arks,	gether.	Cover

(4) 4-way ceiling cassette type(FDTC) Models FDTC25VH1, 35VH1

PJF012D514

a

0

0

0

Ø

ø

0

0

Ø

#

This manual is for the installation of the indoor unit.

For wired remote control installation, refer to page 249. For wireless kit installation, refer to page 267. For electrical wiring work (Outdoor unit) and refrigerant pipe work installation for outdoor unit, refer to page 113. For motion sensor kit installation, refer to page 275. This unit must always be used with the

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, △WARNING and △CAUTION [AWARNING]: Wrong installation would cause serious consequences such as injuries or death. ACAUTION: Wrong installation might cause serious consequences depending on circumstances
- Both mentions the important items to protect your health and safety so strictly follow them by any means. The meanings of "Marks" used here are as shown on the right:
- customers about "SAFETY PRECAUTIONS", correct operation method and maintenance method (air filter cleaning, operation method and temperature setting method) with user's manual of this unit. Ask your customers to keep this installation manual together with the user's manual. Also, ask them to hand over the user's manual to the new user when the owner is changed.

⚠WARNING

- Installation should be performed by the specialist.
- If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- Install the system correctly according to these installation manuals. Improper installation may cause explosion, injury, water leakage, electric shock, and fire
- Check the density refered by the foundula (accordance with ISO5149).
- If the density exceeds the limit density, please consult the dealer and installate the ventilation system
- Use the genuine accessories and the specified parts for installation.
- If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit Ventilate the working area well in case the refrigerant leaks during installation
- If the refrigerant contacts the fire, toxic gas is produced
 - In case of R32, the refrigerant could be ignited because of its flammability
- Install the unit in a location that can hold heavy weight. Improper installation may cause the unit to fall leading to acci
- Install the unit properly in order to be able to withstand strong winds such as typhoons, and earthquakes. Improper installation may cause the unit to fall leading to accidents
- Do not mix air in to the cooling cycle on installation or removal of the air conditioner.
- If air is mixed in, the pressure in the cooling cycle will rise abnormally and may cause explosion and injuries Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.
- Power source with insufficient capacity and improper work can cause electric shock and fire. Use specified wire for electrical wiring, fasten the wiring to the terminal securely, and hold the cable securely
- in order not to apply unexpected stress on the terminal Loose connections or hold could result in abnormal heat generation or fire
- lacktriangle Arrange the electrical wires in the control box properly to prevent them from rising. Fit the lid of the
- services panel property. Improper fitting may cause abnormal heat and fire
- Check for refrigerant gas leakage after installation is completed.
- If the refrigerant gas leaks into the house and comes in contact with a fan heater, a stove, or an oven, toxic gas is produce Use the specified pipe, flare nut, and tools for R32 or R410A.
- Using existing parts (R22) could cause the unit failure and serious accident due to explosion of the cooling cycle
- Tighten the flare nut according to the specified method by with torque wrench.
- If the flare nut were tightened with excess torque, it could cause burst and refrigerant leakage after a long period
- Do not put the drainage pipe directly into drainage channels where poisonous gases such as sulfide gas can
- Poisonous gases will flow into the room through drainage pipe and seriously affect the user's health and safety. This can also cause the corrosion of the indoor unit and a resultant unit failure or refrigerant leak.
- Connect the pipes for refrigeration circuit securely in installation work before compressor is operated If the compressor is operated when the service valve is open without connecting the pipe, it could cause explosion and injuries due 💶 to abnormal high pressure in the system
- Stop the compressor before removing the pipe after shutting the service valve on pump down work. If the pipe is removed when the compressor is in operation with the service valve open, air would be mixed in the refrigeration circuit
- and it could cause explosion and injuries due to abnormal high pressure in the cooling cycle. Only use prescribed optional parts. The installation must be carried out by the qualified installer.
- If you install the system by yourself, it can cause serious trouble such as water leaks, electric shocks, fire
- Do not repair by yourself. And consult with the dealer about repair. Improper repair may cause water leakage, electric shock or fire
- Consult the dealer or a specialist about removal of the air conditioner.
- Turn off the power source during servicing or inspection work
- If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.
- Do not run the unit when the panel or protection guard are taken off. Touching the rotating equipment, hot surface, or high voltage section could cause an injury to be caught in the machine, to get burned, or electric shock.
- Shut off the power before electrical wiring work.

Improper installation may cause water leakage, electric shock or fin

It could cause electric shock, unit failure and improper running.

⚠ CAUTION

Perform earth wiring surely.

Do not connect the earth wiring to the gas pipe, water pipe, lightning rod and telephone earth wiring, Improper earth could ause unit failure and electric shock due to a short circuit

- Earth leakage breaker must be installed.
- If the earth leakage breaker is not installed, it can cause electric shocks
- Use the circuit breaker of correct capacity. Circuit breaker should be the one that disconnect all poles under over current.
- Ising the incorrect one could cause the system failure and fire
- Do not use any materials other than a fuse of correct capacity where a fuse should be used. Connecting the circuit by wire or copper wire could cause unit failure and fire
- Do not install the indoor unit near the location where there is possibility of flammable gas leakages. If the gas leaks and gathers around the unit, it could cause fire.
- Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumula it could be sprayed with chemicals, or volatile flammable substances are handled. t could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire
- Secure a space for installation, inspection and maintenance specified in the manual.
- nsufficient space can result in accident such as personal injury due to falling from the installation place Do not use the indoor unit at the place where water splashes such as laundry.
- Indoor unit is not waterproof. It could cause electric shock and fire.
- Do not use the indoor unit for a special purpose such as food storage, cooling for precision instrument, preservation of animals, plants, and a work of art. It could cause the damage of the items.
- Do not install nor use the system near equipments which generate electromagnetic wave or high harmonics. Equipments like inverter equipment, private power generator, high-frequency medical equipment, or telecommunication equipment might influence the air conditioner and cause a malfunction and breakdown. Or the air conditioner might influence medical equipments or telecommunication equipments, and obstruct their medical activity or cause jammi
- Do not install the remote control at the direct sunlight.
- It could cause breakdown or deformation of the remote control.
- Do not install the indoor unit at the place listed below.
 - o not install the indoor unit at the place listed below. Places where farmable gas could leak. Places where carbon fiber, metal powder or any powder is floated. Place where the substances which affect the air conditioner are generated such as suffide gas, chindrie gas, and allair or ammorie atmospheres. Places exposed to oil mist or steam directly.

 - On vehicles and ships

0

0

0

0

0

0

0

0

0

0

0

0

0

- Places where machinery which generates high harmonics is used
- Places where cosmetics or special sprays at
- requently used.
 Highly salted area such as beach.
 Heavy snow area
 Places where the system is affected by
- smoke from a chimney. Altitude over 1000m
- Do not install the indoor unit in the locations listed below (Be sure to install the indoor unit according to the installation manual for each model because each indoor unit has each limitation)
 - Do not install the motion sensor mounting panel at following place: Locations with any obstacles which can prevent inlet and outlet air of the unit It could cause detection error, incapacity of detection, or
- ns where vibration can be amplified due to

- Locations where vibration can be amplified due to insufficient strength of structure.
 Locations where the infrared receiver is exposed to the direct sunlight or the strong light beam. (in case of the infrared specification unit)
 Locations where an equipment affected by high harmonics is Dusty place or where the lens face could be fouled or damaged. Jocations where an equipment affected by high harmonics is Dusty place or where the lens face could be fouled or damaged. Locations where drainage cannot run off safely.

 It can affect performance or function and etc.
- Do not put any valuables which will break down by getting wet under the air conditioner. on could drop when the relative humidity is higher than 80% or drain pipe is clogged, and it damages user's belongings.
- Do not use the base frame for the outdoor unit which is corroded or damaged after a long period of use. It could cause the unit falling down and injury.
- Pay attention not to damage the drain pan by weld sputter when brazing work is done near the unit If sputter entered into the unit during brazing work, it could cause damage (pinhole) of drain pan and leakage of water. To avoid damaging, keep the indoor unit packed or cover the indoor unit
- Install the drain pipe to drain the water surely according to the installation manual. Water may drip in the room, damaging user's belongings, unless it is worked as instructed
- Be sure to perform air tightness test by pressurizing with nitrogen gas after completed refrigerant piping work If the density of refrigerant exceeds the limit in the event of refrigerant leakage in the small room, lack of oxygen can
- occur, which can cause serious accidents. • For drain pipe installation, be sure to make descending slope of greater than 1/100, not to make traps and not to make air-bleeding
- Check if the drainage is correctly done during commissioning and ensure the space for inspection and maintenance Ensure the insulation on the pipes for refrigeration circuit so as not to condense water ncomplete insulation could cause condensation and it would wet ceiling, floor, and any other valuables
- Do not install the outdoor unit where is likely to be a nest for insects and small animals
- Insects and small animals could come into the electronic components and cause breakdown and fire. Instruct the user to keep the surroundings clean. Pay extra attention, carrying the unit by hand.
- Carry the unit with 2 people if it is heavier than 20kg. Do not use the plastic straps but the grabbing place, moving the unit by hand. Use protective gloves in order to avoid inj
- Make sure to dispose of the packaging material. Leaving the materials may cause injury as metals like nail and woods are used in the package
- t may cause the breakdown of the system due to clogging of the heat exchange
- Do not touch any button with wet hands.

Do not operate the system without the air filter.

- Do not touch the refrigerant piping with bare hands when in operation. The pipe during operation would become very hot or cold according to the operating condition, and it could cause a burn or frostbite
- Do not clean up the air conditioner with water, and do not spray disinfectants etc. directly over the air condition It could cause electrical shock or corrode parts
- Do not turn off the power source immediately after stopping the operation.
 - Be sure to wait for more than 5 minutes. Otherwise it could cause water leakage or breakdown
- Do not control the operation with the circuit breaker.
- It could cause fire or water leakage. In addition, the fan may start operation unexpectedly and it may cause injury.

-105 -

1) Before installation

- Install correctly according to the installation manual. When moving the indoor unit, hold only
- Confirm the following points:

OUnit type/Power supply specification

OPipes/Wires/Small parts OAccessory items

Accessory item

the hanging hardware (4 places) only, with care not to apply forces to any other parts of the unit (particularly the refrigerant pipe, drain pipe, and resin parts).

For unit hanging		For refrigerant pipe			For drain pipe			
Flat washer (M10)	Level gauge	Pipe cover(big)	Pipe cover (small)	Strap	Pipe cover(big)	Pipe cover(small)	Drain hose	Hose clamp
0)		0			0	0	a	
8	1	1	1	4	1	1	1	1
For unit hanging	For unit hight position adjustment and hanging suport	For heat insulation of gas pipe	For heat insulation of liquid tube		For heat insulation of drain socket	For heat insulation of drain socket	For drain pipe connecting	For drain hose mounting

2Selection of installation location for the indoor unit

- ① Select the suitable areas to install the unit under approval of the user
 - Areas where the indoor unit can deliver hot and cold wind sufficiently. Suggest to the user to use a circulator if the ceiling height is over 3m to avoid warm air being accumulated on the ceiling.
 - In case of the panel having the motion sensor, the installation height must be no higher than 4 m. It could reduce the sensitivity of motion sensor, disabling the detection.
 - · Areas where there is enough space to install and service.
 - · Areas where it can be drained properly. Areas where drain pipe descending slope can be taken.
 - Areas where there is no obstruction of airflow on both air return grille and air supply port.
 - Areas where fire alarm will not be accidentally activated by the air conditioner.
 Areas where the supply air does not short-circuit.


 - · Areas where it is not influenced by draft air.
 - Areas not exposed to direct sunlight.
 - Areas where dew point is lower than around 28°C and relative humidity is lower than 80% This indoor unit is tested under the condition of JIS (Japan Industrial Standard) high humidity condition and confirmed there is no problem. However, there is some risk of condensation drop if the air conditioner is operated under the severer condition than mentioned above. If there is a possibility to use it under such a condition, attach additional insulation of 10 to 20mm thick for entire surface of indoor unit, refrigeration pipe and drain pipe.
 - Areas where TV and radio stays away more than 1m. (It could cause jamming and noise.)
 - · Areas where any items which will be damaged by getting wet are not placed such as food, table wares, server, or medical equipment under the unit.

 Areas where there is no influence by the heat which cookware generates.

 - Areas where not exposed to oil mist, powder and/or steam directly such as above fryer.
 - · Areas where lighting device such as fluorescent light or incandescent light doesn't affect the operation.
 - (A beam from lighting device sometimes affects the infrared receiver for the wireless remote control and the air conditioner might not work properly.)
- 2) Check if the place where the air conditioner is installed can hold the weight of the unit. If it is not able to hold, reinforce the structure with boards and beams strong enough to hold it. If the strength is not enough, it could cause injury due to unit falling.
- (3)If there are 2 units of wireless type, keep them away for more than 6m to avoid malfunction due to cross communication.
- 4When plural indoor units are installed nearby, keep them away for more than 4m

Space for installation and service

- When it is not possible to keep enough space between indoor unit and wall or between indoor units, close the air supply port where it is not possible to keep space and confirm there is no short circuit of airflow
- ■Install the indoor unit at a height of more than 2.5m above the floor.

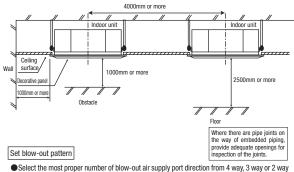

- Select the most proper number of blow-out air supply port direction from 4 way, 3 way or 2 way according to the shape of the room and installation position. (1 way is not available.)
- If it is necessary to change the number of air supply port, prepare the covering materials. (sold as accessory)
- Instruct the user not to use low fan speed when 2way or 3way air supply is used.
- Do not use 2way air supply port under high temperature and humidity environment. (Otherwise it could cause condensation and leakage of water.)
- It is possible to set the airflow direction port by port independently. Refer to the user's manual for details

3 Preparation before installation


- If suspension bolt becomes longer, do reinforcement of earthquake resistant. OFor arid ceiling
 - When suspension bolt length is over 500mm, or the gap between the ceiling and roof is over 700mm, apply earthquake resistant brace to the bolt
- Oln case the unit is hanged directly from the slab and is installed on the ceiling plane which has enough strength
- When suspension bolt length is over 1000mm, apply the earthquake resistant brace to the bolt. Prepare four (4) sets of suspension bolt, nut and spring washer (M10 or M8) on site.

Ceiling opening, Suspension bolts pitch, Pipe position Inspection opening Gas piping agual piping Drain piping Power supply connection Remote control code and signal wiring connection Suspension bolts Dutside air opening for ducting Site outside company for ducting J *In case of other than the system ceiling.install ir outlet opening for ducting an inspection opening at the control box side Inspection opening □576~610 (System ceiling hole size) □576~600 (Ceiling hole size) ***** Drain hose piece (Accessory) (Installed on site) 88

(4) Installation of indoor unit

Work procedure

- This unit is designed to install on a system ceiling.
 - If necessary, remove T bars temporarily before installing the unit.
 - When it is installed on a ceiling other than the system ceiling, install an inspection port at the control box side.
- Determine the position of suspension bolts (530 mm \times 530 mm)
- Use 4 suspension bolts, and fix them.
- Set the suspension bolt length to about 50 mm from the ceiling.
- Temporarily locate the lower nuts of the suspension bolts (4 places) at a position approximately 130 mm from the ceiling.
- Temporarily locate the upper nuts of the suspension bolts (4 places) at positions sufficiently distance from the lower nuts so that they do not interfere with the suspension of the indoor unit and with its height adjustment.
- Set the upper nuts of the suspension bolts and upper washers (4 places) at positions sufficiently distance from the lower nuts. Then, push and insert the temporary fixing carton of washers (*1) onto suspension bolts. Make sure that the upper washers do not slide down.
- Suspend the indoor unit.
- After suspending the indoor unit, mount the level gauge (*2) to the air outlet of the indoor unit, and adjust the suspension height of the indoor unit. Loosen the upper nuts (4 places), and adjust the suspension height using the lower nuts (4 places). Confirm there is no slack between the lower nuts and flat washers of the indoor unit hanger plate (4 places).
- 10. Remove the temporary fixing carton of washers (from all 4 places).
- 11. Make sure that the indoor unit is installed horizontally. Confirm the levelness of the indoor unit using a level gauge or transparent hose filled with water. (Keep the height difference at both ends of the indoor unit within 3 mm.)
- 12. Tighten the upper nuts of the suspension bolts (4 places).

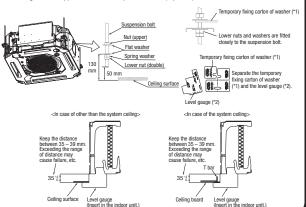

(4) Installation of indoor unit (continued)

Protection of the indoor unit

 If it is not possible to install the panel for a while or if attaching the ceiling board after installing the indoor unit, protect the indoor unit by using upper carton.



Caution


- Do not adjust the unit height by adjusting the upper nuts. Doing so will cause unexpected stress on the indoor unit and cause the unit to become deformed, prevent the panel from being installed, and be generated fan interference noise.
- Make sure that the indoor unit is installed horizontally and set the appropriate gap between the underside of the unit and the ceiling plane. Improper installation may cause air leakage, dew condensation, water leakage and noise
- Make sure there is no gap between the panel and the ceiling surface, and between the panel and the indoor unit. Any gap may cause air and/or water to leak, or condensation to

5Refrigerant pipe

Caution

- Be sure to use new pipes for the refrigerant pipes. Use the flare nut attached to the product. Regarding whether existing pipes can be reused or not, and the washing method, refer to the instruction m unit, catalogue or technical data.
- In case of reuse: Do not use old flare nut, but use the nut attached to the unit.
- 2) In case of reuse: Flare the end of pipe replaced partially for R32 or R410A.

AWARNING: When flared joints are reused indoors, the flare part shall be re-fabricated. (only for R32)

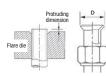

			Protruding dimer	ision for flare, mm		
Pipe dia. d mm		Min. pipe wall thickness	Rigid (CI	utch type)	Flare O.D.	Flare nut tightening torque N·m
		mm	For R32 For R410A	Conventional tool	mm	
6	i.35	0.8			8.9 ~ 9.1	14 ~ 18
9.52 12.7	1.52	0.8	0 ~ 0.5	0.7 ~ 1.3	12.8 ~ 13.2	34 ~ 42
	2.7	0.8			16.2 ~ 16.6	49 ~ 61
1	5.88	1			19.3 ~ 19.7	68 ~ 82
1	9.05	1.2			23.6 ~ 24.0	100 ~ 120

- Use phosphorus deoxidized copper alloy seamless pipe (C1220T) for refrigeration pipe installation. In addition, make sure there is no damage both inside and outside of the pipe, and no harmful substances such as sulfur, oxide, dust or a contaminant stuck on the pipes.
- Do not use any refrigerant other than the designated refrigerant. Using other refrigerant except the designated refrigerant, may degrade inside refrigeration oil. And air getting into refrigeration circuit may cause over-pressure and resultant it may result in bursting, etc.
- Store the copper pipes indoors and seal the both end of them until they are brazed in order to avoid any dust, dirt or water getting into pipe. Otherwise it will cause degradation of refrigeration oil and compressor breakdown, etc.
- Use special tools for R32 or R410A refrigerant.

Work procedure

- 1. Remove the flare nut and blind flanges on the pipe of the indoor unit.
 - * Make sure to loosen the flare nut with holding the nut on pipe side with a spanner and giving torque to the nut with another spanner in order to avoid unexpected stress to the copper pipe, and then remove (Gas may come out at this time, but it is not abnormal.)
 - Pay attention whether the flare nut pops out. (as the indoor unit is sometimes pressured.)
- Make a flare on liquid pipe and gas pipe, and connect the refrigeration pipes on the indoor unit.
 Bend radius of pipe must be 4D or larger. Once a pipe is bent, do not readjust the bending Do not twist a pipe or collapse to 2/3D or smaller.
 - Make sure to use flare nuts assembled on the unions. Usage of other flare nuts could cause refrigerant leakage.
 - * Do a flare connection as follows:
 - ■Make sure to hold the nut on indoor unit pipe side using double spanner method as indicated when fastening / loosening flare nuts in order to prevent
 - unintentional twisting of the copper pipe.

 When fastening the flare nut, align the refrigeration pipe with the center of flare nut, screw the nut for 3-4 times by hand and then tighten it by snanner with the specified torque mentioned in the table above.
- Cover the flare connection part of the indoor unit with attached insulation material after a gas leakage inspection, and tighten both ends with attached straps.
- - Make sure to insulate both gas pipes and liquid pipes completely.
 - *Incomplete insulation may cause dew condensation or water dropping. Use heat-resistant (120 °C or more) insulations on the gas side pipes.
- In case of using at high humidity condition, reinforce insulation of refrigerant pipes.
 Surface of insulation may cause dew condition or water dropping, if insulations are not
- 4. Refrigerant is charged in the outdoor unit.

As for the additional refrigerant charge for the indoor unit and piping, refer to the installation manual attached to the outdoor unit.

5 Refrigerant pipe (continued)


Caution:


Refrigerating machine oil should not be applied to the threads of union or external surface of flare. It is because, even if the same tightening torque is applied, the oil is likely to decrease the slide friction force on the threads and increase, in turn, the axial component force so that it could crack the flare

Refrigerating machine oil may be applied to the internal surface of flare only.

<The case of using thicness of insulation is 10mm>

(The case of using reinfoced insulation)

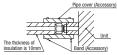

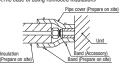

6Drain pipe

Caution

- Install the drain pipe according to the installation manual in order to drain properly.
 Water may drip in the room, damaging user's belongings, unless it is worked as instructed.
- Be sure to use the supplied drain hose. Unless it is used, the drain socket could be damaged by undue stresses, causing water leakage.

 Do not put the drain pipe directly into the ditch where toxic gas such as sulfur, the other harmful and
- both to but the unain pipe unleady into the data where table gas single gas is generated. Toxic gas would flow into the room and it would cause serious damage to user's health and safety (some poisoning or deficiency of oxygen). In addition, it may cause corrosion of heat exchanger and bad smell.
- Connect the pipe securely to avoid water leakage from the joint.
 Insulate the pipe properly to avoid condensation drop.
- Check if the water can flow out properly from both the drain outlet on the indoor unit and the end of the drain pipe after installation.
- Make sure to make descending slope of greater than 1/100 and do not make up-down bend and/or trap in the midway. In addition, do not put air vent on the drain pipe. Check if water is drained out properly from the pipe during commissioning. Also, keep sufficient space for inspection and maintenance

Drain socket and drain hose connection

- Where temperatures around the drain socket may rise beyond 50°C, adhere the drain socket and the drain hose.
- Avoid using the hose clamp with adhesive. It could cause water leakage

<When using the hose clamp>

- Make sure that the drain hose (the soft PVC side) is inserted into the end of the step part of the drain socket.
- Fix the hose clamp so that its bolt is located on the outside of the indoor unit, and the bolt are fastened in a vertical orientation.

 Position the hose clamp so that it touches the insulation of the drain hose, and then tighten the bolt.
- Turn the bolt several times until it is securely tightened, but do not tighten it excessively. Target extent of bolt tightening should be 17 to 20 mm (Reference:1.2 to 1.5N·m)

When using adhesives>

- Connect the drain hose (the soft PVC side) to the drain socket using polyvinyl type adhesives Make sure that the drain hose (the soft PVC side) is inserted into the
- Use the adhesive according to maker's instructions.
- * Do not use adhesives containing phthalic esters. It could cause water leak
- Make sure that the adhesive will not get into the drain hose or drain socket.

Drain hose and piping connection


- Prepare a joint for connecting VP-25 pipe, adhere and connect the joint to the drain hose (the rigid PVC side), and adhere and connect VP-25 pipe (prepare on site).

 * As for drain pipe, apply VP-25 made of rigid PVC which is on the product.
 - is on the market. Make sure that the adhesive will not get into the supplied drain hose.

It may cause the flexible part broken after the

- adhesive is dried up and gets rigid.

 The flexible drain hose is intended to absorb a small difference at installation of the unit or drain pipes Intentional bending, expanding may cause the
- flexible hose broken and water leakage.

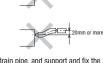

#

0" to 20"

It should never be smaller than 0° (horizontal).


Shorten the distance as much as possible (250 mm or less

此

- Pay attention not to apply stresses to the drain socket or drain pipe, and support and fix the drain pipe as close place to the unit as possible when connecting the drain pipe. (within 250 mm from the end of joint prepared at site)
 - As for drain pipe, apply VP25 (0D32).
 If apply PVC25 (0D25), connect the expanded connector to the drain hose. with adhesive. (Multi unit only)


 Make sure to make descending slope of
- greater than 1/100 and do not make
- - up-down bend and/or trap in the midway.

 Pay attention not to give stress on the pipe on the indoor unit side, and support and fix the pipe as close place to the unit as possible when connecting the drain pipe
 - Do not set up air vent.

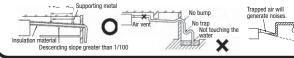

6 Drain pipe (continued)


When sharing a drain pipe for more than 1 unit, lay the main pipe 100mm below the drain outlet of the unit. In addition, select VP30 or bigger size for main drain pipe.

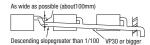

- 6. Insulate the drain pipe.
- Be sure to insulate the drain socket and rigid PVC pipe installed indoors otherwise it may cause dew condensation and water leakage.
 - *After drainage test implementation, cover the drain socket part with pipe cover (small size), then use the pipe cover (big size) to cover the pipe cover (small size), clamps and part of the drain hose, and fix and wrap it with tapes to wrap and make joint part gapless.

Drain up

The position for drain pipe outlet can be raised up to 850mm above the ceiling. Use elbows for installation to avoid obstacles inside ceiling. If the horizontal drain pipe is too long before vertical pipe, the backflow of water will increase when the unit is stopped, and it may cause overflow of water from the drain pan on the indoor unit. In order to avoid overflow, keep the horizontal pipe length and offset of the pipe within the limit shown in the figure below

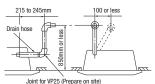


Drain test

- After installing the drain pipe, make sure that drain system works correctly and that no water leaks from the joint and drain pan. Check whether the motor sound of the drain pump is normal.
- Conduct a drain test when installing, even during the heating season.
- In the case of new buildings, be sure to complete the test before fixing the ceiling.
- Pour about 1,000 cc of test water into the drain pan of the indoor unit. Exercise care not to allow electrical equipment such as the drain pump and other components to become wet while filling water.

Pour test water through the pipe lid using a feed water pump or a similar device, or through the refrigerant pipe joint.



In case of pouring water from the pipe lid
 (1) Remove screws at 2 places.
 (2) Release the claws, and remove the lid.

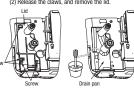

- 2. Make sure that water drains out completely and that no water leaks from any joints of the drain pipe during the test
- Test to confirm that the water drains out correctly while listening to the drain pump motor operating sound. At the drain socket (transparent), it is possible to check whether the water drains out correctly Unplying the rubber plug on the indoor unit so that the remaining water drains from the drain
- pan after the draining test.

 After checking the water drainage, fix the rubber plug correctly. Installation work for the drain
- pipe must be performed for the entire drain pipe up to the indoor unit. If the pipe lid has been removed in order to pour water, mount the pipe lid again.

Drain pump operation


- In case electrical wiring work completed
- The date electrical winning work comparation prain pump can be operated by the wired remote control. For the operation method, refer to Operation for drain pump in the installation manual for wiring work.
- In case electrical wiring work not completed Drain pump will run continuously when the dip switch "SW7-1" on the indoor unit PCB is turned ON, the connector CnB is disconnected, and then the power source (230VAC on the terminal block ① and ②) is turned ON. Make sure to turn OFF "SW7-1" and reconnect the connector CnB after the test.

(7) Wiring-out position and wiring connection

- Electrical installation work must be performed according to the installation manual by an
 electrical installation service provider qualified by a power provider of the country, and be
 executed according to the technical standards and other regulations applicable to electrical installation in the country.
- Be sure to use an exclusive circuit.
- Use specified cord, fasten the wiring to the terminal securely, and hold the cord securely in order not to apply unexpected stress on the terminal.

 Do not put both power source line and signal line on the same route. It may cause miscommunication and malfunction.
- Be sure to do D type earth work
- For the details of electrical wiring work, see attached instruction manual for electrical wiring work
- Loosen screws (2 pcs.) on the control box of the unit. Remove the control lid by sliding it in the arrow direction in the figure
- nenrove the control in by shaling it in the arrow direction in the lighter. Introduce the wiring in the control box, and connect it securely to the terminal block. Fix the wiring with bands as shown below.

 Install the control lid, with care not to pinch the wiring, and fix the lid with screws (2 pcs.).

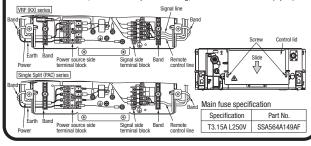

®Panel installation

- Install the panel on the indoor unit after electrical wiring work.
- Refer to the attached manual for panel installation for details.

9Check list after installation


Check the following items after all installation work completed.

Check if;	Expected trouble	Check
The indoor and outdoor units are fixed securely?	Falling, vibration, noise	
Inspection for leakage is done?	Insufficient capacity	
Insulation work is properly done?	Water leakage	
Water is drained properly?	Water leakage	
Power source voltage is same as mentioned in the model name plate?	PCB burnt out, not working at all	
There is mis-wiring or mis-connection of piping?	PCB burnt out, not working at all	
Earth wiring is connected properly?	Electric shock	
Cable size comply with specified size?	PCB burnt out, not working at all	
Any obstacle blocks airflow on air inlet and outlet?	Insufficient capacity	

(10) How to check the dirt of drain pan and cleaning the inlet of the drain pump. (Maintenance)


The method of checking the dirt of drain pan

- 1. Remove the panel according to the installation manual of the panel.
- 2. Check the dirt on the drain pan from the drain cap, and check the drain pump inlet. If the drain pan is very dirty, remove the drain pan and clean it

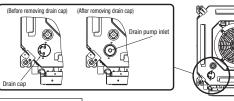


Cleaning of drain pump inlet

- It is possible to clean the drain pump inlet and surrounding area by removing the drain cap only; it is not necessary to remove the drain pan
- Before removing the drain cap, remove the rubber plug and drain water from the drain pan.
- 1. Insert the nose of the pliers into the concave portions (2 places) of the drain cap, and rotate the pliers about 1 turn in the CCW direction. The drain cap is removed.
- 2. When cleaning the drain pump inlet, use a soft plastic tool. If a metallic tool is used, the drain cap mounting portion may be scratched and water may leak
- 3. Before mounting the drain cap, rinse it and remove any foreign material from the inside of the cap. If the drain cap is installed with foreign material inside it, it may cause water to leak.
- 4. Insert the nose of the pliers into the concave portions of the drain cap and rotate the pliers to install the drain cap. Rotate the drain cap about 1 turn in the CW direction until it stops rotating. If the drain cap is not rotated for 1 or more turns, the cap will not have been installed correctly. Remove the drain cap, and then install it again correctly.
- 5. After tightening the drain cap, make sure the triangle () mark of the drain cap comes close to the triangle mark on the drain pan. If these triangle marks are not close to each other, tighten the drain cap further.
- 6. Refix the rubber plug securely. If the cover is not refixed correctly, it may cause condensation to form and/or water to leak

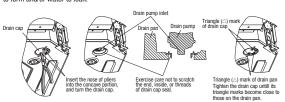

Notes for removing the drain pan


- Before removing the drain pan, drain water from the drain pan. Remove the rubber plug and drain water
- The drain pan is installed by the temporary installation plate. Remove the 2 drain pan fixing screws, and loosen the 2 screws of the temporary installation plate. Slide the temporary installation plate to the outside of the drain pan. And then, it is possible temporary that the drain pan.
- to remove the drain pan.
 When reinstalling the drain pan, slide the temporary installation plate to the inside and temporarily fix the drain pan. Then, tighten the 2 drain pan fixing screws and the 2 screws of the temporary installation plate. Also, refix the rubber plug securely.

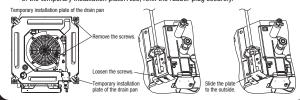

Panel installation



Read this manual together with the indoor unit's installation manual

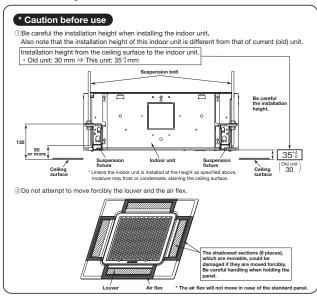

⚠ WARNING

- Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.
 Loose connection or hold will cause abnormal heat generation or fire.
- Make sure the power source is turned off when electric wiring work.

 Otherwise, electric shock, malfunction and improper running may occur.



Function


The draft prevention panel has the draft prevention mechanism. If the draft prevention panel is installed and the draft prevention function is set, the draft prevention function will be operated and reduce the draft feeling.

(Refer to (Refer to <a hre

① Before installation

- · Follow installation manual carefully, and install the panel properly.
- Check the following items


Accesso	ories		
Bolt	E) rue	4 pieces	For panel installation
Strap	-	4 pieces	For avoiding the corner panel from falling
Grille hook	→	1 piece	For avoiding the grille from falling
Screw	9	4 pieces	For fixing the corner panel
lote: Ac	cessories are laid in the	position	removing the corner lid.

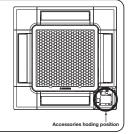

② Checking the indoor unit installation height


- Read this manual together with the air-conditioner installation manual carefully.
 Check if the opening size for the indoor unit is correct with the level gauge supplied in the indoor unit.
 Check if the gap between the plane and the indoor unit is correct by inserting the level gauge into the air outlet port of the indoor unit. (See below drawing)
- Adjust the installation elevation if necessary.
 Remove the level gauge before installing the panel.

Caution ~ If there is a height difference beyond the design limit between the installation level of the indoor unit and the panel, the panel may be subject to excessive stress during installation and it may cause distortion and damage

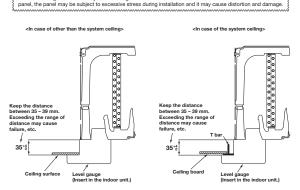

③ Removing the inlet grille

- While placing a finger behind the stopper (2 places) and pressing it in the direction of arrow ①, pull the grille downward to open the grille.
 Release the hooks of the inlet grille from the panel while it is in the open position.

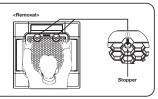


4 Removing the corner lid


· Pull the corner lid toward the direction indicated by the arrow and remove it. (Same way for all 4 corner lids)




⑤ Before installing the panel <Only Draft prevention panel>

- (1) Loosen screws (2 pcs.) on the control lid of the unit.

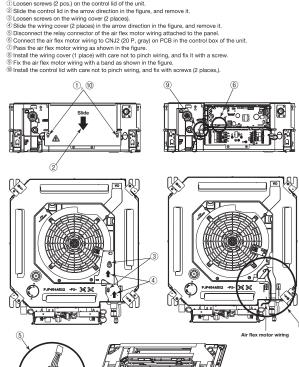

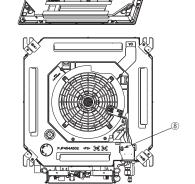


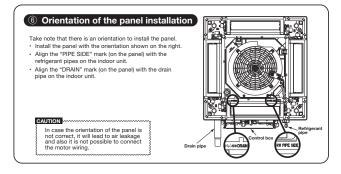

7 Installing the panel

1. Temporary hanging


- Lift up the hanger (2 places) on the panel for temporary support.
 Hang the panel on the hook on the indoor unit.

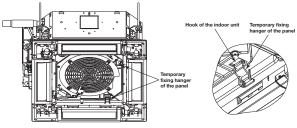


2. Fix the panel on the indoor unit


Fasten the panel on the indoor unit with the 4 bolts supplied with the panel



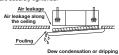

If there is a gap between the ceiling and the panel even after the fixing bolts are tightened, adjust the installation level of the indoor unit again.

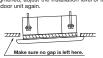

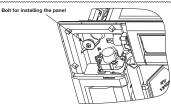



Do not give any stress on the panel when adjusting the height of the indoor unit to avoid unexpected distortion. It may cause the distortion of panel or failing to close the [inlet grille, and the parts of the draft prevention mechanism.

Electrical wiring

The wiring work varies depending on the panel type. Select the wiring work appropriate for the panel type.

For the Standard panel

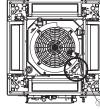

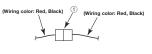


- For the draft prevention panel>
 ① Connect the connector of the louver motor wiring (Wiring color: Red, Black) at the panel side to the connector CnJ3 (20 P, White) of the louver motor wiring (Wiring color: Red, Black) at the unit side.
 ② Connect the connector of the air flex motor wiring (Wiring color: Bible, White) at the panel side to the connector CnJ4 (20 P, White) of the air flex motor wiring (Wiring color: Bible, White) at the unit side.

For the Draft prevention panel (Wiring color: Red, Black) Motor wiring connection - Detail view 1), (2) Install the wiring cover with care not to pinch wiring, and fix it with so Hook for <

If the wiring cover is hung at the hook on panel, it will become easier to work

9 Installing a corner lid

To avoid unexpected falling of the comer lid, put the strap onto the comer lid's pin with turning the strap up.
 Then hang the strap of a comer lid onto the panel's pin.
 Hook the comer lid claws at 3 places, and fix the comer lid with attached screws.

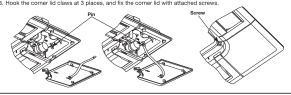


10 Installing the inlet grille

The panel and the inlet grille have no directional limitation to install, (Hinges of the inlet grille can be hooked at any side.) Install the inlet grille in the reverse order of the steps described at **Removing the inlet grille**.

② Insert the hinges of inlet grille with the panel.

Close then the inlet grille while pressing the stoppers (2 places).

Confirm that both stoppers are inserted securely in the panel.

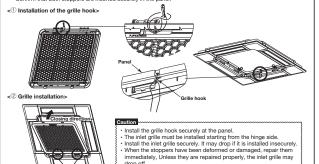

1 Panel setting <Louver swing range setting (Individual louver control setting)>

It is possible to change the swing range of the louver by the wired remote control. Once the upper and lower limit positions are set, the louver will swing within the set range. It is also possible to set the different range to each louver limit.

<Draft prevention setting>

The draft prevention function will not be operated if the draft prevention panel is installed and its wirings are only connected. To operate the draft prevention function, enable the draft prevention setting by using the wired or wireless remote control.

Note: It is not possible to set by the following remote control models or older: Wired:RC-EX3, RC-E5, RCH-E3 Wireless: RCN-E1R

Once you have enabled the settings in this mode, the draft prevention function is operated when the air-conditioner is started, and the parts of the draft prevention mechanism are always open when the air-conditioner is operating. When the air-conditioner is stopped, they are closed. It is possible to enabled or disabled the draft prevention function for each air outlet.

For the setting details, refer to the user's manual supplied with the remote control.

FRESH AIR INTAKE (Location for installation) FOR FDTC


At the time of installation use the duct hole (cut out) located at the positions shown in follwing diagram, as and when required.

(1)Temperature conditions for OA spacer(1)

- Adjust the temperature conditions of mixed air with outdoor air and indoor air within the usage range of suction air temperature for the air-conditioner.
- The usage temperature conditions of intake outdoor air and indoor air around the ducts are shown in the following table.
- If the temperature conditions of intake outdoor air do not satisfy, process the outdoor air before intaking.


0	Usage tempera	ture conditions
Operation mode	Intake outdoor air	Indoor air around the ducts
Heating	5°C DB or higher	18.5°C WB or lower and 60% RH or lower
Cooling	29°C DB or lower and 80% RH or lower	20°C DB or higher

Note(1): For the OA spacer, refer to page 290.

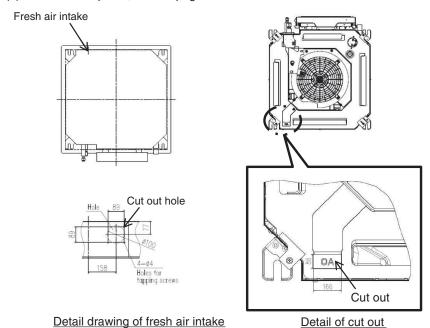


■Fresh air intake amount & static pressure characteristics


All models

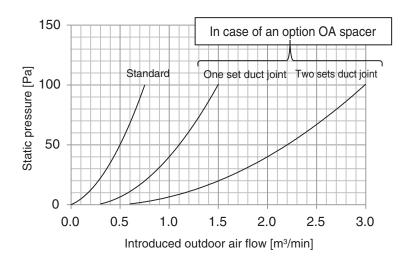

CHARACTERISTICS OF AIR FLOW IN DIVIDED DUCT FOR FDTC

Models FDTC25VH1, 35VH1

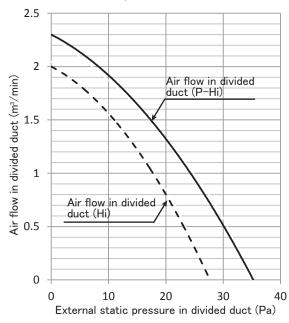

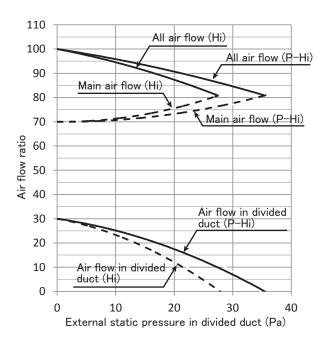

■ Divided duct connection method

- 1. Open some one during 3 knockout holes, and please connect a divided duct. It isn't possible to use more than one hole at the same time.
- 2. Please make the wind shielding a blowout vent on the side where a divided duct was connected.
- 3. The shorage of the external static pressure by pressure loss for a connected divided duct and blowout unit is made up by a booster fan.

 Example: When 1.5m³/min of ventilation by divided duct is needed in model FDTC25VH1

 (In case of connection duct ϕ 125 x 5m)
 - ①Duct resistance : Pressure loss by a flexible duct =35Pa (7Pa/m x 5m)
 - ②Blowout unit : Pressure loss by a blowout unit =10Pa
 - ③External static pressure when being 1.5m³/min =11Pa (See upper table.)
 - ⇒Correspondence by a booster fan =①+②-③ =34Pa

9.2 Installation of outdoor unit

Models SRC20ZS-WA SRC257S-WA2

SRC35ZS-WA2

• This installation manual deals with an outdoor unit installation only. For an indoor unit installation, refer to page 89.

RWC012A068F \land

Model SRC20,25,35,50ZS-W SRC20.25.35ZS-WA R32 REFRIGERANT USED

SAFETY PRECAUTIONS

- Before installation, read the "SAFETY PRECAUTIONS" carefully and strictly follow it during the installation work in order to protect yourself.

 Be sure to confirm no operation problem on the equipment after completing the installation. If unusual noise can be heard during the test run, consult the dealer.

 The precautionary items mentioned below are distinguished into two levels, AWARNING and CAUTION is the operating methods as well as the maintenance methods of this equipment to the user according to the user's manual.

 ⚠ WARNING
 Indicates a potentially hazardous situation which, if not avoided, can result in serious consequences such as death or severe injury.
 Sequences such as death or severe injury.
 Be sure to keep the installation manual together with user's manual at a place where it is easily accessible to the user any time. Moreover, ask the user to hand the manuals to a new user, whenever required.

jury or property damage.

Both mention the important items to protect your health and safety. Therefore, strictly follow them by any means

MARNING

- Be sure to use only for residential purpose.
- Installation must be carried out by the qualified installer completely in accor-

- Installation must be carried out by the qualified installer completely in accordance with the installation manual.

 Installation by non qualified person or incorrect installation can cause serious troubles such as water leak, electric shock, fire and personal injury.

 Be sure to wear protective goggles and gloves while performing installation work. Improper safely measures can result in personal injury.

 Use the original accessories and the specified components for the installation. Using parts other than those prescribed may cause water leak, electric shock, fire and personal injury.

 Do not install the unit near the location where leakage of flammable gases can occur. If leaked gases accumulate around the unit, it can cause fire resulting in property damage and personal injury. sonal injury
- When installing the unit in small rooms, make sure that refrigerant density does not exceed the limit (Reference: ISO5149) in the event of leakage.

 If refrigerant density exceeds the limit, consult the dealer and install the ventilation system.
- Otherwise lack of oxygen can occur resulting in serious accident.

 Install the unit in a location where unit will remain stable, horizontal and free of any vibration transmission.

 Unsuitable installation location can cause the unit to fall resulting in material damage and personal injury.

 Do not run the unit with removed panels or protections.
- Touching rotating equipments, hot surfaces or high voltage parts can cause personal injury due to entrapment, burn or electric shock.

 This unit is designed specifically for R32.
 Using any other refrigerant can cause unit failure and personal injury.

 Do not vent R32 into atmosphere.

- R32 is a florinated greenhouse gas with a Global Warming Potential (GWP) = 675.

 Make sure that no air enters the refrigerant circuit when the unit is installed and removed.

 If air enters the refrigerant circuit, the pressure in the refrigerant circuit will become too high, which
- Can cause burst and personal injury.

 Be sure to use the prescribed pipes, flare nuts and tools for R32 or R410A.

 Using existing parts (for R22 or R407C) can cause refrigerant circuit burst resulting in unit failure and personal injury. Be sure to connect both liquid and gas connecting pipes properly before op-
- Do not open the liquid and gas service valves before completing piping work, and evacuation.
- if the compressor is operated when connecting pipes are not connected and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure result-
- open, an can be sucked into the lenggrant circuit which can cause anomalous high pressure result ing in burst or personal injury. **Be sure to tighten the flare nuts to specified torque using the torque wrench.**Tightening flare nuts with excess torque can cause burst and refrigerant leakage after a long period.

- During pump down work, be sure to stop the compressor before closing service valves and removing connecting pipes. If the connecting pipes are removed when the compressor is in operation and service valves are open, air can be sucked into the refrigerant circuit which can cause anomalous high pressure result-

- open, air can be sucked into the refingerant circuit which can cause anomalous high pressure resulting in burst or personal injury.

 In the event of refrigerant leakage during installation, be sure to ventilate the working area properly.

 If the refingerant comes into contact with naked flames, poisonous gases will be produced.

 Electrical work must be carried out by the qualified electrician, strictly in accordance with national or regional electricity regulations.

 Incorrect installation can cause electric shock, fire or personal injury.

 Make sure that earth leakage breaker and circuit breaker of appropriate caractities are installed.
- pacities are installed.

 Circuit breaker should be able to disconnect all poles under over current. Absence of appropriate

breakers can cause electric shock, personal injury or property damage.

Be sure to switch off the power source in the event of installation, mainte-

- nance or service. If the power source is not switched off, there is a risk of electric shock, unit failure or personal injury.
- Be sure to tighten the cables securely in terminal block and relieve the cables properly to prevent overloading the terminal blocks.

 Loose connections or cable mountings can cause anomalous heat production or fire.

 Do not process, splice or modify the power cable, or share the socket with
- other power plugs.

 Improper power cable or power plug can cause fire or electric shock due to poor connection, insufficient insulation or over-current.

- ficient insulation or over-current.

 Do not perform any change in protective device or its setup condition yourself.

 Changing protective device specifications can cause electric shock, fire or burst.

 Be sure to clamp the cables properly so that they do not touch any internal component of the unit.

 If cables touch any internal component, it can cause overheating and fire.

 Be sure to install service cover properly.

 Improper installation can cause electric shock or fire due to intrusion of dust or water.

 Be sure to use the prescribed power and connecting cables for electrical work.

 Using improper cables can cause electric leak or fire.
- Using improper capies can cause electric teak or line.

 This appliance must be connected to main power source by means of a circuit breaker or switch with a contact separation of at least 3 mm.

 Improper electrical work can cause unit failure or personal injury.

 Be sure to connect the power source cable with power source properly.
- Improper connection can cause intrusion of dust or water resulting in electric shock or fire

⚠ CAUTION

- Take care when carrying the unit by hand.
 If the unit weight is more than 20 kg, it must be carried by two or more persons.
 Do not carry the unit by the plastic straps. Always use the carry handle.
 Do not install the outdoor unit in a location where insects and small animals
- can inhabit.
- can inhabit.

 Insects and small animals can enter the electrical parts and cause damage resulting in fire or personal injury. Instruct the user to keep the surroundings clean.

 If the outdoor unit is installed at height, make sure that there is enough space for installation, maintenance and service.

 Insufficient space can result in personal injury due to falling from the height.

 Do not install the unit near the location where neighbours are bothered by noise or air generating from the unit.

 It can affect surrounding environment and cause a claim.

 Do not install in the locations where unit is directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty atmosphere.

 It can cause corrosion of heat exchanger and damage to plastic parts.

 Do not install the unit close to the equipments that generate electromagnetic waves and/or high-harmonic waves.

- waves and/or high-harmonic waves.

 Equipment such as inverters, standby generators, medical high frequency equipments and telecommunication equipments can affect the system, and cause malfunctions and breakdowns.
- The system can also affect medical equipment and telecommunication equipment, and obstruct its function or cause jamming.

- Do not install the unit in the locations where:

- Do not install the unit in the locations where:

 There are heat sources nearby.

 Unit is directly exposed to rain or sunlight.

 There is any obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.

 Unit is directly exposed to oil mist and steam such as kitchen.

 Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will generate or accumulate.

 Drain water can not be discharged properly.

 TV set or radio receiver is placed within 1 m.

 Height above sea level is more than 1000 m.

- It can cause performance degradation, corrosion and damage of components, unit malfunction and fire.

 Dispose of all packing materials properly.

 Packing materials contain nails and wood which can cause personal injury.
- Keep the polybag away from children to avoid the risk of suffocation.
- Do not put anything on the outdoor unit.
- Object may fall causing property damage or personal injury.
- Do not touch the aluminum fin of the outdoor unit.

 Aluminium fin temperature is high during heating operation. Touching fin can cause burn.
- Do not touch any refrigerant pipe with your hands when the system is in operation. During operation the refrigerant pipes become extremely hot or extremely cold depending on the operating condition. Touching pipes can cause personal injury like burn (hot/cold). Install isolator or disconnect switch on the power source wiring in accordance with the local codes and regulations.

 The isolator should be locked in OFF state in accordance with EN60204-1.

1. ACCESSORIES AND TOOLS

Standard accessories (Supplied with outdoor unit)	Q'ty		Locally procured parts	Tools for installation work		Tools for installation work		
(1) Drain grommet	1	(a)	Anchor bolt(M10-M12) × 4 pcs.	Plus headed driver	Spanner wrench	Vacuum pump*		
	-	(b)	Putty	Knife	Torque wrench [14.0-62.0 N•m(1.4-6.2 kgf•m)]	Gauge manifold *		
(2) Drain elbow	1	(c)	Electrical tape	Saw	Wrench key (Hexagon) [4 mm]	Charge hose *		
Not included for SRC20, 25, or 35ZS-WA,		OD 25 or 357S-WA (d) Connecting pipe		T	Floring to death	Vacuum pump adapter		
Not included for SRG20, 25, or 5525	· v v/¬.	(e)	Connecting cable	Tape measure	Flaring tool set *	(Anti-reverse flow type)		
		(f)	Power cable	Pipe cutter	Flare adjustment gauge	Gas leak detector *		
		(g)	Clamp and screw (for finishing work)	vork) *Designed specifically for R32 or R410A		ed specifically for R32 or R410A		

2. OUTDOOR UNIT INSTALLATION

- Note as a unit designed for R32

 Do not use any refrigerant other than R32. R32 will rise to pressure about 1.6 times higher than that of a conventional refrigerant. A cylinder containing R32 has a light blue indication mark on the top.
- · Do not use a charge cylinder. The use of a charge cylinder will cause the refrigerant composition to

- change, which results in performance degradation.

 In charging refrigerant, always take it out from a cylinder in the liquid phase.

 All indoor units must be models designed exclusively for R32. Check connectable indoor unit models in a catalog, etc. (A wrong indoor unit, if connected into the system, will impair proper system operation)

1. Haulage

- Always carry or move the unit with two or more persons.
- . The right hand side of the unit as viewed from the front (outlet side) is

Reaver.

A person carrying the right hand side must take care of this fact. A person carrying the left hand side must hold the handle provided on the front panel of the unit with his right hand and the corner column section of the unit with his left hand.



⚠ CAUTION

When a unit is hauled, take care of its gravity center position which is shifted towards right hand side If the unit is not hauled properly, it can go off balance and fall resulting in serious injury.

- Selecting the installation location
 Select the suitable installation location where:
 Unit will be stable, horizontal and free of any vibration transmission.
- There is no obstacle which can prevent smooth air circulation from inlet and outlet side of the unit.
 There is enough space for service and maintenance of unit.
 Neighbours are not bothered by noise or air generating from the unit.

- Outlet air of the unit does not blow directly to animals or plants.

- Drain water can be discharged properly.
 There is no risk of flammable gas leakage.
 There are no other heat sources nearby.
- · Unit is not directly exposed to rain or sunlight.
- Unit is not directly exposed to oil mist and steam.
 Chemical substances like ammonia (organic fertilizer), calcium chloride (snow melting agent) and acid (sulfurous acid etc.), which can harm the unit, will not generate or accumulate.
- Unit is not directly exposed to corrosive gases (like sulphide gas, chloride gas), sea breeze or salty at-
- mosphere.

 No TV set or radio receiver is placed within 1 m.


 Unit is not affected by electromagnetic waves and/or high-harmonic waves generated by other equipments.
- Strong wind does not blow against the unit outlet.
 Heavy snowfalls do not occur (If installed, provide proper protection to avoid snow accumulation).

NOTE

If the unit is installed in the area where there is a possibility of strong wind or snow accumulation, the following measures are required.

(1) Location of strong wind

· Place the unit with its outlet side facing the wall.

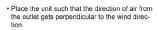





(2) Location of snow accumulation


- · Install the unit on the base so that the bottom is higher than snow cover surface.

 Install the unit under eaves or provide the roof on



3. Installation space

There must be 1 m or larger space between the unit and the wall in at least 1 of the 4 sides. Walls surrounding the unit from 4 sides is not acceptable. The wall height on the outlet side should be 1200 mm or less. Refer to the following figure and table for details

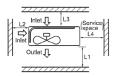

Installation space (mm)		
280 or more		
100 or more		
80 or more		
250 or more		

NOTE

When more than one unit are installed side by side, provide a 250 mm or wider interval between them as a service space

↑ CAUTION

When more than one unit are installed in parallel directions, provide sufficient inlet space so that shortcircuiting may not occur.


4. Drain piping work (If necessary) Carry out drain piping work by using a drain elbow and a drain grommet supplied separately as accessories if condensed water needs to be drained out.

Solies in Colliderised water needs to be disabled out.

(1) Install disting elbow and drain grommet.

(2) Seal around the drain elbow and drain grommet with putty or adequate caulking material.

<SRC20/25/35/50ZS-W>

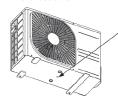


Do not put a grommet on this hole. This is a supplementary drain hole to discharge drain water, when a large amount of it is gathered

△ CAUTION

Do not use drain elbow and drain grommet if there is a possibility to have several consecutive days of sub zero temperature. (There is a risk of drain water freezing inside and blocking the drain.)

<SRC20/25/35ZS-WA>

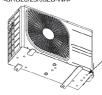


Do not block the drain holes when installing the

5. Installation

- Install the unit on a flat level base.

 While installing the unit, keep space and fix the unit's legs with 4 anchor bolts as shown in the figure below. The protrusion of an anchor bolt from the foundation surface must be kept within 15 mm.

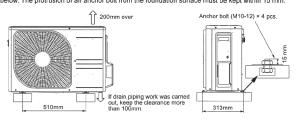


⚠ CAUTION


- Install the unit properly so that it does not fall over during earthquake, strong wind, etc.
- Make sure that unit is installed on a flat level base. Installing unit on uneven base may result in unit

3. PREPARATION FOR WORK

1. Removing service cover


Remove the screw. Slide service cover downwards and remove it

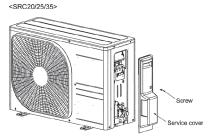

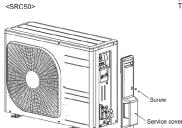

2. Removing terminal cover

Remove the screw and take out terminal cover (For SRC50, terminal cover is attached to service cover Therefore, there is no need to remove terminal cover separately.)

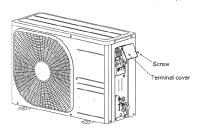

4. CONNECTING PIPING WORK

1. Restrictions on unit installation

Abide by the following restrictions on unit installation. Improper installation can cause compressor failure or performance degradation

	Dimensional restrictions			
	Model SRC20/25/35	Model SRC50		L
Connecting pipe length(L)	20 m or less	25 m or less	н	
Elevation difference between indoor and outdoor units(H)*	10 m or less	15 m or less]	

* Outdoor unit installation position can be higher as well as lower than the indoor unit installation position.

2. Preparation of connecting pipe

2.1 Selecting connecting pipe
Select connecting pipe according to the following table.

		-
	Model SRC20/25/35	Model SRC50
Gas pipe	φ9.52	φ12.7
Liquid pipe	φ6.35	ϕ 6.35

- Pipe wall thickness must be greater than or equal to 0.8 mm.
 Pipe material must be O-type (Phosphorus deoxidized seamless copper pipe ICS 23.040.15, ICS 77.150.30)


NOTE

If it is required to reuse the existing connecting pipe system, refer to 5. UTILIZATION OF EXISTING PIPE.

- 2.2 Cutting connecting pipe
 (1) Cut the connecting pipe to the required length with pipe cutter.
- (2) Hold the pipe downward and remove the burrs. Make sure that no foreign material enters the pipe.
- (3) Cover the connecting pipe ends with the tape.

3. Piping work

Check that both liquid and gas service valves are fully closed. Carry out the piping work with service valves fully closed.

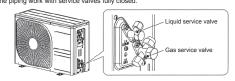


- 3.1 Flaring pipe(1) Take out flare nuts from the service valves of outdoor unit and engage them onto connecting pipes.

(2) Flare the pipes according to table and figure shown below.

Flare dimensions for R32 are different from those for conventional refrigerant.

Although it is recommended to use the faing tools designed specifically for R32 or R410A, conventional flaring tools can also be used by adjusting the dimension B with a flare adjustment gauge.

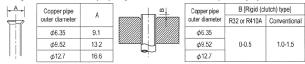

3.2 Connecting pipes

- (1) Connect pipes on both liquid and gas sides.
- (2) Tighten nuts to specified torque shown in the table below

Service valve size (mm)	Tightening torque (N·m)
φ6.35 (1/4")	14-18
φ9.52 (3/8")	34-42
φ12.7 (1/2")	49-61



⚠ CAUTION

- Do not apply refrigerating machine oil to the flared surface. It can cause refrigerant leakage
- Do not apply excess forgue to the flared puts. The flared puts may crack resulting in refrigerant leakage.

4. Evacuation

- 4. Evacuation

 (1) Connect vacuum pump to gauge manifold. Connect charge hose of gauge manifold to service port of outdoor unit.

 (2) Run the vacuum pump for at least one hour after the vacuum gauge shows -0.1 MPa (-76 cm Hg).

 (3) Confirm that the vacuum gauge indicator does not rise even if the system is left for 15 minutes or more. Vacuum gauge indicator will rise if the system has moisture left inside or has a leakage point. Oneck the system for the leakage point. If leakage point is found, repair it and return to (1) again.

 (4) Close the Handle Lo and stop the vacuum pump.


 Keep this state for a few minutes to make sure that the compound pressure gauge pointer does not swing back.

 (5) Remove valve caps from liquid service valve and gas service valve.

 (6) Turn the liquid service valve's rod 90 degree counterclockwise with a hexagonal wrench key to open valve.

- valve.
 Close it after 5 seconds, and check for gas leakage.
 Using soapy water, check for gas leakage from indoor unit's flare and outdoor unit's flare and valve rods.
 Wipe off all the water after completing the check.
 (7) Disconnect charging hose from gas service valve's service port and fully open liquid and gas service valves. (Do not attempt to turn valve rod beyond its stop.)
 (8) Tighten operation valve caps and service port cap to the specified torque shown in the table below.

Service valve size (mm)	Service valve cap tightening torque (N·m)	Service port cap tightening torque (N·m)
φ6.35 (1/4")	20-30	
φ9.52 (3/8")	20-30	10-12
φ12 7 (1/2")	25-35	

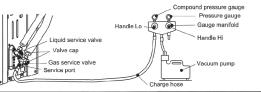

\triangle CAUTION

To prevent vacuum pump oil from entering into the refrigerant system, use a counterflow prevention adapter.

5. Additional refrigerant charge

Additional refrigerant charge is required only when connecting pipe length exceeds 15 m.

5.1 Calculating additional refrigerant charge
Additional refrigerant charge can be calculated using the formula given below.
Additional refrigerant charge (g) = { Connecting pipe length (m) – Factory charged length 15 (m) } x 20 (g/m)

NOTE

- If additional refrigerant charge calculation result is negative, there is no need to remove the refrigerant.
- If refrigerant recharge is required for the unit with connecting pipe length 15 m or shorter, charge the factory charged amount as shown in the table below.

 The maximum refrigerant charge amount is designed as shown in the table below

	Model SRC20/25	Model SRC35	Model SRC50
The factory refrigerant charge amount(kg)	0.62	0.78	1.05
The maximum refrigerant charge amount(kg)	0.72	0.88	1.25

5.2 Charging refrigerant


- 5.2 Charging retrigerant (1) Charge the R32 refrigerant in liquid phase from service port with both liquid and gas service valves shut. Since R32 refrigerant must be charged in the liquid phase, make sure that refrigerant is discharged from the cylinder in the liquid phase all the time.
 (2) When it is difficult to charge a required refrigerant amount, fully open both liquid and gas service valves and charge refrigerant, while running the unit in the cooling mode. When refrigerant is charged with the unit being run, complete the charge operation within 30 minutes.
 (3) Write the additional refrigerant charge calculated from the connecting pipe length on the label attached on the service cover.

A CAUTION

 Running the unit with an insufficient quantity of refrigerant for a long time can cause unit malfunction. Do not charge more than the maximum refrigerant amount. It can cause unit malfunction

5. UTILIZATION OF EXISTING PIPE

(1) Check whether an existing pipe system is reusable or not by using the following flow chart.

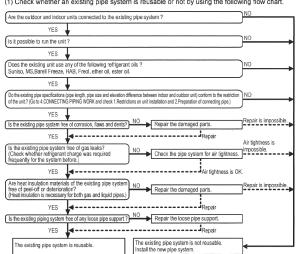

NOTE

- Consult with our distributor in the area, if you need to recover refrigerant and charge it again.

 (2) Clean the existing pipe system according to the procedure given below.

 (a) Carry out forced cooling operation of existing unit for 30 minutes.
- - For 'Forced cooling operation' refer to the indoor unit installation manual
- (b) Stop the indoor fan and carry out forced cooling operation for 3 minutes (Liquid return).
 (c) Close the liquid service valve of the outdoor unit and carry out pump down operation (Refer to 6.
- PUMP DOWN). (d) Blow with nitrogen gas. If discolored refrigeration oil or any foreign matter is discharged by the
- blow, wash the pipe system or install a new pipe system.
- (3) Remove the flare nuts from the existing pipe system. Go back to 4.CONNECTING PIPING WORK and proceed to step 2.2 Cutting connecting pipe

⚠ CAUTION

- Do not use the old flare nuts (of existing unit). Make sure that the flare nuts supplied with the (new)
- outdoor unit are used.


 If the flared / compression connection to the indoor unit is located inside the house / room then this pipework can't be reused.
- If the existing piping is specified as liquid pipe ø9.52 or gas pipe ø12.7, refer to the following. (SRC50 only)
- <Table of pipe size restrictions>

Additional charge amount per meter of pipe		0.054 kg/m
Pipe size	Liquid pipe	ø9.52
	Gas pipe	ø12.7
Maximum one-way pipe length		10
Length covered without additional charge		5

Additional charge amount (kg) = {Main pipe length (m) - Length covered without additional charge shown in the table (m)} X Additional charge amount per meter of pipe shown in the table (kg/m)

6. PUMP DOWN

- (1) Connect charge hose of gauge manifold to service port of outdoor unit.
 (2) Close the liquid service valve with hexagonal wrench key.
 (3) Fully open the gas service valve with hexagonal wrench key.
 (4) Carry out forced cooling operation (For forced cooling operation procedure, refer to indoor unit installation manual).
 (5) When the low pressure gauge becomes 0.01 MPa, close the gas service valve and stop forced cooling operation.

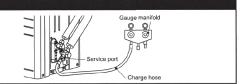

7. ELECTRICAL WIRING WORK

⚠ WARNING

- Make sure that all the electrical work is carried out in accordance with the national or regional electrical standards.
- cal standards.

 Make sure that the earth leakage breaker and circuit breaker of appropriate capacities are installed (Refer to the table given below).

 Do not turn on the power until the electrical work is completed.

 Do not use a condensive capacitor for power factor improvement under any circumstances. (It does not improve power factor. Moreover, it can cause an abnormal overheat accident).

Breaker specifications

Model	Phase	Earth leakage breaker	Circuit breaker
SRC20/25/35	Single phase	Leakage current: 30 mA,	Over current: 16 A
SRC50	Single phase	0.1sec or less	Over current: 20 A

Main fuse specification

Model	Specification	Parts No.	Code on LABEL, WIRING
SRC20/25/35	250 V 15 A	SSA564A136	F7
CDCEO	250 V 20 A	CCVECAV136V	E4

1. Preparing cable

(1) Selecting cable

Select the power source cable and connecting cable in accordance with the specifications mentioned below

(a) Power source cable
3 cores* 2.5mm* or more, conformed with 60245 IEC57
When selecting the power source cable length, make sure that voltage drop is less than 2 %.
If the wire length gets longer, increase the wire diameter.

(b) Connecting cable
4 cores* 1.5mm², conformed with 60245 IEC57
1 Earth wire is included (Yellow/Green).
(2) Arrange each wire length as shown below.



(3) Attach round crimp-type terminal to each wire as shown in the below Select the size of round crimp-type terminal after considering the specifications of terminal block and wire diameter.



△ CAUTION

Power source cable and connecting cable must conform to the specifications mentioned in the manual Using cables with wrong specifications may result in unit malfunction.

2. Connecting cable

(1) Remove the service cover.
(2) Connect the cables according to the instructions and figures given below.
(a) Connect the earth wire of power source cable.


An earth wire must be connected before connecting the other wires of power source cable.


Keep the earth wire longer than the remaining two wires of power source cable.
(b) Connect the remaining two wires (N and L) of power source cable.
(c) Connect the wires of connecting cable. Make sure that for each wire, outdoor and indoor side terminating unphase method. minal numbers match.

(3) Fasten the cables properly with cable clamps so that no external force may work on terminal connections

uions. Moreover, make sure that cables do not touch the piping, etc. When cables are connected, make sure that all electrical components within the electrical component box are free of loose connector coupling or terminal connection.

<Circuit diagram>

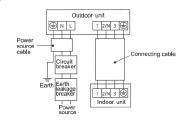

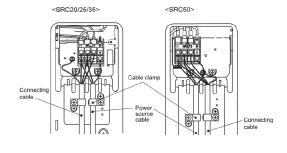

8. FINISHING WORK

1. Heating and condensation prevention

- 1. Heating and condensation prevention
 1. The prevention of the connecting pipes (both liquid and gas pipes) with insulation to prevent it from heating and dew condensation.


 Use the heat insulating material which can withstand 120 °C or higher temperature. Make sure that insulation is wrapped tightly around the pipes and no gap is left between them.

 (2) Wrap the refrigerant pipings of indoor unit with indoor unit heat insulation using tape.

 (3) Cover the flare-connected joints (indoor side) with the indoor unit heat insulation and wrap it with an insulation pred (stongers or generally each defined in those with the conformation).

- insulation pad (standard accessory provided with indoor unit).

 (4) Wrap the connecting pipes, connecting cable and drain hose with the tape.

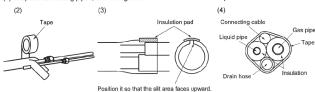

NOTE

Locations where relative humidity exceeds 70 %, both liquid and gas pipes need to be dressed with 20 mm or thicker heat insulation materials.


⚠ CAUTION

- Improper insulation can cause condensate (water) formation during cooling operation
- Condensate can leak or drip causing damage to household property.

 Poor heat insulating capacity can cause pipe outer surface to reach high temperature during heating operation. It can cause cable deterioration and personal injury.

2. Finishing work

- 2. Finishing work
 (1) Make sure that the exterior portion of connecting pipes, connecting cable and drain hose is wrapped properly with tape. Shape the connecting pipes to match with the contours of the pipe assembly route.
 (2) Fix the pipe assembly with the wall using clamps and screws. Pipe assembly should be anchored every 1.5 m or less to isolate the vibretion.
 (3) Install the service cover securely. Water may enter the unit if service cover is not installed properly, resulting in unit malfunction and failure.

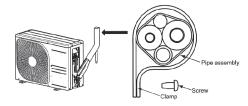

⚠ CAUTION

Make sure that the connecting pipes do not touch the components within the unit. If pipes touch the internal components, it may generate abnormal sounds and/or vibrations

9. INSTALLATION TEST CHECK POINTS

Both liquid and gas service valves are fully open

After finishing the installation work, check the following points again before turning on the power. Conduct test run (Refer to indoor unit installation manual) and ensure that the unit operates properly

Power source voltage complies with the rated voltage of air-conditioner Earth leakage breaker and circuit breaker are installed Power cable and connecting cable are securely fixed to the terminal block

No gas leaks from the joints of the service valves. Indoor and outdoor side pipe joints have been insulated. Drain hose (if installed) is fixed properly Screw of the service cover is tightened properly

9.3 Safety precautions in handling air-conditioners with flammable refrigerants

RSA012A090



This equipment uses flammable refrigerants. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.



There is information included in the user's manual and/or installation manual.



The user's manual should be read carefully.



A service personnel should be handing this equipment with reference to the installation manual.

- This safety precaution sheet is for R32 refrigerant. If you want to know the type of refrigerant in the unit, check the label attached to the outdoor unit.
- The precautionary items mentioned below are distinguished into two levels, MWARNING and CAUTION

MARNING: Wrong installation would cause serious consequences such as injuries or death

⚠ CAUTION : Wrong installation might cause serious consequences depending on circumstances.

⚠ WARNING

- Strict compliance of the domestic laws must be observed when disposing the appliance.
- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odour

↑ CAUTION

(1. General

- That the installation of pipe-work shall be kept to a minimum.
- That pipe-work shall be protected from physical damage.
- That compliance with national gas regulations shall be observed.
- That mechanical connections shall be accessible for maintenance purposes.
- Keep any required ventilation openings clear of obstruction.
- Servicing shall be performed only as recommended by the manufacturer.

2. Unventilated areas

 The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.

3. Qualification of workers

 The staff in servicing operations must hold the national qualification or other relevant qualifications.

4. Information on servicing

- 4.1 Checks to the area
- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.
- For repair to the refrigerating system, 4.3 to 4.7 shall be completed prior to conducting work on the system.
- 4.2 Work procedure
- Work shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed
- 4.3 General work area
- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.
- Work in confined spaces shall be avoided.
- The area around the workspace shall be sectioned off.
- Ensure that the conditions within the area have been made safe by control of flammable material.
- 4.4 Checking for presence of refrigerant
- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

- 4.5 Presence of fire extinguisher
- If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.
- 4.6 No ignition sources
- No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space.
- Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
- "No Smoking" signs shall be displayed.
- 4.7 Ventilated area
- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
- A degree of ventilation shall continue during the period that the work is carried out.
- The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- 4.8 Checks to the refrigeration equipment
- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
 The following checks shall be applied to
- The following checks shall be applied to installations using flammable refrigerants:
 the charge size is in accordance with the room
 - the charge size is in accordance with the room size within which the refrigerant containing parts are installed;
- the ventilation machinery and outlets are operating adequately and are not obstructed;
- if an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
- refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

- 4.9 Checks to electrical devices
- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.
- This shall be reported to the owner of the equipment so all parties are advised.
- Initial safety checks shall include:
- that capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- that no live electrical components and wiring are exposed while charging, recovering or purging the system;
- the system,
 that there is continuity of earth bonding.

5. Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.
- If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected.
- This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- Ensure that the apparatus is mounted securely.
- Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres.
- Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE

The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

⚠ CAUTION

6. Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.
- The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer.
- Other parts may result in the ignition of refrigerant in the atmosphere from a leak

7. Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

8. Detection of flammable refrigerants

- Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.
- A halide torch (or any other detector using a naked flame) shall not be used.

9. Leak detection methods

- Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
 Ensure that the detector is not a potential source of
- ignition and is suitable for the refrigerant used.
- Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.
- Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
- If a leak is suspected, all naked flames shall be removed/extinguished.
- If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak.
- For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

10. Removal and evacuation

- When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration.
- The following procedure shall be adhered to:
- remove refrigerant;
- purge the circuit with inert gas;
- evacuate:
- purge again with inert gas;
- open the circuit by cutting or brazing. The refrigerant charge shall be recovered into the correct recovery cylinders.
- For appliances containing flammable refrigerants, the system shall be "flushed" with OFN to render the unit safe.
- This process may need to be repeated several times
- Compressed air or oxygen shall not be used for purging refrigerant systems.

- For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system.
- When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
- This operation is absolutely vital if brazing operations on the pipe-work are to take place. Ensure that the outlet for the vacuum pump is not
- close to any ignition sources and that ventilation is available.

11. Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed.
- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.
- Prior to recharging the system, it shall be pressuretested with the appropriate purging gas
- The system shall be leak-tested on completion of charging but prior to commissioning.
- A follow up leak test shall be carried out prior to leaving the site

12. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant.
- It is essential that electrical power is available before the task is commenced.
- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically.c) Before attempting the procedure ensure that: mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- all personal protective equipment is available and being used correctly;
- the recovery process is supervised at all times by a competent person:
- recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer's instructions
- h) Do not overfill cylinders. (No more than 80 %volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

13. Labelling

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed.
- For appliances containing flammable refrigerants ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

14. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants.
- In addition, a set of calibrated weighing scales shall
- be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder. and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to
- returning the compressor to the suppliers.
 Only electric heating to the compressor body shall be employed to accelerate this process
- When oil is drained from a system, it shall be carried out safely.

15. Other safety precautions

- A brazed, welded, or mechanical connection shall be made before opening the valves to permit refrigerant to flow between the refrigerating system parts.
- Flammable refrigerant used, refrigerant tubing protected or enclosed to avoid mechanical damage (IEC/EN 60335-2-40/A1).
- Tubing protected to extent that it will not be handled or used for carrying during moving of product (IEC/EN 60335-2-40/A1).
- Flammable refrigerant used, low temperature solder alloys, such as lead/tin alloys, not acceptable for pipe connections (IEC/EN 60335-2-40/A1).
- When there is flare connection, it must be installed outdoor

Selection of installation location for the indoor unit


• Minimum installation area for indoor unit

⚠ CAUTION

The indoor unit shall be installed in a room with minimum installation area or more according to the refrigerant charge amount (factory refrigerant charge + additional refrigerant charge).

For factory refrigerant charge, refer to the outdoor unit label model name or installation sheet.

For additional refrigerant charge, refer to the outdoor unit installation sheet.

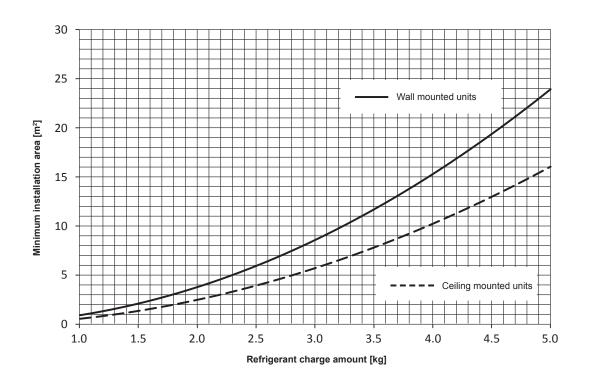



Refrigerant charge	Minimum instal	lation area [m²]
amount [kg]	Wall mounted units	Ceiling mounted units
1.0	1.0	0.6
1.1	1.2	0.8
1.2	1.4	0.9
1.3	1.6	1.1
1.4	1.9	1.3
1.5	2.1	1.4
1.6	2.4	1.6
1.7	2.8	1.8
1.8	3.1	2.1
1.9	3.4	2.3
2.0	3.8	2.6
2.1	4.2	2.8
2.2	4.6	3.1
2.3	5.0	3.4
2.4	5.5	3.7
2.5	6.0	4.0
2.6	6.4	4.3
2.7	7.0	4.7
2.8	7.5	5.0
2.9	8.0	5.4
3.0	8.6	5.7

Refrigerant charge	Minimum installation area [m²]		
amount [kg]	Wall mounted units	Ceiling mounted units	
3.1	9.2	6.1	
3.2	9.8	6.5	
3.3	10.4	7.0	
3.4	11.0	7.4	
3.5	11.7	7.8	
3.6	12.4	8.3	
3.7	13.1	8.7	
3.8	13.8	9.2	
3.9	14.5	9.7	
4.0	15.3	10.2	
4.1	16.0	10.7	
4.2	16.8	11.3	
4.3	17.6	11.8	
4.4	18.5	12.4	
4.5	19.3	12.9	
4.6	20.2	13.5	
4.7	21.1	14.1	
4.8	22.0	14.7	
4.9	22.9	15.3	
5.0	23.8	16.0	

10. OUTLINE OF OPERATION CONTROL BY MICROCOMPUTER

10.1 SRK, SRF & SRR series

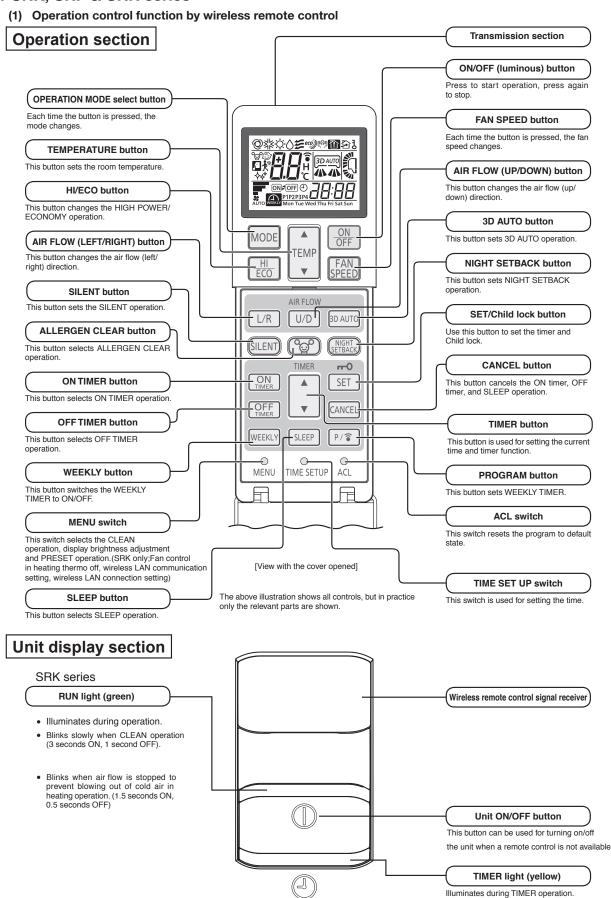

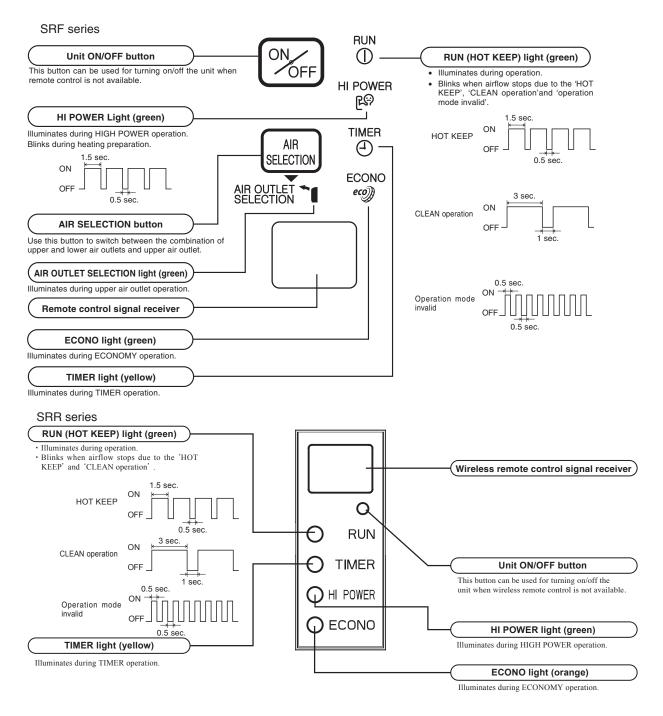

(2) Unit ON/OFF button

When the wireless remote control batteries become weak, or if the wireless remote control is lost or malfunctioning, this button may be used to turn the unit on and off.

(a) Operation

Push the button once to place the unit in the automatic mode. Push it once more to turn the unit off.


(b) Details of operation

The unit will go into the automatic mode in which it automatically determines, from indoor temperature (as detected by sensor), whether to go into COOL, DRY⁽¹⁾ or HEAT modes.


Function Operation mode	Indoor temperature setting	Fan speed Flap/Louver		Timer switch	
COOL	About 24°C				
DRY ⁽¹⁾	About 25°C ⁽¹⁾	Auto Auto		Continuous	
HEAT	About 26°C				

Note (1) Models SRF & SRR series only


•Models SRK20, 25, 35ZS-W

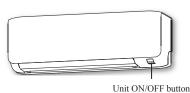



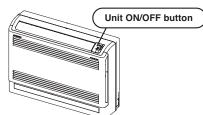



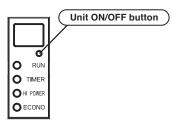



(3) Auto restart function

- (a) Auto restart function records the operational status of the air-conditioner immediately prior to be switched off by a power cut, and then automatically resumes operations after the power has been restored.
- (b) The following settings will be cancelled:
 - (i) Timer settings
 - (ii) HIGH POWER operation


Notes (1) Auto restart function is set at on when the air-conditioner is shipped from the factory. Consult with your dealer if this function needs to be switched off.

- (2) When power failure ocurrs, the timer setting is cancelled. Once power is resumed, reset the timer.
- $(3) \quad \text{If the jumper wire (J1 or J170) ``AUTO RESTART" is cut, auto restart is disabled. (See the diagram at below.)}$

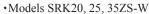

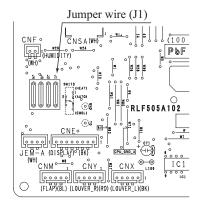

•Models SRF25, 35ZS-W SRR25, 35ZS-W

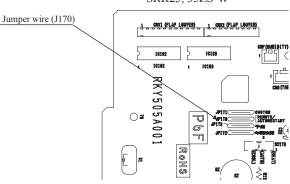


(4) Installing two air-conditioners in the same room

When two air-conditioners are installed in the room, use setting when the two air-conditioners are not operated with one wireless remote control. Set the wireless remote control and indoor unit.

(a) Setting the wireless remote control


- (i) Pull out the cover and take out batteries.
- (ii) Disconnect the switching line next to the battery with wire cutters.
- (iii) Insert batteries. Close the cover.

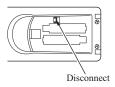

(b) Setting an indoor unit

- (i) Turn off the power source, and turn it on after 1 minute.
- (ii) Point the wireless remote control that was set according to the procedure described on the left side at the indoor unit display section and send a signal by pressing the ACL switch on the wireless remote control.
 Since the signal is sent in about 6 seconds after the ACL switch is pressed, point the wireless remote control at the indoor unit display section for some time.
- (iii) Check that the reception buzzer sound "Peep" or "Pip" is emitted from the indoor unit. At completion of the setting, the indoor unit emits a buzzer sound "Peep" or "Pip".

(If no reception tone is emitted, start the setting from the beginning again.)

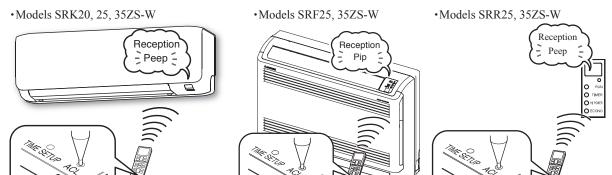

(5) Selection of the annual cooling function


(a) The annual cooling control is valid from factory default setting. It is possible to disable by cutting jumper wire (J3 or J172), or changing the setting of DIP switch (SW2-4) on the interface kit (Option) PCB if it is connected.

Jumper wire (J3 or J172)	Interface kit (SC-BIKN2-E) SW2-4	Function
Shorted	ON	Enabled
Shorted	OFF	Disabled
Open	ON	Disabled
Open	OFF	Disabled


Note: (1) Default states of the jumper wire (J3 or J172) and the interface kit at the shipping from factory – On the PCB, the DIP switch (SW2-4) is set to enable the annual cooling function.

(2) To cancel the annual cooling setting, consult your dealer.

•Models SRK20, 25, 35ZS-W

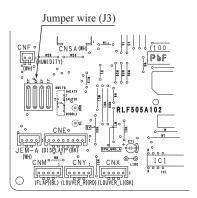


•Models SRF25, 35ZS-W SRR25, 35ZS-W

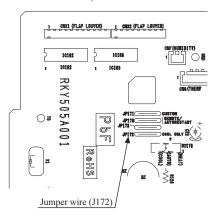

(b) Content of control

- (i) If the outdoor air temperature sensor (TH3) detects below 5°C, the indoor unit speed is switched to 7(SRF & SRR:8)th step.
- (ii) If the outdoor air temperature sensor (TH3) detects higher than A°C, the indoor unit speed is changed to the normal control speed.

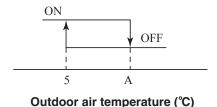


Model	A
SRK20, 25, 35ZS-W	10
SRF25, 35ZS-W	7
SRR25, 35ZS-W	17

(6) Heating only function (SRK series only)

(a) Heating only function is enabled by disconnecting the jumper wire (J4).

(b) Content of control

Operation mode setting	Operation mode
COOL/DRY/FAN	FAN
AUTO/HEAT	HEAT

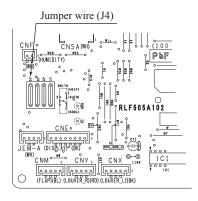

(7) High power operation

Pressing the HI POWER/ECONOMY button intensifies the operating power and initiates powerful cooling and heating operation for 15 minutes continuously. The wireless remote control displays HIGH POWER mark and the FAN SPEED display disappears.

- (a) During the HIGH POWER operation, the room temperature is not controlled. When it causes an excessive cooling and heating, press the HI POWER/ECONOMY button again to cancel the HIGH POWER operation.
- (b) HIGH POWER operation is not available during the DRY and the ON timer to OFF timer operations.
- (c) When HIGH POWER operation is set after ON timer operation, HIGH POWER operation will start from the set time.
- (d) When the following operation are set, HIGH POWER operation will be cancelled.
 - ① When the HI POWER/ECONOMY button is pressed again.
 - ② When the operation mode is changed.
 - ③ When it has been 15 minutes since HIGH POWER operation has started.
 - ④ When the 3D AUTO botton is pressed.(SRK series only)
 - (5) When the SILENT botton is pressed.
 - 6 When the NIGHT SETBACK botton is pressed.
- (e) Not operable while the air-conditioner is OFF.
- (f) After HIGH POWER operation, the sound of refrigerant flowing may be heard.

(8) Economy operation

Pressing the HI POWER/ECONOMY button initiates a soft operation with the power suppressed in order to avoid an excessive cooling or heating. The unit operate 1.5°C higher than the setting temperature during cooling or 2.5°C lower than that during heating. The wireless remote control displays ECONOMY mark and the FAN SPEED display disappears.

- (a) It will go into ECONOMY operation at the next time the air-conditioner runs in the following cases.
 - ① When the air-conditioner is stopped by ON/OFF button during ECONOMY operation.
 - ② When the air-conditioner is stopped in SLEEP or OFF TIMER operation during ECONOMY operation.
 - ③ When the operation is retrieved from CLEAN or ALLERGEN CLEAR (SRK series only) operation.
- (b) When the following operation are set, ECONOMY operation will be cancelled.
 - ① When the HI POWER/ECONOMY button is pressed again.
 - ② When the operation mode is changed from DRY to FAN.
 - ③ When the NIGHT SETBACK botton is pressed.

- (c) Not operable while the air-conditioner is OFF.
- (d) The setting temperature is adjusted according to the following table.

Item Mode	Cooling	Heating
T	(1)+0.5	①-1.0
Temperature adjustment	②+1.0	2-2.0
3	3+1.5	3-2.5


- ① at the start of operation
- 2 one hour after the start of operation
- 3 two hours after the start of operation

(9) Flap and louver control (SRK and SRF series only)

SRK series

(a) Flap

Every time when you press the AIR FLOW \(\Delta \) (UP/DOWN) button the mode changes as follows.

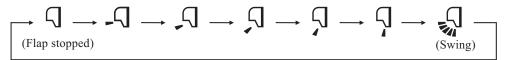


Angle of flap from horizontal

Wireless remote control display	-9	Ρ.	Ŋ	Ş	Ş
COOL, DRY, FAN	Approx. 25°	Approx. 30°	Approx. 40°	Approx. 50°	Approx. 60°
HEAT	Approx. 25°	Approx. 35°	Approx. 50°	Approx. 60°	Approx. 70°

(b) Louver

Every time when you press the AIR FLOW **♦** (LEFT/RIGHT) button the mode changes as follows.

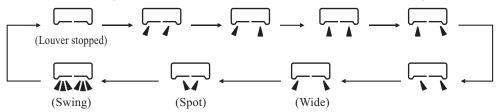

· Angle of louver

Wireless remote control display	11				
Center installation	Left approx. 50°	Left approx. 20°	Center	Right approx. 20°	Right approx. 50°
Right end installation	Left approx. 50°	Left approx. 45°	Left approx. 30°	Center	Right approx. 20°
Left end installation	Left approx. 20°	Center	Right approx. 30°	Right approx. 45°	Right approx. 50°

(c) Swing


(i) Swing flap

Flap moves in upward and downward directions continuously.

(ii) Swing louver

Louver moves in left and right directions continuously.

♦ In COOL, DRY, FAN operation ♦ In HEAT operation

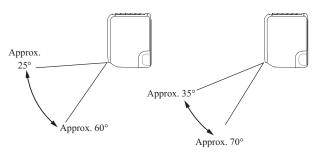



(d) Memory flap (Flap or louver stopped)


When you press the AIR FLOW (UP/DOWN or LEFT/RIGHT) button once while the flap or louver is operating, it stops swinging at the position. Since this angle is memorized in the microcomputer, the flap or louver will automatically be set at this angle when the next operation is started.

♦ SRF series

Control the flap by AIR FLOW **\(\Phi\)** (UP/DOWN) button on the wireless remote control.

(a) Flan

Each time when you press the AIR FLOW **(UP/DOWN)** button the mode changes as follows.

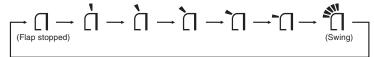

• Angle of Flap from horizontal

Remote control display	Ò	à	ì	` []	<u>-</u> []
COOL , DRY, FAN	Approx. 60°	Approx. 50°	Approx. 38°	Approx. 21.5°	Approx. 12°
HEAT	Approx. 44°	Approx. 32°	Approx. 21.5°	Approx. 12°	Approx. 5°

(b) Swing

(i) Swing flap

Flap moves in upward and downward directions continuously.



(c) Memory flap (Flap stopped)

When you press the AIR FLOW button once while the flap is operating, it stops swinging at the position. Since this angle is memorized in the microcomputer, the flap will automatically be set at this angle when the next operation is started.

(d) When not operating


The flap returns to the position of air flow directly below, when operation has stopped.

(10) Air outlet selection (SRF series only)

(a) AIR SELECTION button can switch between the combination of upper and lower air outlets and upper air outlet. Not operable while the air-conditioner is OFF.

- (i) Each time the AIR SELECTION button is pressed. The combination of the upper and lower air outlets and the upper air outlet can be switched.
- (ii) When the upper air outlet is selected, AIR OUTLET SELECTION light on the unit display area will light green.




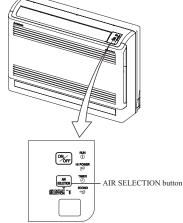

(b) Auto air outlet selection


(i) COOL, DRY operation

- In case both lower and upper outlets operation is selected in Cooling or Dry operation, both outlets will be kept for sixty minutes after the start or until indoor temperature is below the setting point. And then the air outlet will change to the upper outlet. That state will be maintained until switch is turned off.
- 2) In case both outlets operation with auto fan speed mode is selected, the upper outlet will be kept for ten minutes after the start or until indoor temperature is close to reaching the setting point. And then the air outlet will change to both outlets in order to spread comfort air to every corner.

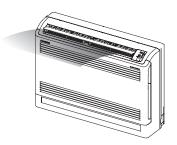

(ii) HEAT operation

- In case both lower and upper outlets operation with auto fan speed mode is selected, the lower outlet will be kept for twenty minutes after the start or until room temperature is close to reaching the setting point. And then the air outlet will change to both outlets. That state will be maintained until the switch is turned off.
- 2) Automatic adjustment of lower air outlet direction prevents stirring up of warm air and keeps optimum comfort at floor level.

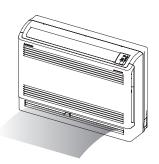

(11) 3D auto operation (SRK series only)

Control the flap and louver by 3D AUTO button on the wireless remote control.

Fan speed and air flow direction are automatically controlled, allowing the entire indoor to efficiently conditioned.

- (a) During cooling and heating (Including auto cooling and heating)
 - (i) Air flow selection is determined according to indoor temperature and setting temperature.

Operation mode	Air flow selection				
	AL	HI	MED	LO	
Cooling	Room temp. – Setting temp. >5°C	Room temp. – Setting temp. ≦5°C		MED	LO
	HIGH POWER	AUTO	НІ		
Llooting	Setting temp. – Room temp. >5°C	Setting temp. – Room temp. ≦ 5°C	_ пі		
Heating	HIGH POWER	AUTO			

- (ii) Air flow direction is controlled according to the room temperature and setting temperature.
 - 1) When 3D auto operation starts

	Cooling Heating		
Flap	Up/down swing		
Louver	Wide (Fixed) Center (Fixed)		

2) When Room temp. – Setting temp. is $\leq 5^{\circ}$ C during cooling and when setting temp. – Room temp. is $\leq 5^{\circ}$ C during heating, the system switches to the following air flow direction control. After the louver swings left and right symmetrically for 3 cycles, control is switched to the control in 3).

	Cooling Heating		
Flap	Horizontal blowing (Fixed)	Slant forwardl blowing (Fixed)	
Louver	Left/right swing		

3) After the flap swings for 5 cycles, control is switched to the control in 4).

	Cooling Heating		
Flap	Up/down swing		
Louver	Center (Fixed)		

4) For 5 minutes, the following air flow direction control is carried out.

	Cooling Heating		
Flap	Horizontal blowing (Fixed)	Slant forwardl blowing (Fixed)	
Louver	Wide (Fixed)		

5) After 5 minutes have passed, the air flow direction is determined according to the room temperature and setting temperature.

Operation mode	Air flow direction contorol				
Cooling	Room temp. – Setting temp. ≦2°C	2° C < Room temp. – Setting temp. $\leq 5^{\circ}$ C	Room temp. – Setting temp. > 5 °C		
Cooling	The control in 4) continues.	Control returns to the control in 2).	Control returns to the control in 1).		
Heating	Setting temp. – Room temp. ≦2°C	2° C < Setting temp. – Room temp. $\leq 5^{\circ}$ C	Setting temp. − Room temp. > 5°C		
Heating	The control in 4) continues.	Control returns to the control in 2).	Control returns to the control in 1).		

(b) During DRY operation

Flap	Horizontal blowing (Fixed)
Louver	Wide (Fixed)

(12) Timer operation

(a) Comfortable timer setting (ON timer)

If the timer is set at ON when the operation select switch is set at the cooling or heating, or the cooling or heating in auto mode operation is selected, the comfortable timer starts and determines the starting time of next operation based on the initial value of 15 minutes and the relationship between the indoor temperature at the setting time (temperature of room temperature sensor) and the setting temperature.

(b) Sleep timer operation

Pressing the SLEEP button causes the temperature to be controlled with respect to the set temperature.

(c) OFF timer operation

The Off timer can be set at a specific time (in 10-minute units) within a 24-hour period.

(d) Weekly timer operation

Timer operation (ON timer, OFF timer) can be set up to 4 times a day for each weekday.

Note Timer operation from wireless remote control becomes invarid when you connect the interface kit (such as SC-BIKN2-E and WF-RAC).

(e) Combination of patterns which can be set for the timer operations

Item Item	Sleep timer	OFF timer	ON timer	Weekly timer
Sleep timer		×	0	×
OFF timer	×		0	×
ON timer	0	0		×
Weekly timer	×	×	×	

Notes (1) \bigcirc : Allowed \times : Not

⁽²⁾ Since the ON timer, sleep timer and OFF timer are set in parallel, when the times to turn ON and OFF the air-conditioner are duplicated, the setting of the OFF timer has priority.

(13) Silent mode

As "Silent mode start" signal is received from the wireless remote control, it operates by dropping the outdoor fan tap and the compressor command speed.

	SRK20		SRK25, SRF25, SRR25		SRK35, SRF35, SRR35	
	Cooling	Heating	Cooling	Heating	Cooling	Heating
Outdoor fan speed (Upper limit)	4th speed	4th speed	4th speed	4th speed	5th speed	4th speed
Compressor speed (Upper limit)	30 rps	46 rps	37 rps	49(46) rps	46 rps	56 rps

NOTE (1) Value in () is for SRR series.

(14) Night setback

As "Night setback" signal is received from the wireless remote control, the heating operation starts with the setting temperature at 10° C.

(15) Air flow range setting (SRK series only)

Take the air-conditioner location into account and adjust the left/right air flow range to maximize air-conditioning.

(a) Setting

(i) If the air-conditioning unit is running, press the ON/OFF button to stop. The installation location setting cannot be made while the unit is running.

(ii) Press the AIR FLOW U/D (UP/DOWN) button and the

AIR FLOW L/R (LEFT/RIGHT) button together for 5 seconds or more.


The installation location display illuminates.


(iii) Setting the air-conditioning installation location.

Press the AIR FLOW L/R (LEFT/RIGHT) button and adjust to the desired location.


Each time the AIR FLOW L/R (LEFT/RIGHT) button is pressed, the indicator is switched in the order of:



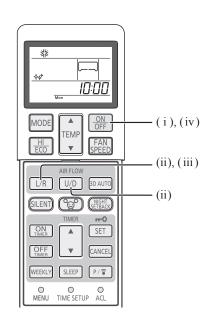

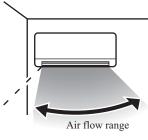



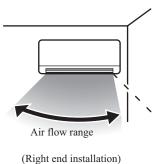

(iv) Press the ON/OFF button.

The air-conditioner's installation location is set.

Press within 60 seconds of setting the installation location (while the installation location setting display illuminates).

(16) Display brightness adjustment (SRK series only)

This function can be used when it is necessary to adjust the brightness of unit display.

Brightness level	Run light	Timer light
LV2	100%	100%
LV1	50%	50%
LV0	0%	0%

Note(1) When the unit displays self diagnosis or service mode, brightness level is always LV2.

(17) Wireless LAN connection function (SRK series only)

(a) Operating conditions

When a signal of wireless LAN connection setting was received from a remote control during all air-conditioners stop

(b) Detail of operation

- (i) A signal which corresponds to the signal received from a remote control is sent to interface.
- (ii) A buzzer for confirmation of receipt rings.

(c) Reset conditions

When either of the following conditions is satisfied

- (i) When a reception complete signal was received from interface
- (ii) When an interface communication setting OFF signal was received from a remote control

Note: Regarding a long buzzer sound (In wireless LAN connection setting)

When RUN light and TIMER light blink simultaneously (at an interval of 2 seconds) and you push the remote control button, the indoor unit may emit a long buzzer sound for approximately 3 seconds.

The occurrence of this buzzer sound is not abnormal.

(18) Fan control during heating thermostat OFF (SRK series only)

- (i) Following fan controls during the heating thermostat OFF can be selected with the wireless remote control.
 - 1) Normal thermostat operation 2) Fireplace 3) Interval 4) Stop
- (ii) When the "Normal thermostat operation" is selected, the indoor fan is controlled by HOT KEEP.
- (iii) When the "Fireplace" is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the "Interval" is selected, following controls are performed:
 - 1) If the thermostat is turned OFF during the heating operation, the indoor unit turns OFF the indoor fan.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ① tap for 1 minute.
 - 3) After operating at ① tap for 1 minute, the indoor fan moves to the state of 1) above.
- (v) When the "Stop" is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF.

Note To use "Stop" function, additional work in which the suction temperature sensor can detect the room temperature appropriately is required.

Otherwise, it may take time to return to heating and the heating capacity may be insufficient.

(19) Outline of heating operation

(a) Operation of major functional components in heating mode

	Heating				
	Thermostat ON	Thermostat OFF	Failure		
Compressor	ON	OFF	OFF		
Indoor fan motor	ON	ON(HOT KEEP)*	OFF		
Outdoor fan motor	ON	OFF (few minutes ON)	OFF		
4-way valve	ON	ON	OFF (3 minutes ON)		

^{*}When a wired remote control is connected, a signal of a wired remote control is priority. HOT KEEP, Fireplace, Interval and Stop can be established.

In the case, indoor air temperature is detected by sensor on the wired remote control.

(b) Details of control at each operation mode (pattern)

(i) Fuzzy operation

Deviation between the indoor temperature setting correction temperature and the return air temperature is calculated in accordance with the fuzzy rule, and used for control of the air capacity and the compressor speed.

SRK series

Model Fan speed	SRK20ZS-W	SRK25ZS-W	SRK35ZS-W
Auto	20-115rps	20-115rps	20-115rps
HI	20-115rps	20-115rps	20-115rps
MED	20-86rps	20-104rps	20-108rps
LO	20-70rps	20-84rps	20-96rps
ULO	20-44rps	20-54rps	20-60rps

·SRF series

Model		
Fan speed	SRF25ZS-W	SRF35ZS-W
Auto	20-102rps	20-115rps
HI	20-102rps	20-115rps
MED	20-76rps	20-98rps
LO	20-66rps	20-92rps
ULO	20-58rps	20-80rps

•SRR series

Model Fan speed	SRR25ZS-W	SRR35ZS-W
Auto	20-102rps	20-115rps
HI	20-102rps	20-115rps
MED	20-72rps	20-76rps
LO	20-58rps	20-62rps
ULO	20-42rps	20-46rps

When the defrost operation, protection device, etc. is actuated, operation is performed in the corresponding mode.

(ii) Hot keep operation

If the hot keep operation is selected during the heating operation, the indoor blower is controlled based on the temperature of the indoor heat exchanger (Th2) to prevent blowing of cool wind.

However, if the fan speed setting is Hi and room temperature is 19°C or higher, this control is not executed.

(c) Defrost operation

- (i) Starting conditions (Defrost operation can be started only when all of the following conditions are satisfied.)
 - 1) After start of heating operation

When it elapsed 35 minutes (Accumulated compressor operation time)

2) After end of defrost operation

When it elapsed 35 minutes (Accumulated compressor operation time)


- 3) Outdoor heat exchanger temperature sensor (TH2)
 - When the temperature has been below -5°C for 3 minutes continuously
- 4) The difference between the outdoor air temperature sensor and the outdoor heat exchanger sensor temperature (TH3-TH2)
 - The outdoor air temperature $\geq 0^{\circ}\text{C}$: 7°C or higher
 - -15°C \leq The outdoor air temperature < 0°C : $3/15 \times$ The outdoor air temperature + 7°C or higher (SRK20, 25;


SRF, SRR25)

4/15 × The outdoor air temperature + 7°C or higher (SRK, SRF,

SRR35)

• The outdoor air temperature < -15°C : -5°C or higher

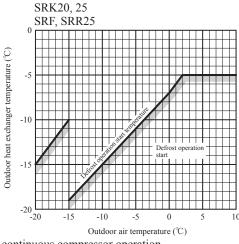

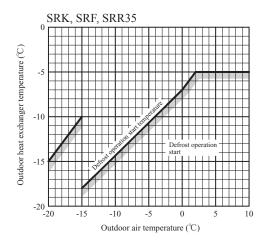

5) During continuous compressor operation

In addition, when the speed command from the indoor control of the indoor unit during heating operation has counted 0 rps 10 times or more and all conditions of 1), 2) and 3) above and the outdoor air temperature is 3°C or less are satisfied (note that when the temperature for outdoor heat exchanger temperature sensor (TH2) is -5°C or less: 62 rps or more, -4°C or less: less than 62 rps), defrost operation is started.

- (ii) Ending conditions (Operation returns to the heating cycle when either one of the following is satisfied.)
 - 1) Outdoor heat exchanger temperature sensor (TH2): 13°C or higher
 - 2) Continued time of defrost operation → For more than 15 minutes
 - Defrost operation



XDepends on an operation condition, the time can be longer than 7 minutes.

(d) Countermeasure for excessive temperature rise (SRK series only)

If it feels excessive temperature rise in heating operation, setting temperature can be lower.

(i) Setting

Push ON/OFF button 30 seconds or more after turn on the power source and operate the air-conditioner at least once time, At completion of the setting, the indoor unit emits a buzzer sound "Pip".

(ii) Contents of control

Unit : $^{\circ}$ C

		Signal of wireless remote control (Display)											
	18	19	20	21	22	23	24	25	26	27	28	29	30
Before setting	20	21	22	23	24	25	26	27	28	29	30	31	32
After setting	18	19	20	21	22	23	24	25	26	27	28	29	30

(iii) Reset condition

Push ON/OFF button 30 seconds or more during setting this mode. At completion of the reset, the indoor unit emits a buzzer sound "PiPiPi".

(20) Outline of cooling operation

(a) Operation of major functional components in cooling mode

	Cooling							
	Thermostat ON	Thermostat OFF	Failure					
Compressor	ON	OFF	OFF					
Indoor fan motor	ON	ON	OFF					
Outdoor fan motor	ON	OFF (few minutes ON)	OFF (few minutes ON)					
4-way valve	OFF	OFF	OFF					

(b) Detail of control in each mode (Pattern)

(i) Fuzzy operation

During the fuzzy operation, the air flow and the compressor speed are controlled by calculating the difference between the indoor temperature setting correction temperature and the return air temperature.

•SRK series

Model Fan speed	SRK20ZS-W	SRK2ZS-W	SRK35ZS-W
Auto	15-66rps	15-74rps	15-98rps
HI	15-66rps	15-74rps	15-98rps
MED	15-52rps	15-60rps	15-80rps
LO	15-42rps	15-48rps	15-70rps
ULO	15-34rps	15-38rps	15-46rps

·SRF series

Model Fan speed	SRF25ZS-W	SRF35ZS-W
Auto	15-72rps	15-104rps
HI	15-72rps	15-104rps
MED	15-48rps	15-71rps
LO	15-40rps	15-58rps
ULO	15-34rps	15-46rps

SRR series

Model Fan speed	SRR25ZS-W	SRR35ZS-W
Auto	15-74rps	15-96rps
HI	15-74rps	15-96rps
MED	15-55rps	15-74rps
LO	15-45rps	15-58rps
ULO	15-34rps	15-44rps

(21) Outline of dehumidifying (DRY) operationion


(a) Purpose of DRY mode

The purpose is "Dehumidification", and not to control the humidity to the target condition.

Indoor/outdoor unit control the operation condition to reduce the humidity, and also prevent over cooling.

(b) Outline of control

(i) Indoor fan speed and compressor are controlled by the area which is selected by the temperature difference.

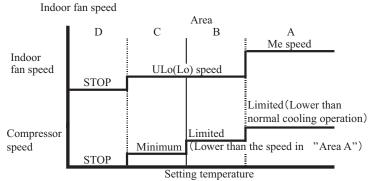

Difference between setting temperature and return air temperature

(ii) The indoor unit check the current area by every 5 minutes, and operate by the next checking.


(c) Other

When the outdoor air temperature and room temperature is low for cooling operation, indoor unit can not operate in cooling, and dehumidify. In this case, the units operate in heating to rise the room temperature, and after that start DRY operation.


(22) Outline of automatic operation

(a) Determination of operation mode

Operation mode is determined by indoor air temperature and outdoor air temperature as following.

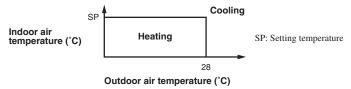

(b) Operation mode is changes when keep cooling and heating thermostat off 20 minutes and be satisfied with following conditions. If the setting temperature is changed with the remote control, the operation mode is judged immediately.

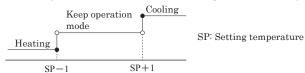

Indoor air temperature - Setting temperature (°C)

*It can not be changed to heating mode if outdoor air temperature is 28°C or higher.

- (c) When the unit is started again within one hour after the stop of automatic operation or when the automatic operation is selected during heating, cooling or dehumidifying operation, the unit is operated in the previous operation mode.
- (d) Setting temperature can be adjusted within the following range. There is the relationship as shown below between the signals of the wireless remote control and the setting temperature. $U_{\text{nit}}: {}^{\circ}C$

	Signals of wireless remote control (Display)													
		18	19	20	21	22	23	24	25	26	27	28	29	30
•	Cooling	18	19	20	21	22	23	24	25	26	27	28	29	30
Setting	Dehumidifying	19	20	21	22	23	24	25	26	27	28	29	30	31
temperature	Heating	20	21	22	23	24	25	26	27	28	29	30	31	32

(e) When the unit is operated automatically with the wired remote control connected, the cooling operation is controlled according to the display temperatures while the setting temperature is compensated by +1°C during dehumidifying or by +2°C during heating.

(23) Protective control function

(a) Dew prevention control (During cooling) (SRK and SRF series only)

Prevents dewing on the indoor unit.

(i) Operating conditions

When the following conditions have been satisfied for more than 30 minutes after starting operation


- 1) Compressor's speed is 32 rps or higher.
- 2) Detected value of humidity is 68% or higher.

(ii) Contents of operation

1) Air capacity control

Item	Model	SRK20, 25, 35	SRF25, 35
LO,ULO	Upper limit of compressor's speed	RangeA: 60rps, RangeB: 60rps	RangeA: 60rps, RangeB: 40(SRF35:45)rps
LO,OLO	Indoor fan	4th speed(SRK35:5th speed)	5th speed
	Upper limit of compressor's speed	RangeA: 60rps, RangeB: 60rps	RangeA: 60rps, RangeB: 40(SRF35:45)rps
AUTO,HI,MED		Adaptable to compressor speed	Adaptable to compressor speed
	Indoor fan	(SRK20, 25:Lower limit 4th speed) (SRK35:Lower limit 5th speed)	(Lower limit 5th speed)

Note (1) Ranges A and B are as shown below.

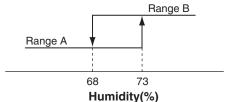

- 2) When this control has continued for more than 30 minutes continuously, the following wind direction control is performed.
 - ·SRK series
 - a) When the vertical wind direction is set at other than the vertical swing, the flaps change to the horizontal position.
 - b) When the horizontal wind direction is set at other than the horizontal swing the louver changes to the vertical position.
 - ·SRF series
 - a) Upper flap: Approx 38°
 - b) Lower flap and Damper: Close

(iii) Reset conditions

When any of followings is satisfied

- 1) Compressor speed is less than 32 rps. (SRF series only)
- 2) Detected value of humidity is less than 63%.

(b) Frost prevention control (During cooling or dehumidifying)


♦ SRK series

(i) Operating conditions

- Indoor heat exchanger temperature (Th2) is lower than 5°C.
- 5 minutes after reaching the compressor speed except 0 rps.

(ii) Detail of anti-frost operation

Indoor heat exchanger temperature	5°C or lower	2.5°C or lower
Lower limit of compressor command speed	22 rps	0 rps
Indoor fan	Depends on operation mode	Keep the fan speed before frost prevention control
Outdoor fan	Depends on compressor speed	Dananda an atan mada
4-way valve	OFF	Depends on stop mode

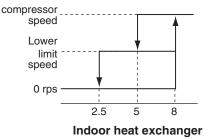

temperature (°C)

Notes (1) When the indoor heat exchanger temperature is in the range of 2.5–5°C, the speed is reduced by 4 rps at each 20 seconds.

- (2) When the temperature is lower than 2.5°C, the compressor is stopped.
- (3) When the indoor heat exchanger temperature is in the range of 5-8°C, the compressor speed is been maintained.

(iii) Reset conditions

When either of the following condition is satisfied

- 1) The indoor heat exchanger temperature (Th2) is 8°C or higher.
- 2) The compressor speed is 0 rps.


♦ SRF, SRR series

(i) Operating conditions

- Indoor heat exchanger temperature (Th2) is lower than 2.5°C.
- 2) 8 minutes after reaching the compressor command speed except 0 rps.

(ii) Detail of anti-frost operation

Operation mode	Protective control	Reset
Compressor operation	Forced outage	Operation instruction
Indoor fan	Depends on operation mode	Depends on operation mode

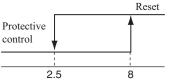

Indoor heat exchanger temperature (°C)

(iii) Reset condition


The indoor heat exchanger temperature (Th2) is 8°C or higher.

(c) Cooling overload protective control

(i) Operating conditions

When the outdoor air temperature (TH3) has become continuously for 30 seconds at 41°C or more, or 47°C or more with the compressor running, the lower limit speed of compressor is brought up.

Outdoor air temperature	41°C or more	47°C or more
Lower limit speed	30 rps	45 rps

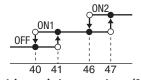

(ii) Detail of operation

- 1) The outdoor fan is stepped up by 3 speed step. (Upper limit 8th speed.)
- 2) The lower limit of compressor command speed is set to 30 or 45 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 30 or 45 rps. However, when the thermo OFF, the speed is reduced to 0 rps.

(iii) Reset conditions

When either of the following condition is satisfied

- 1) The outdoor air temperature is lower than 40°C.
- 2) The compressor command speed is 0 rps.

(d) Cooling high pressure control

(i) Purpose


Prevents anomalous high pressure operation during cooling

(ii) Detector


Outdoor heat exchanger temperature (TH2)

(iii) Detail of operation

(Example) Compressor speed

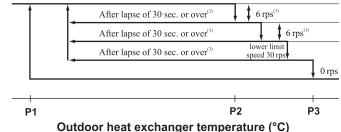

		TH2(℃)				
		P1	P2	Р3		
20, 25	Range A	47	50	53		
	Range B	53	58	63		
35	Range A	48	53	55		
	Range B	53	58	63		

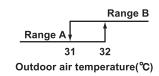

- Notes (1) When the outdoor heat exchanger temperature is in the range of P2-P3°C, the speed is reduced by 6 rps at each 30 seconds.

 (2) When the temperature is P3°C or higher, the compressor is stopped.

 - When the outdoor heat exchanger temperature is in the range of P1-P2°C, if the compressor speed is been maintained and the operation has continued for more than 20 seconds at the same speed, it returns to the normal cooling operation.

(e) Cooling low outdoor temperature protective control

(i) Operating conditions


When the outdoor air temperature (TH3) is 22°C or lower continues for 20 seconds while the compressor command speed is other than 0 rps.

(ii) Detail of operation

- 1) The lower limit of the compressor command speed is set to $50 \langle 44 \rangle$ (30) rps and even if the speed becomes lower than 50 $\langle 44 \rangle$ (30) rps, the speed is kept to 50 $\langle 44 \rangle$ (30) rps. However, when the thermo OFF, the speed is reduced to 0 rps.
- 2) The upper limit of the compressor command speed is set to 50 < 50 > (60) rps and even if the calculated result becomes higher than that after fuzzy calculation, the speed is kept to $50 \langle 50 \rangle$ (60) rps.

Notes (1) Values in $\langle \ \rangle$ are for outdoor air temperature is A or B°C


(2) Values in () are for outdoor air temperature is C or D°C

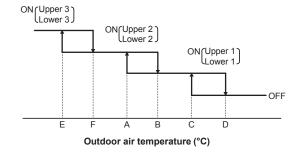

• Values of A, B, C, D, E, F

	Outdoor air temperature (°C)					
	E	F	Α	В	С	D
First time	-8	-5	0	3	22	25
After the second times	-2	1	5	8	25	28

Compressor speed: Upper/lower limit (rps)						
Low Range B	er 1 Range A	Upper 1	Lower 2	Upper 2	Lower 3	Upper 3
30	Release	60	44	50	50	50

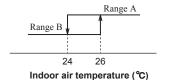

(iii) Reset conditions

When either of the following condition is satisfied

- 1) The outdoor air temperature (TH3) is D °C or higher.
- 2) The compressor command speed is 0 rps.

(f) Heating high pressure control

♦ SRK series


(i) Purpose

Prevents anomalous high pressure operation during heating.

(ii) Detector

Indoor heat exchanger sensor (Th2)

(iii) Detail of operation

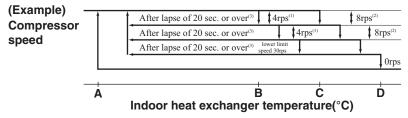

Notes (1) When the indoor heat exchanger temperature is in the range of B-C °C, the speed is reduced by 4 rps at each 20 seconds.

- (2) When the indoor heat exchanger temperature is in the range of C-D °C, the speed is reduced by 8 rps at each 20 seconds. When the temperature is D °C or higher continues for 1 minute, the compressor is stopped.
- (3) When the indoor heat exchanger temperature is in the range of A-B °C, if the compressor speed is been maintained and the operation has continued for more than 20 seconds at the same speed, it returns to the normal heating operation.
- (4) Indoor fan retains the fan speed when it enters in the high pressure control. Outdoor fan is operated in accordance with the speed.

Temperature list

Models SRK20, 25, 35

	Α	В	С	D	
RPSmin < 50	47	52	54	58	
50 ≦ RPSmin < 92	47.5	55	57	61	
92 ≦ RPSmin ≦ 115	47.5 - 39	55 - 40	57 - 42	61	

Note (1) RPSmin: The lower one between the outdoor speed and the compressor speed

♦ SRF, SRR series

(i) Starting condition

When the indoor heat exchanger temperature (Th2) has risen to a specified temperature while the compressor is turned on.

(ii) Compressor speed is controlled according to the zones of indoor heat exchanger temperature as shown by the following table.

	Th2 <p1< th=""><th>P1≦Th2<p2< th=""><th>P2≦Th2<p3< th=""><th>P3≦Th2</th></p3<></th></p2<></th></p1<>	P1≦Th2 <p2< th=""><th>P2≦Th2<p3< th=""><th>P3≦Th2</th></p3<></th></p2<>	P2≦Th2 <p3< th=""><th>P3≦Th2</th></p3<>	P3≦Th2
Protection control speed (NP)	Normal	Retention	NP-4rps	NP-8rps
Sampling time (s)	Normal	20	20	20
	Unit:°C			
NP Th2 P1	P2	P3		

NP Th2	P1	P2	P3
NP<50	47	52	54
50≦NP<92	47.5	55	57
92≦NP<115	47.5-39	55-40	57-42
115≦NP	39	40	42

(g) Heating overload protective control

(i) Indoor unit side (SRF, SRR series only)

1) Operating conditions

When the outdoor air temperature (TH3) is 17°C or higher continues for 30 seconds while the compressor command speed other than 0 rps.

2) Detail of operation

The indoor fan is stepped up by 1 speed step. (Upper limit 9th speed)

3) Reset conditions

The outdoor air temperature (TH3) is lower than 16°C.


(ii) Outdoor unit side

1) Operating conditions


When the outdoor air temperature (TH3) is 22°C or higher continues for 30 seconds while the compressor speed other than 0 rps.

2) Detail of operation

- a) Taking the upper limit of compressor speed at 60 rps, if the output speed obtained with the fuzzy calculation exceeds the upper limit, the upper limit value is maintained.
- b) The lower limit of compressor speed is set to 40 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 40 rps. However, when the thermostat OFF, the speed is reduced to 0 rps.
- c) Inching prevention control is activated and inching prevention control is carried out with the minimum speed set at 40 rps.
- d) The outdoor fan speed is set on 2nd speed.

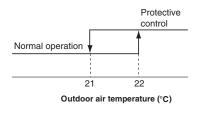

Compressor speed : Upper/lower limit (rps)				
Lowe	r limit	Upper limit	Outdoor fan speed	
Range A	Range B	Оррег ппп	*	
40	Release	60	2nd	

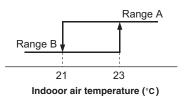

3) Reset conditions

The outdoor air temperature (TH3) is lower than 21°C.

(h) Heating low outdoor temperature protective control


(i) Protective control I

1) Operating conditions

When the outdoor air temperature (TH3) is lower than -2°C or higher continues for 30 seconds while the compressor command speed is other than 0 rps

2) Detail of operation

The lower limit compressor command speed is changed as shown in the figure below.

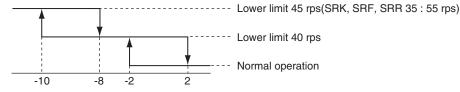

Outdoor air temperature(°C)

3) Reset conditions

When either of the following condition is satisfied

- a) The outdoor air temperature (TH3) becomes 2°C.
- b) The compressor command speed is 0 rps.


(i) Compressor overheat protection

(i) Purpose

It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor overheat.

(ii) Detail of operation

1) Speeds are controlled with temperature detected by the temperature sensor mounted on the discharge pipe.

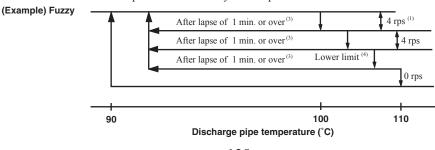

Notes (1) When the discharge pipe temperature is in the range of 100-110°C, the speed is reduced by 4 rps.

- (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps.
- (3) If the discharge pipe temperature is in the range of 90-100°C even when the compressor speed is maintained for 3 minutes when the temperature is in the range of 90-100°C, the speed is raised by 1 rps and kept at that speed for 1 minute. This process is repeated until the command speed is reached.
- (4) Lower limit speed

Model	Cooling	Heating
Lower limit speed	15 rps	20 rps

2) If the temperature of 110°C is detected by the temperature sensor on the discharge pipe, then the compressor will stop immediately.

When the discharge pipe temperature drops and the time delay of 3 minutes is over, the unit starts again within 1 hour but there is no start at the third time.

(i) Current safe

(i) Purpose

Current is controlled not to exceed the upper limit of the setting operation current.

(ii) Detail of operation

Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor command speed is reduced. If the mechanism is actuated when the compressor command speed is less than 30 (SRF, SRR35:36) rps, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(k) Current cut

(i) Purpose

Inverter is protected from overcurrent.

(ii) Detail of operation

Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(I) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air-conditioning.

The compressor is stopped if any one of the following in item (i), (ii) is satisfied. Once the unit is stopped by this function, it is not restarted

- (i) When the input current is measured at 1 A or less for 3 continuous minutes or more
- (ii) If the outdoor unit sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on

(m) Indoor fan motor protection

When the air-conditioner is operating and the indoor fan motor is turned ON, if the indoor fan motor has operated at 300 min⁻¹ or under for more than 30 seconds, the unit enters first in the stop mode and then stops the entire system.

(n) Serial signal transmission error protection

(i) Purpose

Prevents malfunction resulting from error on the indoor \leftrightarrow outdoor signals.

(ii) Detail of operation

If the compressor is operating and a serial signal cannot be received from the indoor control with outdoor control having serial signals continues for 7 minutes and 35 seconds, the compressor is stopped. After the compressor has been stopped, it will be restarted after the compressor start delay if a serial signal can be received again from the indoor control.

(o) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(p) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 min⁻¹ or under for more than 30 seconds, the compressor and fan motor are stopped.

(g) Outdoor fan control at low outdoor air temperature

(i) Cooling

1) Operating conditions

When the outdoor air temperature (TH3) is 22°C or lower continues for 30 seconds while the compressor speed is other than 0 rps

2) Detail of operation

After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat exchanger temperature shall im plement the following controls.

Value of A

	Outdoor fan
Outdoor temperature > 10°C	2nd speed
Outdoor temperature ≦ 10°C	1st speed

a) Outdoor heat exchanger temperature (TH2) ≤ 21°C

After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 21°C, gradually reduce the outdoor fan speed by 1 speed. (Lower limit 1st speed)

b) 21°C < Outdoor heat exchanger temperature (TH2) ≤ 38°C

After the outdoor fan speed maintains at A speed for 20 seconds; if the outdoor heat exchanger temperature is 21°C-38°C, maintain outdoor fan speed.

c) Outdoor heat exchanger temperature (TH2) > 38°C

After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 38°C, gradually increase outdoor fan speed by 1 speed. (Upper limit 3rd speed)

3) Reset conditions

When either of the following conditions is satisfied

- a) The outdoor air temperature (TH3) is 24°C or higher.
- b) The compressor command speed is 0 rps.

(ii) Heating

1) Operating conditions

When the outdoor air temperature (TH3) is 0°C (In addition SRC35:6°C) or lower continues for 30 seconds while the compressor command speed is other than 0 rps.

2) Detail of operation

The outdoor fan is stepped up by 2 speed step at each 20 seconds. (Upper limit 8th speed (In addition SRC35:1 speed step up corresponding to inverter number of rotations when the outdoor air temperature (TH3) is 6°C or lower))

3) Reset conditions

When either of the following conditions is satisfied

- a) The outdoor air temperature (TH3) is 2°C (SRC35:7°C) or higher.
- b) The compressor command speed is 0 rps.

(r) Drain pump motor (DM) control (SRR series only)

(i) Drain pump motor (DM) is operated during the cooling or dehumidifying mode operations and simultaneously wity the compressor ON. The DM continues to operate for 5 minutes after the operation stop, anomalous stop, thermostat stop or when it was switched from the cooling and dehumidifying operations to the fan or heating operation.

		Indoor unit op	eration mode		
	Stop (1)	COOL	DRY	FAN (2)	HEAT
Compressor ON		Control A			
Compressor OFF		Control B			•

Notes (1) Including the stop from the cooling, dehumiditying, fan

and heating, and the anomalous stop
(2) Including the "FAN" operation according to the mismatch of operation modes

1) Control A

- a) If the float switch detects any anomalous draining condition, the unit stops with the anomalous stop and the drain pump starts. After detecting the anomalous condition, the drain pump motor continues to be ON.
- b) It keeps operating while the float switch is detecting the anomalous condition.

2) Control B

If the float switch detects any anomalous drain condition, the drain pump motor is turned ON for 5 minutes, and at 10 seconds after the drain pump motor OFF it checks the float switch. If it is normal, the unit is stopped under the normal mode or, if there is any anomalous condition, displayed by the flashing of display lights and the drain pump motor is turned ON. (The ON condition is maintained during the drain detection.)

(s) Refrigeration cycle system protection

(i) Starting conditions

- 1) When 5 minutes have elapsed after the compressor ON or the completion of the defrost control
- 2) Other than the defrost control
- 3) When, after satisfying the conditions of 1) and 2) above, the compressor speed, room temperature (Th1) and indoor heat exchanger temperature (Th2) have satisfied the conditions in the following table for 5 minutes:

Operation mode	Compressor speed (N)	Room temperature (Th1)	Room temperature (Th1)/ Indoor heat exchanger temperature (Th2)
Cooling	50≦N	10≦Th1≦40	Th1-4 <th2< td=""></th2<>
Heating ⁽¹⁾	50≦N	0≦Th1≦40	Th2 <th1+6< td=""></th1+6<>

Note (1) Except that the fan speed is Hi in heating operation.

(ii) Contents of control

- 1) When the conditions of (i) above are satisfied, the compressor stops
- 2) Error stop occurs when the compressor has stopped 3 times within 60 minutes.

(iii) Reset condition

When the compressor has been turned OFF

(24) Defrost heater control

(a) Starting conditions

When all of the following conditions (i) - (iv) have been met for 1 minute continuously, with the compressor frequency at 0 rps or higher:

- (i) Operation is in the heating mode.
- (ii) Outdoor heat exchanger sensor(TH2) temperature is lower than -2.0°C.
- (iii) Outdoor air temperature sensor(TH3) temperature is lower than 0°C.
- (iv) 1) Outdoor air temperature, at 0°C

Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is larger than 4°C.

- 2) Outdoor air temperature, higher than -5°C and lower than 0°C
 - Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is larger than 2°C.
- 3) Outdoor air temperature, higher than -10° C and lower than -5° C
 - Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is larger than 0°C.
- 4) Outdoor air temperature, higher than -15° C and lower than -10° C
 - Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is larger than -5°C.
- 5) Outdoor air temperature, lower than -15°C
 - Difference between the outdoor air temperature and the outdoor heat exchanger sensor temperature is larger than -5°C.

(b) Releasing conditions

When either of the following conditions is satisfied


- (i) Compressor frequency becomes 0 rps.
- (ii) When even one of the starting conditions of (a) is lost (When continuing for 1 minute)

Note (1) The heater is forced to turn off during defrost operation. When the defrost operation is over and the outdoor fan is turned on, the heater is forced to turn on for 5 minutes. If the outdoor fan is turned off, the heater is also turned off.

10.2 Models FDTC25VH1, 35VH1

10.2.1 Remote control (Option parts)

(1) Wired remote control Model RC-EX3A

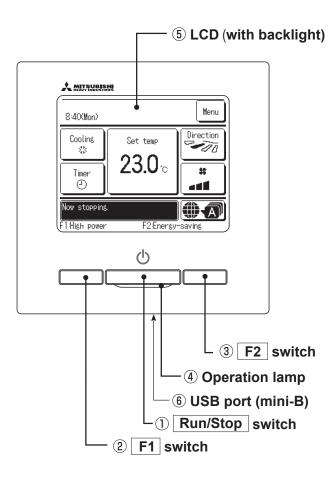

Touch panel system, which is operated by tapping the LCD screen with a finger, is employed for any operations other than the ①Run/Stop, ②F1 and ③F2 switches.

1 Run/Stop switch

One push on the button starts operation and another push stops operation.

2 F1 switch3 F2 switch

This switch starts operation that is set in F1/F2 function change.

4 Operation lamp

This lamp lights in green(yellow-green) during operation. It changes to red (orange) if any error occurs.

Operation lamp luminance can be changed.

5 LCD (with backlight)

A tap on the LCD lights the backlight. The backlight turns off automatically if there is no operation for certain period of time. Lighting period of the backlight lighting can be changed.

If the backlight is ON setting, when the screen is tapped while the backlight is turned off,the backlight only is turned on.(Operations with switches \bigcirc , \bigcirc and \bigcirc are excluded.)

6 USB port

USB connector (mini-B) allows connecting to a personal computer.

For operating methods, refer to the instruction manual attached to the software for personal computer (remote control utility software).

Note(1) When connecting to a personal computer, do not connect simultaneously with other USB devices.

Places he cure to connect to the computer directly without


Please be sure to connect to the computer directly, without going through a hub, etc.

Model RC-E5

The figure below shows the remote control with the cover opened. Note that all the items that may be displayed in the liquid crystal display area are shown in the figure for the sake of explanation.

Characters displayed with dots in the liquid crystal display area are abbreviated.

The figure below shows the remote control with the cover opened.

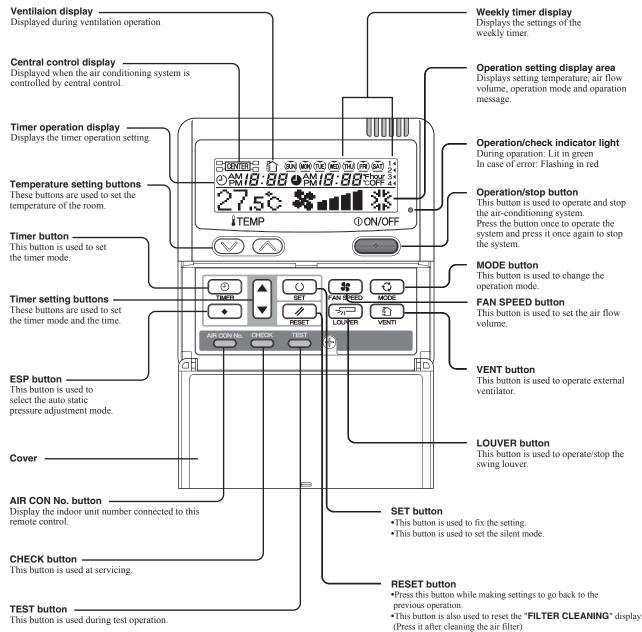


^{*} All displays are described in the liguid crystal display for explanation.

(2) Wireless remote control


RCN-E2

Indication section

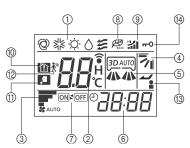

1	OPERATION MODE display	Indicates selected operation mode.
	SET TEMP display	Indicates set temperature.
(2)	SLEEP TIMER time display	Indicates the amount of time remaining on the sleep timer.
Ŀ	Indoor function setting number display	Indicates the setting number of the indoor function setting.
3	FAN SPEED display	Indicates the selected air flow volume.
(4)	UP/DOWN AIR FLOW	Indicates the up/down louver position.
-	display LEFT/RIGHT AIR FLOW	
(5)	display	Indicates the left/right louver position.
(6)	Clock display	Indicates the current time. If the timer is set, the ON
		TIMER and OFF TIMER setting times are indicated.
7	ON/OFF TIMER display	Displayed when the timer is set.
8	ECO mode display	Displayed when the energy-saving operation is active.
9	HI POWER display	Displayed when the high power operation is active.
10	NIGHT SETBACK display	Displayed when the home leave mode is active.
(1)	SILENT display	Displayed when the silent mode control is active.
12	Motion sensor display	Displayed when the infrared sensor control(motion sensor control) is enabled.
13	Anti draft setting display	Displayed when anti draft setting is enabled.
14)	Child lock display	Displayed when child lock is enabled.

Operation section

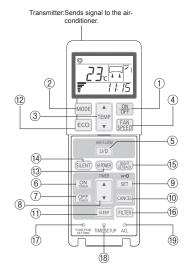


1	ON/OFF button	When this is pressed once, the air-conditioner starts to operate and when this is pressed once again, it stops operating.
2	MODE button	Every time this button is pressed, displays switch as below □ ②(AUTO) → ③(COOL) → ③(HEAT) □ (FAN) ← ○(DRY) ←
(3)	TEMP button	Change the set temperature by pressing ▲ or ▼ button.
4	FAN SPEED button	The fan speed is switched in the following order: 1-speed → 2-speed → 3-speed → 4-speed → AUTO → 1-speed.
(5)	U/D button	Used to determine the up/down louver position.
6	ON TIMER button	Used to set the ON TIMER.
(7)	OFF TIMER button	Used to set the OFF TIMER.
8	SELECT button	Used to switch the time when setting the timer or adjusting the time. Used to switch the settings of the indoor function.
9	SET button	Used to determine the setting when setting the timer or adjusting the time. Used to determine the settings of the indoor function. When press and hold SET button ,Child Lock is enabled.
(10)	CANCEL button	Used to cancel the timer setting.
(1)	SLEEP button	Used to set the sleep timer.
12	ECO button	Pressing this button starts the energy-saving operation. Pressing this button again cancels it.
13	HI POWER button	Pressing this button starts the high power operation. Pressing this button again cancels it.
14)	SILENT button	Pressing this button starts the silent mode control. Pressing this button again cancels it.
(15)	NIGHT SETBACK button	Pressing this button starts the home leave mode. Pressing this button again cancels it.
(16)	FILTER button	Pressing this button resets FILTER SIGN.
(17)	FUNCTION SETTING switch	Used to set the indoor function.
(18)	TIME SETUP switch	Used to set the current time.
(19)	ACL switch	Used to reset the microcomputer.
\sim		


10.2.2 Operation control function by the wired remote control

●Model RC-EX3A


(1) Switching sequence of the operation mode switches of remote control


- (a) Tap the change operation mode button on the TOP screen.
- (b) When the change operation mode screen is displayed, tap the button of desired mode.
- (c) When the operation mode is selected, the display returns to the TOP screen. Icons displayed have the following meanings.

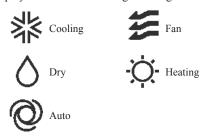

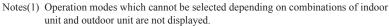


(2) When the Auto is selected, the cooling and heating switching operation is performed automatically according to indoor and outdoor temperatures.

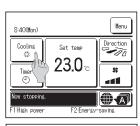

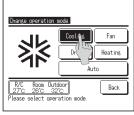


(2) CPU reset

Reset CPU from the remote control as follows.

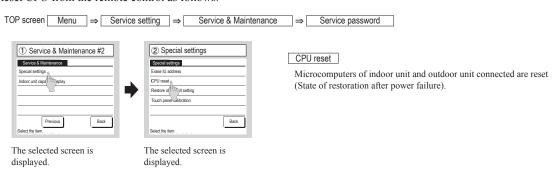

(3) Power failure compensation function (Electric power source failure)

Enable the Auto-restart function from the remote control as follows.

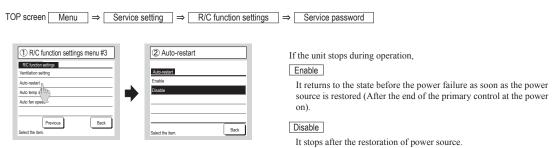

- •Since the status of remote control is retained in memory always, it restarts operations according to the contents of memory as soon as the power source is restored. Although the timer mode is cancelled, the weekly timer, peak cut timer and silent mode timer operate according to the following contents:
 - When the clock setting is valid: These timer settings are also valid.
 - When the clock setting is invalid: These timer settings become "Invalid" since the clock setting is invalid.

 These timer settings have to be changed to "Valid" after the timer setting.

•Content memorized with the power failure compensation are as follows.

Note(1) Items (f) and (g) are memorized regardless whether the power failure compensation is effective or not while the setting of silent mode is cancelled regardless whether the power failure compensation is effective or not.

- $\hbox{(a)} \ \ At \ power \ failure-Operating/stopped$
 - If it had been operating under the off timer mode, sleep timer mode, the state of stop is memorized.
- (b) Operation mode
- (c) Air flow volume mode
- (d) Room temperature setting
- (e) Louver auto swing/stop
 - However, the stop position (4-position) is cancelled so that it returns to Position (1).
- (f) "Remote control function items" which have been set with the administrator or installation function settings ("Indoor function items" are saved in the memory of indoor unit.)
- (g) Weekly timer, peak-cut timer or silent mode timer settings
- (h) Remote control function setting

(4) Alert displays

If the following (a) to (c) appear, check and repair as follows.

(a) Communication check between indoor unit and remote control



• This appears if communications cannot be established between the remote control and the indoor unit.

Check whether the system is correctly connected (indoor unit, outdoor unit, remote control) and whether the power source for the outdoor unit is connected.

(b) Clock setting check



• This appears when the timer settings are done without clock setting.Set the clock setting before the timer settings.

(c) Misconnection



• This appears when something other than the air-conditioner has been connected to the remote control

Check the location to which the remote control is connected.

●Model RC-E5

(1) Switching sequence of the operation mode switches of remote control



(2) CPU reset

This functions when "CHECK" and "ESP" buttons on the remote control are pressed simultaneously. Operation is same as that of the power source reset.

(3) Power failure compensation function (Electric power source failure)


- This becomes effective if "Power failure compensation effective" is selected with the setting of remote control function.
- Since it memorizes always the condition of remote control, it starts operation according to the contents of memory no sooner than normal state is recovered after the power failure. Although the auto swing stop position and the timer mode are cancelled, the weekly timer setting is restored with the holiday setting for all weekdays.


After recovering from the power failure, it readjusts the clock and resets the holiday setting for each weekday so that the setting of weekly timer becomes effective.

- Content memorized with the power failure compensation are as follows.
 - Note (1) Items (f), (g) and (h) are memorized regardless whether the power failure compensation is effective or not while the setting of silent mode is cancelled regardless whether the power failure compensation is effective or not.
 - (a) At power failure Operating/stopped

 If it had been operating under the off timer mode, sleep timer mode, the state of stop is memorized. (Although the timer mode is cancelled at the recovery from power failure, the setting of weekly timer is changed to the holiday setting for all weekdays.)
 - (b) Operation mode
 - (c) Air flow volume mode
 - (d) Room temperature setting
 - (e) Louver auto swing/stop
 - However, the stop position (4-position) is cancelled so that it returns to Position (1).
 - (f) "Remote control function items" which have been set with the remote control function setting ("Indoor function items" are saved in the memory of indoor unit.)
 - (g) Upper limit value and lower limit value which have been set with the temperature setting control
 - (h) Sleep timer and weekly timer settings (Other timer settings are not memorized.)

[Parts layout on remote control PCB]

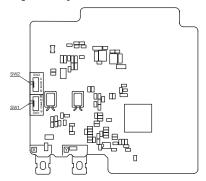


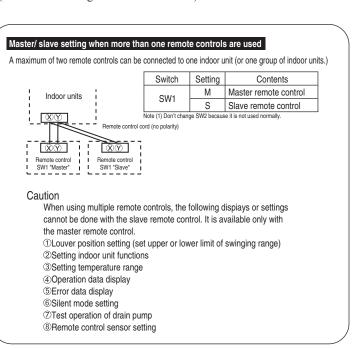

10.2.3 Operation control function by the indoor control

(1) Auto operation


(a) If "Auto" mode is selected by the remote control, the heating and the cooling are automatically switched according to the difference between outdoor air temperature and setting temperature and the difference between setting temperature and return air temperature. (When the switching of cooling mode ↔ heating mode takes place within 3 minutes, the compressor does not operate for 3 minutes by the control of 3-minute timer.) This will facilitate the cooling/heating switching operation in intermediate seasons and the adaptation to unmanned operation at stores, etc (ATM corner of bank).

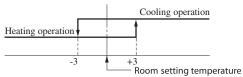


Room temperature (detected with Thi-A) [°C]

Notes (1) Temperature range of switching cooling/heating mode can be changed by RC-EX3A from ± 1.0 – ± 4.0 .


- (2) Room temperature control during auto cooling/auto heating is performed according to the room setting temperature. (DIFF: ±1 deg)
- (3) If the indoor heat exchanger temperature rises to 59°C or higher during heating operation, it is switched automatically to cooling operation. In addition, for 1 hour after this switching, the heating operation is not performed, regardless of the temperature shown at right.

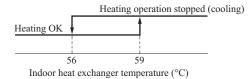

- (b) The following automatic controls are performed other than (a) above.
 - (i) Cooling or heating operation mode is judged according to the conditions of the "Judgment based on Setting temperature + Cooling select temperature and Indoor return air temperature" and the "Judgment based on Outdoor temperature".
 - 1) In "Setting temperature Cooling select temperature < Indoor return air temperature" and "Outdoor temperature/Cooling < Outdoor return air temperature" \Rightarrow Operation mode: Cooling
 - 2) "Setting temperature + Heating select temperature > Indoor return air temperature" and "Outdoor temperature/ Heating > Outdoor air temperature" ⇒ Operation mode: Heating
 - 3) The outdoor air temperature of the above judgment conditions is sampled at every 10 minutes.
 - 4) In the range where the above cooling and heating zones are overlapped ⇒ Forced thermostat OFF

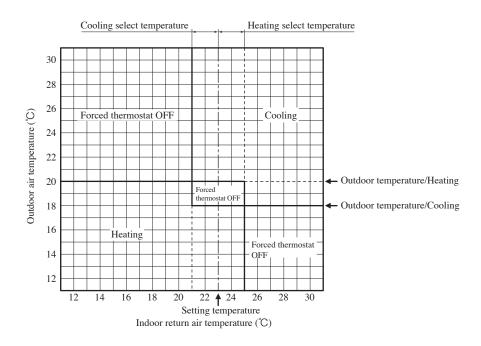

- (ii) Regardless of the setting temperature, the cooling or heating operation mode is judged according to the "Judgment based on Room temperature/Cooling or Heating and Outdoor temperature/Cooling or Heating".
 - 1) In case of "Room temperature/Cooling < Indoor return air temperature" and "Outdoor temperature/Cooling < Outdoor air temperature" ⇒ Operation mode: Cooling
 - 2) In case of "Room temperature/Heating > Indoor return air temperature" and "Outdoor temperature /Heating > Outdoor air temperature" ⇒ Operation mode: Heating
 - 3) The outdoor air temperature of the above judgment conditions is sampled at every 10 minutes.
 - 4) In the range where the above cooling and heating zones are overlapped \Rightarrow Forced thermostat OFF

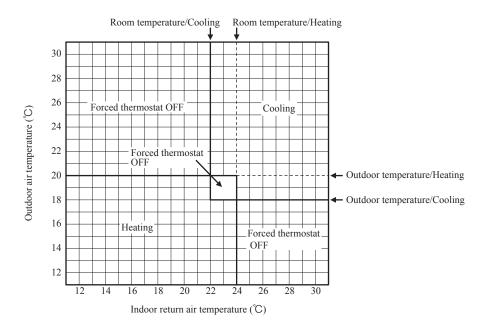

(2) Operations of functional items during cooling/heating

Operation	Cooling						
Functional item	Thermostat ON	Thermostat OFF	Fan	Thermostat ON	Thermostat OFF	Hot start (Defrost)	Dehumidifying
Compressor	0	×	×	0	×	0	O/×
4-way valve	×	×	×	0	0	○(×)	×
Outdoor unit fan	0	×	×	0	×	○(×)	O/×
Indoor unit fan	0	0	0	O/×	O/×	O/×	O/×
Drain pump ⁽³⁾	0	× ⁽²⁾	× ⁽²⁾		O/× ⁽²⁾		Thermostat ON: O Thermostat OFF: X ⁽²⁾

Notes (1) O: Operation X: Stop O/X: Turned ON/OFF by the control other than the room temperature control.

- (2) ON during the drain pump motor delay control.
- (3) Drain pump ON setting may be selected with the indoor unit function setting of the wired remote control.

(3) Dehumidifying (DRY) operation

Indoor ambient temperatures and humidity are controlled simultaneously with the relative humidity sensor (HS) and the suction temperature sensor [Thi-A (or the remote control temperature sensor when it is activated)], which are installed at the suction inlet.

- (a) When the operation has been started with cooling, if there is a difference of 2°C or less between the suction and setting temperatures, the tap of indoor fan is lowered by one tap. This tap is retained for 3 minutes after changing the tap.
- (b) After the above condition, when a difference between suction and setting temperature is lower than 3°C, and the relative humidity is high, the tap of indoor fan is lowered by one tap.
 - When the difference between suction and setting temperature is larger than 3°C, the tap of indoor fan is raised by one tap. This tap is retained for 3 minutes after changing the tap.
- (c) When relative humidity becomes lower, the indoor fan tap is retained.
- (d) In case of the thermostat OFF, the indoor fan tap at the thermostat ON is retained.

(4) Timer operation

(a) RC-EX3A

(i) Sleep timer

Set the time from the start to stop of operation. The time can be selected in the range from 30 to 240 minutes (in the unit of 10-minute).

Note (1) Enable the "Sleep timer" setting from the remote control. If the setting is enabled, the timer operates at every time.

(ii) Set OFF timer by hour

Set the time to stop the unit after operation, in the range from 1 to 12 hours (in the unit of hour).

(iii) Set ON timer by hour

Set the time to start the unit after the stop of operation, in the range from 1 to 12 hours (in the unit of hour). It is allowed also to set simultaneously the indoor temperature, operation mode, air flow rate and warm-up enabled/disabled.

(iv) Set ON timer by clock

Set the time to start operation. The time can be set in the unit of 5-minute. This setting can be switched only once or daily. It is allowed also to set simultaneously the indoor temperature, operation mode, air flow rate and warm-up enabled/disabled.

Note (1) It is necessary to set the clock to use this timer.

(v) Set OFF timer by clock

Set the time to stop operation. The time can be set in the unit of 5-minute. This setting can be switched only once or daily.

Note (1) It is necessary to set the clock to use this timer.

(vi) Weekly timer

Set the ON or OFF timer for a week. Up to 8 patterns can be set for a day. The day-off setting is provided for holidays and non-business days.

Note (1) It is necessary to set the clock to use the weekly timer.

(vii) Combination of patterns which can be set for the timer operations

	Sleep timer	Set OFF timer by hour	Set ON timer by hour	Set OFF timer by clock	Set ON timer by clock	Weekly timer
Sleep timer		×	×	0	0	0
Set OFF timer by hour	×		×	×	×	×
Set ON timer by hour	×	×		×	×	×
Set OFF timer by clock	0	×	×		0	×
Set ON timer by clock	0	×	×	0		×
Weekly timer	0	×	×	×	×	

Note (1) ○: Allowed ×: Not

(b) RC-E5

(i) Sleep timer

Set the duration of time from the present to the time to turn off the air-conditioner.

It can be selected from 10 steps in the range from "OFF 1 hour later" to "OFF 10 hours later". After the sleep timer setting, the remaining time is displayed with progress of time in the unit of hour.

(ii) OFF timer

Time to turn OFF the air-conditioner can be set in the unit of 10 minutes.

(iii) ON timer

Time to turn ON the air-conditioner can be set in the unit of 10 minutes. Indoor temperature can be set simultaneously.

(iv) Weekly timer

Timer operation (ON timer, OFF timer) can be set up to 4 times a day for each weekday.

$\left(v\right)$ Combination of patterns which can be set for the timer operations

Item Item	Sleep Timer	OFF timer	ON timer	Weekly timer
Sleep Timer		×	0	×
OFF timer	×		0	×
ON timer	0	0		×
Weekly timer	×	×	×	

Notes (1) ○: Allowed ×: Not

⁽²⁾ Since the ON timer, sleep timer and OFF timer are set in parallel, when the times to turn ON and OFF the air-conditioner are duplicated, the setting of the OFF timer has priority.

(5) Hot start (Cold draft prevention at heating)

(a) Operating conditions

When either one of following conditions is satisfied, the hot start control is performed.

- (i) From stop to heating operation
- (ii) From cooling to heating operation
- (iii) Form heating thermostat OFF to ON
- (iv) After completing the defrost operation (only on units with thermostat ON)

(b) Contents of operation

- (i) Indoor fan motor control at hot start
 - 1) Within 7 minutes after starting heating operation, the fan mode is determined depending on the condition of thermostat (fan control with heating thermostat OFF).
 - a) Thermostat OFF
 - i) Operates according to the fan control setting at heating thermostat OFF.
 - ii) Even if it changes from thermostat OFF to ON, the fan continues to operate with the fan control at thermostat OFF till the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher.
 - iii) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher, the fan operates with the set air flow volume.
 - b) Thermostat ON
 - i) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 25°C or lower, the fan is turned OFF and does not operate.
 - ii) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 25°C or higher, the fan operates with the fan control at heating thermostat OFF.
 - iii) When the heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher, the fan operates with the set air flow volume.
 - c) If the fan control at heating thermostat OFF is set at the "Set air flow volume" (from the remote control), the fan operates with the set air flow volume regardless of the thermostat ON/OFF.
 - 2) Once the fan motor is changed from OFF to ON during the thermostat ON, the indoor fan motor is not turned OFF even if the heat exchanger thermistor detects lower than 25°C.
 - Note (1) When the defrost control signal is received, it complies with the fan control during defrost operation.
 - 3) Once the hot start is completed, it will not restart even if the temperature on the heat exchanger thermistor drops.
- (ii) During the hot start, the louver is kept at the horizontal position.
- (iii) When the fan motor is turned OFF for 7 minutes continuously after defrost operation, the fan motor is turned ON regardless of the temperatures detected with the indoor heat exchanger thermistors (Thi-R1, R2).

(c) Ending condition

- (i) If one of following conditions is satisfied during the hot start control, this control is terminated, and the fan is operated with the set air flow volume.
 - 1) Heat exchanger thermistor (Thi-R1 or R2, whichever higher) detects 35°C or higher.
 - 2) It has elapsed 7 minutes after starting the hot start control.

(6) Hot keep

Hot keep control is performed at the start of the defrost operation.

(a) Contents of operation

- (i) When the indoor heat exchanger temperature (detected with Thi-R1 or R2) drops to less than 35°C, the speed of indoor fan follows fan setting at the time of thermostat OFF.
- (ii) During the hot keep, the louver is kept at the horizontal position.

(7) Auto swing control

Note Even if [Auto Swing] is selected, the louver position with anti draft function is fixed to position 1.

(a) RC-EX3A

- (i) Louver control
 - 1) To operate the swing louver when the air-conditioner is operating, press the "Direction" button on the TOP screen of remote control. The wind direction select screen will be displayed.
 - 2) To swing the louver, touch the "Auto swing" button. The lover will move up and down. To fix the swing louver at a position, touch one of [1] [4] buttons. The swing lover will stop at the selected position.
 - 3) Louver operation at the power on with a unit having the louver 4-position control function

 The louver swings one time automatically (without operating the remote control) at the power on.

 This allows the microcomputer recognizing and inputting the louver motor (LM) position.
- (ii) Automatic louver level setting during heating

At the hot start and the heating thermostat OFF, regardless whether the auto swing switch is operated or not (auto swing or louver stop), the louver takes the level position (in order to prevent blowing of cool wind). The louver position display LCD continues to show the display which has been shown before entering this control.

(iii) Louver free stop control

If you touch the "Menu" \rightarrow "Service setting" \rightarrow "R/C settings" \rightarrow "Service password" buttons one after another on the TOP screen of remote control, the "Flap control" screen is displayed. If the free stop is selected on this screen, the louver motor stops upon receipt of the stop signal from the remote control. If the auto swing signal is received from the remote control, the auto swing will start from the position before the stop.

(b) RC-E5

- (i) Louver control
 - 1) Press the "LOUVER" button to operate the swing louver when the air-conditioner is operating.

 "SWING ="" is displayed for 3 seconds and then the swing louver moves up and down continuously.
 - 2) To fix the swing louver at a position, press one time the "LOUVER" button while the swing louver is moving so that four stop positions are displayed one after another per second.
 - When a desired stop position is displayed, press the "LOUVER" button again. The display stops, changes to show the "STOP 1 —" for 5 seconds and then the swing louver stops.
 - 3) Louver operation at the power on with a unit having the louver 4-position control function
 - The louver swings one time automatically (without operating the remote control) at the power on.
 - This allows inputting the louver motor (LM) position, which is necessary for the microcomputer to recognize the louver position.
 - Note (1) If you press the "LOUVER" button, the swing motion is displayed on the louver position LCD for 10 seconds. The display changes to the "SWING -" display 3 seconds later.
- (ii) Automatic louver level setting during heating

At the hot start with the heating thermostat OFF, regardless whether the auto swing switch is operated or not (auto swing or louver stop), the louver takes the level position (In order to prevent the cold start). The louver position display LCD continues to show the display which has been shown before entering this control.

(iii) Louver-free stop control


When the louver-free stop has been selected with the indoor function of wired remote control " \Rightarrow_{n} POSITION", the louver motor stops when it receives the stop signal from the remote control. If the auto swing signal is received from the remote control, the auto swing will start from the position where it was before the stop.

Note (1) When the indoor function of wired remote control ">¬¬ POSITION" has been switched, switch also the remote control function ">¬¬ POSITION" in the same way.

(8) Thermostat operation

(a) Cooling


- (i) Thermostat is operated with the room temperature control.
- (ii) Thermostat is turned ON or OFF relative to the setting room temperature as shown below.

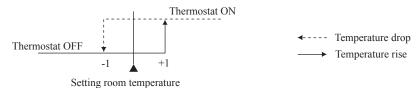

(iii) Thermostat is turned ON when the room temperature is in the range of -1 < Setting temperature < +1 at the start of cooling operation (including from heating to cooling).

(b) Heating

- (i) Thermostat is operated with the room temperature control.
- (ii) Thermostat is turned ON or OFF relative to the setting room temperature as shown below.

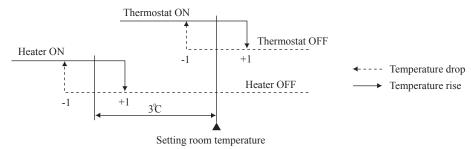

(iii) Thermostat is turned ON when the room temperature is in the range of -1 < Set room temperature < +1 at the start of heating operation (including from cooling to heating).

(c) Fan control during heating thermostat OFF

- (i) Following fan controls during the heating thermostat OFF can be selected with the indoor function setting of the wired remote control.
 - ① Low fan speed (Factory default) ② Set fan speed ③ Intermittence ④ Fan OFF
- (ii) When the "Low fan speed (Factory default)" is selected, the following taps are used for the indoor fans.
 - · For DC motor: ULo tap
- (iii) When the "Set fan speed" is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the "Intermittence" is selected, following controls are performed:
 - 1) If the thermostat is turned OFF during the heating operation, the indoor unit moves to the hot control and turns OFF the indoor fan if the heat exchanger thermistors (both Thi-R1 and R2) detect 25°C or lower.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ULo for 2 minutes. In the meantime the louver is controlled at level.
 - 3) After operating at ULo for 2 minutes, the indoor fan moves to the state of 1) above.
 - 4) If the thermostat is turned ON, it moves to the hot start control.
 - 5) When the heating thermostat is turned OFF, the remote control displays the temperature detected at the fan stop and revises the temperature later when the indoor fan changes from ULo to stop.
 - The remote control uses the operation data display function to display temperatures and updates values of temperature even when the indoor fan is turned OFF.
 - 6) When the defrosting starts while the heating thermostat is turned OFF or the thermostat is turned OFF during defrosting, the indoor fan is turned OFF. (Hot keep or hot start control takes priority.) However, the suction temperature is updated at every 7-minute.
 - 7) When the heating thermostat is turned ON or the operation is changed to another mode (including stop), this control is stopped immediately, and the operating condition is restored.
- (v) When the "Fan OFF" is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF. The same occurs also when the remote control sensor is effective.

(d) Fan control during cooling thermostat OFF

- (i) Following fan controls during the cooling thermostat OFF can be selected with the indoor function setting of the wired remote control.
 - (1) Low fan speed (2) Set fan speed (Factory default) (3) Intermittence (4) Fan OFF
- (ii) When the "Low fan speed" is selected, the following taps are used for the indoor fans.
 - · ULo tap
- (iii) When the "Set fan speed" is selected, it is operated with the set fan speed also in the thermostat OFF condition.
- (iv) If the "Intermittence" is selected, following controls are performed:
 - 1) If the thermostat is turned OFF during the cooling operation, the indoor fan motor stops.
 - 2) Indoor fan OFF is fixed for 5 minutes. After the 5 minutes, the indoor fan is operated at ULo for 2 minutes. In the meantime the louver is controlled at level.
 - 3) After operating at ULo for 2 minutes, the indoor fan moves to the state of 1) above.
 - 4) If the thermostat is turned ON, the fan starts operation at set fan speed.
 - 5) When the cooling thermostat is turned OFF, the remote control displays the temperature detected at the fan stop and revises the temperature later when the indoor fan changes from ULo to stop.
 - By using operation data display function at wireless remote control, the tempenature as displayad and the value is updated including the fan stops.
 - 6) When the cooling thermostat is turned ON or the operation is changed to another mode (including stop), this control is stopped immediately, and the operating condition is restored.
- (v) When the "Fan OFF" is selected, the fan on the indoor unit of which the thermostat has been turned OFF, is turned OFF. The same occurs also when the remote control sensor is effective.

(9) Filter sign

As the operation time (Total ON time of ON/OFF switch) accumulates to 180 hours (1), "FILTER CLEANING" is displayed on the remote control. (This is displayed when the unit is in trouble and under the centralized control, regardless of ON/OFF)

Notes (1) Time setting for the filter sign can be made as shown below using the indoor function of wired remote control "Filter sign". (It is set at setting 1 at the shipping from factory.)

Filter sign setting	Function		
Setting 1	Setting time: 180 hrs (Factory default)		
Setting 2	Setting time: 600 hrs		
Setting 3	Setting time: 1,000 hrs		
Setting 4	Setting time: 1,000 hrs (Unit stop) (2)		

⁽²⁾ After the setting time has elapsed, the "FILTER CLEANING" is displayed and, after operating for 24 hours further (counted also during the stop), the unit stops.

(10) Compressor inching prevention control

(a) 3-minute timer

When the compressor has been stopped by the thermostat, remote control operation switch or anomalous condition, its restart will be inhibited for 3 minutes. However, the 3-minute timer is invalidated at the power on the electric power source for the unit.

(b) 3-minute forced operation timer


- (i) Compressor will not stop for 3 minutes after the compressor ON. However, it stops immediately when the unit is stoppe d by means of the ON/OFF switch or when the thermostat is turned OFF by the change of operation mode.
- (ii) If the thermostat is turned OFF during the forced operation control of heating compressor, the louver position (with the auto swing) is returned to the level position.
 - Note (1) The compressor stops when it has entered the protective control.

(11) Drain pump control

- (a) This control is operated when the inverter frequency is other than 0 Hz during the cooling operation and automatic cooling and dehumidifying operations.
- (b) Drain pump ON condition continues for 5 minutes even when it enters the OFF range according to (a) above after turning the drain pump ON, and then stops. The 5-minute delay continues also in the event of anomalous stop.
- (c) The drain pump is operated with the 5-minute delay operation when the compressor is changed from ON to OFF.
- (d) Even in conditions other than the above (such as heating, fan, stop, cooling thermostat OFF), the drain pump control is performed by the drain detection.
- (e) Following settings can be made using the indoor function setting of the wired remote control.
 - (i) 🐉 [Standard (in cooling)]: Drain pump is run during cooling.
- (ii) 攀部形態 [Operate in standard & heating]: Drain pump is run during cooling and heating.
- (iii) 攀納[D菜科[D註 [Operate in heating & fan] : Drain pump is run during cooling, heating and fan.
- (iv) 器例[到 [Operate in standard & fan]: Drain pump is run during cooling and fan. Note (1) Values in [] are for the RC-EX3A model.

(12) Drain pump motor (DM) control

(a) Drain detection switch is turned ON or OFF with the float switch (FS) and the timer.

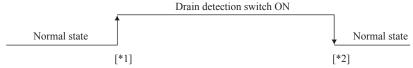

- [*1] Drain detection switch is turned "ON" when the float switch "Open" is detected for 3 seconds continuously in the drain detectable space.
- [*2] Drain detection switch is turned "OFF" when the float switch "Close" is detected for 10 seconds continuously.
- (i) It detects always from 30 seconds after turning the power ON.
 - 1) There is no detection of anomalous draining for 10 seconds after turning the drain pump OFF.
 - 2) Turning the drain detection switch "ON" causes to turn ON the drain pump forcibly.
 - 3) Turning the drain detection switch "OFF" releases the forced drain pump ON condition.
- (b) Indoor unit performs the control A or B depending on each operating condition.

Indoor unit operation mode						
	Stop (1) Cooling Dry Fan (2) Heating					
Compressor ON		Control A				
Compressor OFF		Control B				

Notes (1) Including the stop from the cooling, dehumidifying, fan and heating, and the anomalous stop (2) Including the "Fan" operation according to the mismatch of operation modes

- (i) Control A
 - 1) If the float switch detects any anomalous draining condition, the unit stops with the anomalous stop (displays E9) and the drain pump starts. After detecting the anomalous condition, the drain pump motor continues to be ON.
 - 2) It keeps operating while the float switch is detecting the anomalous condition.
- (ii) Control B

If the float switch detects any anomalous drain condition, the drain pump motor is turned ON for 5 minutes, and at 10 seconds after the drain pump motor OFF it checks the float switch. If it is normal, the unit is stopped under the normal mode or, if there is any anomalous condition, E9 is displayed and the drain pump motor is turned ON. (The ON condition is maintained during the drain detection.)

(13) Operation check/drain pump test run operation mode

- (a) If the power is turned on by the DIP switch (SW7-1) on the indoor unit control PCB when electric power source is supplied, it enters the mode of operation check/drain pump test run. It is ineffective (prohibited) to change the switch after turning power on.
- (b) When the communication with the remote control has been established within 60 seconds after turning power on by the DIP switch (SW7-1) ON, it enters the operation check mode. Unless the remote control communication is established, it enters the drain pump test run mode.
 - Note (1) To select the drain pump test run mode, disconnect the remote control connector (CnB) on the indoor unit PCB to shut down the remote control communication

(c) Operation check mode

There is no communication with the outdoor unit but it allows performing operation in respective modes by operating the remote control.


(d) Drain pump test run mode

As the drain pump test run is established, the drain pump only operates and during the operation protective functions by the microcomputer of indoor unit become ineffective.

(14) Cooling, dehumidifying frost protection

- (a) To prevent frosting during cooling mode or dehumidifying mode operation, the compressor-OFF if the indoor heat exchanger temperature (detected with Thi-R) drops to 1.0 °C or lower at 4 minutes after the compressor-ON. If the indoor unit heat exchanger temperature is 1.0 °C or lower after 5 minutes, the indoor unit is controlled compressor-OFF. If it becomes 10°C or higher, the control terminates.
 - Frost prevention temperature setting can be selected with the indoor unit function setting of the wired remote control.

Symbol	A
Temperature - Low (Factory default)	1.0
Temperature - High	2.5

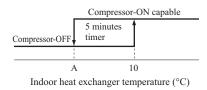

• Compressor forced off temperature

Hs > 50%

Symbol	Item	Low	High
A		1.0	2.5

Hs	<	50%
ПS	\rightarrow	20%

Item Symbol	Low	High
A	-0.5	1.0

(b) Selection of indoor fan speed


If it enters the frost prevention control during cooling operation (including dehumidifying), the indoor fan speed is switched.

- (i) When the indoor return air temperature (Thi-A) is 18°C or higher and the indoor heat exchanger temperature (detected with Thi-R) detects the compressor frequency drop start temperature A°C+1°C, indoor fan speed is increased by 20min⁻¹
- (ii) If the phenomenon of (i) above is detected again after the acceleration of indoor fan, indoor fan speed is increased further by 20min⁻¹.

Note (1) Indoor fan speed can be increased by up to P-Hi.

(15) Heating overload protection

(a) If the indoor heat exchanger temperature (detected with Thi-R) at 63°C or higher is detected for 2 seconds continuously, the compressor stops. When the compressor is restarted after a 3-minute delay, if a temperature at 63°C or higher is detected for 2 seconds continuously within 60 minutes after initial detection and if this is detected 5 times consecutively, the compressor stops with the anomalous stop (E8). Anomalous stop occurs also when the indoor heat exchanger temperature at 63°C or higher is detected for 6 minutes continuously.

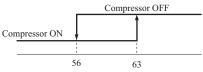

Indoor heat exchanger temperature (°C)

(b) Indoor fan speed selection

If, after second detection of heating overload protection up to fourth, the indoor fan is set at below Hi tap when the compressor is turned ON, the indoor fan speed is increased by 1 tap.

(16) Anomalous fan motor

- (a) After starting the fan motor, if the fan motor speed is 200 min⁻¹ or less is detected for 30 seconds continuously and 4 times within 60 minutes, then fan motor stops with the anomalous stop (E16).
- (b) If the fan motor fails to reach at -50 min⁻¹ less than the required speed, it stops with the anomalous stop (E20).


(17) Plural unit control - Control of 16 units group by one remote control

(a) Function

One remote control can control a group of multiple number of unit (Max. 16 indoor units). "Operation mode" which is set by the remote control can operate or stop all units in the group one after another in the order of unit. No. (1). Thermostat and protective function of each unit function independently.

Note (1) Unit No. is set by SW2 on the indoor control PCB. Unit No. setting by SW2 is necessary for the indoor unit only.

SW2: For setting of 0 - 9, A - F

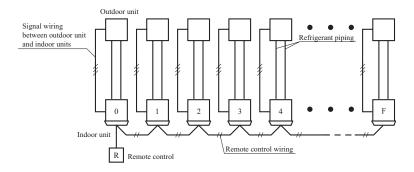

(2) Unit No. may be set at random unless duplicated, it should be better to set orderly like 0, 1, 2..., F to avoid mistake.

(b) Display to the remote control

- (i) Central or each remote control basis, heating preparation: the smallest unit No. among the operating units in the remote mode (or the center mode unless the remote mode is available) is displayed.
- (ii) Inspection display, filter sign: Any of unit that starts initially is displayed.

(c) Confirmation of connected units

- (i) In case of RC-EX3A remote control
 - If you touch the buttons in the order of "Menu" \rightarrow "Service setting" \rightarrow "Service & Maintenance" \rightarrow "Service password" \rightarrow "IU address" on the TOP screen of remote control, the indoor units which are connected are displayed.
- (ii) In case of RC-E5 remote control
 - Pressing "AIR CON No." button on the remote control displays the indoor unit address. If "▲" "▼" button is pressed at the next, it is displayed orderly starting from the unit of smallest No..

(d) In case of anomaly

If any anomaly occurs on a unit in a group (a protective function operates), that unit stops with the anomalous stop but any other normal units continue to run as they are.

(e) Signal wiring procedure

Signal wiring between indoor and outdoor units should be made on each unit same as the normal wiring. For the group control, connect the remote control wiring to each indoor unit via terminal block for the remote control.

Connect the remote control wiring separately from the power source cable or wires of other electric devices (AC220V or higher).

(18) Fan speed setting control

When sufficient air flow rate cannot be obtained from the indoor unit which is installed at a room with high ceiling, the air flow rate can be increased by changing the fan tap. To change the fan tap, use the indoor unit function "Fan speed setting" on the wired remote control.

Fan tap		Indoor unit air flow rate setting				Wired remote control
		24 - 24 - 24 - 24 - 24 - 24 - 24 - 24 -	2011 - 2010 - 201 0	\$al - \$al	Raff - Raff	Series
	Standard	P-Hi1 - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me	RC-EX3A
		UH - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me	RC-E5
Fan speed setting	Setting1	P-Hi2 - P-Hi1 - Hi - Me	P-Hi1 - Hi - Me	P-Hi1 - Me	P-Hi1 - Hi	RC-EX3A
	Setting2	P-Hi2 - Hi - Me - Lo	Hi - Me - Lo	Hi - Lo	Hi - Me	RC-EX3A
	HIGH SPEED1, 2	UH - UH - Hi - Me	UH - Hi - Me	UH - Me	UH - Hi	RC-E5

Notes (1) Factory default is Standard

- (2) At the hot-start and heating thermostat OFF, or other, the indoor fan is operated at the low speed tap of each setting.
- (3) This function is not able to be set with wireless remote control or simple remote control (RCH-E3).

(19) Abnormal temperature sensor (return air/indoor heat exchanger) broken wire/short-circuit detection

(a) Broken wire detection

When the return air temperature sensor detects -50°C or lower or the heat exchanger temperature sensor detect -50°C or lower for 5 seconds continuously, the compressor stops. After 3-minute delay, the compressor restarts but, if it is detected again within 60 minutes after the initial detection for 6 minutes continuously, stops again (the return air temperature sensor : E7, the heat exchanger temperature sensor : E6).


(b) Short-circuit detection

If the heat exchanger temperature sensor detects short-circuit for 5 seconds continuously within 2 minutes to 2 minutes 20 seconds after the compressor ON during cooling operation, the compressor stops (E6).

(20) External input/output control (CnT or CnTA)

External input/output connectors are provided on the indoor unit control PCB, and each input/output is possible to be changed by RC-EX3A.

Be sure to connect the wired remote control to the indoor unit. Remote operation with CnT/CnTA only is not possible.

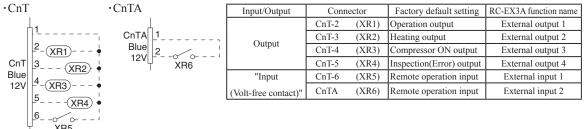

Priority order for combinations of CnT and CnTA input.

		CnTA						
		① Operation stop level	② Operation stop pulse	③ Operation permission/prohibition	4 Operation permission/prohibition pulse		6 Cooling/heating selection pulse	
	① Operation stop level	CnT ①	CnT ①	CnT ① +CnTA ②	CnT ①	CnT ① /CnTA ⑤	CnT ① /CnTA ⑥	
	② Operation stop pulse	CnT ②	CnT ②	CnT ② +CnTA ③	CnT ②	CnT ② /CnTA ⑤	CnT 2 /CnTA 6	
CnT	③ Operation permission/prohibition level	CnT ③ >CnTA ①	CnT ③ >CnTA ②	CnT ③ +CnTA ③	CnT ③	CnT ③ /CnTA ⑤	CnT ③ /CnTA ⑥	
Cni	4 Operation permission/prohibition pulse	CnT ④	CnT ④	CnT 4 +CnTA 3 **	CnT ④	CnT 4 /CnTA 5	CnT 4 /CnTA 6	
	(5) Cooling/heating selection level	CnT (5) /CnTA (1)	CnT (5) /CnTA (2)	CnT (5) /CnTA (3)	CnT (5) /CnTA (4)	CnT ⑤	CnT (5)	
	6 Cooling/heating selection pulse	CnT 6 /CnTA 1	CnT 6 /CnTA 2	CnT 6 /CnTA 3	CnT 6 /CnTA 4	CnT ⑥	CnT ⑥	

Note (1) Following operation commands are accepted when the operation prohibition is set with CnTA as indicated with *.

Individual operation command from remote control, test run command from outdoor unit and operation command from option device, CnT input.

Reference: Explanation on the codes and the combinations of codes in the table above

- 1. In case of CnT "Number", the CnT "Number" is adopted and CnTA is invalidated.
- 2. In case of CnTA "Number", the CnTA "Number" is adopted and CnT is invalidated.
- 3. In case of CnT "Number"/CnTA "Number", the CnT "Number" and the CnTA "Number" become independent functions each other.
- 4. In case of CnT "Number" + CnTA "Number", the CnT "Number" and the CnTA "Number" become competing functions each other.
- 5. In case of CnT "Number" > CnTA "Number", the function of CnT "Number" supersedes that of CnTA "Number".
- 6. In case of CnT "Number" < CnTA "Number", the function of CnTA "Number" supersedes that of CnT "Number". (The "Number" above means ① ⑥ in the table.)

(a) Output for external control (remote display)

Indoor unit outputs the following signal for operation status monitoring.

_	, , ,	1
	Output name	Condition
1	Operation output	During operation
2	Heating output	During heating operation
3	Compressor ON output	During compressor operation
4	Inspection(Error) output	When anomalous condition occurs.
5	Cooling output	During cooling operation
6	Fan operation output 1	When indoor unit's fan is operating
7	Fan operation output 2	When indoor unit's fan is operating, and fan speed is higher than Hi speed.
8	Fan operation output 3	When indoor unit's fan is operating, and fan speed is Lower than Me speed.
9	Defrost/oil return output	When indoor unit receive defrost/oil return signal from the outdoor unit.
10	Ventilation output	When "Venti.ON" is selected from remote control
11	Free cooling output	When the ambient temp. is between 10 - 18°C in cooling and fan operation
12	Indoor unit overload alrm output	Refer to "IU overload alarm"
13	Heater output	Refer to "(8) Thermostat operation (b) Heating"


(b) Input for external control

The external input for the indoor unit can be selected from the following input.

	Input name	Content
1	Run/Stop	Refer to [(20) (c) Remote operation input]
2	Premission/Prohibition	Refer to [(21) Operation permission/prohibition]
3	Cooling/Heating	Refer to [(23) Selection of cooling/heating external input function]
4	Emergency stop	Indoor/outdoor units stop the operation, and [E63] is displayed.
5	Setting temperature shift	Set temperature is shifted by +2/-2°C in cooling/heating.
6	Forced thermo-OFF	Unit goes thermo off.
7	Temporary stop	Refer to [(22) Temporary stop input]
8	Silent mode	Outdoor unit silent mode is activated.

(i) In case of "Level input" setting (Factory default)

Input signal to CnT-6 or CnTA is OFF→ON unit ON Input signal to CnT-6 or CnTA is ON→OFF unit OFF Operation is not inverted.

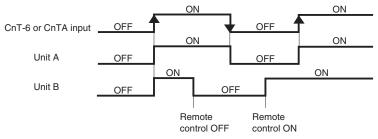


Note (1) The latest operation has priority

It is available to operate/stop by remote control or central control.

(ii) In case of "Pulse input" setting (Local setting)


It is effective only when the input signal to CnT-6 or CnTA is changed OFF→ON, and at that time unit operation [ON/OFF] is inverted.

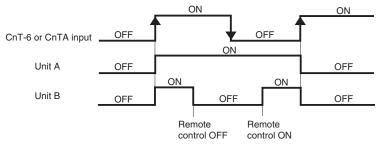

(c) Remote operation

(i) In case of multiple units (Max. 16 indoor units group) are connected to one wired remote control

When the R/C function setting of wired remote control for "External control set" is changed from "Individual (Factory default)" to "For all units", all units connected in one wired remote control system can be controlled by external operation input.

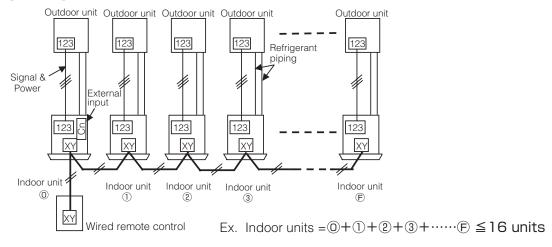

	Individual operation	on (Factory default)	All units operation (Local setting)		
	ON	OFF	ON	OFF	
CnT-6 or CnTA	Only the unit directly connected to the remote control can be operated.	Only the unit directly connected to the remote control can be stopped opeartion.	All units in one remote control system can be operated.	All units in one remote control system can be stopped operation.	
	Unit ① only	Unit ① only	Units ① – ⑤	Units ① – 🕞	


When more than one indoor unit (Max. 16 indoor units) are connected in one wired remote control system:

- (1) With the factory default, external input to CnT-6 or CnTA is effective for only the unit ①.
- (2) When setting "For all unit" (Local setting), all units in one remote control system can be controlled by external input to CnT-6 or CnTA on the indoor unit ①.
- (3) External input to CnT-6 or CnTA on the other indoor unit than the unit ① is not effective.

(21) Operation permission/prohibition

(In case of adopting card key switches or commercially available timers)

When the indoor function setting of wired remote control for "Operation permission/prohibition" is changed from "Invalid (Factory default)" to "Valid", following control becomes effective.

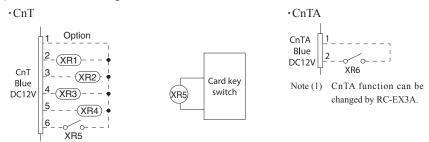


	Normal operation (Factory default)		Operation permission/prohibition mode "Valid" (Local setting)		
CnT 6 or	ON	OFF	ON	OFF	
CnT-6 or CnTA	Operation	Stop	Operation permission*1	Operation prohibition (Unit stops)	

*1 Only the "LEVEL INPUT" is acceptable for external input, however when the indoor function setting of "Level input (Factory default)" or "Pulse input" is selected by the function for "External input" of the wired remote control, operation status will be changed as follows.

In case of "Level input" setting	In case of "Pulse input" setting
Unit operation from the wired remote control becomes available ¥1	Unit starts operation *2


- **1) In case that "Operation permission/prohibition mode" setting is "Valid" and "External input" setting is "Level input (Factory default)";
 - ① When card key switch is ON (CnT-6 or CnTA ON: Operation permission), start/stop operation of the unit from the wired remote control becomes available.
 - When card key switch is OFF (CnT-6 or CnTA OFF: Operation prohibition), the unit stops operation in conjunction with OFF signal, and start/stop operation of the unit from the wired remote control becomes unavailable.
- **2) In case that "Operation permission/prohibition mode" setting is "Valid" and "External input" setting is "Pulse input (Local setting)";
 - ① When card key switch is ON (Operation permission), the unit starts operation in conjunction with ON signal, and also start/stop operation of the unit from the wired remote control becomes available.
 - When card key switch is OFF (Operation prohibition), the unit stops operation in conjunction with OFF signal, and start/stop operation of the unit from the wired remote control becomes unavailable.
 - 3) This function is invalid only at "Center mode" setting done by central control.

(a) In case of CnT ① Operation stop level > CnTA ③ Operation permission/prohibition level

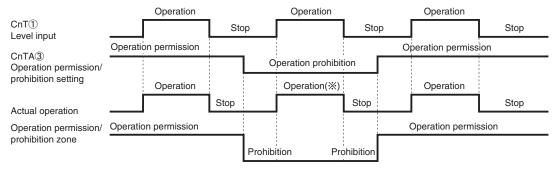


(*) CnT level input supersedes CnTA operation prohibition.

(b) In case of CnT (3) Operation permission/prohibition level + CnTA (3) Operation permission/prohibition level

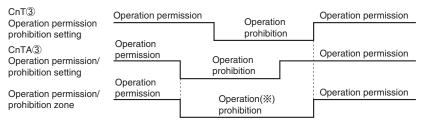


(*) Operation prohibition zone is determined by the OR judgment between CnT operation prohibition zone and CnTA operation prohibition zone.

(c) In case of CnT 3 Operation permission/prohibition level > CnTA 2 Operation stop pulse

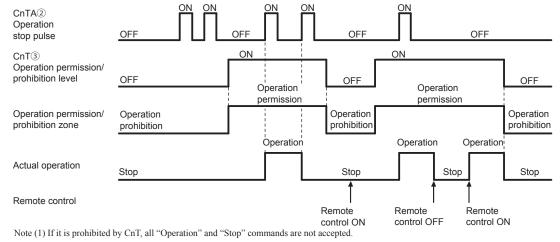

(d) In case of CnT ② Operation stop pulse + CnTA ③ Operation permission/prohibition level

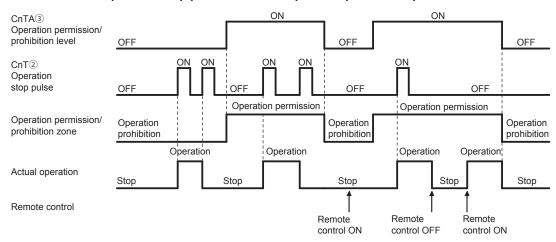


(22) Temporary stop input

In case of temporary stop, operation lamp of remote control lights, but indoor/outdoor unit stop the operation.


(a) In case of "level input" setting (Factory default)

Input signal to CnT-6 or CnTA is OFF \rightarrow ON : Temporary stop Input signal to CnT-6 or CnTA is OFF \rightarrow ON : Normal operation

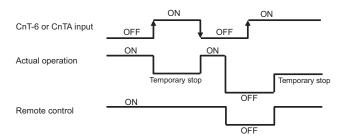

(b) In case of "pulse input" setting (Local setting)

It is effective only when the input signal is changed OFF→ON, and "temporary stop/normal operation" is inverted.

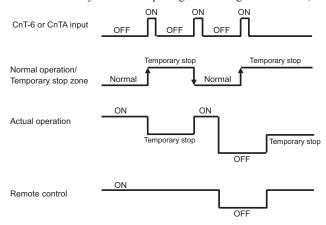

(23) Selection of cooling/heating external input function

- (a) When "External input 1 setting: Cooling/heating" is set by the indoor unit function from remote control, the cooling or heating is selected with CnT-6 or CnTA.
- (b) When the external input 1 method selection: Level input is set by the indoor unit function:
 - CnT-6 or CnTA: OPEN \rightarrow Cooling operation mode
 - CnT-6 or CnTA: CLOSE \rightarrow Heating operation mode
- (c) When the external input 1 method selection: Pulse input is set by the indoor unit function:

 If the external input is changed OPEN → CLOSE, operation modes are inverted (Cooling → Heating or Heating → Cooling).
- (d) If the cooling/heating selection signal is given by the external input, the operation mode is transmitted to the remote control.
 - Selection of cooling/heating external input function

External input selection	External input method	Operation				
		External terminal input (CnT or CnTA)	OFF ON OFF ON Cooling zone Heating zone Cooling zone Heating zone			
	(5) Level	Cooling/heating	Cooling Heating Heating Cooling			
External input selection		Cooling/heating (Competitive)	Heating Heating			
Cooling/heating selection		External terminal input (CnT or CnTA)	OFF Heating zone After setting "Cooling heating selection", the cooling/heating is selected by the current operation mode. During heating: Set at the heating zone (cooling prohibition zone). During nearing: Set at the heating zone (cooling prohibition zone). During cooling, day, anto and far mode: Set at cooling zone thesting prohibition zone).			
	(6) Pulse	Cooling/heating	Auto Cooling Cooling			
		Cooling/heating (Competitive)	Auto Cooling Cooling Set*Cooling Auto, cooling, dy mode command Auto, bearing mode Hearing "Pulse" by remote control			

Note (1) Regarding the priority order for combinations of CnT and CnTA, refer to page 158.

(24) Fan control at heating startup

(a) Starting conditions

At the start of heating operation and after the end of hot start control, if the difference of setting temperature and return air temperature is 5°C or higher, this control is performed.

(b) Contents of control


- (i) Sampling is made at each minute and, when the indoor heat exchanger temperature (detected with Thi-R) is 37°C or higher, present number of revolutions of indoor fan speed is increased by 10min⁻¹.
- (ii) If the indoor heat exchanger temperature drops below 37°C at next sampling, present number of revolutions of indoor fan speed is reduced by 10min⁻¹.

(c) Ending conditions

Indoor fan speed is reduced to the setting air flow rate when the compressor OFF is established and at 30 minutes after the start of heating operation.

(25) Room temperature detection temperature compensation during heating

With the standard specification, the compressor is turned ON/OFF with the thermostat setting temperature. When the thermostat is likely to turn OFF earlier because the unit is installed at the ceiling where warm air tends to accumulate, the setting can be changed with the wired remote control indoor unit function "*SPOFFSET". The compressor and the heater are turned ON/OFF at one of the setting temperature +3, +2 or +1°C in order to improve the feeling of heating. The setting temperature, however, has the upper limit of 30°C.

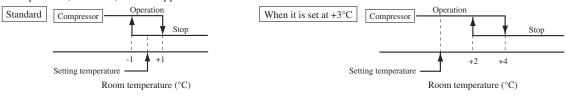

(26) Return air temperature compensation

This is the function to compensate the deviation between the detection temperature by the return air temperature sensor and the measured temperature after installing the unit.

(a) It is adjustable in the unit of 0.5°C with the wired remote control indoor unit function "RETURN AIR TEMP".

(b) Compensated temperature is transmitted to the remote control and the compressor to control them.

Note (1) The detection temperature compensation is effective on the indoor unit thermistor only.

(27) High power operation (RC-EX3A only)

It operates at with the set temperature fixed at 16°C for cooling, 30°C for heating and maximum indoor fan speed for 15 minutes maximum.

(28) Energy-saving operation (RC-EX3A only)

It operates with the setting temperature fixed at 28°C for cooling, 22°C for heating or 25°C for auto. When fan control in cooling/heating thermo-OFF setting is "Set fan speed", fan speed during thermo-OFF is changed to "Low". (Maximum capacity is restricted at 80%.)

(29) Warm-up control (RC-EX3A only)

Operation will be started 5 to 60 minutes before use according to the forecast made by the microcomputer which calculates when the operation should be started in order to warm up the indoor temperature near the setting temperature at the setting time of operation start.

(30) Home leave mode (RC-EX3A only)

When the unit is not used for a long period of time, the room temperature is maintained at a moderate level, avoiding extremely hot or cool temperature.

- (a) Cooling or heating is operated according to the outdoor temperature (factory setting 35°C for cooling, 0°C for heating) and the setting temperature. (factory setting 33°C for cooling, 10°C for heating)
- (b) Setting temperature and indoor fan speed can be set by RC-EX3A.

(31) Auto temperature setting (RC-EX3A only)

Setting temperature is adjusted automatically at the adequate temperature the center setting temperature is 24°C by correcting the outdoor air temperature.

(32) Fan circulator operation (RC-EX3A only)

When the fan is used for circulation, the unit is operated as follows depending on the setting with the remote control.

- (a) If the invalid is selected with the remote control, the fan is operated continuously during the fan operation. (normal fan mode)
- (b) If the valid is selected with the remote control, the fan is operated or stopped when on the difference of the remote control temperature sensor and the return air temperature sensor becomes bigger than 3°C.

(33) The operation judgment is executed every 5 minutes (RC-EX3A only)

Setting temperature Ts is changed according to outdoor temperature.

This control is valid with cooling and heating mode. (Not auto mode)

- (a) Operate 5 minutes forcedly.
- (b) Setting temperature is adjusted every 10 minutes.
 - (i) Cooling mode.
 - Ts = outdoor temperature offset value
 - (ii) Heating mode.
 - Ts = outdoor temperature offset value
- (c) If the return air temperature lower than 18°C in cooling or return air temperature becomes higher than 25°C in heating, unit goes thermostat OFF.

(34) Auto fan speed control (RC-EX3A only)

In order to reach the room temperature to the setting temperature as quickly as possible, the air flow rate is increased when the setting temperature of thermostat differs largely from the return air temperature. According to temperature difference between setting temperature and return air temperature, indoor fan tap are controlled automalically.

- Auto 1: Changes the indoor fan tap within the range of $Hi \leftrightarrow Me \leftrightarrow Lo$.
- Auto 2: Changes the indoor fan tap within the range of P-Hi \leftrightarrow Hi \leftrightarrow Me \leftrightarrow Lo.

(35) Indoor unit overload alarm (RC-EX3A only)

If the following condition is satisfied at 30 minutes after starting operation, RC-EX3A shows maintenance code "M07" and the signal is transmitted to the external output (CnT-2-5).

- · Cooling, Dry, Auto(Cooling): Indoor air temperature = Set room temperature by remote control + Alarm temperature difference
- Heating, Auto(Heating) : Indoor air temperature = Set room temperature by remote control Alarm temperature difference Alarm temperature difference is selectable between 5 to 10° C.

If the following condition is satisfied or unit is stopped, the signal is disappeared.

- · Cooling, Dry, Auto(Cooling): Indoor air temperature = Set room temperature + Alarm temperature difference -2°C
- Heating, Auto(Heating) : Indoor air temperature = Set room temperature Alarm temperature difference +2°C

(36) Peak-cut timer (RC-EX3A only)

Power consumption can be reduced by restricting the maximum capacity.

Set the [Start time], the [End time] and the capacity limit % (Peak-cut %).

- · 4-operation patterns per day can be set at maximum.
- The setting time can be changed by 5-minute interval.
- The selectable range of capacity limit % (Peak-cut %) is from 0% to 40-80% (20% interval).
- · Holiday setting is available.

(37) Motion sensor control (RC-EX3A and RCN-E2 only)

The sensor determines the presence of people and the amount of activity, and the following controls are done by the motion sensor. Following settings are necessary to activate motion sensor control.

- (a) Infrared (motion) sensor setting: Installation setting of remote control The indoor unit which is set to "Enable" become valid.
- (b) Infrared (motion) sensor control: Energy-saving setting of remote control The function which is set to "Enable" become valid.

RC-EX3A


 $\mathsf{TOP}\;\mathsf{screen}\;\;\boxed{\mathsf{Menu}}\;\; \Rightarrow \boxed{\mathsf{Service}\;\mathsf{setting}} \; \Rightarrow \boxed{\mathsf{Installation}\;\mathsf{settings}} \; \Rightarrow \boxed{\mathsf{Service}\;\mathsf{password}}$







TOP screen Menu ⇒ Energy-saving setting ⇒ Infrared sensor control or Motion sensor control

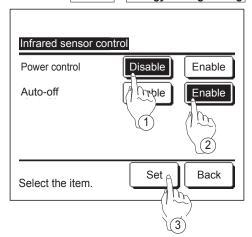

The Infrared sensor control screen and contents of the current settings are displayed.


- 1 Enable/disable power control.
- ② Enable/disable auto-off.
- ③ After you set each item, tap the Set button. The display returns to the Energy-saving setting menu screen.


RCN-E2

- 1. Set indoor functions
 - ① Press the ON/OFF button to stop the unit.
 - ② Press the desired one of the buttons shown item 2. while holding down the FUNCTION SETTING switch.
 - ③ Use the selection buttons, ▲ and ▼, to change the setting.
 - Press the SET button.

The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.



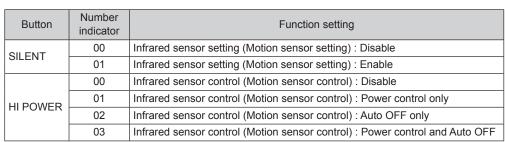


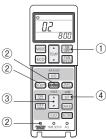

(i) Power saving / comfort control

The setting temperature is adjusted according to the presence of people and their amount of activity detected by the infrared (motion) sensor.

MODE:AUTO/COOL/HEAT mode operation

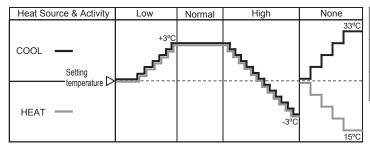

Low	When the extent of human activity is low
High	When the extent of human activity is high
None	When there is no one in the room

When the "None" continues for 1 hour, the FAN SPEED is set Lo.

Notes (1) When the following operations are set, power saving control will be canceled.

- ① Energy-saving, Home leave mode, Warm-up control, Cooling operation check.
- ② When the operation mode is changed DRY or FAN.
- (2) Not operable while the air-conditioner is OFF.

(ii) Auto-off control

When no activity is detected for 1 hour, unit will go stand-by mode. ** Unit will re-start operation automatically with the original setting temperature by activity detection during the stand-by mode. When stand-by mode continues for 12 hours, unit stops.

*Compressor keeps stopped regardless of the setting temperature.

10.2.4 Operation control function by the outdoor control

(1) Defrost operation

- (a) Starting conditions (Defrosting operation can be started only when all of the following conditions are satisfied.)
 - 1) After start of heating operation

When it elapsed 35 minutes. (Accumulated compressor operation time)

2) After end of defrosting operation

When it elapsed 35 minutes. (Accumulated compressor operation time)


3) Outdoor heat exchanger sensor (TH2) temperature


When the temperature has been below -5°C for 3 minutes continuously.

- 4) The difference between the outdoor air sensor temperature and the outdoor heat exchanger sensor temperature (TH3-TH2)
 - The outdoor air temperature $\ge 0^{\circ}\text{C}$: 7°C or higher
 - -15°C \leq The outdoor air temperature < 0°C : $3/15 \times$ The outdoor air temperature + 7°C or higher (FDTC25)

 $4/15 \times$ The outdoor air temperature + 7°C or higher (FDTC35)

• The outdoor air temperature < -15°C: -5°C or higher

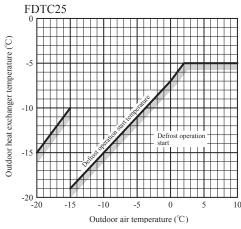

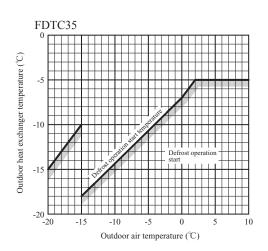

5) During continuous compressor operation

In addition, when the speed command from the indoor control of the indoor unit during heating operation has counted 0 rps 10 times or more and all conditions of 1), 2) and 3) above and the outdoor air temperature is 3°C or less are satisfied (note that when the temperature for outdoor heat exchanger sensor (TH2) is -5°C or less: 62 rps or more, -4°C or less: less than 62 rps), defrost operation is started.

- (b) Ending conditions (Operation returns to the heating cycle when either one of the following is satisfied.)
 - 1) Outdoor heat exchanger sensor (TH2) temperature: 13°C or higher
 - 2) Continued defrost operation time \rightarrow For more than 15 minutes
 - Defrost operation




*Depends on an operation condition, the time can be longer than 7 minutes.

(2) Cooling overload protective control

(a) Operating conditions

When the outdoor air temperature (TH3) has become continuously for 30 seconds at 41°C or more, or 47°C or more with the compressor running, the lower limit speed of compressor is brought up.

Outdoor air temperature	41°C or more	47°C or more
Lower limit speed	30 rps	45 rps

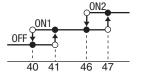

Outdoor air temperature (°C)

(b) Detail of operation

- 1) The outdoor fan is stepped up by 3 speed step. (Upper limit 8th speed)
- 2) The lower limit of compressor command speed is set to 30 or 45 rps and even if the calculated result becomes lower than that after fuzzy calculation, the speed is kept to 30 or 45 rps. However, when the thermo OFF, the speed is reduced to 0 rps.

(c) Reset conditions

When either of the following condition is satisfied

- 1) The outdoor air temperature is lower than 40°C.
- 2) The compressor command speed is 0 rps.

(3) Cooling high pressure control

(a) Purpose


Prevents anomalous high pressure operation during cooling

(b) Detector


Outdoor heat exchanger sensor (TH2)

(c) Detail of operation

(Example) Compressor speed

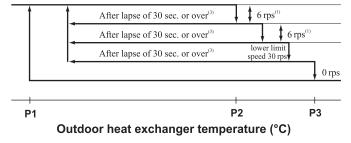

		TH2(°C)		
		P1	P2	P3
25	Range A	47	50	53
	Range B	53	58	63
35	Range A	48	53	55
	Range B	53	58	63

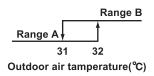

Notes (1) When the outdoor heat exchanger temperature is in the range of P2-P3°C, the speed is reduced by 6 rps at each 30 seconds.

- (2) When the temperature is P3°C or higher, the compressor is stopped.
- (3) When the outdoor heat exchanger temperature is in the range of P1-P2°C, if the compressor speed is been maintained and the operation has continued for more than 20 seconds at the same speed, it returns to the normal cooling operation.


(4) Cooling low outdoor temperature protective control

(a) Operating conditions

When the outdoor air temperature (TH3) is 22°C or lower continues for 20 seconds while the compressor command speed is other than 0 rps

(b) Detail of operation


- 1) The lower limit of the compressor command speed is set to 50 < 44 > (30) rps and even if the speed becomes lower than 50 < 44 > (30) rps, the speed is kept to 50 < 44 > (30) rps. However, when the thermo OFF, the speed is reduced to 0 rps.
- 2) The upper limit of the compressor command speed is set to 50 < 50 > (60) rps and even if the calculated result becomes higher than that after fuzzy calculation, the speed is kept to 50 < 50 > (60) rps.
- Notes (1) Values in $\langle \ \rangle$ are for outdoor air temperature is A or B°C
 - (2) Values in () are for outdoor air temperature is C or D°C

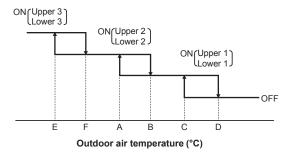

Compressor speed: Upper/lower limit (rps)							
Lower 1 Range B Range A Upper 1 Lower 2				Upper 2	Lower 3	Upper 3	
30	Release	60	44	50	50	50	

•Values of A, B, C, D, E, F

	Outdoor air temperature (°C)						
	E	F	Α	В	С	D	
First time	-8	-5	0	3	22	25	
After the second times	-2	1	5	8	25	28	

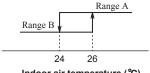

(c) Reset conditions

When either of the following condition is satisfied

- 1) The outdoor air temperature (TH3) is D °C or higher.
- 2) The compressor command speed is 0 rps.

(5) Heating high pressure control

(a) Starting condition

When the indoor heat exchanger temperature (Thi-R) has risen to a specified temperature while the compressor is turned on.

(b) Compressor speed is controlled according to the zones of indoor heat exchanger temperature as shown by the following table.

		Thi	Thi-R <p1 i<="" p1≦thi-r<p2="" th="" =""><th>P2≦Thi-R<p3< th=""><th>P3≦Thi-R</th></p3<></th></p1>		P2≦Thi-R <p3< th=""><th>P3≦Thi-R</th></p3<>	P3≦Thi-R	
Protection control speed (NP)		Normal		I	Retention	NP-4rps	NP-8rps
Sampling time	Sampling time (s)		Normal 20		20	20	
					Unit:	°C	
NP Thi-R	P1		P2		P3		
NP<50	47		52		54		
50≦NP<92	47.5		55		57		
92≦NP<115	47.5-	39	55-40		57-42		
115≦NP	39		40		42		

(6) Heating overload protective control

(a) Indoor unit side

1) Operating conditions

When the outdoor air temperature (TH3) is 17°C or higher continues for 30 seconds while the compressor command speed other than 0 rps

2) Detail of operation

The indoor fan is stepped up by 1 speed step. (Upper limit 9th speed)

3) Reset conditions

The outdoor air temperature (TH3) is lower than 16°C.


(b) Outdoor unit side


1) Operating conditions

When the outdoor air temperature (TH3) is 22°C or higher continues for 30 seconds while the compressor command speed other than 0 rps

2) Detail of operation

Upper and lower limits of compressor speed and the outdoor unit fan speed are restricted.

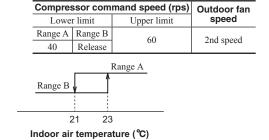

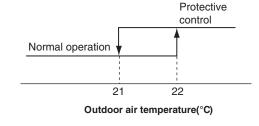

3) Reset condition

When the outdoor air temperature (TH3) drops below 21°C

(7) Heating low outdoor temperature protective control


(a) Protective control I

1) Operating conditions

When the outdoor air temperature (TH3) is -2°C or lower continues for 30 seconds while the compressor command speed is other than 0 rps

2) Detail of operation

The lower limit compressor command speed is changed as shown in the figure below.

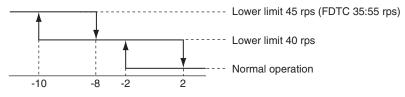

Outdoor air temperature(°C)

3) Reset conditions

When either of the following condition is satisfied

- a) The outdoor air temperature (TH3) becomes 2°C.
- b) The compressor command speed is 0 rps.


(8) Compressor overheat protection

(a) Purpose

It is designed to prevent deterioration of oil, burnout of motor coil and other trouble resulting from the compressor overheat.

(b) Detail of operation

1) Speeds are controlled with temperature detected by the sensor mounted on the discharge pipe.

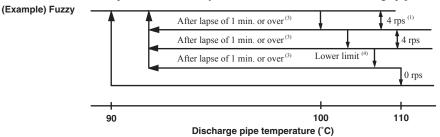

- Notes (1) When the discharge pipe temperature is in the range of 100-110°C, the speed is reduced by 4 rps.
 - (2) When the discharge pipe temperature is raised and continues operation for 20 seconds without changing, then the speed is reduced again by 4 rps.
 - (3) If the discharge pipe temperature is in the range of 90-100°C even when the compressor speed is maintained for 3 minutes when the temperature is in the range of 90-100°C, the speed is raised by 1 rps and kept at that speed for 1 minute. This process is repeated until the command speed is reached.
 - (4) Lower limit speed

Model	Cooling	Heating
Lower limit speed	15 rps	20 rps

2) If the temperature of 110°C is detected by the sensor on the discharge pipe, then the compressor will stop immediately. When the discharge pipe temperature drops and the time delay of 3 minutes is over, the unit starts again within 1 hour but there is no start at the third time.

(9) Current safe

(a) Purpose

Current is controlled not to exceed the upper limit of the setting operation current.

(b) Detail of operation

Input current to the converter is monitored with the current sensor fixed on the printed circuit board of the outdoor unit and, if the operation current value reaches the limiting current value, the compressor command speed is reduced. If the mechanism is actuated when the compressor command speed is less than 30 (FDTC35:36) rps, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(10) Current cut

(a) Purpose

Inverter is protected from overcurrent.

(b) Detail of operation

Output current from the inverter is monitored with a shunt resistor and, if the current exceeds the setting value, the compressor is stopped immediately. Operation starts again after a delay time of 3 minutes.

(11) Outdoor unit failure

This is a function for determining when there is trouble with the outdoor unit during air-conditioning.

The compressor is stopped if any one of the following in item (i), (ii) is satisfied. Once the unit is stopped by this function, it is not restarted.

- (i) When the input current is measured at 1 A or less for 3 continuous minutes or more
- (ii) If the outdoor unit sends a 0 rps signal to the indoor unit 3 times or more within 20 minutes of the power being turned on

(12) Indoor fan motor protection

When the air-conditioner is operating and the indoor fan motor is turned ON, if the indoor fan motor has operated at 200 min⁻¹ or under for more than 30 seconds, the unit enters first in the stop mode and then stops the entire system.

(13) Rotor lock

If the motor for the compressor does not turn after it has been started, it is determined that a compressor lock has occurred and the compressor is stopped.

(14) Outdoor fan motor protection

If the outdoor fan motor has operated at 75 min⁻¹ or under for more than 30 seconds, the compressor and fan motor are stopped.

(15) Outdoor fan control at low outdoor air temperature

(a) Cooling

1) Operating conditions

When the outdoor air temperature (TH3) is 22°C or lower continues for 30 seconds while the compressor speed is other than 0 rps

2) Detail of operation

After the outdoor fan operates at A speed for 60 seconds; the corresponding outdoor heat exchanger temperature shall implement the following controls.

• Value of A

	Outdoor fan
Outdoor temperature > 10°C	2nd speed
Outdoor temperature ≦ 10°C	1st speed

a) Outdoor heat exchanger temperature (TH2) ≤ 21°C

After the outdoor fan speed drops (down) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is lower than 21°C, gradually reduce the outdoor fan speed by 1 speed. (Lower limit 1st speed)

b) 21°C < Outdoor heat exchanger temperature (TH2) ≤ 38°C

After the outdoor fan speed maintains at A speed for 20 seconds; if the outdoor heat exchanger temperature is 21°C-38°C, maintain outdoor fan speed.

c) Outdoor heat exchanger tempeature (TH2) > 38°C

After the outdoor fan speed rises (up) to 1 speed for 60 seconds; if the outdoor heat exchanger temperature is higher than 38°C, gradually increase outdoor fan speed by 1 speed. (Upper limit 3rd speed)

3) Reset conditions

When either of the following conditions is satisfied

- a) The outdoor air temperature (TH3) is 24°C or higher.
- b) The compressor command speed is 0 rps.

(b) Heating

1) Operating conditions

When the outdoor air temperature (TH3) is 0°C (In addition SRC35:6°C) or lower continues for 30 seconds while the compressor command speed is other than 0 rps

2) Detail of operation

The outdoor fan is stepped up by 2 speed step at each 20 seconds. (Upper limit 8th speed (In addition SRC35:1 speed step up corresponding to inverter number of rotations when the outdoor air temperature (TH3) is 6°C or lower))

3) Reset conditions

When either of the following conditions is satisfied

- a) The outdoor air temperature (TH3) is 2°C (SRC35:7°C) or higher.
- b) The compressor command speed is 0 rps.

(16) Refrigeration cycle system protection

(a) Starting conditions

- 1) When 5 minutes have elapsed after the compressor ON or the completion of the defrost control
- 2) Other than the defrost control
- 3) When, after satisfying the conditions of 1) and 2) above, the compressor speed, room temperature (Thi-A) and indoor heat exchanger temperature (Thi-R) have satisfied the conditions in the following table for 5 minutes:

Operation mode	Compressor speed (N)		Room temperature (Thi-A)/ Indoor heat exchanger temperature (Thi-R)
Cooling	50≦N	10≦Thi-A ≦40	Thi-A-4 <thi-r< td=""></thi-r<>
Heating ⁽¹⁾	50≦N	0≦Thi-A≦40	Thi-R <thi-a+4< td=""></thi-a+4<>

Note (1) Except that the fan speed is Hi in heating operation.

(b) Contents of control

- 1) When the conditions of (a) above are satisfied, the compressor stops.
- 2) Error stop occurs when the compressor has stopped 3 times within 60 minutes.

(c) Reset condition

When the compressor has been turned OFF

11. MAINTENANCE DATA

11.1 SRK, SRF & SRR series

(1) Cautions

- (a) If you are disassembling and checking an air-conditioner, be sure to turn off the power before beginning. When working on indoor units, let the unit sit for about 1 minute after turning off the power before you begin work. When working on an outdoor unit, there may be an electrical charge applied to the main circuit (electrolytic condenser), so begin work only after discharging this electrical charge (to DC10V or lower).
- (b) When taking out printed circuit boards, be sure to do so without exerting force on the circuit boards or package components.
- (c) When disconnecting and connecting connectors, take hold of the connector housing and do not pull on the lead wires.

(2) Items to check before troubleshooting


- (a) Have you thoroughly investigated the details of the trouble which the customer is complaining about?
- (b) Is the air-conditioner running? Is it displaying any self-diagnosis information?
- (c) Is a power source with the correct voltage connected?
- (d) Are the control lines connecting the indoor and outdoor units wired correctly and connected securely?
- (e) Is the outdoor unit's service valve open?

(3) Troubleshooting procedure (If the air-conditioner does not run at all)


If the air-conditioner does not run at all, diagnose the trouble using the following troubleshooting procedure. If the air-conditioner is running but breaks down, proceed to troubleshooting step (4).

Important When all the following conditions are satisfied, we say that the air-conditioner will not run at all.

- (a) The RUN light does not light up.
- (b) The flaps do not open.
- (c) The indoor unit fan motors do not run.
- (d) The self-diagnosis display does not function.

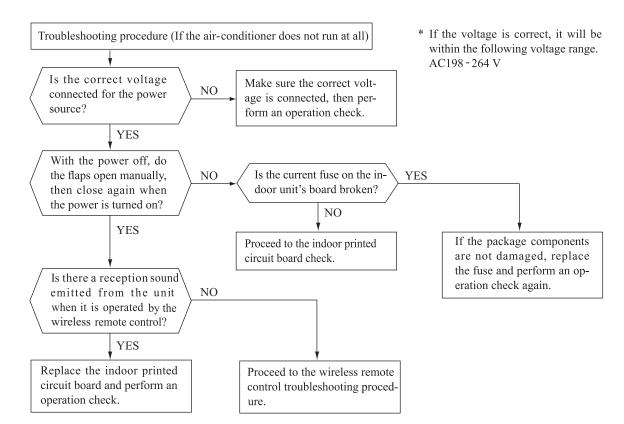

(4) Troubleshooting procedure (If the air-conditioner runs)

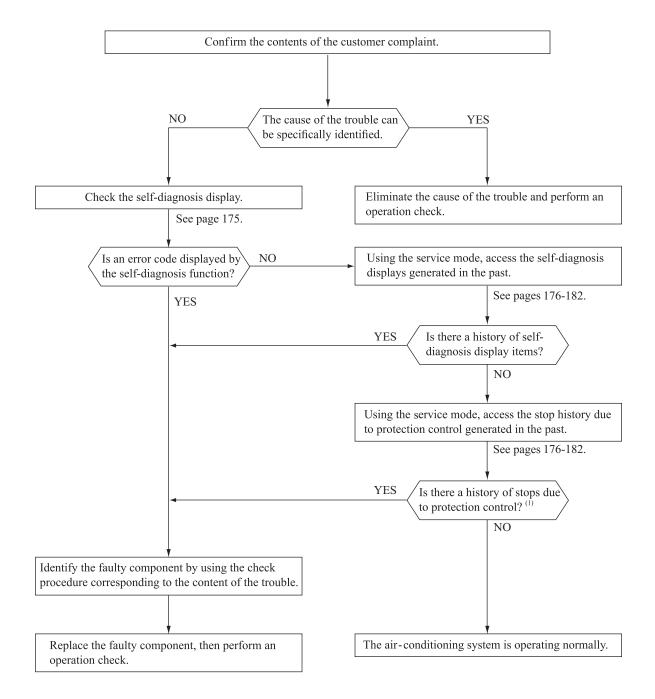

Note (1) Even in cases where only intermittent stop data are generated, the air-conditioning system is normal. However, if the same protective operation recurs repeatedly (3 or more times), it will lead to customer complaints. Judge the conditions in comparison with the contents of the complaints.

(5) Self-diagnosis table

When this air-conditioner performs an emergency stop, the reason why the emergency stop occurred is displayed by the flashing of display lights. If the air-conditioner is operated using the remote control 3 minutes or more after the emergency stop, the trouble display stops and the air-conditioner resumes operation. (1)

ndoor unit d RUN	isplay panel	Wired (2) remote control	Description of trouble	Cause	Display (flashing) condition
light	light	display	or trouble		
1-time flash	ON	_	Heat exchanger sensor 1 error	Broken heat exchanger sensor 1 wire, poor connector connection Indoor unit PCB is faulty	When a heat exchanger sensor 1 wire disconnection is detected while operation is stopped. (If a temperature of -28°C or lowe is detected for 15 seconds, it is judged that the wire is disconnected.) (Not displayed during operation.)
2-time flash	ON	_	Room temperature sensor error	Broken room temperature sensor wire, poor connector connection Indoor unit PCB is faulty	When a room temperature sensor wire disconnection is detected while operation is stopped. (If a temperature of -45°C or lower is detected for 15 seconds, it is judged that the wire is disconnected.) (Not displayed during operation.)
3-time flash	ON	_	Heat exchanger sensor 2 error	Broken heat exchanger sensor wire, poor connector connection Indoor unit PCB is faulty	When a heat exchanger sensor 2 wire disconnection is detected while operation is stopped. (If a temperature of -28°C or lower is detected for 15 seconds, it is judged that the wire is disconnected.)(Not displayed during operation.)
4-time flash	ON	E 9	Drain trouble (SRR series only)	Defective drain pump (DM), broken drain pump wire Anomalous float switch operation Defective indoor unit PCB faulty	If the float switch OPEN is defected for 3 seconds continuously or if float switch connector or wire is disconnected.
6-time flash	ON	E 16	Indoor fan motor error	Defective fan motor, poor connector connection	When conditions for turning the indoor unit's fan motor on exist during ai -conditioner operation, an indoor unit fan motor speed of 300min or lower is measured for 30 seconds or longer. (The air-conditioner stops.
Keeps flashing	1-time flash	E 38	Outdoor air temperature sensor error	Broken outdoor air temp. sensor wire, poor connector connection Outdoor unit PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 time within 40 minutes after initial detection of this anomalous temperature.Or −55°C or higher is detected for within 20 seconds after power ON. (The compressor is stopped.)
Keeps flashing	2-time flash	E 37	Outdoor heat exchanger sensor error	Broken heat exchanger sensor wire, poor connector connection Outdoor unit PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 time within 40 minutes after initial detection of this anomalous temperature.Or -55°C or higher is detected for within 20 seconds after power ON. (The compressor is stopped.)
Keeps flashing	4-time flash	E 39	Discharge pipe sensor error	Broken discharge pipe sensor wire, poor connector connection Outdoor unit PCB is faulty	-25°C or lower is detected for 5 seconds continuously 3 time within 40 minutes after initial detection of this anomalous temperature.(The compressor is stopped.)
ON	1-time flash	E 42	Current cut	Compressor locking, open phase on compressor output, short circuit on power transistor, service valve is closed	The compressor output current exceeds the set value during compressor start. (The air-conditioner stops.)
ON	2-time flash	E 59	Trouble of outdoor unit	Broken compressor wire Compressor blockage	When there is an emergency stop caused by trouble in the outdoor unit, or the input current value is found to be lower than the set value.(The air-conditioner stops.)
ON	3-time flash	E 58	Current safe stop	Overload operation Overcharge Compressor locking	When the compressor command speed is lower than the set value and the current safe has operated. (the compressor stops)
ON	4-time flash	E 51	Power transistor error	Broken power transistor	When the power transistor is judged breakdown while compressor starts. (The compressor is stopped.)
ON	5-time flash	E 36	Over heat of compressor	Gas shortage, defective discharge pipe sensor, service valve is closed	When the value of the discharge pipe sensor exceeds the se value.(The air-conditioner stops.)
ON	6-time flash	E 5	Error of signal transmission	Defective power source, Broken signal wire, defective indoor/outdoor unit PCB	When there is no signal between the indoor unit PCB and outdoor unit PCB for 10 seconds or longer (when the power is turned on), or when there is no signal for 7 minute 35 seconds or longer (during operation)(the compressor is stopped).
ON	7-time flash	E 48	Outdoor fan motor error	Defective fan motor, poor connector connection	When the outdoor unit's fan motor speed continues for 30 seconds or longer at 75 min ⁻¹ or lower. (3 times) (The air -conditioner stops.)
ON	Keeps flashing	E 35	Cooling high pressure protecton	Overload operation, overcharge Broken outdoor heat exchange sensor wire Service valve is closed	When the value of the outdoor heat exchanger sensor exceeds the set value.
2-time flash	2-time flash	E 60	Rotor lock	Defective compressor Open phase on compressor Defective outdoor unit PCB	If the compressor motor's magnetic pole positions cannot be correctly detected when the compressor starts. (The air-conditioner stops.)
5-time flash	ON	E 47	Active filter voltage error	Defective active filter	When the wrong voltage connected for the power source. When the outdoor unit PCB is faulty
7-time flash	ON	E 57	Refrigeration cycle system protective control	Service valve is closed. Refrigerant is insufficient	When refrigeration cycle system protective control operates
7-time flash	1-time flash	E 40	Service valve (gas side) closed opertion	Service valve (gas side) closed Defective outdoor unit PCB	If the output current of inverter exceeds the specifications, it makes the compressor stopping. (In heating mode). After 3-minute delay, the compressor restarts, but if this anomaly occurs 2 times within 20 minutes after the initial detection.
_	_	E 1	Error of wired remote control wiring	Broken wired remote control wire, defective indoor unit PCB	The wired remote control wire Y is open. The wired remote control wires X and Y are reversely connected. Noise is penetrating the wired remote control lines. The wired remote control or indoor unit PCB is faulty. (The communications circuit is faulty.)

Notes (1) The air-conditioner cannot be restarted using the remote control for 3 minutes after operation stops.

(2) The wired remote control is option parts.


(6) Service mode (Trouble mode access function)

This air-conditioner is capable of recording error displays and protective stops (service data) which have occurred in the past. If self-diagnosis displays cannot be confirmed, it is possible to get a grasp of the conditions at the time trouble occurred by checking these service data.


(a) Explanation of terms

Term	Explanation
Service mode	The service mode is the mode where service data are displayed by flashing of the display lights when the operations in item (b) below are performed with the indoor control.
Service data	These are the contents of error displays and protective stops which occurred in the past in the air-conditioner system. Error display contents and protective stop data from past anomalous operations of the air-conditioner system are saved in the indoor unit control's non-volatile memory (memory which is not erased when the power goes off). There are two types of data, self-diagnosis data and stop data, described below.
Self-diagnosis data	These are the data which display the reason why a stop occurred when an error display(self-diagnosis display) occurred in an indoor unit. Data are recorded for up to 5 previous occurrences. Data which are older than the 5th previous occurrence are erased. In addition, data on the temperature of each sensor (room temperature, indoor heat exchanger, outdoor heat exchanger, outdoor air temperature, discharge pipe), remote control information (operation switching, fan speed switching) are recorded when trouble occurs, so more detailed information can be checked.
Stop data	These are the data which display the reason by a stop occurred when the air-conditioning system performed protective stops, etc. in the past. Even if stop data alone are generated, the system restarts automatically. (After executing the stop mode while the display is normal, the system restarts automatically.) Data for up to 10 previous occasions are stored. Data older than the 10th previous occasion are erased. (Important) In cases where transient stop data only are generated, the air-conditioner system may still be normal. However, if the same protective stop occurs frequently (3 or more times), it could lead to customer complaints.

(b) Service mode display procedure

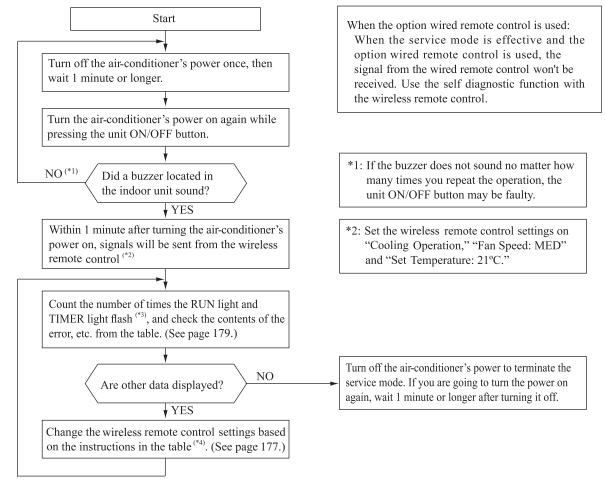

*3: To count the number of flashes in the service mode, count the number of flashes after the light lights up for 1.5 second initially (start signal). (The time that the light lights up for 1.5 second (start signal) is not counted in the number of flashes.)

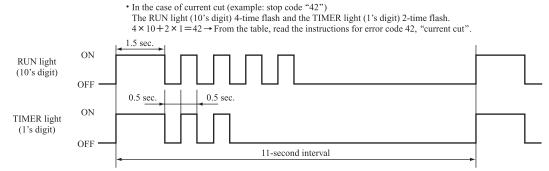

*4: When in the service mode, when the wireless remote control settings (operation mode, fan speed mode, temperature setting) are set as shown in the following table and sent to the air-conditioner unit, the unit switches to display of service data.

(i) Self-diagnosis data

What are Self-diagnosis Data?

These are control data (reasons for stops, temperature at each sensor, wireless remote control information) from the time when there were error displays (abnormal stops) in the indoor unit in the past. Data from up to 5 previous occasions are stored in memory. Data older than the 5th previous occasion are erased. The temperature setting indicates how many occasions previous to the present setting the error display data are and the operation mode and fan speed mode data show the type of data.

Wireless remote control setting		Contouts of submit data			
Operation mode	Fan speed mode	Contents of output data			
MED		Displays the reason for stopping display in the past (error code).			
Cooling	HI	Displays the room temperature sensor temperature at the time the error code was displayed in the past.			
	AUTO	Displays the indoor heat exchanger sensor temperature at the time the error code was displayed in the past.			
	LO	Displays the wireless remote control information at the time the error code was displayed in the past.			
Haatina	MED	Displays the outdoor air temperature sensor temperature at the time the error code was displayed in the past.			
Heating	HI	Displays the outdoor heat exchanger sensor temperature at the time the error code was displayed in the past.			
	AUTO	Displays the discharge pipe sensor temperature at the time the error code was displayed in the past.			

Wireless remote control setting	Indicates the number of occasions previous to the present	
Temperature setting	the error display data are from.	
21°C	1 time previous (previous time)	
22°C	2 times previous	
23°C	3 times previous	
24°C	4 times previous	
25°C	5 times previous	

Only for indoor heat exchanger sensor 2

Wireless remote control setting	Indicates the number of occasions previous to the present	
Temperature setting	the error display data are from.	
26°C	1 time previous (previous time)	
27°C	2 times previous	
28°C	3 times previous	
29°C	4 times previous	
30°C	5 times previous	

(Example)

Wireless remote control setting		ol setting		
Operation mode	Fan speed mode	Temperature setting	Displayed data	
	MED	21°C	Displays the reason for the stop (error code) the previous time an error was displayed.	
		22°C	Displays the reason for the stop (error code) 2 times previous when an error was displayed.	
Cooling		23°C	Displays the reason for the stop (error code) 3 times previous when an error was displayed.	
		24°C	Displays the reason for the stop (error code) 4 times previous when an error was displayed.	
		25°C	Displays the reason for the stop (error code) 5 times previous when an error was displayed.	

(ii) Stop data


Wireless	Wireless remote control setting			
Operation mode	Fan speed mode	Temperature setting	Displayed data	
		21°C	Displays the reason for the stop (stop code) the previous time when the air-conditioner was stopped by protective stop control.	
		22°C	Displays the reason for the stop (stop code) 2 times previous when the air-conditioner was stopped by protective stop control.	
	LO	23°C	Displays the reason for the stop (stop code) 3 times previous when the air-conditioner was stopped by protective stop control.	
			24°C	Displays the reason for the stop (stop code) 4 times previous when the air-conditioner was stopped by protective stop control.
Cooling		25°C	Displays the reason for the stop (stop code) 5 times previous when the air-conditioner was stopped by protective stop control.	
Coomig		26°C	Displays the reason for the stop (stop code) 6 times previous when the air-conditioner was stopped by protective stop control.	
		27°C	Displays the reason for the stop (stop code) 7 times previous when the air-conditioner was stopped by protective stop control.	
		28°C	Displays the reason for the stop (stop code) 8 times previous when the air-conditioner was stopped by protective stop control.	
		29°C	Displays the reason for the stop (stop code) 9 times previous when the air-conditioner was stopped by protective stop control.	
		30°C	Displays the reason for the stop (stop code) 10 times previous when the air-conditioner was stopped by protective stop control.	

(c) Error code, stop code table (Assignment of error codes and stop codes is done in common for all models.)

Number of flas service RUN light		Stop coad or Error coad	Error content	Cause	Occurrence conditions	Error display	Auto recovery
(10's digit)	(1's digit)		N 1				
	OFF 1-time	0	Normal Error of wired remote control	Broken wired remote control wire.	The wired remote control wire Y is open. The wired remote control wires X and Y are reversely connected.	_	_
OFF	flash	01	wiring Can not receive signals for 35	defective indoor unit PCB Power source is faulty	Noise is penetrating the wired remote control lines. The wired remote control or indoor unit PCB is faulty. When 35 seconds passes without	_	
	5-time flash	05	seconds (if communications have recovered)	Power source cables and signal lines are improperly wired. Indoor or outdoor unit PCB are faulty	communications signals from either the outdoor unit or the indoor unit being detected correctly.	0	_
	5-time flash	35	Cooling high pressure control	Cooling overload operation. Outdoor unit fan speed drops. Outdoor heat exchanger sensor is short circuit.	When the outdoor heat exchanger sensor's value exceeds the set value.	(5 times)	0
	6-time flash	36	Compressor overheat 110°C	Refrigerant is insufficient. Discharge pipe sensor is faulty. Service valve is closed.	When the discharge pipe sensor's value exceeds the set value.	(2 times)	0
3-time flash	7-time flash	37	Outdoor heat exchanger temperature sensor is abnormal	Outdoor heat exchanger sensor wire is disconnected. Connector connections are poor. Outdoor unit PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature. Or-55°C higher is detected for 5 seconds continuously within 20 seconds after power ON.	(3 times)	0
	8-time flash	38	Outdoor air temperature sensor is abnormal	Outdoor air temperature sensor wire is disconnected. Connector connections are poor. Outdoor unit PCB is faulty	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature. 07-55°C higher is detected for 5 seconds continuously within 20 seconds after power ON.	(3 times)	0
	9-time flash	39	Discharge pipe temperature sensor is abnormal (anomalous stop)	Discharge pipe sensor wire is disconnected. Connector connections are poor. Outdoor unit PCB is faulty	-25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after intial detection of this anomalous temperature.	(3 times)	0
	OFF	40	Service valve (gas side) closed operation (SRK series only)	Service valve (gas side) closed Outdoor unit PCB is faulty.	If the inverter output current value exceeds the setting value within 80 seconds after the compressor ON in the heating mode, the compressor stops.	(2 times)	0
4-time flash	2-time flash	42	Current cut	Compressor lock. Compressor wiring short circuit. Compressor output is open phase. Outdoor unit PCB is faulty Service valve is closed. Electronic expansion valve is faulty. Compressor is faulty.	Compressor start fails 42 times in succession and the reason for the final failure is current cut.	(2 times)	0
	7-time flash	47	Active filter voltage error	Defective active filter	When the wrong voltage connected for the power source. When the outdoor unit PCB is faulty.	0	_
	8-time flash	48	Outdoor unit's fan motor is abnormal	Outdoor fan motor is faulty. Connector connections are poor. Outdoor unit PCB is faulty	When a fan speed of 75 min ⁻¹ or lower continues for 30 seconds or longer.	(3 times)	0
	1-time flash	51	Short-circuit in the power transistor (high side) Current cut circuit breakdown	Outdoor unit PCB is faulty Power transistor is damaged.	When it is judged that the power transistor was damaged at the time the compressor started.	0	_
	7-time flash	57	Refrigeration cycle system protective control	Service valve is closed. Refrigerant is insufficient.	When refrigeration cycle system protective control operates.	(3 times)	0
5-time flash	8-time flash	58	Current safe	Refrigerant is overcharge. Compressor lock. Overload operation.	When there is a current safe stop during operation.	_	0
	9-time flash	59	Compressor wiring is unconnection Voltage drop Low speed protective control	Compressor wiring is disconnected. Power transistor is damaged. Power source construction is defective. Outdoor unit PCB is faulty Compressor is faulty.	When the current is 1A or less at the time the compressor started. When the power source voltage drops during operation. When the compressor command speed is 1 ower than 32 rps for 60 minutes.	0	0
	OFF	60	Rotor lock	Compressor is faulty. Compressor output is open phase. Electronic expansion valve is faulty. Overload operation. Outdoor unit PCB is faulty	After the compressor starts, when the compressor stops due to rotor lock.	(2 times)	0
6-time flash	1-time flash	61	Connection lines between the indoor and outdoor units are faulty	Connection lines are faulty. Indoor or outdoor unit PCB are faulty	When 10 seconds passes after the power is turned on without communications signals from the indoor or outdoor unit being detected correctly.	0	_
	2-time flash	62	Serial transmission error	Indoor or outdoor unit PCB are faulty Noise is causing faulty operation.	When 7 minute 35 seconds passes without communications signals from either the outdoor unit or the indoor unit being detected correctly.	0	_
	OFF	80	Indoor fan motor is abnormal	Indoor fan motor is faulty. Connector connections are poor. Indoor unit PCB is faulty	When the indoor unit's fan motor is detected to be running at 300min' or lower speed with the fan motor in the ON condition while the air-conditioner is running.	0	_
	2-time flash	82	Indoor heat exchanger temperature sensor is abnormal (anomalous stop)	Indoor heat exchanger sensor wire is disconnected. Connector connections are poor.	When a temperature of -28°C or lower is sensed continuously for 40 minutes during heating operation. (the compressor stops).	0	
8-time flash	4-time flash	84	Anti-condensation control	High humidity condition.	Anti-condensation prevention control is operating.	_	0
	5-time flash	85	Anti-frost control	Indoor unit fan speed drops. Indoor heat exchanger sensor is broken wire.	When the anti-frost control operates and the compressor stops during cooling operation.	_	0
	6-time flash	86	Heating high pressure control	Heating overload operation. Indoor unit fan speed drops. Indoor heat exchanger sensor is short circuit.	When high pressure control operates during heating operation and the compressor stops.	_	0
	7-time flash	87	Drain trouble (SRR series only)	Defective drain pump (DM), broken drain pump wire Anomalous float switch operation Defective indoor unit PCB faulty	If the float switch OPEN is defected for 3 seconds continuously or if float switch connector or wire is disconnected.	(4 times)	_

Notes (1) The number of flashes when in the service mode do not include the 1.5 second period when the lights light up at first (start signal). (See the example shown below.)

• In the case of current cut (example: stop code "42")
The RUN light (10's digit) 4-time flash and the TIMER light (1's digit) 2-time flash.
4×10+2×1=42→ From the table, read the instructions for error code 42, "current cut".

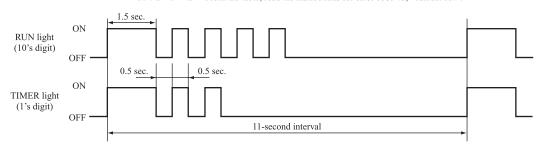

- (2) Error display:
 Is not displayed. (automatic recovery only)
 - \bigcirc Displayed.

If there is a () displayed, the error display shows the number of times that an auto recovery occurred for the same reason

has reached the number of times in ().

If no () is displayed, the error display shows that the trouble has occurred once.

(3) Auto Recovery: — Does not occur

O Auto recovery occurs.

(d) Operation mode, Fan speed mode information tables

(i) Operation mode

Display pattern when in service mode	Operation mode				
RUN light (10's digit)	when there is an abnormal stop				
_	AUTO				
1-time flash	DRY				
2-time flash	COOL				
3-time flash	FAN				
4-time flash	HEAT				


(ii) Fan speed mode

Display pattern when in service mode	Fan speed mode when			
TIMER light (1's digit)	there is an abnormal stop			
_	AUTO			
2-time flash	HI			
3-time flash	MED			
4-time flash	LO			
5-time flash	ULO			
6-time flash	HI POWER			
7-time flash	ECONO			

^{*} If no data are recorded (error code is normal), the information display in the operation mode and fan speed mode becomes as follows.

Mode	Display when error code is normal.
Operation mode	AUTO
Fan speed mode	AUTO

(Example): Operation mode: COOL, Fan speed mode: HI

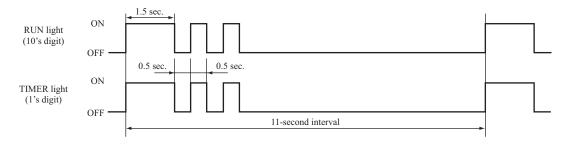

(e) Temperatare information


(i) Room temperature sensor, indoor heat exchanger temperature sensor, outdoor air temperature sensor, outdoor heat exchanger temperature sensor

										U	nit: °C
TIMER light (1's digit) RUN light (10's digit) Buzzer sound			1	2	3	4	5	6	7	8	9
	6	-60	-61	-62	-63	-64					
	5	-50	-51	-52	-53	-54	-55	-56	-57	-58	-59
	4	-40	-41	-42	-43	-44	-45	-46	-47	-48	-49
Yes (sounds for 0.1 second)	3	-30	-31	-32	-33	-34	-35	-36	-37	-38	-39
,	2	-20	-21	-22	-23	-24	-25	-26	-27	-28	-29
	1	-10	-11	-12	-13	-14	-15	-16	-17	-18	-19
	0		-1	-2	-3	-4	-5	-6	-7	-8	-9
	0	0	1	2	3	4	5	6	7	8	9
	1	10	11	12	13	14	15	16	17	18	19
	2	20	21	22	23	24	25	26	27	28	29
	3	30	31	32	33	34	35	36	37	38	39
No	4	40	41	42	43	44	45	46	47	48	49
(does not sound)	5	50	51	52	53	54	55	56	57	58	59
	6	60	61	62	63	64	65	66	67	68	69
	7	70	71	72	73	74	75	76	77	78	79
	8	80	81	82	83	84	85	86	87	88	89
	9	90	91	92	93	94	95	96	97	98	99

^{*} If no data are recorded (error code is normal), the display for each temperature information becomes as shown below.

Sensor name	Sensor value displayed when the error code is normal
Room temperature sensor	-64°C
Indoor heat exchanger temperature sensor	-64°C
Outdoor air temperature sensor	-64°C
Outdoor heat exchanger temperature sensor	-64°C

(Example) Outdoor heat exchanger temperature data: "-9°C"

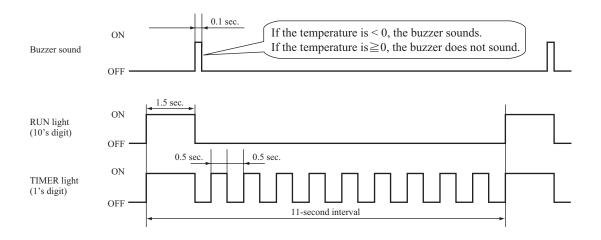

(ii) Discharge pipe temperature sensor


										Ur	nit: °C
TIMER (1's di RUN light (10's digit) Buzzer sound		0	1	2	3	4	5	6	7	8	9
	3	-60	-62	-64							
Yes	2	-40	-42	-44	-46	-48	-50	-52	-54	-56	-58
(sounds for 0.1 second)	1	-20	-22	-24	-26	-28	-30	-32	-34	-36	-38
	0		-2	-4	-6	-8	-10	-12	-14	-16	-18
	0	0	2	4	6	8	10	12	14	16	18
	1	20	22	24	26	28	30	32	34	36	38
	2	40	42	44	46	48	50	52	54	56	58
No	3	60	62	64	66	68	70	72	74	76	78
(does not sound)	4	80	82	84	86	88	90	92	94	96	98
	5	100	102	104	106	108	110	112	114	116	118
	6	120	122	124	126	128	130	132	134	136	138
	7	140	142	144	146	148	150				

* If no data are recorded (error code is normal), the display for each temperature information becomes as shown below.

Sensor name	Sensor value displayed when the error code is normal
Discharge pipe temperature sensor	-64°C

(Example) Discharge pipe temperature data: "122°C"

* In the case of discharge pipe data, multiply the reading value by 2. (Below, $61 \times 2 = \text{``122°C''}$)

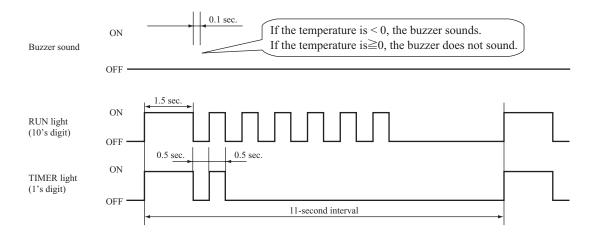

Service data record form


				Model				
Date of inve	estigation							
Machine na	me							
Content of o	complaint				1			
Wireless r	emote contro		Content of displayed da	ata.		Display resul		Display conter
Temperature setting	Operation mode	Fan speed mode	Content of displayed data		Buzzer (Yes/No.)	RUN light (Times)	TIMER light (Times)	
		MED	Error code on previous occasion					
	Cooling	HI	Room temperature sensor on previous occasi-	on				
		AUTO	Indoor heat exchanger sensor 1 on previous of	ccasion				
21		LO	Wireless remote control information on previ	ous occasion				
	Heating MED		Outdoor air temperature sensor on previous or	ecasion				
	ricuting	HI	Outdoor heat exchanger sensor on previous or	ecasion				
		AUTO	Discharge pipe sensor on previous occasion					
26	Cooling	AUTO	Indoor heat exchanger sensor 2 on previous of	ccasion				
		MED	Error code on second previous occasion					
	Cooling	HI	Room temperature sensor on second previous	occasion				
		AUTO	Indoor heat exchanger sensor 1 on second previ	ous occasion				
22		LO	Wireless remote control information on secon	nd previous occasion				
	Hanting	MED	Outdoor air temperature sensor on second pre	vious occasion				
	Heating	HI	Outdoor heat exchanger sensor on second pre-	vious occasion				
		AUTO	Discharge pipe sensor on second previous occ	asion				
27	Cooling	AUTO	Indoor heat exchanger sensor 2 on second occ	asion				
		MED	Error code on third previous occasion					
	Cooling	HI	Room temperature sensor on third previous of	ccasion				
		AUTO	Indoor heat exchanger sensor 1 on third previous	ous occasion				
23	LO		Wireless remote control information on third					
Heating	MED	Outdoor air temperature sensor on third previo	ous occasion					
	Heating	HI	Outdoor heat exchanger sensor on third previous	ous occasion				
	AUTO Discharge pipe senso		Discharge pipe sensor on third previous occas	ion				
28	Cooling	AUTO	Indoor heat exchanger sensor 2 on third occas	ion				
	Cooling HI AUTO		Error code on fourth previous occasion					
			Room temperature sensor on fourth previous	occasion				
			Indoor heat exchanger sensor 1 on fourth prev	rious occasion				
24		LO	Wireless remote control information on fourt	h previous occasion				
	**	MED	Outdoor air temperature sensor on fourth prev	rious occasion				
	Heating	HI	Outdoor heat exchanger sensor on fourth prev	ious occasion				
		AUTO	Discharge pipe sensor on fourth previous occa	nsion				
29	Cooling	AUTO	Indoor heat exchanger sensor 2 on fouth occas	sion				
		MED	Error code on fifth previous occasion					
	Cooling	HI	Room temperature sensor on fifth previous oc	casion				
		AUTO	Indoor heat exchanger sensor 1 on fifth previo	ous occasion				
25		LO	Wireless remote control information on fifth	previous occasion				
		MED	Outdoor air temperature sensor on fifth previo	ous occasion				
	Heating	HI	Outdoor heat exchanger sensor on fifth previo	ous occasion				
		AUTO	Discharge pipe sensor on fifth previous occasi					
30	Cooling	AUTO	Indoor heat exchanger sensor 2 on fifth occasi					
21			Stop code on previous occasion					
22		Stop code on previous occasion Stop code on second previous occasion						
23			Stop code on third previous occasion					
24			Stop code on fourth previous occasion					
25			Stop code on fifth previous occasion					
26	Cooling	LO	Stop code on sixth previous occasion					
27			Stop code on seventh previous occasion					
28			Stop code on eighth previous occasion					
29			Stop code on ninth previous occasion					
30			Stop code on tenth previous occasion					
Judgment					1	I		Examiner

Note (1) In the case of indoor heat exchanger sensor 2, match from 26 to 30 the temperature setting of wireless remote control. (Refor to page 177.)


(7) Inspection procedures corresponding to detail of trouble


Sensor error

Broken sensor wire, connector poor connection

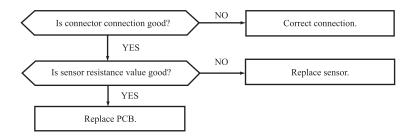


- ♦ Discharge pipe temperature sensor characteristics
- ◆ Temperature sensor characteristics (Room temperature, indoor heat exchanger temperature, outdoor heat exchanger temperature, outdoor air temperature)

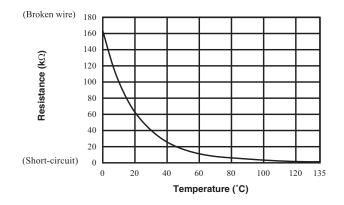

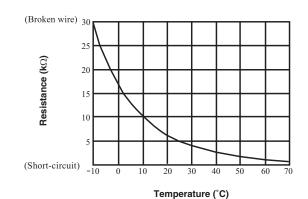


Indoor fan motor error

Defective fan motor, connector poor connection, defective indoor unit PCB

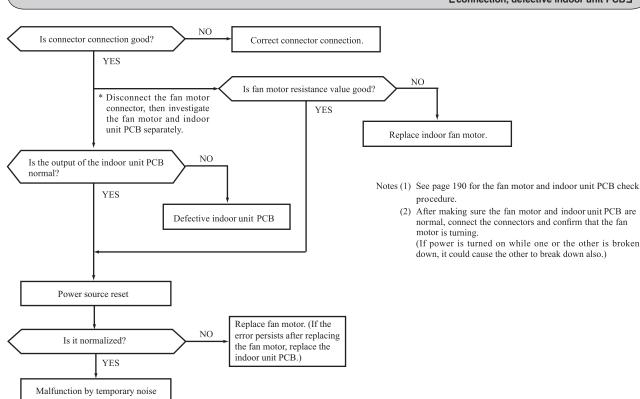


Current cut

Compressor lock, Compressor wiring short-circuit, Compressor output is open phase, Outdoor unit PCB is faulty, Service valve is closed, EEV is faulty, Compressor faulty.

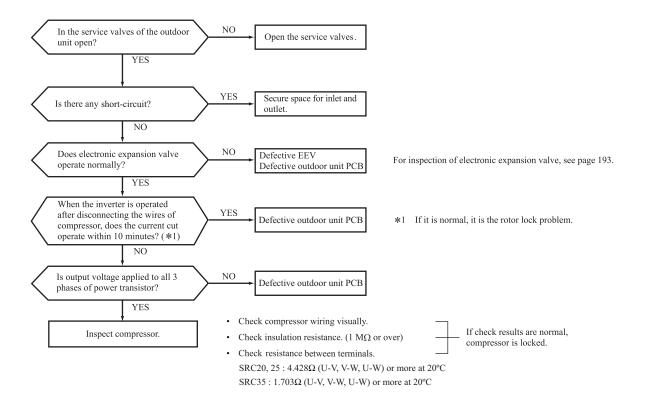


Current safe stop

Overload operation, compressor lock, overcharge

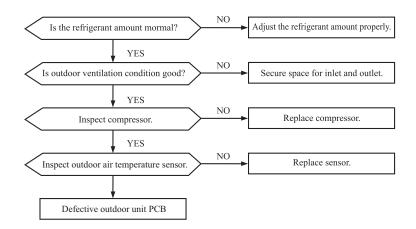


Over heat of compressor

Gas shortage, defective discharge pipe temperature sensor

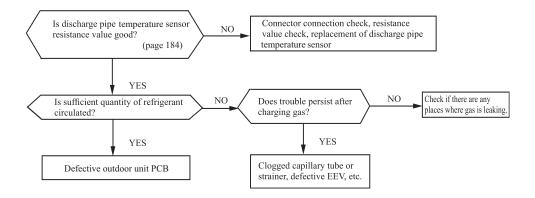


Error of signal transmission

Wiring error including power cable, defective indoor/ outdoor unit PCB

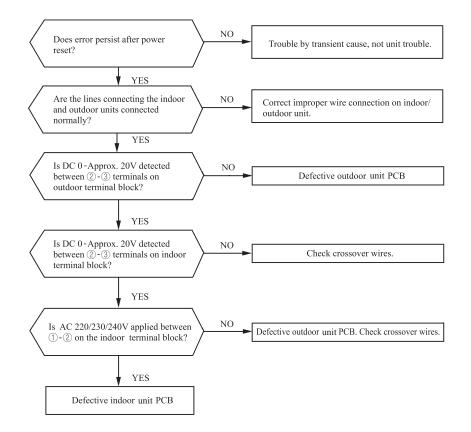

Trouble of outdoor unit

Insufficient refregerant amount, Faulty power transistor, Broken compressor wire Service valve close, Defective EEV, Defective outdoor unit PCB

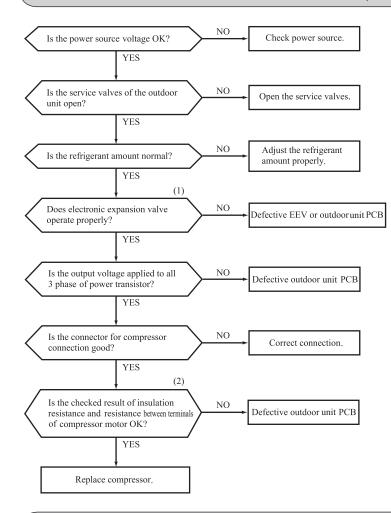

Proper power source voltages are as follows.

(At the power source outlet) AC220V: AC198-242V AC230V: AC207-253V AC240V : AC216-264V

- ◆ Judgment of refrigerant quantity
- (1) Phenomenon of insufficient refrigerant
 - (a) Loss of capacity

NO


- (b) Poor defrost operation (Frost is not removed completely.)
- (c) Longer time of hot keep (5minutes or more) (Normal time: Approx. 1-1 minute and 30 seconds)

Notes (1) For inspection of electronic expansion valve, see page 193.

(2) Check resistance between terminals, see page 185.

Outdoor fan motor error


Defective fan motor, connector poor L connection, defective outdoor unit PCB _

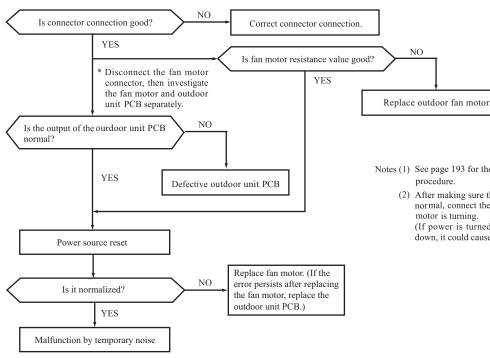

- Notes (1) See page 193 for the fan motor and outdoor unit PCB check
 - (2) After making sure the fan motor and outdoor unit PCB are normal, connect the connectors and confirm that the fan motor is turning.
 - (If power is turned on while one or the other is broken down, it could cause the other to break down also.)


Service valve (gas side) closed operation

Service valve (gas side) closed,
Defective outdoor unit PCB

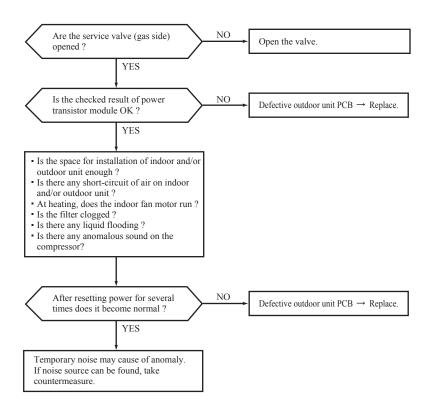

Drain abnormality (SRR series only)

[Drain piping defective,pump defect, float switch, indoor unit PCB]

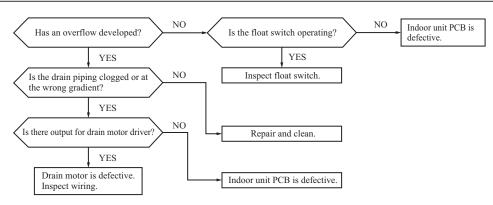

(8) Phenomenon observed after short-circuit, wire breakage on sensor


(a) Indoor unit

Sensor	Operation	Pheno	menon				
Selisor	mode	Short-circuit	Disconnected wire				
Room temperature	Cooling	Release of continuous compressor operation command.	Continuous compressor operation command is not released.				
sensor	Heating	Continuous compressor operation command is not released.	Release of continuous compressor operation command.				
Heat exchanger temperature	Cooling	Freezing cycle system protection trips and stops the compressor.	Continiuous compressor operation command is not released. (Anti-frosting)				
sensor	Heating	High pressure control mode (Compressor stop command)	Hot keep (Indoor fan stop)				
Liumiditu Cooling		Refer to the table below.	Refer to the table below.				
numumy sensor	Humidity sensor ⁽¹⁾ Heating Normal system operation is						

Note (1) SRK35 only.

Humidity sensor operation

	Failure mode	Control input circuit resding	Air-conditioning system operation		
cted	① Disconnected wire				
Disconnected wire	② Disconnected wire	Humidity reading is 0%	Anti-condensation control is not done.		
Dis	12 Disconnected wire				
Short- circuit	① and ② are shot- circuited	Humidity reading is 100%	Anti-condensation control keep doing.		

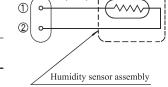

Humidity sensor

Connector (CNF)


Remark: Do not perform a continuity check of the humidity sensor with a tester. If DC current is applied, it could damage the sensor.

(b) Outdoor unit

0	Operation	tion Phenomenon		
Sensor	mode	Short-circuit	Disconnected wire	
Heat exchanger	Cooling	Compressor stop.	Compressor stop.	
emperature sensor Heating		Defrost operation is not performed.	Defrost operation is performed for 10 minutes at approx. 35 minutes.	
Ourdoor air	Cooling	The compressor cannot pick up its speed owing to the current safe so that the designed capacity is not achieved.	Compressor stop.	
temperature sensor	Heating	The compressor cannot pick up its speed owing to the heating overload protection so that the designed capacity is not achieved.	Defrost operation is performed for 10 minutes at approx. 35 minutes.	
Discharge pipe temperature sensor	All modes	Compressor overload protection is disabled. (Can be operated.)	Compressor stop.	

(9) Checking the indoor electrical equipment

(a) Indoor unit PCB check procedure

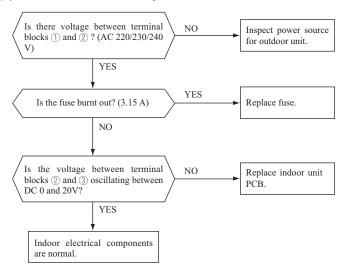


(b) Indoor fan motor check procedure

This is a diagnostic procedure for determining if the indoor fan motor or the indoor unit PCB is broken down.

1) Indoor unit PCB output check

- a) Turn off the power.
- b) Remove the front panel, then disconnect the fan motor lead wire connector.
- c) Turn on the power. If the unit operates when the ON/OFF button is pressed, if trouble is detected after the voltages in the following figure are output for approximately 30 seconds, it means that the indoor unit PCB is normal and the fan motor is broken down.

If the voltages in the following figure are not output at connector pins No. ①, ④ and ⑤, the indoor unit PCB has failed and the fan motor is normal.

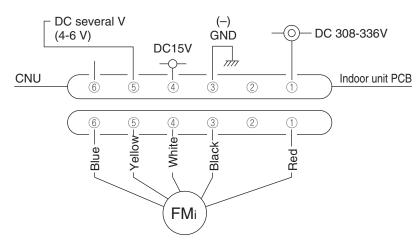

Measuring point	Voltage range when normal
1 - 3	DC 308-336V
4-3	DC 15V
(5) - (3)	DC several V (4-6V)


2) Fan motor resistance check

Measuring point	Resistance when normal
① - ③ (Red - Black)	$20\mathrm{M}\Omega$ or higher
4 - 3 (White - Black)	20 k Ω or higher

Notes (1) Remove the fan motor and measure it without power connected to it.


(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.

(10) How to make sure of wireless remote control

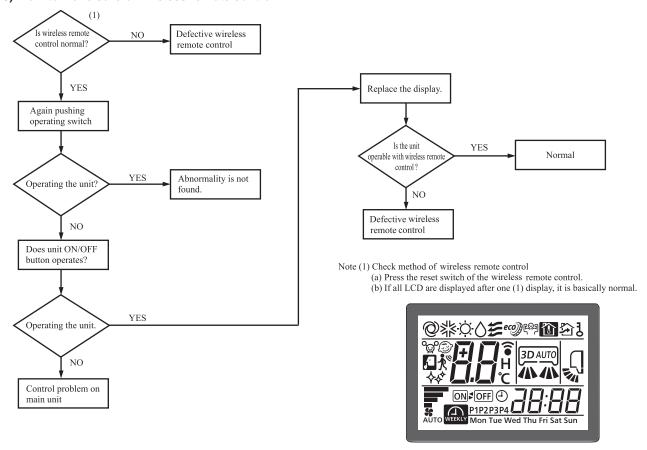


Simplified check method of wireless remote control
 It is normal if the signal transmission section of the wireless remote control emits a whitish light at each transmission on the monitor of digital camera.

(11) Inspection procedure for blown fuse on the indoor and outdoor unit PCB

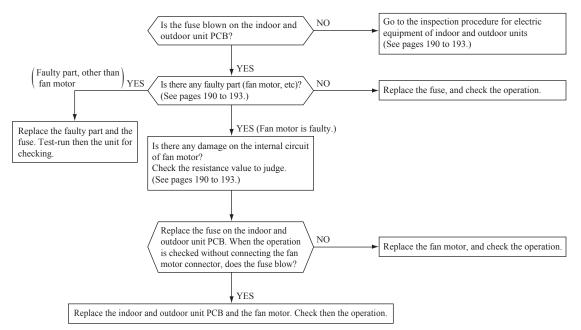

(12) Outdoor unit inspection points Models SRC20ZS-WA, 25ZS-WA2, 35ZS-WA2


♦Check point of outdoor unit

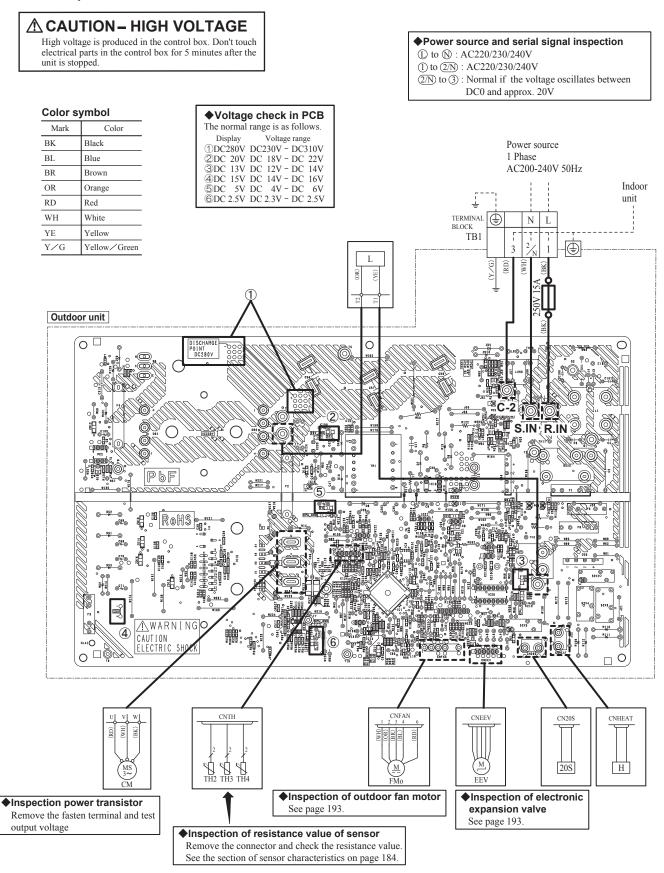

(a) Inspection of electronic expansion valve

Electronic expansion valve operates for approx. 10 seconds after the power on, in order to determine its aperture. Check the operating sound and voltage during the period of time. (Voltage cannot be checked during operation in which only the aperture change occurs.)

- (i) If it is heard the sound of operating electronic expansion valve, it is almost normal.
- (ii) If the operating sound is not heard, check the output voltage.

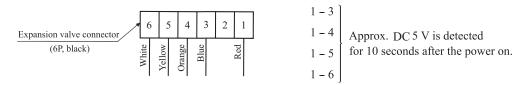

- (iii) If voltage is detected, the outdoor unit PCB is normal.
- (iv) If the expansion valve does not operate (no operating sound) while voltage is detected, the expansion valve is defective.

• Inspection of electronic expansion valve as a separate unit

Measure the resistance between terminals with an analog tester.


Measuring point	Resistance when normal
1-6	
1-5	$46 \pm 4\Omega$
1-4	(at 20°C)
1-3	

(b) Outdoor fan motor check procedure

- When the outdoor unit fan motor error is detected, diagnose which of the outdoor unit fan motor or outdoor unit PCB is defective.
- Diagnose this only after confirming that the indoor unit is normal.
- (i) Outdoor unit PCB output check
 - 1) Turn off the power.
 - 2) Disconnect the outdoor fan motor connector CNFAN.
 - 3) When the indoor unit is operated by inserting the power source plug and pressing (ON) the backup switch for more than 5 seconds, if the voltage of pin No. ② in the following figure is output for 30 seconds at 20 seconds after turning "ON" the backup switch, the outdoor unit PCB is normal but the fan motor is defective.

If the voltage is not detected, the outdoor unit PCB is defective but the fan motor is normal.

Note (1) The voltage is output 3 times repeatedly. If it is not detected, the indoor unit displays the error message.

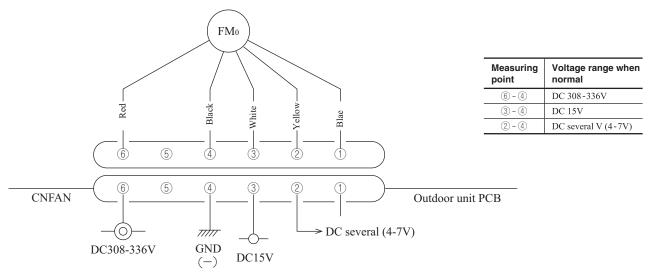

(ii) Fan motor resistance check

Measuring point	Resistance when normal
6 - 4 (Red - Black)	$20~\mathrm{M}\Omega$ or higher
③ - ④ (White - Black)	20 k Ω or higher

Notes (1) Remove the fan motor and measure it without power connected to it.

(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.

11.2 FDTC series

11.2.1 Diagnosing of microcomputer circuit

(1) Selfdiagnosis function

(a) Check Indicator Table

Whether a failure exists or not on the indoor unit and outdoor unit can be know by the contents of remote control error code, indoor unit green LED (power pilot lamp and microcomputer normality pilot lamp) or red LED (check pilot lamp).

(i) Indoor unit

Remote control		Indoor unit control PCB		Location of	2	Renair method	Reference	
Error code	Red LED	Red LED	Green LED (1)	trouble	Description of trouble	Repair method	page	
		Stays OFF	Keeps flashing	_	Normal operation	_	_	
	a. opp	Stays OFF	Stays OFF	Indoor unit power source	Power OFF, broken wire/blown fuse, broken transformer wire	Repair	214	
No-indication	Stays OFF	*	Keeps	Remote control wires	Poor connection, breakage of remote control wire * For wire breaking at power ON, the LED is OFF.	Repair		
		3-time flash	flashing	Remote control	Remote control • Defective remote control PCB		215	
⊕WAI1		Stays OFF	Keeps flashing	Indoor-outdoor units connection wire	Poor connection, breakage of indoor-outdoor units connection wire	remote control Repair	216-220	
				Remote control	Improper setting of master and slave by remote control			
		Stays OFF	* Keeps	Remote control wires (Noise)	Poor connection of remote control signal wire (White) * For wire breaking at power ON, the LED is OFF Intrusion of noise in remote control wire	Repair	222	
<u> </u>		Stays OFF	flashing	Remote control indoor unit control PCB	*• Defective remote control or indoor unit control PCB (defective communication circuit)?	Replacement of remote control or PCB	222	
		2-time flash	Keeps flashing	Indoor-outdoor units connection wire	Poor connection of wire between indoor-outdoor units during operation (disconnection, loose connection) Anomalous communication between indoor-outdoor units by noise, etc.	Repair		
		2-time	Keeps	(Noise)	CPU-runaway on outdoor unit control PCB	Power reset or Repair		
E5		flash	flashing	Outdoor unit control PCB	*• Occurrence of defective outdoor unit control PCB on the way of power source (defective communication circuit)?	Replacement of PCB	223	
				Outdoor unit control PCB	Defective outdoor unit control PCB on the way of power source	Replacement		
		Hush	Hushing	Fuse	• Blown fuse	D. I.		
ЕБ		1-time flash		Indoor heat exchanger tempera- ture sensor	Defective indoor heat exchanger temperature sensor (defective element, broken wire, short-circuit) Poor contact of temperature sensor connector	Replacement, repair of temperature sensor	224	
				Indoor unit control PCB	*• Defective indoor unit control PCB (Defective temperature sensor input circuit)?	Replacement of PCB		
		1-time flash	1-time Keeps temperatu flash flashing Indoor un	Indoor return air temperature sensor	Defective indoor return air temperature sensor (defective element, broken wire, short-circuit) Poor contact of temperature sensor connector	Replacement, repair of temperature sensor	225	
				Indoor unit control PCB	•		220	
	Keeps flashing			Installation or oper- ating condition	Heating over-load (Anomalously high indoor heat exchanger temperature)	Repair		
E8	naoning .	1-time flash		Indoor heat exchanger tempera- ture sensor	Defective indoor heat exchanger temperature sensor (short-circuit)	Replacement of temperature sensor	226	
			Indoor unit control PCB	*- Defective indoor unit control PCB (Defective temperature sensor input circuit)?	Replacement of PCB			
				Drain trouble	Defective drain pump (DM), broken drain pump wire, disconnected connector	Replacement, repair of DM		
		1-time	Keeps	Float switch	Anomalous float switch operation (malfunction)	Repair	227	
E 9		flash	flashing	Indoor unit control PCB	*• Defective indoor unit control PCB (Defective float switch input circuit) *• Defective indoor unit control PCB (Defective DM drive output circuit)?	Replacement of PCB	221	
				Option	Defective option parts (At option anomalous input setting)	Repair		
E 10		Stays OFF	Keeps flashing	Number of con- nected indoor units	When multi-unit control by remote control is performed, the number of units is over	Repair	228	
E IH	Keeps Keeps Address flashing flashing flashing setting error - • • • • • • • • • • • • • • • • • •			Repair	229			
_ ,_		1(2)-time	Keeps	Fan motor	Defective fan motor	Replacement, repair	222	
E 16		flash	flashing	Indoor unit power PCB	Defective indoor unit power PCB	Replacement	230	
<u> </u>	1-time Keeps Indoor unit control PCB - Ir			Improper operation mode setting	Repair	231		
		1(2)-time	Keeps	Fan motor	Indoor fan motor rotation speed anomaly	Replacement, repair	222	
1-time Keeps Indoor unit control Improper operation mode setting		Defective indoor unit power PCB	Replacement	232				
	1	Stays OFF	Keeps	Remote control	Broken wire of remote control temperature sensor	Repair	ı	

Notes (1) Normal indicator lamp (Indoor unit: Green) extinguishes (or lights continuously) only when CPU is anomalous. It keeps flashing in any trouble other than anomalous CPU.

^{(2) *} mark in the description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(ii) Outdoor unit

Remote control		Indoor unit control PC					Reference
Error code	Red LED	Red LED	Green LED	Location of trouble	Description of trouble	Repair method	page
				Installation, operation status	Higher outdoor heat exchanger temperature	Repair	
E35	Stays OF		Keeps flashing	Outdoor heat exchanger temperature sensor	Defective outdoor heat exchanger temperature sensor	Replacement, repair of temperature sensor	234
				Outdoor unit control PCB	*• Defective outdoor unit control PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
				Installation, operation status	Higher discharge temperature	Repair	.
E 36		Stays OFF	Keeps flashing	Discharge pipe temperature sensor	Defective discharge pipe temperature sensor	Replacement, repair of temperature sensor	235
				Outdoor unit control PCB	*• Defective outdoor unit control PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
E37		Stays OFF	Keeps	Outdoor heat exchanger temperature sensor	Defective outdoor heat exchanger temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	236
			flashing	Outdoor unit control PCB	*• Defective outdoor unit control PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
E 38		Stays OFF	Keeps	Outdoor air temperature sensor	Defective outdoor air temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	237
			nasning	Outdoor unit control PCB	*• Defective outdoor unit control PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
E 39	Keeps flashing Stays OFF		Stays OFF Keeps flashing	Discharge pipe temperature sensor	Defective discharge pipe temperature sensor, broken wire or poor connector connection	Replacement, repair of temperature sensor	238
			паѕппд	Outdoor unit control PCB	*• Defective outdoor unit control PCB (Defective temperature sensor input circuit)?	Replacement of PCB	
E48		Stays OFF	Keeps flashing	Installation, operation status	Service valve (gas side) closing operation	Replacement	239
E42		Stays OFF	Keeps flashing	Outdoor unit control PCB, compressor	Current cut (Anomalous compressor over-current)	Replacement of PCB	240•241
			Hashing	Installation, operation status	Service valve closing operation	Repair	
EYT		Stays OFF	Keeps flashing	Outdoor unit control PCB	Defective active filter	Repair PCB replacement	242
E48		Stays OFF	Keeps	Fan motor	Defective fan motor	Replacement	243
		Says Of f	flashing	Outdoor unit control PCB	Defective outdoor unit control PCB	першестен	243
E5 1		Stays OFF	Keeps flashing	Power transistor error (outdoor unit control PCB)	Power transistor error	Replacement of PCB	244
			Keeps	Operation status	Shortage in refrigerant quantity	Repair	
E57		Stays OFF	flashing	Installation status	Service valve closing operation	Service valve opening check	245
E 58	S tays OFF		Keeps flashing	Overload operation Overcharge Compressor locking	Current safe stop	Replacement	246
E59		Stays OFF	Keeps flashing	Compressor, outdoor control PCB	Anomalous compressor startup	Replacement	247
E 60		Stays OFF	Keeps flashing	Compressor	Anomalous compressor rotor lock	Replacement	248
⊕WAIT INSPEC		Stays OFF	Keep flashing	Indoor-outdoor connection wire	Poor connection, breakage of indoor-outdoor unit connection wire	Repair	

Note (1) * mark in the description of trouble means that, in ordinary diagnosis, it cannot identify the cause definitely, and, if the trouble is repaired by replacing the part, it is judged consequently that the replaced part was defective.

(iii) Option control in-use

		Indoor unit	control PCB	Description of trouble Repair method		
Error code	Red LED	Red LED	Green LED		перан тетоо	
E75	Keeps flashing	Stays OFF	Keeps flashing	Communication error (Defective communication circuit on the main unit of SC-SL2NA-E or SC-SL4-AE/BE) ete.	Replacement	

(iv) Display sequence of error codes or inspection indicator lamps

■ Occurrence of one kind of error

Displays are shown respectively according to errors.

■ Occurrence of plural kinds of error

Section	Category of display
Error code on remote control	Displays the error of higher priority (When plural errors are persisting)
Red LED on indoor	E 1≥5>····≥ 10≥532>····E60
control PCB	• Displays the present errors. (When a new error has occurred after the former error was reset.)

■ Error detecting timing

Section	Error description	Error code	Error detecting timing
	Drain trouble (Float switch activated)	E9	Whenever float switch is activated after 30 second had past since power ON.
	Communication error at initial operation	""WAIT"	No communication between indoor and outdoor units is established at initial operation.
	Remote control communication circuit error	ΕI	Communication between indoor unit and remote control is interrupted for more than 2 minutes continuously after initial communication was established.
Indoor	Communication error during operation	E5	Communication between indoor and outdoor units is interrupted for more than 2 minutes continuously after initial communication was established.
indoor	Excessive number of connected indoor units by controlling with one remote control		Whenever excessively connected indoor units is detected after power ON.
	Return air temperature sensor anomaly	Εŋ	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature.
	Indoor heat exchanger temperature sensor anomaly	E6	-50°C or lower is detected for 5 seconds continuously within 60 minutes after initial detection of this anomalous temperature. Or 70°C or higher is detected for 5 seconds continuously.
	Outdoor air temperature sensor anomaly	E 38	-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -55°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.
Outdoor	Outdoor heat exchanger temperature sensor anomaly		-55°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature. Or -55°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.
	Discharge pipe temperature sensor anomaly	E39	-25°C or lower is detected for 5 seconds continuously 3 times within 40 minutes after initial detection of this anomalous temperature.

■ Error log and reset

Error indicator	Memorized error log	Reset
Remote control display	Higher priority error is memorized.	Stop the unit by pressing the ON/OFF switch of remote control.
Red LED on indoor unit control PCB	Not memorized.	• If the unit has recovered from anomaly, it can be operated.

■ Resetting the error log

1) RC-EX3A

• Resetting the memorized error log in the remote control

You touch the buttons in the order of "Menu" — "Service setting" — "Service & Maintenance" — "Service

password" — "Error display" — "Error history" on the TOP screen of remote control. And if you touch

"Delete" — "Yes" button, all error log and anomaly data memorized in the remote control are deleted.

· Resetting the memorized error log in the indoor unit

You touch the buttons in the order of "Menu" → "Service setting" → "Service & Maintenance" → "Service password" → "Error display" → "Error anomaly data" on the TOP screen of remote control.

The remote control transmits error log erase command to the indoor unit when "Yes" button is pressed on the erase anomaly data screen.

Receiving the command, the indoor unit erase the log and answer the status of no error.

2) RC-E5


- Resetting the memorized error log in the remote control

 Holding down "CHECK" button, press "TIMER" button to reset the error log memorized in the remote control.
- Resetting the memorized error log in the indoor unit
 The remote control transmits error log erase command to the indoor unit when "VENTI" button is pressed while holding down "CHECK" button.

Receiving the command, the indoor unit erase the log and answer the status of no error.

(2) Troubleshooting procedure

When any trouble has occurred, inspect as follows. Details of respective inspection method will be described on later pages.

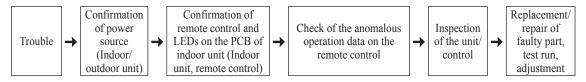

(3) Troubleshooting at the indoor unit

(a) FDTC series

With the troubleshooting, find out any defective part by checking the voltage (AC, DC), resistance, etc. at respective connectors at around the indoor unit PCB, according to the inspection display or operation status of unit (the compressor does not run, fan does not run, the 4-way valve does not switch, etc.), and replace or repair in the unit of following part.

(i) Replacement part related to indoor unit PCB's

Control PCB, power source PCB, temperature sensor (return air, indoor heat exchanger), remote control switch, limit switch, transformer and fuse

Note (1) With regard to parts of high voltage circuits and refrigeration cycle, judge it according to ordinary inspection methods.

(ii) Instruction of how to replace indoor unit control PCB

SAFETY PRECAUTIONS

- Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the replacement in order to protect yourself.
- The precautionary items mentioned below are distinguished into two levels, WARNING and CAUTION.

Both mentions the important items to protect your health and safety so strictly follow them by any means.

⚠ WARNING
 ⚠ CAUTION
 Wrong installation would cause serious consequences such as injuries or death.
 Wrong installation might cause serious consequences depending on circumstances.

After completing the replacement, do commissioning to confirm there are no anomaly

WARNING

- Replacement should be performed by the specialist.
 - If you replace the PCB by yourself, it may lead to serious trouble such as electric shock or fire.
- Replace the PCB correctly according to these instructions.
 - Improper replacement may cause electric shock or fire.
- Shut off the power before electrical wiring work.

Replacement during the applying the current would cause the electric shock, unit failure or improper running.

It would cause the damage of connected equipment such as fan motor,etc.

- Fasten the wiring to the terminal securely, and hold the cable securely so as not to apply unexpected stress on the terminal.
 Loose connections or hold could result in abnormal heat generation or fire.
- Check the connection of wiring to PCB correctly before turning on the power, after replacement.

Defectiveness of replacement may cause electric shock or fire.

CAUTION

- In connecting connector onto the PCB, connect not to deform the PCB. It may cause breakage or malfunction.
- · Insert connecter securely, and hook stopper. It may cause fire or improper running.
- Bundle the cables together so as not to be pinched or be tensioned. It may cause malfunction or electric shock for disconnection or deformation

1) Model FDTC series

PSC012D050 🛕

Replace and set up the PCB according to this instruction.

i) Set to an appropriate address and function using switch on PCB.

Select the same setting with the removed PCB.

ine same setting with the removed r OB.							
Item	Switch	Content of control					
Address	SW2	Plural indoor units control by 1 remote control					
Test run	SW7-1	_	Normal				
1621 IUII	3007-1	0	Operation check/drain pump motor test run				

ii) Set to an appropriate capacity using the model selector switch(SW6).

Select the same capacity with the PCB removed from the unit.

	SW6	-1	-2	-3	-4
ſ	25VH1	0	-	_	_
	35VH1	-	0	-	-




Example setting for 25VH1

- iii) Replace the PCB
 - ① Unscrew terminal (Arrow A) of the "E1" wiring (yellow/green) that is connected to PCB.
 - ② Replace the PCB only after all the wirings connected to the connector are removed.
 - ③ Fix the board such that it will not pinch any of the wires.
 - 4 Switch setting must be same setting as that of the removed PCB.
 - ⑤ Reconnect the wirings to the PCB. Wiring connector color should match with the color of connector of the PCB.
 - 6 Screw back the terminal(Arrow A) of the "E1" wiring, that was removed in 1.

iv) Control PCB

Parts mounting are different by the kind of PCB.

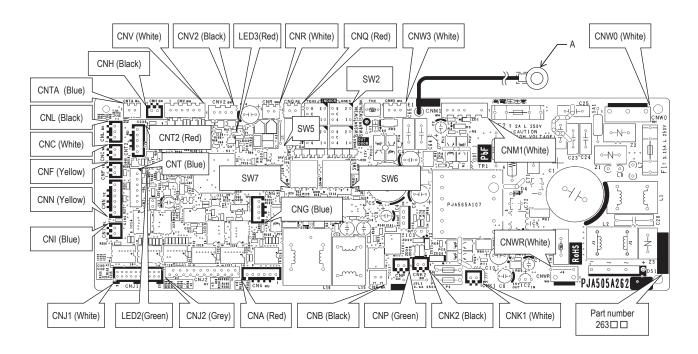

DIP switch setting list

Switch	Description	D	efault setting	Remark	
SW2	Address No. setting at plural indoor u	0		0-F	
SW6-1					
SW6-2	Model selection	As per model		See table 1.	
SW6-3	Widder selection		As per moder		See table 1.
SW6-4					
SW7-1	Test run, drain pump motor	Normal*/Test run	OFF	Normal	
SW7-2	Reserved		OFF		Keep OFF
SW7-3	Reserved	OFF		Keep OFF	
SW7-4	Reserved	OFF		Keep OFF	
JSL1	Superlink terminal spare	Normal*/switch to spare	With		

* Default setting

Table 1: Indoor unit model selection with SW6-1-SW6-4

Switch	25VH1	35VH1
SW6-1	ON	OFF
SW6-2	OFF	ON
SW6-3	OFF	OFF
SW6-4	OFF	OFF

(4) Troubleshooting at the outdoor unit

When troubleshooting the outdoor unit, firstly assess the overview of malfunction and try to presume the cause and the faulty part by checking the error code dispalyed on the remote control and then proceed further inspection and remedy it. Self-diagnosis system by microcomputor on indoor unit PCB can assist to find the cause of malfunction smoothly by making a diagnosis of not only the anomaly of microcomputer, but also the anomaly in power source system, installation space, overload resulting from improper charging amount of refrigerant and etc.

Unless the power is reset, the error log is saved in memory.

After automatical recovering from malfunction, if any another error mode which has a higher priority than the previous error saved in memory occurs, it is overwritten in memory and is displayed.

[Reset of power source]

Be sure to avoid electrical shock, when replacing or checking the outdoor unit control PCB, because some voltage is still retained in the electrolytic capacitor on the PCB even after shutting down the power source to the outdoor unit.

Be sure to start repairing work and reconfirming that voltage has been discharged sufficiently by measuring the voltage (DC) between both terminals of electrolytic capacitor (C58).

(Measurment of voltage may be disturbed by the moisture-proof coating. In such case, remove the coating and measure it by taking care of avoiding electrical shock.)

(a) Module of part to be replaced for outdoor unit control

Outdoor unit PCB, Temperature sensor (of outdoor heat exchanger, discharge pipe, outdoor air), Fuses (for power source and PCB) and Reactor.

(5) Check of anomalous operation data with the remote control

(a) In case of RC-EX3A remote control

[Operating procedure]

- ① On the TOP screen, touch the buttons in the order of "Menu" → "Service setting" → "Service & Maintenance" → "Service password" → "Set" → "Error display" → "Error history".
- ② When only one indoor unit is connected to the remote control, followings will be displayed.
 - 1) When there is any anomaly: "Loading. Wait a while" is displayed, followed by the operation data at the occurrence of anomaly. Contents of display
 - · Error code
 - · Number and data item
 - 2) When there is no anomaly: "No anomaly" is displayed, and this mode is terminated.
- 3 When two or more indoor units are connected to the remote control, followings will be displayed.
 - 1) When there is any anomaly: If the unit having anomaly is selected on the "Select IU" screen, "Loading. Wait a while" is displayed, followed by the operation data at the occurrence of anomaly.

Contents of display

- · Indoor unit No.
- · Error code
- · Number and data item
- 2) When there is no anomaly: "No anomaly" is displayed, ant this mode is terminated.

Note (1) When the number of connected units cannot be shown in a page, select "Next".

- ④ If you press [RUN/STOP] button, the display returns to the TOP screen.
 - O If you touch "Back" button on the way of setting, the display returns to the last precious screen.

Note (1) When two remote controls are used to control indoor units, the check of anomaly operation data can be made on the master remote control only. (It cannot be operated from the slave remote control.)

■ Anomaly operation data (Corresponding data may not be provided depending on models. Such items will not be displayed.)

Number		Data Item			
01	(Operation Mode)				
02	SET TEMP	(Set Temperature)			
03	RETURN AIRc	(Return Air Temperature)			
04	⊟SBNSORt	(Remote Control Temperature Sensor)			
05	thi-Ri_t	(Indoor Heat Exchanger Temperature Sensor / U Bend)			
06	THI-R2t	(Indoor Heat Exchanger Temperature Sensor /Capillary)			
07	THI-R3c	(Indoor Heat Exchanger Temperature Sensor /Gas Header)			
08	I/U FANSPEED	(Indoor Unit Fan Speed)			
09	DEMANDHz	(Frequency Requirements)			
10	ANSWERHz	(Response Frequency)			
11	I/UEEYP	(Pulse of Indoor Unit Expansion Value)			
12	TOTAL I/U RUN	_ H (Total Running Hours of The Indoor Unit)			
13	SUPPLY AIR&	(Supply Air Temperature)			
21	OUTDOORt	(Outdoor Air Temperature)			
22	THO-R1t	(Outdoor Heat Exchanger Temperature Sensor)			
23	THO-R2ზ	(Outdoor Heat Exchanger Temperature Sensor)			
24	COMPHz	(Compressor Frequency)			
25	HPMPa	(High Pressure)			
26	LPMPa	(Low Pressure)			
27	Tdb	(Discharge Pipe Temperature)			
28	COMP BOTTOM <u> </u>	(Comp Bottom Temperature)			
29	CTAMP	(Current)			
30	TARGET SHზ	(Target Super Heat)			
31	orH2	(Super Heat)			
32	TDSHъ	(Discharge Pipe Super Heat)			
33	PROTECTION No	_(Protection State No. of The Compressor)			
34	O/U FANSPEED	(Outdoor Unit Fan Speed)			
35	63H1	(63H1 On/Off)			
36	DEFROST	(Defrost Control On/Off)			
37	TOTAL COMP RUN_	_ H (Total Running Hours of The Compressor)			
38	O/U EEV 1P	(Pulse of The Outdoor Unit Expansion Valve EEVC)			
39	0/U ŒV2P	(Pulse of The Outdoor Unit Expansion Valve EEVH)			

Number 33 details of compressor protection status

No.	Contents of display
"0"	Normal
"1"	Discharge pipe temperature protection control
"2"	Discharge pipe temperature anomaly
"3"	Current safe control of inverter primary current
"4"	High pressure protection control
"5"	High pressure anomaly
"6"	Low pressure protection control
"7"	Low pressure anomaly
"8"	Anti-frost prevention control
"9"	Current cut
"10"	Power transistor protection control
"11"	Power transistor anomaly (Overheat)
"12"	Compression ratio control
"13"	Spare
"14"	Dewing prevention control
"15"	Current safe control of inverter secondary current
"16"	Stop by compressor rotor lock
"17"	Stop by compressor startup failure
"18"	Active filter anomaly

Note(1) Operation data display on the remote control.

·Data are dispalyed until canceling the protection control.

· In case of multiple protections controlled, only the younger No. is displayed Note(2) Common item.

① In heating mode.

During protection control by the command signal for reducing compressor frequency from indoor unit, No. "4" is displayed.

2 In cooling and dehumidifying mode.

During protection control by the command signal for reducing compressor frequency from indoor unit, No. "8" is displayed.

(b) In case of RC-E5 remote control

Operation data can be checked with remote control unit operation.

- ① Press the CHECK button. The display change "OPER DATA
- 2 Press the (SET) button while "OPER DATA displayed.
- 3 When only one indoor unit is connected to remote control, "DATA LOADING" is displayed (blinking indication during data

Next, operation data of the indoor unit will be displayed. Skip to step ⑦.

4 When plural indoor units is connected, the smallest address number of indoor unit among all connected indoor unit is displayed.

[Example]:

1

- " ♦ SELECT I/U" (blinking 1 seconds) → " I/U000 blinking.
- ⑤ Select the indoor unit number you would like to have data displayed with the | \bullet | button.
- ⑥ Determine the indoor unit number with the O (SET) button. (The indoor unit number changes from blinking indication to continuous indication)
 - "I/U000" (The address of selected indoor unit is blinking for 2 seconds.)

"DATA LOADING" (A blinking indication appears while data loaded.) Next, the operation data of the indoor unit is indicated.

Number		Data Item
01	46	(Operation Mode)
02	SET TEMP°c	(Set Temperature)
03	RETURN AIR_్ర	(Return Air Temperature)
04	ലSENSORt	(Remote Control Temperature Sensor)
05	THI-R1ზ	(Indoor Heat Exchanger Temperature Sensor / U Bend)
06	THI-R2c	(Indoor Heat Exchanger Temperature Sensor /Capillary)
07	THI-R36	(Indoor Heat Exchanger Temperature Sensor /Gas Header)
08	I/U FANSPEED	(Indoor Unit Fan Speed)
09	DEMANDHz	(Frequency Requirements)
10	ANSWERHz	(Response Frequency)
11	I/UEEVP	(Pulse of Indoor Unit Expansion Value)
12	TOTAL I/U RUN	$_{ m H}$ (Total Running Hours of The Indoor Unit)
21	OUTDOORt	(Outdoor Air Temperature)
22	THO-R1c	(Outdoor Heat Exchanger Temperature Sensor)
23	THO-R2c	(Outdoor Heat Exchanger Temperature Sensor)
24	COMPHz	(Compressor Frequency)
25	HPMPa	(High Pressure)
26	LPMPa	(Low Pressure)
27	Tdc	(Discharge Pipe Temperature)
28	COMP BOTTOM₺	(Comp Bottom Temperature)
29	CTAMP	(Current)
30	TARGET SH°C	(Target Super Heat)
31	SHt	(Super Heat)
32	TDSHъ	(Discharge Pipe Super Heat)
33	PROTECTION No	(Protection State No. of The Compressor)
34	O/UFANSPEED	(Outdoor Unit Fan Speed)
35	63H1	(63H1 On/Off)
36	DEFROST	(Defrost Control On/Off)
37	TOTAL COMP RUN_	$\ \ \ \ \ \ \ \ \ \ \ \ \ $
38	0/U EEV1P	(Pulse of The Outdoor Unit Expansion Valve EEVC)
39	D/U EEV2P	$(Pulse\ of\ The\ Outdoor\ Unit\ Expansion\ Valve\ EEVH)$

- \odot Upon operation of the $|\triangle|$ $|\nabla|$ button, the current operation data is displayed in order from data number 01. The items displayed are in the above table.
 - *Depending on models, the items that do not have corresponding data are not displayed.
- ® To display the data of a different indoor unit, press the AIR CON No. button, which allows you to go back to the indoor unit selection screen.
- Pressing the OON/OFF button will stop displaying data.

Pressing the (RESET) button during remote control unit operation will undo your last operation and allow you to go back to the previous screen.

⊙ If two (2) remote controls are connected to one (1) inside unit, only the master control is available for trial operation and confirmation of operation data. (The slave remote control is not available.)

Number 33 details of compressor protection status

INUITIL	iei 33 detalis di colliptessoi protectio
No.	Contents of display
"0"	Normal
"1"	Discharge pipe temperature protection control
"2"	Discharge pipe temperature anomaly
"3"	Current safe control of inverter primary current
"4"	High pressure protection control
"5"	High pressure anomaly
"6"	Low pressure protection control
"7"	Low pressure anomaly
"8"	Anti-frost prevention control
"9"	Current cut
"10"	Power transistor protection control
"11"	Power transistor anomaly (Overheat)
"12"	Compression ratio control
"13"	Spare
"14"	Dewing prevention control
"15"	Current safe control of inverter secondary current
"16"	Stop by compressor rotor lock
"17"	Stop by compressor startup failure
"18"	Active filter anomaly

Note(1) Operation data display on the remote control.

 Data are dispalyed until canceling the protection control.
 In case of multiple protections controlled, only the younger No. is displayed. Note(2) Common item.

1 In heating mode.


During protection control by the command signal for reducing compressor frequency from indoor unit, No. "4" is displayed.

In cooling and dehumidifying mode.


During protection control by the command signal for reducing compressor frequency from indoor unit, No. "8" is displayed.

(6) Inverter checker for diagnosis of inverter output

- Checking method
 - 1) Setup procedure of checker
 - a) Power OFF (Turn off the breaker).
 - b) Remove the terminal cover of compressor and disconnect the wires (U, V, W) from compressor.
 - c) Connect the wires U (Red), V (White) and W (Black) of the checker to the terminal of disconnected wires (U, V, W) from compressor respectively.
 - 2) Operation for judgment
 - a) Power ON and start check operation on cooling or heating mode.
 - b) Check ON/OFF status of 6 LED's on the checker.
 - c) Judge the PCB by ON/OFF status of 6 LED's on the checker.

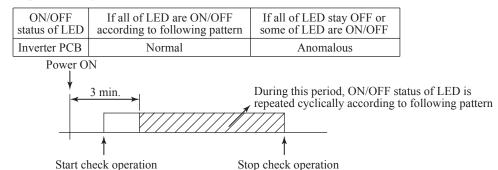


d) Stop check operation within about 2 minutes after starting check operation.

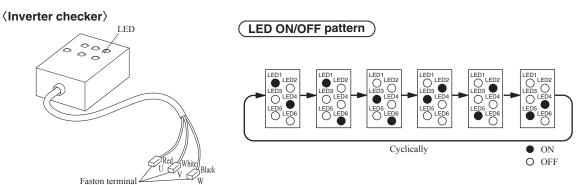

Connect to the terminal of the wires which are disconnected from compressor.

(7) Outdoor unit inspection points Models SRC25ZS-WA2, 35ZS-WA2

♦Check point of outdoor unit

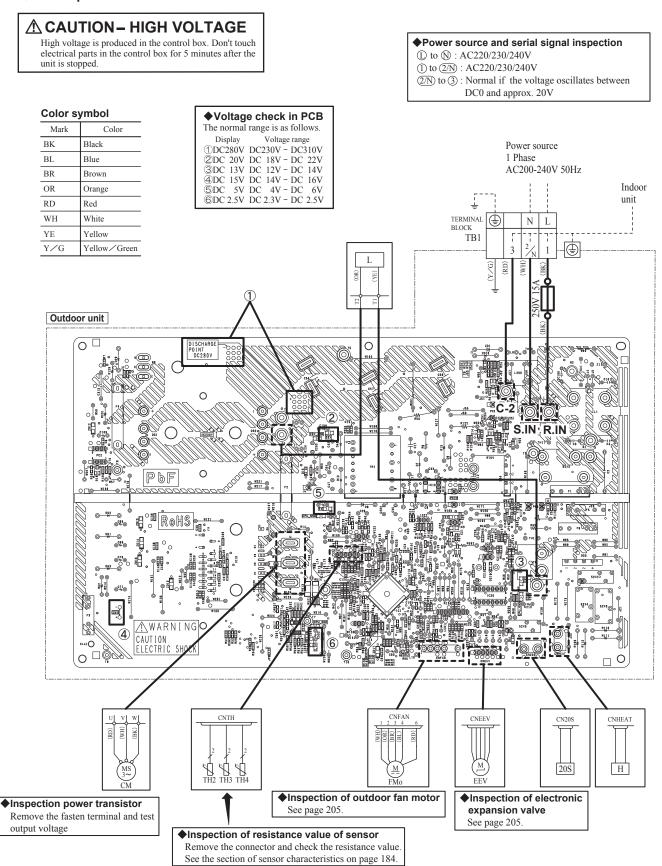

(a) Inspection of electronic expansion valve

Electronic expansion valve operates for approx. 10 seconds after the power on, in order to determine its aperture. Check the operating sound and voltage during the period of time. (Voltage cannot be checked during operation in which only the aperture change occurs.)

- (i) If it is heard the sound of operating electronic expansion valve, it is almost normal.
- (ii) If the operating sound is not heard, check the output voltage.



- (iii) If voltage is detected, the outdoor unit PCB is normal.
- (iv) If the expansion valve does not operate (no operating sound) while voltage is detected, the expansion valve is defective.

• Inspection of electronic expansion valve as a separate unit

Measure the resistance between terminals with an analog tester.


Measuring point	Resistance when normal
1-6	
1-5	$46\pm4\Omega$
1-4	(at 20°C)
1-3	

(b) Outdoor fan motor check procedure

- When the outdoor fan motor error is detected, diagnose which of the outdoor fan motor or outdoor unit PCB is defective.
- Diagnose this only after confirming that the indoor unit is normal.
- (i) Outdoor unit PCB output check
 - 1) Turn off the power.
 - 2) Disconnect the outdoor fan motor connector CNFAN.
 - 3) When the indoor unit is operated by inserting the power source plug and pressing (ON) the backup switch for more than 5 seconds, if the voltage of pin No. ② in the following figure is output for 30 seconds at 20 seconds after turning "ON" the backup switch, the outdoor unit PCB is normal but the fan motor is defective.

If the voltage is not detected, the outdoor unit PCB is defective but the fan motor is normal.

Note (1) The voltage is output 3 times repeatedly. If it is not detected, the indoor unit displays the error message.

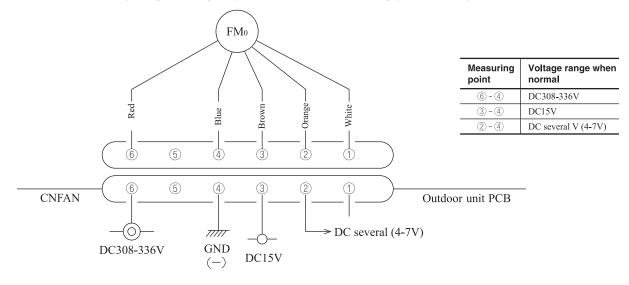

(ii) Fan motor resistance check

Measuring point	Resistance when normal
6 - 4 (Red - Blue)	$20 \ \mathrm{M}\Omega$ or higher
③ - ④ (Brown - Blue)	20 k Ω or higher

Notes (1) Remove the fan motor and measure it without power connected to it.

(2) If the measured value is below the value when the motor is normal, it means that the fan motor is faulty.

11.2.2 Troubleshooting flow

(1) List of troubles

Remote control display	Description of trouble	Reference page
None	Operates but does not cool.	207
None	Operates but does not heat.	208
None	Earth leakage breaker activated	209
None	Excessive noise/vibration (1/3)	210
None	Excessive noise/vibration (2/3)	211
None	Excessive noise/vibration (3/3)	212
None	Louver motor failure	213
None	Power source system error (Power source to indoor unit control PCB)	214
None	Power source system error (Power source to remote control)	215
INSPECT I/U	INSPECT I/U (When 1 or 2 remote controls are connected)	216
INSPECT I/U	INSPECT I/U (Connection of 3 units or more remote controls)	217
⊕WAIT⊕	Communication error at initial operation	218-220
None	No display	221
E1	Remote control communication circuit error	222
E5	Communication error during operation	223
E6	Indoor heat exchanger temperature sensor anomaly	224
E7	Return air temperature sensor anomaly	225
E8	Heating overload operation	226
E9	Drain trouble	227
E10	Excessive number of connected indoor units (more than 17 units) by controlling with one remote control	228
E11	Address setting error of indoor units	229
E16	Indoor fan motor anomaly	230
E19	Indoor unit operation check, drain pump motor check setting error	231
E20	Indoor fan motor rotation speed anomaly	232
E28	Remote control temperature sensor anomaly	233
E35	Cooling overload operation	234
E36	Discharge pipe temperature error	235
E37	Outdoor heat exchanger temperature sensor anomaly	236
E38	Outdoor air temperature sensor anomaly	237
E39	Discharge pipe temperature sensor anomaly	238
E40	Service valve (gas side) closing operation	239
E42	Current cut	240-241
E47	Active filter voltage error	242
E48	Outdoor fan motor anomaly	243
E51	Power transistor anomaly	244
E57	Insufficient refrigerant amount or detection of service valve closure	245
E58	Current safe stop	246
E59	Compressor startup failure	247
E60	Compressor rotor lock error	248

(2) Troubleshooting

· ,				<u> </u>
Error code	LED	Green	Red	Content
Remote control: None	Indoor	Keeps flashing	Stays OFF	Operates but does not cool

1. Applicable model


All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Poor compression of compressor
- Faulty expansion valve operation

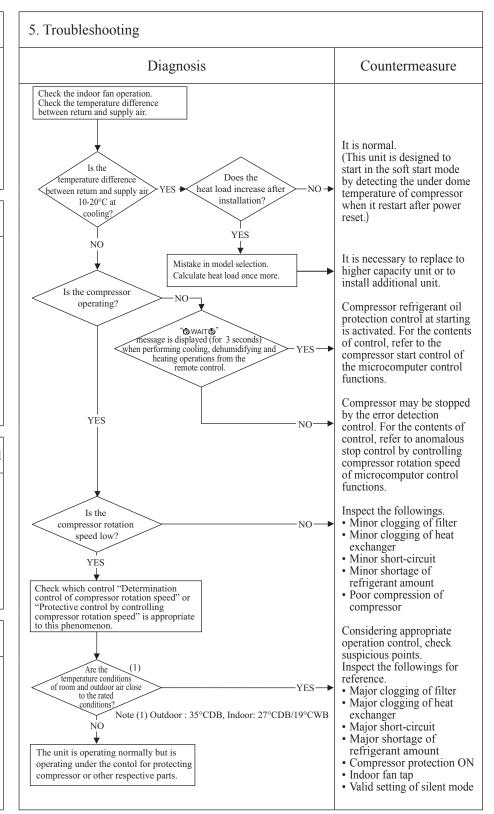

				<u></u>
Error code	LED	Green	Red	Content
Remote control: None	Indoor	Keeps flashing	Stays OFF	Operates but does not heat

1. Applicable model


All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Faulty 4-way valve operation
- Poor compression of compressor
- Faulty expansion valve operation

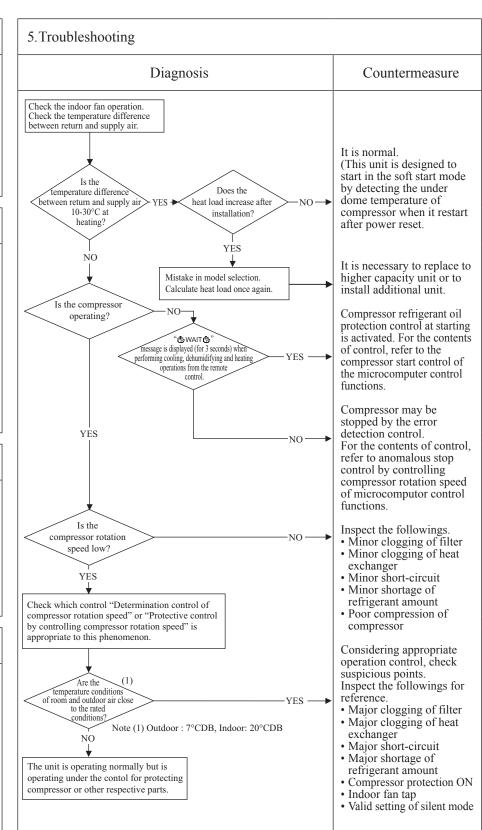


				<u></u>
Error code	LED	Green	Red	Content
Remote control: None	Indoor	Stays OFF	Stays OFF	Earth leakage breaker activated

1. Applicable model All models Are OK the compressor? YĖS 2. Error detection method Is insulation

3. Condition of error displayed

4. Presumable cause

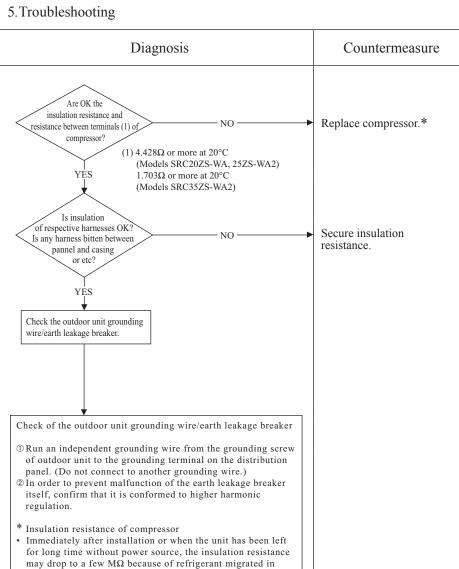

· Defective compressor

• Noise

Note:

When the earth breaker is activated at lower insulation

① When power ON, crankcase heater heat up compressor and

Since the unit is equipped with inverter, it is necessary to use

components conformed to higher harmonic regulation in order

evaporate the refrigerant migrated in the compressor. 2 Check if the earth leakage breaker is conformed to higher

to prevent malfunction of earth leakage breaker.

resistance, check the following points.

harmonic regulation or not.

the compressor.

				<u> </u>
Error code	LED	Green	Red	Content
Remote control: None	Indoor	_	_	Excessive noise/vibration (1/3)

1. Applicable model


All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- ① Improper installation work
 - Improper anti-vibration work at installation
 - Insufficient strength of mounting face
- 2 Defective product
 - Before/after shipping from factory
- ③ Improper adjustment during commissioning
 - Excess/shortage of refrigerant, etc.

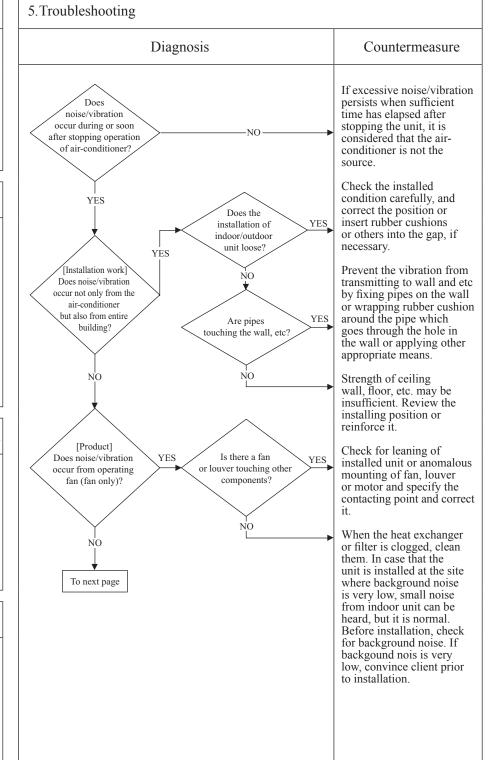


				<u> </u>
Error code	LED	Green	Red	Content
Remote control: None	Indoor	I	-	Excessive noise/vibration (2/3)

1.Applicable model All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause

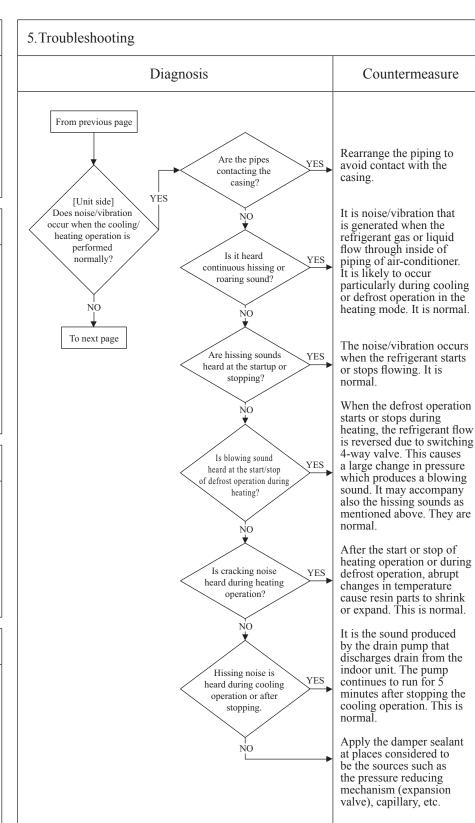

					1)
Error code	LED	Green	Red	Content	
Remote control: None	Indoor	_	_	Excessive noise/vibration (3/3)	

1. Applicable model 5. Troubleshooting All models Diagnosis Countermeasure From previous page If insufficient cooling/ heating problem happens due to anomalous operating conditions at cooling/ heating, followings are Adjustment during commissioning] Does noise/vibration occur when the cooling/heating operation is in 2. Error detection method anomalous condition? suspicious. Overcharge of refrigerantInsufficient charge of refrigerant • Intrusion of air, nitrogen, etc. In such occasion, it is necessary to recover refrigerant, vacuum-dry and recharge refrigerant. * Since there could be many causes of noise/ vibration, the above do not cover all. In such case, check the conditions when, where, 3. Condition of error displayed how the noise/vibration occurs according to following check point. • Indoor/outdoor unit · Cooling/heating/fan mode • Startup/stop/during operation • Operating condition (Indoor/outdoor air temperatures, pressure) • Time it occurred • Operation data retained by the remote control 4. Presumable cause such as compressor rotation speed, heat exchanger temperature, EEV opening degree, etc. • Tone (If available, record the noise) • Any other anomalies

							<u></u>)
	9	Error code	LED	Green	Red	Content		
		Remote control: None	Indoor	Keeps flashing	Stays OFF		Louver motor failure	
l	J							

1.Applicable model 5. Troubleshooting All models Diagnosis Countermeasure ▲ Check at the indoor unit side. Operate after waiting for more than 1 minute. Does the louver operate at the power NO 2. Error detection method on? Is LM wiring broken? NO Repair wiring. YES YES Defective indoor unit Is LM locked? NO control PCB → Replace. Replace LM. YES -Is the louver operable with the remote control? YES Normal 3. Condition of error displayed Adjust LM lever and then check again. NO LM: louver motor 4. Presumable cause • Defective LM • LM wire breakage • Faulty indoor unit control

_					<u> </u>
(Error code	LED	Green	Red	Power source system error
	Remote control: None	Indoor	Stays OFF	Stays OFF	(Power source to indoor unit control PCB)

1.Applicable model


All models

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Misconnection or breakage of connecting wires
- · Blown fuse
- Faulty transformer
- Faulty indoor unit control PCB
- · Broken harness
- Faulty outdoor unit control PCB (Noise filter)

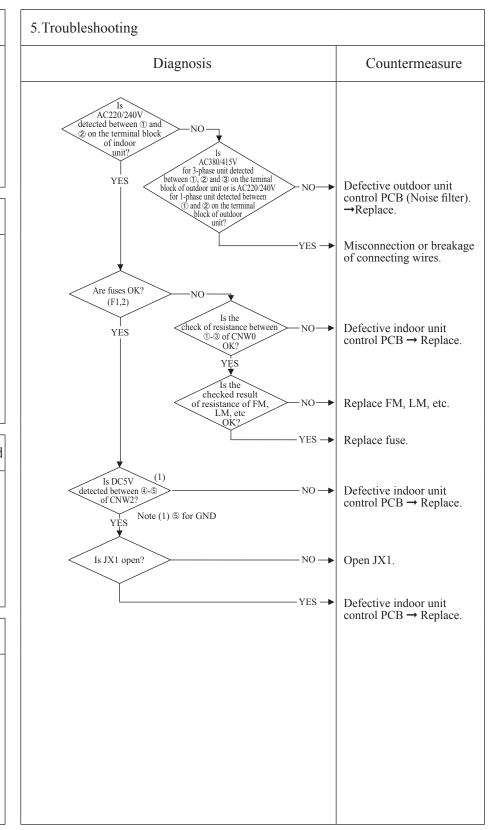

				<u> </u>
Error code	LED	Green	Red	Content Dayyor course system error
Remote control: None	Indoor	Keeps flashing	Stays OFF	Power source system error (Power source to remote control)

1. Applicable model 5. Troubleshooting All models Diagnosis Countermeasure Is the connection of the remote control's wiring OK? Correct it. X (white), Y (black) → Insert connector securely. YĖS 2. Error detection method Does the voltage between X and Y in the indoor terminal block exceed 15 VDC? -YES Remove wire for Power source reset the remote control Does resetting the power source return Remote control wire breakage? Replace remote control. YES Malfunction by temporary 3. Condition of error displayed Does the re-measured voltage between X and Y Defective indoor unit NO in the indoor terminal block control PCB→Replace. exceed 15 VDC? Remote control wire YES breakage? Replace remote control. 4. Presumable cause • Remote control wire breakage/short-circuit • Defective remote control • Malfunction by noise • Broken harness • Faulty indoor unit control PCB

					Ω
(Error code	LED	Green	Red	Content
	Remote control: INSPECT I/U	Indoor	Keeps flashing	Stays OFF	INSPECT I/U (When 1 or 2 remote controls are connected)

All models

2. Error detection method


Communication between indoor unit and remote control is disabled for more than 30 minutes after the power on.

3. Condition of error displayed

Same as above

4. Presumable cause

- Improper setting
- Surrounding environment
- Defective remote control communication circuit
- Faulty indoor unit control PCB

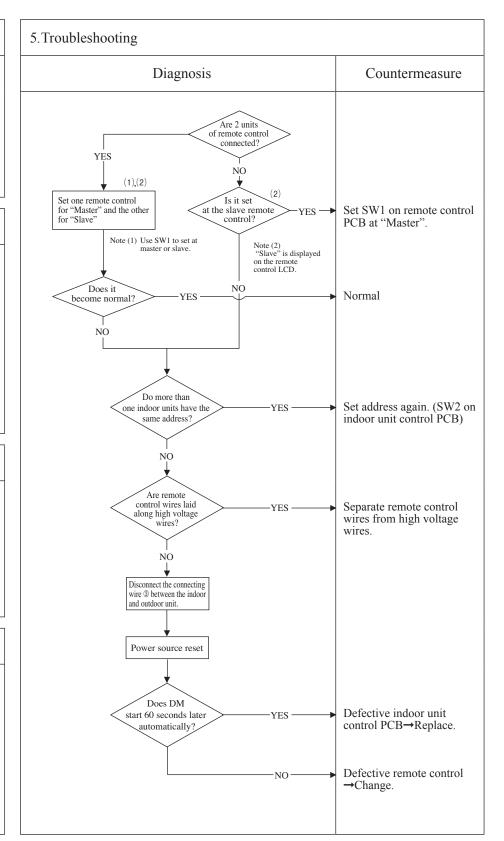

Note: If any error is detected 30 minutes after displaying "WAIT "on the remote control, the display changes to "INSPECT I/U".

					Ω
(Error code	LED	Green	Red	Content
	Remote control: INSPECT I/U	Indoor	Keeps flashing	Stays OFF	INSPECT I/U (Connection of 3 units or more remote controls)

All models

2. Error detection method


Indoor unit cannot communicate for more than 30 minutes after the power on with remote control.

3. Condition of error displayed

Same as above

4. Presumable cause

- Improper setting
- Surrounding environment
- Defective remote control communication circuit
- Faulty indoor unit control PCB
- Faulty outdoor unit control PCB

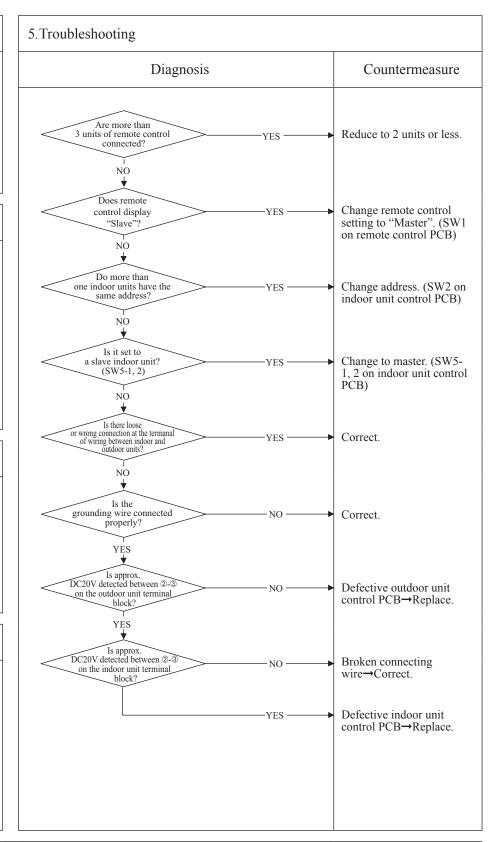

Note: If any error is detected 30 minutes after displaying "WAIT "on the remote control, the display changes to "INSPECT I/U".

Error code	LED	Green	Red	Content Communicati	on arror at	
Remote control: WAIT	Indoor	Keeps flashing	Stays OFF	initial operat		
1.Applicable model	5.Tro	ublesho	oting			
All Models			-	Diagnosis	Countermeasure	
When the remote control LCD displays " WAIT " 2						
minutes after the power on	di	ne remote c splays " minutes aft	Normal			
2.Error detection method	₹		Is blown e fuse (20A) on init control?	the outdoor YES Replace the power source fuse. See next page.		
		green L	Defective indoor unit control PCB→Replace.			
		connected the indo	Correct connection wires between indoor and outdoor units.			
	<		Is approx. ected between @ outdoor unit term block?		Defective outdoor unit PCB→Replace.	
3. Condition of error displayed		DC20V do	Is approx. etected between indoor unit terming block?	©-® NO NO	Defective connection wir (broken wire) Noise	
				YES —	Defective indoor unit control PCB→Replace.	
4. Presumable cause						

Note: If any anomaly is detected during communication, the error code E5 is displayed. (Outdoor unit red LED flashes twice.) Inspection procedure is same as above. (Excluding matters related to connection) When the power source is reset after the occurrence of E5, the LED will display " WAIT " if the anomaly continues. If the breaker ON/OFF is repeated in a short period of time (within 1 minute), " WAIT " may be displayed. In such occasion, turn the breaker off and wait for 3 minutes.

• Blown fuse

model

PCB

Faulty outdoor unit PCBBlown fuse on single phase

• Faulty indoor unit control

Defective remote controlBroken remote control wire

LED Green Red Content Communication error at Initial energtion (2/3)						<u> </u>	(ك
Domesto control, di NAZALTII	(Error code	LED	Green	Red	Content Communication error at	
Indoor Keeps flashing Stays OFF 1111111 Operation (2/3)		Remote control: @WAIT	Indoor	Keeps flashing	Stays OFF		

All Models

When the fuse is blown, the method to inspect inverter before replacing the power source fuse

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Blown fuse
- Faulty outdoor unit PCB
 Faulty reactor

Diagnosis	Countermeasure
Is there a short-circuit between phases of outdoor unit PCB? Replace the outdoor unit PCB Replace the outdoor unit PCB Replace the outdoor unit PCB Is reactor the anomalous? YES Replace the reactor.	_

Note:			

Error code	LED	Green	Red	Communication error at	
Remote control: @WAIT	Indoor	Keeps flashing	Stays OFF	1	

All Models

When the remote control display is extinguished after the power on.

2. Error detection method

3. Condition of error displayed

4. Presumable cause

- Blown fuse
- Faulty indoor unit control
- Defective remote controlWire breakage on remote control
- Faulty outdoor unit PCB

5. Troubleshooting	
Diagnosis	Countermeasure
Remote control display is extinguished after the power on.	
green LED on the indoor unit flashing? NO Is the fuse on the indoor unit power PCB OK? YES	Replace fuse.
YES Is approx. DC10-11V detected between wires at the remote control side after disconnecting the remote control?	Short-circuit on remote control wire Defective remote control
Are wires connected properly between the indoor and the outdoor units? YES YES	Correct wires.
Is approx. DC20V detected between ②N-③ on the outdoor unit terminal block?	Defective outdoor unit PCB→Replace.
YES Is approx DC20V detected between ② -③ on the indoor unit terminal block?	Defective connection wire. (Broken wire) Noise.
YES—	Defective indoor unit control PCB→Replace.

Note:			

Error code	LED	Green	Red	Content
Remote control: None	Indoor	Stays OFF	Stays OFF	No display
		emote control: None	emote control: None	emote control: None

1. Applicable model 5. Troubleshooting All models Diagnosis Countermeasure Remote control does not display anything after the power on. higher detected at remote control connection terminals? Defective remote control ΝÖ 2. Error detection method Is DC10V or higher detected on remote control wires if the remote control is Defective remote control YES · removed? NO Are wires connected properly between the indoor/outdoor units? Defective connecting wire Defective remote control NO wire (Short-circuit, etc.) YES Defective indoor unit control PCB→Replace. 3. Condition of error displayed 4. Presumable cause • Faulty indoor unit control PCB • Defective remote control • Broken remote control wire

					M. M. Marian M. M. Marian M. M. Marian M.
C	Error code	LED	Green	Red	Content
	Remote control: E1	Indoor Ke	V 0 . 1	Ct. OFF	Remote control
			Keeps flashing	Stays OFF	communication circuit error

1. Applicable model 5. Troubleshooting All models Diagnosis Countermeasure Is it possible to reset normally by the power reset? Malfunction by noise YES Check peripheral environment. NO Turn SW7-1 to OFF \rightarrow ON. 2. Error detection method Remove the wire 3 connecting between indoor/outdoor units. When normal communication Power source reset between the remote control and the indoor unit is interrupted for more than 2 minutes. Does the drain pump restart automatically (Detectable only with the Defective indoor unit control remote control) 1 minute later? PCB → Replace. NO Connect the wire 3 connecting between indoor/outdoor units. Move to E5. (Communication error during operation) Check. 3. Condition of error displayed Same as above

4. Presumable cause

- Defective communication circuit between remote control-indoor unit
- Noise
- Defective remote controlFaulty indoor unit control PCB

Note: If the indoor unit cannot communicate normally with the remote control for 180 seconds, the indoor unit PCB starts to reset automatically.

				<u> </u>
Error code	LED	Green	Red	Content
Remote control: E5	Indoor	Keeps flashing	2-time flash	Communication error during operation

All models

2. Error detection method

When normal communication between indoor and outdoor unit is interrupted for more than 2 minutes.

3. Condition of error displayed

Same as above is detected during operation.

4. Presumable cause

- Unit No. setting error
- Broken remote control wire
 Faulty remote control wire connection
 Faulty outdoor unit control PCB

Diagnosis	Countermeasu
•In case that the outdoor unit red LED flashes 2-time	
Note (1) Inspect faulty connections (disconnection, looseness) on the outdoor unit terminal block.	
Is the	
wires at the outdoor unit side OK?	Repair signal wires.
YES Note (2) Check for faulty connection or breakage of	
Is the signal wires between indoor-outdoor units.	
connection of signal wires between indoor-outdoor NO	Repair signal wires.
units OK?	
YES	
Power source reset	
1 ower source reset	
↓	
Has the remote	
control LCD returned to NO NO	To the diagnosis of
	"怹WAIT喽".
YES	Unit is normal.
	(Malfunction by temp
	noise, etc.)

					<u> </u>
(1	Error code	LED	Green	Red	Content
	Remote control: E6				Indoor heat exchanger
	Temote control. Do	Indoor	Keeps flashing	1-time flash	temperature sensor anomaly

All models

2. Error detection method

Anomalously low temperature or high temperature (resistance) is detected on the indoor heat exchanger temperature sensor (Thi-R1, R2 or R3).

3. Condition of error displayed

- When the temperature sensor detects -50°C or lower for 5 seconds continuously, the compressor stops. After 3-minute delay, the compressor starts again automatically, but if this error occurs again within 60 minutes after the initial detection.
- Or if short-circuit detected for 5 seconds continuously.

4. Presumable cause

- Defective indoor heat exchanger temperature sensor connector
- Indoor heat exchanger temperature sensor anomaly
- Faulty indoor unit control PCB

5. Troubleshooting Diagnosis Countermeasure Is the connection of indoor heat exchanger temperature sensor Correct it. → Insert connector securely. YES Are characteristics of indoor Defective indoor heat heat exchanger temperature sensor OK? exchanger temperature sensor \rightarrow Replace. Defective indoor unit control PCB → Replace. (Defective indoor heat exchanger temperature sensor input circuit) Temperature-resistance characteristic (Broken wire) Temperature sensor resistance (kΩ) 5kΩ at 25°C (Short-circuit) Temperature (°C)

Error code	LED	Green	Red	Content
Remote control: E7				Return air temperature
Remote control. E/	Indoor	Keeps flashing	1-time flash	_
		•		

All models

2. Error detection method

Anomalously low temperature or high temperature (resistance) is detected by indoor return air temperature sensor (Thi-A)


3. Condition of error displayed

• When the temperature sensor detects -50°C or lower for 5 seconds continuously, the compressor stops. After 3-minute delay, the compressor starts again automatically, but if this error occurs again within 60 minutes after the initial detection.

4. Presumable cause

- Defective return air temperature sensor connector
- Defective return air
- temperature sensor

 Faulty indoor unit control **PCB**

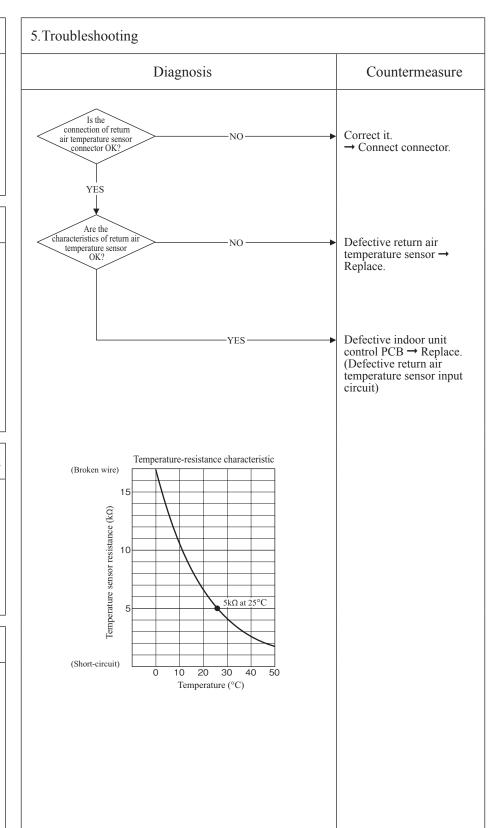

				<u> </u>
Error code	LED	Green	Red	Content
Remote control: E8	Indoor	Keeps flashing	1-time flash	Heating overload operation

All models

2. Error detection method

Indoor heat exchanger temperature sensor (Thi-R1, R2, R3)


3. Condition of error displayed

When it is detected 5 times within 60 minutes from initial detection or when the overload condition is detected for 6 minutes continuously.

4. Presumable cause

- Clogged air filter
- Defective indoor heat exchanger temperature sensor connector
- Defective indoor heat exchanger temperature sensor
- Anomalous refrigerant system


5. Troubleshooting

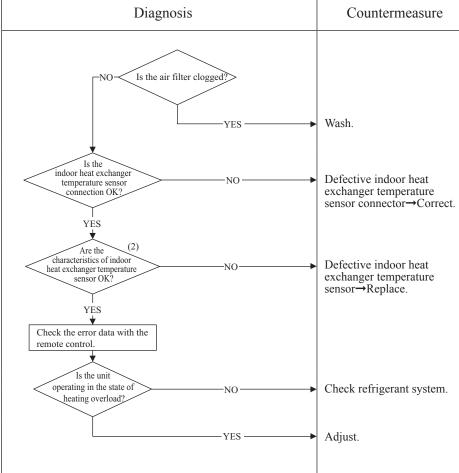

Note (1) Judge if it is in the state of overload or not as follows.

- Is there any short-circuit of air?
- · Isn't there any fouling or clogging on the indoor heat exchanger?
- Is the outdoor fan control normal?
- Isn't the room and outdoor air temperature too high?

Note (2) For characteristics of indoor heat exchanger temperature sensor, see the error display E6.

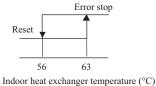

Note: During heating operation; After starting compressor, compressor rotation speed is decreased by detecting indoor heat exchanger temperature (Thi-R) in order to control high pressure.

Er	rror code	LED	Green	Red	Content	
Re	emote control: E9	Indoor	Keeps flashing	1-time flash	Drain trouble	

All models

2. Error detection method


Float switch is activated

3. Condition of error displayed

If the float switch OPEN is detected for 3 seconds continuously or if float switch connector or wire is disconnected.

4. Presumable cause

- Defective indoor unit control PCB
- Float switch setting error
- Humidifier drain pump motor interlock setting error
- Option equipment setting error
- Drain piping error
- Defective drain pump motor
- Disconnection of drain pump motor wiring

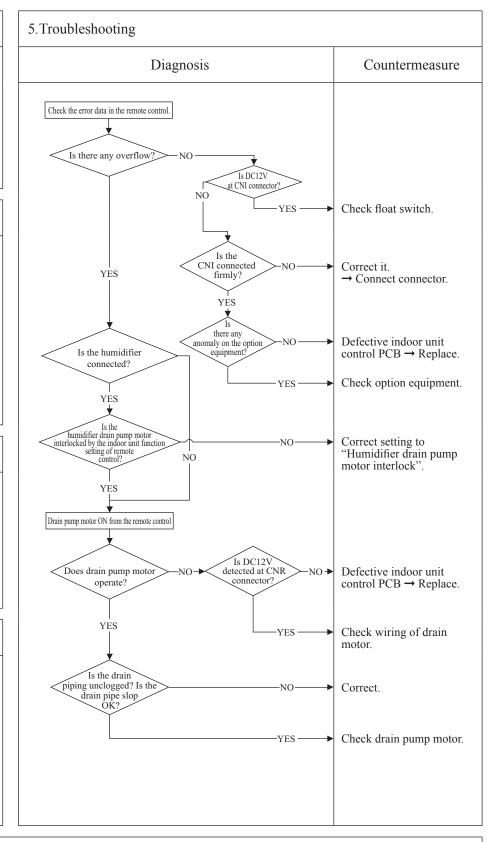

Note: When this error occurred at power ON, disconnection of wire or connector of the float switch is suspected. Check and correct it (or replace it, if necessary).

Error code	LED	Green	Red	Content Excessive number of connected
Remote control: E10	Indoor	Keeps flashing	Stays OFF	indoor units (more than 17 units) by controlling with one remote control
)				
1.Applicable model	5.Tro	ublesho	oting	
All models]	Diagnosis Countermeasure
	<	indoor units c	ore than 17 connected to ore control?	Defective remote control → Replace.
2. Error detection method				YES Reduce to 16 or less units.
When it detects more than 17 of indoor units connected to one remote contorl 3. Condition of error displayed Same as above				
4. Presumable cause • Excessive number of indoor units connected • Defective remote control				

						<u>(</u>
P	Error code	LED	Green	Red	Content	
	Remote control: E11	Indoor	Keeps flashing	Stays OFF	Address setting error of indoor units	
l						

All models

2. Error detection method

IU address has been set using the "Master IU address set" function of remote control.


3. Condition of error displayed

Same as above


4. Presumable cause

Mistake of address setting method (Address setting from remote control can't be done.)

5. Troubleshooting	

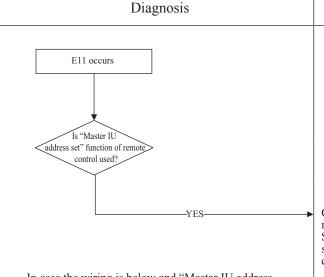

In case the wiring is below and "Mastar IU address set" is used, E11 is appeared.

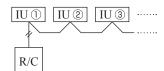

Countermeasure

Change of address setting method Set the address by DIP switch SW2 on indoor unit control PCB.

Error code	LED	Green	Red	Content
Remote control: E16	Indoor	Keeps flashing	1-time flash	Indoor fan motor anomaly

All models

2. Error detection method


Detected by rotation speed of indoor fan motor

3. Condition of error displayed

- When actual rotation speed of indoor fan motor drops to lower than 200min⁻¹ for 30 seconds continuously, the compressor and the indoor fan motor stop.
- After 2-seconds, it starts again automatically, but if this error occurs 4 times within 60 minutes after the initial detection.

4. Presumable cause

- Defective indoor unit control PCB
- Foreign material at rotational area of fan propeller
- Defective fan motor
- Dust on indoor unit control PCB
- Blown fuse
- External noise, surge

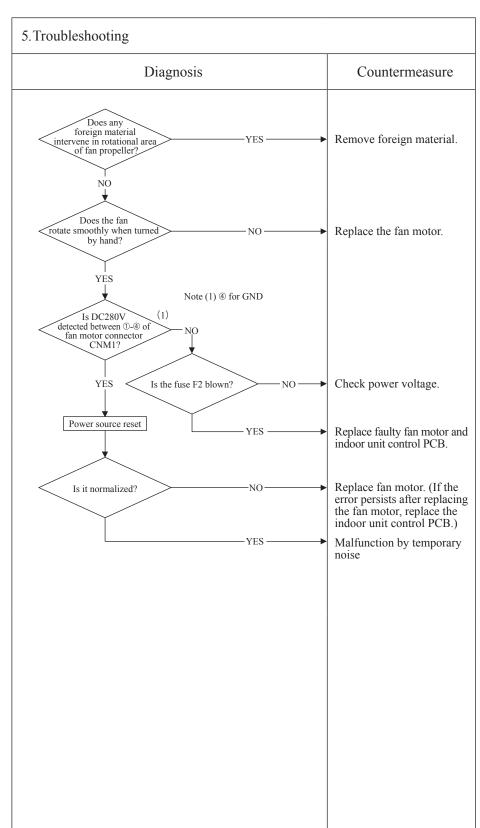

Error code	LED	Green	Red	Content Indoor unit operation shoots
Remote control: E19	Indoor	Keeps flashing	1-time flash	Indoor unit operation check, drain pump motor check setting error

All models

2. Error detection method

After indoor operation check, when the communication between indoor and outdoor unit is established and SW7-1 is still kept ON.

3. Condition of error displayed

Same as above

4. Presumable cause

Mistake in SW7-1 setting (Due to forgetting to turn OFF SW7-1 after indoor operation check)

Diagnosis		Countermeasu
E19 occurs when the power ON		
Is SW7-1		
on the indoor unit control PCB ON ?	NO	Defective indoor unit control PCB (Defective SW7) → Replace.
	YES—	Turn SW7-1 on the in unit control PCB OFF reset the power.
		reset the power.

					<u>4</u>
(Error code	LED	Green	Red	Content Indoor fan motor rotation
	Remote control: E20	Indoor	Keeps flashing	1-time flash	1 1
		macor			speed anomary

All models

2. Error detection method


Detected by rotation speed of indoor fan motor

3. Condition of error displayed

When the actual fan rotation speed does not reach to the speed of [required speed -50 min⁻¹] after 2 minutes have been elapsed since the fan motor rotation speed command was output, the unit stops by detecting indoor fan motor anomaly.

4. Presumable cause

- Defective indoor unit control PCB
- Foreign material at rotational area of fan propeller
- Defective fan motor
- Dust on indoor unit control PCB
- Blown fuse
- External noise, surge

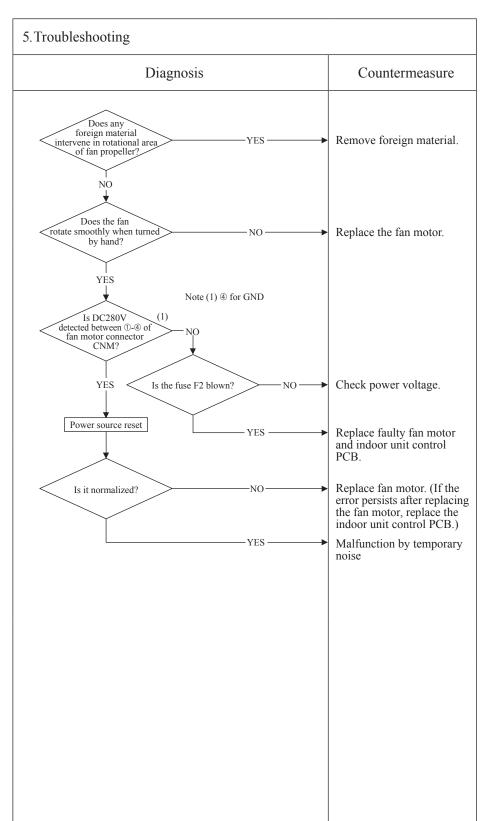

						(4)
(9	Error code	LED	Green	Red	Content
		Remote control: E28				Remote control
			Indoor	Keeps flashing	Stays OFF	temperature sensor anomaly
	- 1					

All models

2. Error detection method


Detection of anomalously low temperature (resistance) of remote control temperature sensor (Thc)

3. Condition of error displayed

When the temperature sensor detects -50°C or lower for 5 seconds continuously, the compressor stops. After 3-minute delay, the compressor starts again automatically, but if this error occurs again within 60 minutes after the initial detection.

4. Presumable cause

- Faulty connection of remote control temperature sensor
- Defective remote control temperature sensor
- Defective remote control PCB

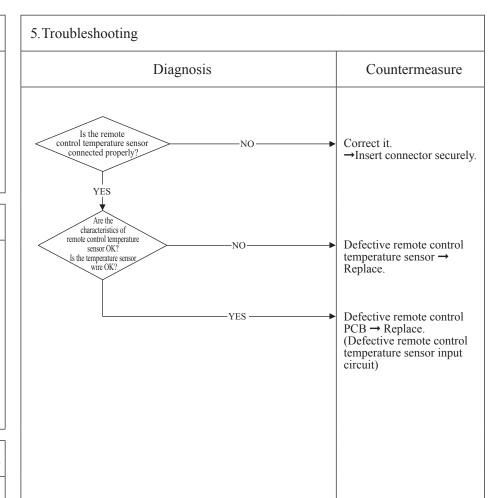

Temperature-resistance characteristics of remote control temperature sensor (Thc)


Temperature (°C)	Resistance value (kΩ)	Temperature (°C)	Resistance value (kΩ)
0	65	30	16
1	62	32	15
2	59	34	14
4	53	36	13
6	48	38	12
8	44	40	11
10	40	42	9.9
12	36	44	9.2
14	33	46	8.5
16	30	48	7.8
18	27	50	7.3
20	25	52	6.7
22	23	54	6.3
24	21	56	5.8
26	19	58	5.4
28	18	60	5.0

Note: After 10 seconds has passed since remote control temperature sensor was switched from invalid to valid, E28 will not be displayed even if the temperature sensor harness is disconnected. At same time the temperature sensor, which is effective, is switched from remote control temperature sensor to indoor return air temperature sensor. Even though the remote control temperature sensor is set to be effective, the return air temperature displayed on remote control for checking still shows the value detected by indoor return air temperature sensor, not by remote control temperature sensor.

				<u> </u>
Error code	LED	Green	Red	Content
Remote control: E35	Indoor	Keeps flashing	Stays OFF	Cooling overload operation

All models

2. Error detection method

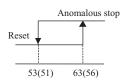


Outdoor heat exchanger temperature (°C)
Note(1) Values in () are applicable
when outdoor
temperature (TH2) is
lower than 32°C

3. Condition of error displayed

When anomalous outdoor heat exchanger temperature occurs 5 times within 60 minutes or 63(56)°C or higher continues for 10 minutes, including the compressor stop.

4. Presumable cause

- Defective outdoor heat
- exchanger temperature sensor
- Defective outdoor unit control PCB
- Indoor, outdoor unit installation spaces
- Short-circuit of air on indoor, outdoor units
- Fouling, clogging of heat exchanger
- Excessive refrigerant quantity

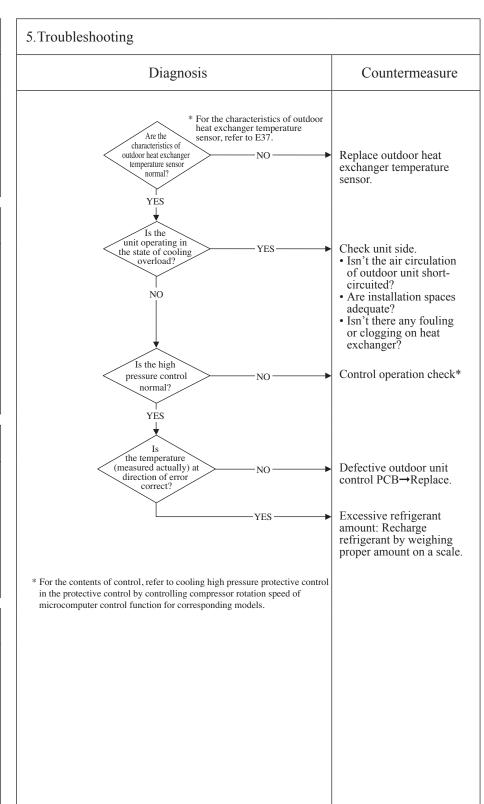

					(4)
Error code	LED	Green	Red	Content Discharge pipe	
Remote control: E36	Indoor	Keeps flashing	Stays OFF	4	

All models

2. Error detection method


For the error detection method, refer to compressor overheat in the protective control by controlling compressor rotation speed of micro-computer control function for corresponding models.

3. Condition of error displayed

When discharge pipe temperature anomaly is detected 2 times within 60 minutes or this anomalous state is detected 60 minutes continuously including compressor stop.

4. Presumable cause

- Defective outdoor unit PCB
- Defective discharge pipe temperature sensor
- Clogged filter
- Indoor, outdoor unit installation spaces
- Short-circuit of air on indoor, outdoor units
- Fouling, clogging of heat exchanger

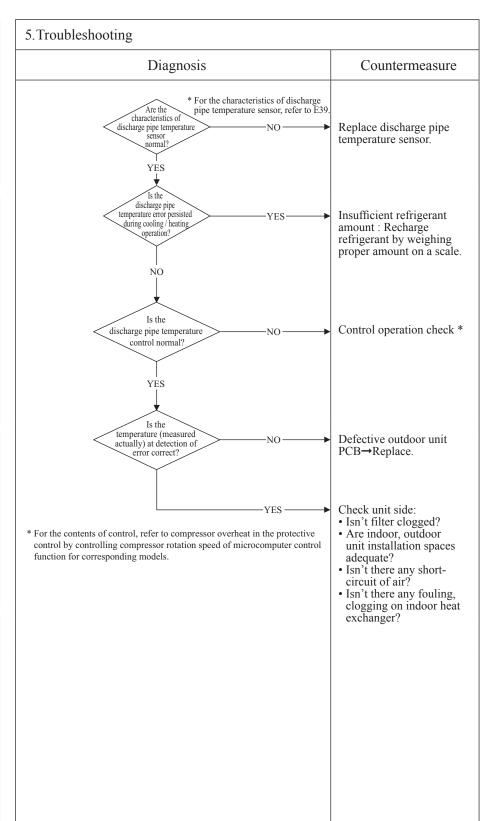

				<u>(4)</u>
Error code	LED	Green	Red	Content
Remote control: E37				Outdoor heat exchanger
Remote control. E37	Indoor	Keeps flashing	Stays OFF	temperature sensor anomaly

All models

2. Error detection method

Detection of anomalously low temperature (resistance) on the outdoor heat exchanger temperature sensor


3. Condition of error displayed

- When the temperature sensor detects -55°C or lower for 5 seconds continuously within 2 minutes to 2 minutes 20 seconds after the compressor ON, the compressor stops. After 3-minute delay, the compressor starts again automatically, but if this anomalous temperature is detected 3 times within 40 minutes.
- within 40 minutes.

 When -55°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.

4. Presumable cause

- Defective outdoor unit PCB
- Broken sensor harness or temperature sensing section
- Disconnected wire connection (connector)

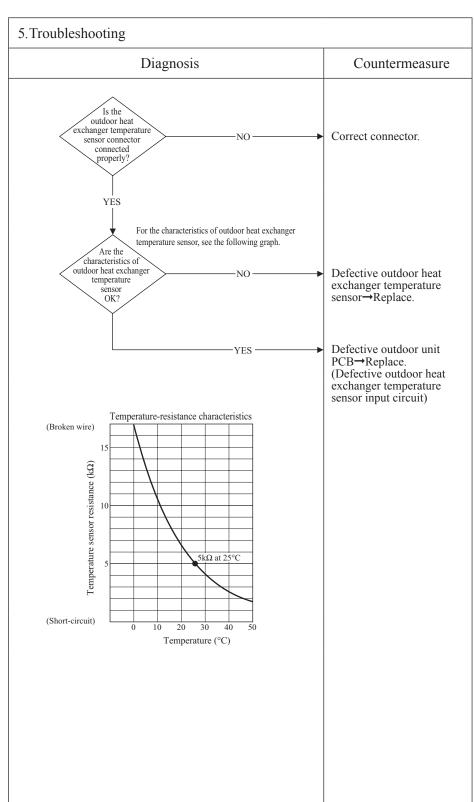

					<u>(4)</u>
(Error code	LED	Green	Red	Content
	Remote control: E38				Outdoor air temperature
	Remote control. E38	Indoor	Keeps flashing	Stays OFF	•
					Sensor unomary

All models

2. Error detection method

Detection of anomalously low temperature (resistance) on outdoor air temperature sensor


3. Condition of error displayed

- When the temperature sensor detects -55°C or lower for 5 seconds continuously within 2 minutes to 2 minutes 20 seconds after the compressor ON, the compressor stops. After 3-minutes delay, the compressor starts again automatically, but if this anomalous temperature is detected 3 times within 40 minutes
- within 40 minutes.

 When -55°C or lower is detected for 5 seconds continuously within 20 seconds after compressor ON.

4. Presumable cause

- Defective outdoor unit PCB
- Broken sensor harness or temperature sensing section (Check molding.)
- Disconnected wire connection (connector)

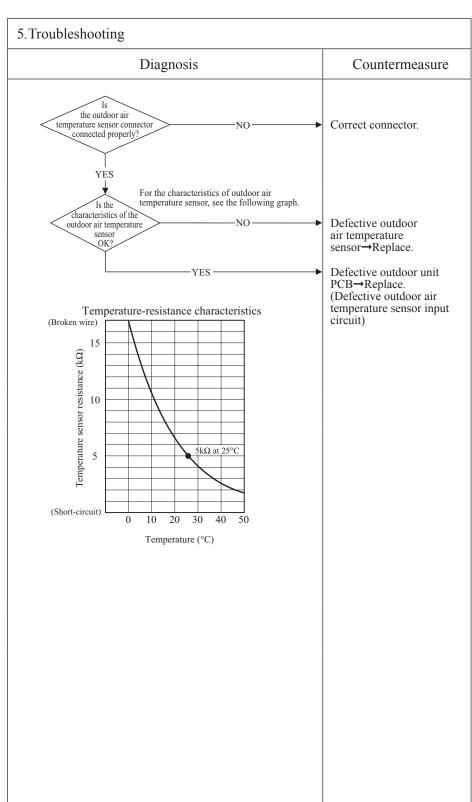

					<u> </u>
(1	Error code	LED	Green	Red	Content
	Remote control: F39				Discharge pipe
		Indoor	Keeps flashing	Stays OFF	temperature sensor anomaly

All models

2. Error detection method


Detection of anomalously low temperature (resistance) on the discharge pipe temperature sensor

3. Condition of error displayed

When the temperature sensor detects -25°C or lower for 5 seconds continuously within 10 minutes to 10 minutes 20 seconds after the compressor ON, the compressor stops. After 3-minute delay, the compressor starts again automatically, but if this anomalous temperature is detected 3 times within 40 minutes.

4. Presumable cause

- Defective outdoor unit PCB
- Broken sensor harness or temperature sensing section (Check molding.)
- Disconnected wire connection (connector)

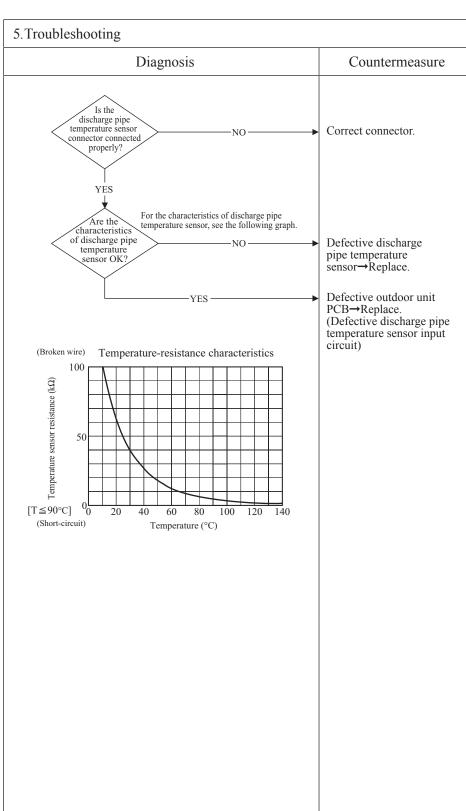

					(4)
9	Error code	LED	Green	Red	Content
	Remote control: E40	Indoor	Keeps flashing	Stays OFF	Service valve (gas side) closing operation

All models

2. Error detection method


If the inverter output current value exceeds the setting value within 80 seconds after the compressor ON in the heating mode, the compressor stops.

3. Condition of error displayed

- If the output current of inveter exceeds the specifications, it makes the compressor stopping. (In heating mode)
 After 3-minute delay, the
- After 3-minute delay, the compressor restarts, but if this anomaly occurs 2 times within 20 minutes after the intial detection.

4. Presumable cause

- Service valve (gas side) closing
- Defective outdoor unit PCB

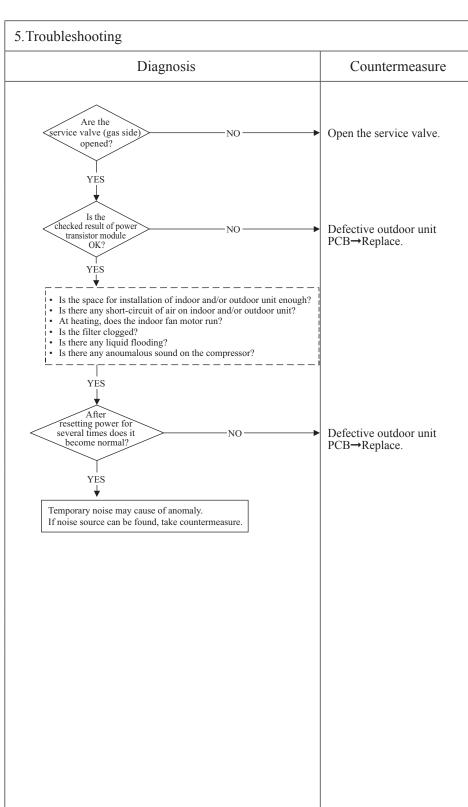

				9
Error code	LED	Green	Red	Content
Remote control: E42	Indoor	Keeps flashing	Stays OFF	Current cut (1/2)

All models

2. Error detection method


In order to prevent from overcurrent of inverter, if the current exceeds the specifications, it makes the compressor stopping.

3. Condition of error displayed

• If the output current of inveter exceeds the specifications, it makes the compressor stopping.

4. Presumable cause

- The valves closed
- Faulty power source
- Insufficient refrigerant amount
- Faulty compressor
- Faulty power transistor module

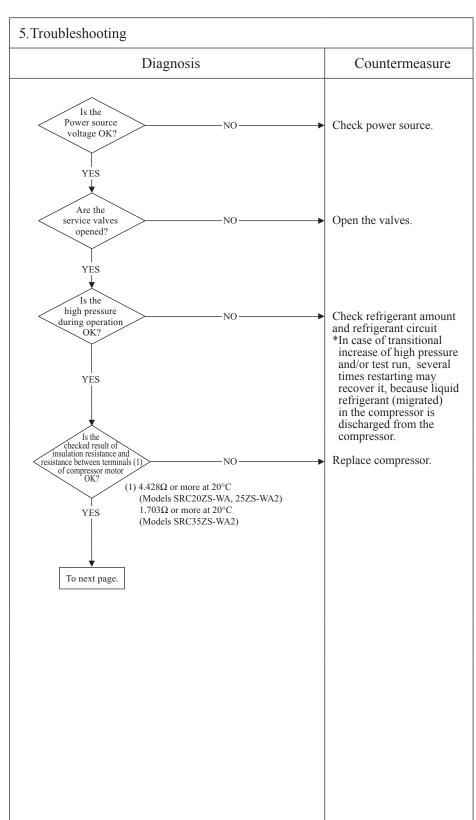

					<u> </u>)
C	Error code	LED	Green	Red	Content	
	Remote control: E42	Indoor	Keeps flashing	Stays OFF	Current cut (2/2)	

All models

2. Error detection method


In order to prevent from overcurrent of inverter, if the current exceeds the specifications, it makes the compressor stopping.

3. Condition of error displayed

• If the output current of inverter exceeds the specifications, it makes the compressor stopping.

4. Presumable cause

- Defective outdoor unit PCB
- Faulty power source
- Insufficient refrigerant amount
- Faulty compressor
- Faulty power transistor module

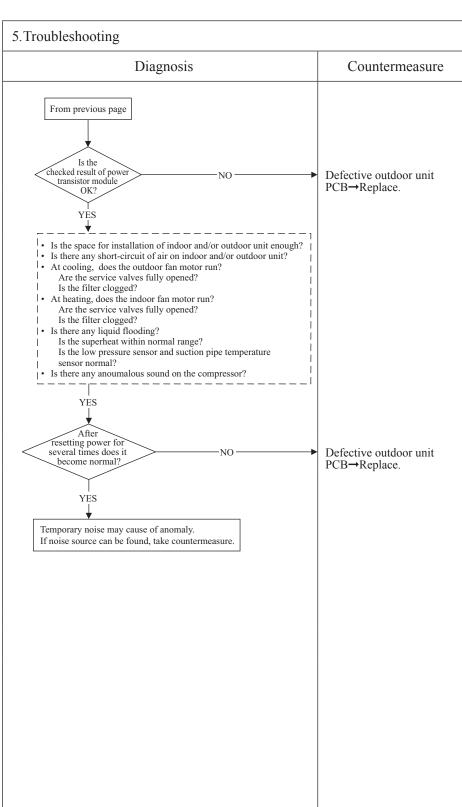

				(4)
Error code	LED	Green	Red	Content
Remote control: E47	Indoor	Keeps flashing	Stays OFF	Active filter voltage error

All models

2. Error detection method

Error is displayed if the converter voltage exceeds target voltage (3 times within 20 minutes). Remote control may be set after 3-minute delay. Error is displayed if the converter voltage is lower than DC210V (1-time within 5 seconds after power ON)

3. Condition of error displayed

Same as above

4. Presumable cause

- Defective outdoor unit PCB
- Dust on outdoor unit PCB
- Anomalous power source

		Countermeasure
Is the power source normal?	NO	Restore normal condition
 YES		
•		
Is voltage		Destance and the
within the specified range?	NO	Restore normal condition
YES		
Check		
soldered surfaces on the outdoor unit PCB for foreign matter like dust, fouling,	NO———	Remove foreign matter dust, fouling, etc.
etc.		dust, rouning, etc.
	—YES ——	Defective outdoor unit
	TES ,	PCB→Replace.

Note:			

				<u></u>
Error code	LED	Green	Red	Content
Remote control: E48	Indoor	Keeps flashing	Stays OFF	Outdoor fan motor anomaly

All models

2. Error detection method


Detected by rotation speed of outdoor fan motor

3. Condition of error displayed

When actual rotation speed of outdoor fan motor drops to 75min⁻¹ or lower for 30 seconds continuously, the compressor and the outdoor fan motor stop. After 3-minute delay, it starts again automatically, but if this anomaly occurs 3 times within 60 minutes after the initial detection.

4. Presumable cause

- Defective outdoor unit PCB
- · Foreign material at rotational area of fan propeller
- Defective fan motor
- Dust on outdoor unit PCB
- Blown F3 fuse

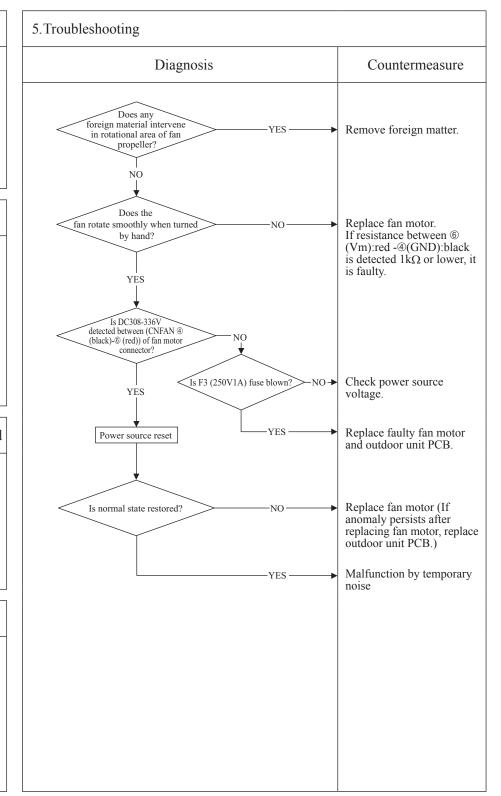

Note: When E48 error occurs, in almost cases F3 fuse (1A) on the outdoor unit PCB is blown. There are a lot of cases that fuse is blown and E48 occurs due to defective fan motor. And even though only the outdoor unit PCB (or fuse) is replaced, another trouble could occur. Therefore when fuse is blown, check whether the fan motor is OK or not.

After confirming the fan motor normal, check by power ON. (Don't power ON without confirming the fan motor normal.)

							ſΩ
(1	Error code	LED	Green	Red	Content		
	Remote control: E51	Indoor	Keeps flashing	Stays OFF		Power transistor anomaly	

All models

2. Error detection method

Power transistor primary current

3. Condition of error displayed

If the power transistor primary current exceeds the setting value for 3 seconds, the compressor stops.

4. Presumable cause

- Outdoor unit PCB anomaly Dust on outdoor unit PCB Blown F2 fuse

					(4)
U	Error code	LED	Green	Red	Content
	Remote control: E57	Indoor	Keeps flashing	Stays OFF	Insufficient refrigerant amount or detection of service valve closure
- 1					9

All models

2. Error detection method


• Judge insufficient refrigerant amount by detecting the temperature differnce between indoor heat exchanger (Thi-R) and indoor return air (Thi-A).

3. Condition of error displayed

When the insufficient refrigerant amount is detected 3 times within 60 minutes.

4. Presumable cause

- Defective indoor heat exchanger temperature sensor
- Defective indoor return air temperature sensor
- Defective indoor unit control PCB
- Insufficient refrigerant amount

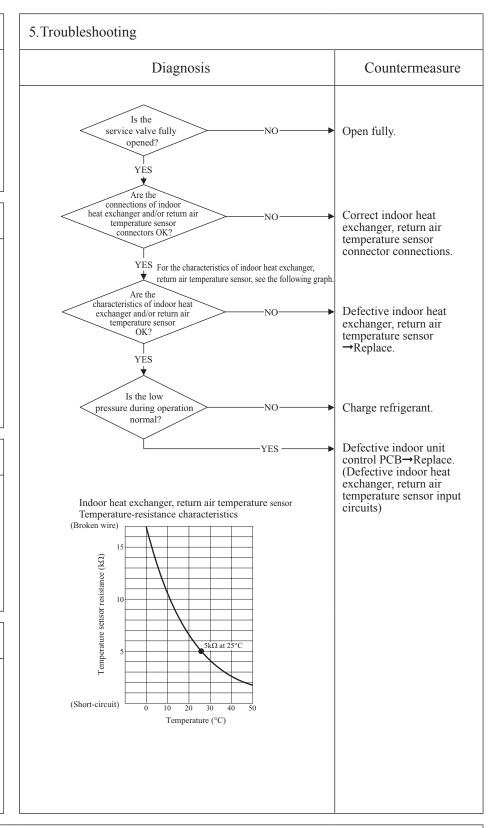

Note: When the compressor speed is 50 rps or under at 5 minutes after the start of compressor or the completion of defrost operation, the low refrigerant protection control judges, by detecting the difference between the indoor heat exchanger temperature (Thi-R) and the indoor return air temperature (Thi-A), that it is in the state of gas leakage, and stops the compressor.

Cooling: Indoor return air temperature (Thi-A) – Indoor heat exchanger temperature (Thi-R) < 4 deg C

Heating: Indoor heat exchanger temperature (Thi-R) – Indoor return air temperature (Thi-A) < 4 deg C

					(4)
C	Error code	LED	Green	Red	Content
	Remote control: E58	Indoor	Keeps flashing	Stays OFF	Current safe stop

All models

2. Error detection method

When the current safe control has operated at the compressor speed of 30 rps or under:

3. Condition of error displayed

Same as above

4. Presumable cause

- Excessive refrigerant amount
- Indoor,outdoor unit installation
- spaces
 Faulty compressor
 Defective outdoor air temperature sensor
- Defective outdoor unit PCB

Diagnosis		Countermeasure
Is the refrigerant amount nomal?	- NO	Adjust the refrigerant amount properly.
Is outdoor ventilation condition good ?	- NO	Secure space for inlet and outlet.
Inspect compressor. Is it normal?	- NO	Replace compressor.
For the characteristics of temperature sensor, see outdoor air temperature sensor. Is it normal?		Replace sensor.
	-YES▶	Defective outdoor unit PCB→Replace. (Defective outdoor air temperature sensor input circuit)

Error code	LED	Green	Red	Content
Remote control: E59	Indoor	Keeps flashing	Stays OFF	Compressor startup failure

All models

2. Error detection method


If it fails to change over to the rotor detection operation of compressor motor

3. Condition of error displayed

If compressor fails to startup for 42 times

4. Presumable cause

- · Outdoor fan motor anomaly
- Outdoor unit PCB anomaly
- Anomalous power source voltage
- Improper refrigerant amount and refrigerant circuit
- Faulty compressor (Motor bearing)

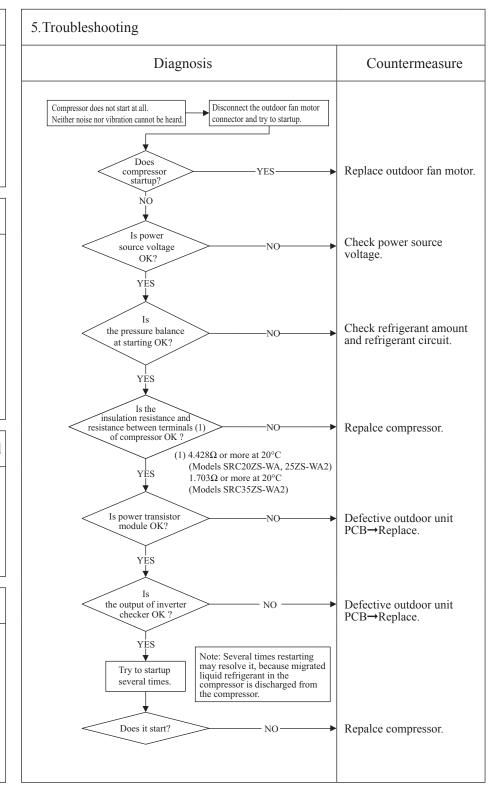

Note: Insulation resistance

- Instantion resistance. The unit is left for long period without power source or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases upto several $M\Omega$ or lower. If the electric leakage breaker is activated due to low insulation resistance, ① Check whether the insulation resistance can recover or not, after 6 hours has passed since power ON.

 - (By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated)

 © Check whether the electric leakage breaker conforms to high-harmonic specifications.

 (As units has inverter, in order to prevent from improper operation, be sure to use high-harmonic one.)

Erro	r code	LED	Green	Red	Content
Rem	ote control: E60	Indoor	Keeps flashing	Stays OFF	Compressor rotor lock error

All models

2. Error detection method


Compressor rotor position

3. Condition of error displayed

If it fails again to detect the rotor position after shifting to the compressor rotor position detection operation, the compressor stops.

4. Presumable cause

- Defective outdoor fan motor
- Defective outdoor unit PCB
- · Anomalous power source voltage
- Improper refrigerant amount and refrigerant circuit
- Defective compressor (motor, bearing)

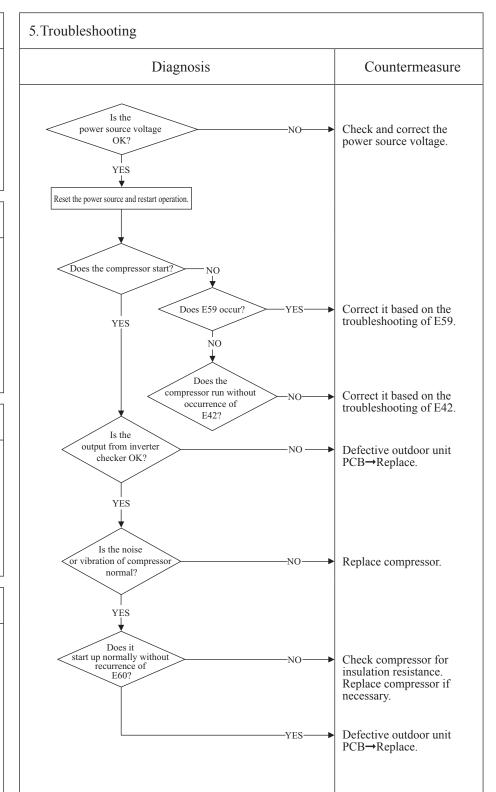

nsulation resistance
The unit is left for long period without power source or soon after installation, migrated liquid refrigerant may dissolve in the refrigerant oil in the compressor. In such case insulation resistance decreases upto several $M\Omega$ or lower. If the electric leakage breaker is activated due to low insulation resistance, check followings.

© Check whether the insulation resistance can recover or not, after 6 hours has passed since power ON.
(By energize the crankcase heater, migrated liquid refrigerant in the refrigerant oil in compressor can be evaporated.)

© Check whether the electric leakage breaker conforms to high-harmonic specifications.

⁽As units has inverter, in order to prevent from improper operation, be sure to use high-harmonic one.)

12. OPTION PARTS

PJZ012A171A

12.1 Wired remote control
(1) Model RC-EX3A

1. Safety precautions

Please read this manual carefully before starting installation work to install the unit properly. Every one of the followings is important information to be observed strictly.

∆ WARNING	Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.
∴ CAUTION	Failure to follow these instructions properly may cause injury or property damage.

It could have serious consequences depending on the circumstances.

The following pictograms are used in the text.



Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to a new owner.

!\WARNING

- Consult your dealer or a professional contractor to install the unit.

 Improper installation made on your own may cause electric shocks, fire or dropping of the unit.
- Installation work should be performed properly according to this installation manual.

Improper installation work may result in electric shocks, fire or break-down.

- Be sure to use accessories and specified parts for installation work.
 Use of unspecified parts may result in drop, fire or electric shocks.
- Install the unit properly to a place with sufficient strength to hold the weight.

If the place is not strong enough, the unit may drop and cause injury.

Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient and improper work can cause electric shock and fire.

Shut OFF the main power source before starting electrical work. Otherwise, it could result in electric shocks, break-down or malfunction.


Do not modify the unit.

It could cause electric shocks, fire, or break-down.

Be sure to turn OFF the power circuit breaker before repairing/ inspecting the unit.

Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.

↑WARNING

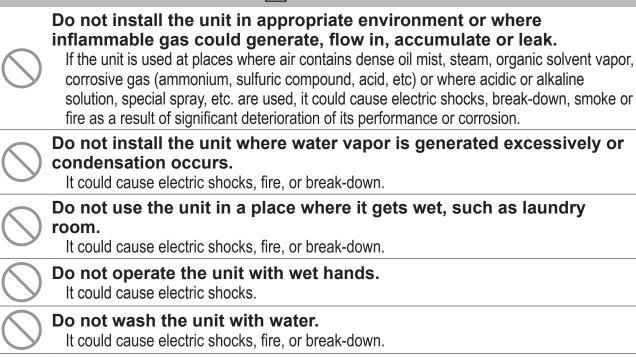

Improper connections or fixing could cause heat generation, fire, etc.

Seal the inlet hole for remote control cable with putty.

care to protect electronic parts from external forces.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

Use the specified cables for wiring, and connect them securely with

If dew or water enters the unit, it may cause screen display anomalies.

When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc.

The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.

Do not leave the remote control with its upper case removed.

If dew, water, insect, etc. enters through the hole, it could cause electric shocks, fire or break-down.

ACAUTION

Do not install the remote control at following places.

- (1) It could cause break-down or deformation of remote control.
 - Where it is exposed to direct sunlight
 - Where the ambient temperature becomes 0 °C or below, or 40 °C or above
 - Where the surface is not flat
 - Where the strength of installation area is insufficient
- (2) Moisture may be attached to internal parts of the remote control, resulting in a display failure.
 - Place with high humidity where condensation occurs on the remote control
 - · Where the remote control gets wet
- (3) Accurate room temperature may not be detected using the temperature sensor of the remote control.
 - · Where the average room temperature cannot be detected
 - Place near the equipment to generate heat
 - Place affected by outside air in opening/closing the door
 - Place exposed to direct sunlight or wind from air-conditioner
 - Where the difference between wall and room temperature is large

To connect to a personal computer via USB, use the dedicated software.

Do not connect other USB devices and the remote control at the same time.

It could cause malfunction or break-down of the remote control/personal computer.

2. Accessories & Prepare on site

Following parts are provided.

Accessories R/C main unit, wood screw (Φ3.5 x 16) 2 pcs, Quick reference

Following parts are arranged at site. Prepare them according to the respective installation procedures.

Item name	Q'ty	Remark	
Switch box For 1 piece or 2 pieces (JIS C 8340 or equivalent)	1		
Thin wall steel pipe for electric appliance directly on a wall. (JIS C 8305 or equivalent)	As required	These are not required when installing directly on a wall.	
Lock nut, bushing (JIS C 8330 or equivalent)	As required		
Lacing (JIS C 8425 or equivalent)	As required	Necessary to run R/C cable on the wall.	
Putty	Suitably	For sealing gaps	
Molly anchor	As required		
R/C cable (0.3 mm ² x 2 pcs)	As required	See right table when longer than 100 m	

When the cable length is longer than 100 m, the max size for wires used in the R/C case is 0.5 mm². Connect them to wires of larger size near the outside of R/C. When wires are connected, take measures to prevent water, etc. from entering inside.

≦ 200 m	0.5 mm ² x 2 cores
≦ 300m	0.75 mm ² x 2 cores
≦ 400m	1.25 mm ² x 2 cores
≦ 600m	2.0 mm ² x 2 cores

3. Installation place


Secure the installation space shown in the figure.

For the installation method, "embedding wiring" or "exposing wiring" can be selected.

For the wiring direction, "Backward", "Upper center" or "Upper left" can be selected.

Determine the installation place in consideration of the installation method and wiring direction.


Installation space

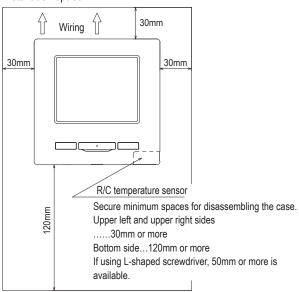

4. Installation procedure

Perform installation and wiring work for the remote control according to the following procedure.

Dimensions (Viewed from front)

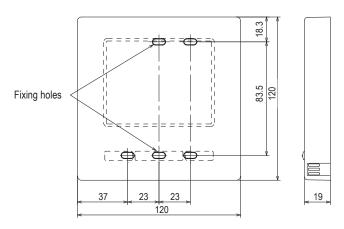

To disassemble the R/C case into the upper and lower pieces after assembling them once


· Insert the tip of flat head screwdriver or the like in the recess at the lower part of R/C and twist it lightly to remove. It is recommended that the tip of the screwdriver be wrapped with tape to avoid damaging the case.

Take care to protect the removed upper case from moisture or dust.

In case of embedding wiring


(When the wiring is retrieved "Backward")

① Embed the switch box and the R/C wires beforehand. Seal the inlet hole for the R/C wiring with putty

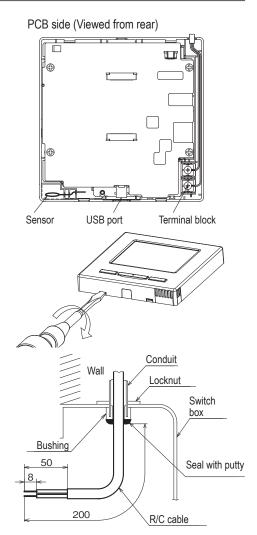


② When wires are passed through the bottom case, fix the bottom case at 2 places on the switch box.

Switch box for 1 pc.

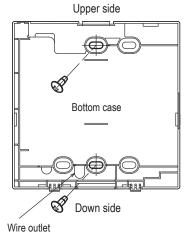

Switch box for 2 pcs.

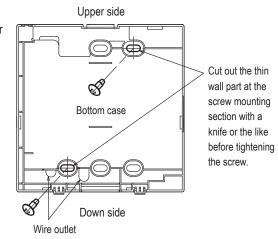



- ③ Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- 4 Install the upper case with care not to pinch wires of R/C.

Cautions for wire connection

Use wires of no larger than 0.5 mm² for wiring running through the remote control case. Take care not to pinch the sheath.

Tighten by hand $(0.7\ N\cdot m\ or\ less)$ the wire connection. If the wire is connected using an electric driver, it may cause failure or deformation.

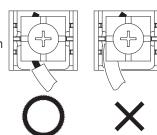

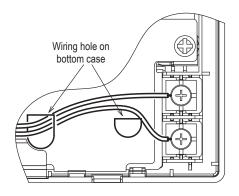


In case of exposing wiring


(When the wiring is taken out from the "upper center" or "upper left" of R/C)

1) Cut out the thin wall sections on the cases for the size of wire.


When taking the wiring out from the upper center, open a hole before separating the upper and bottom cases. This will reduce risk of damaging the PCB and facilitate subsequent work.


When taking the wiring out from the upper left, take care not to damage the PCB and not to leave any chips of cut thin wall inside.

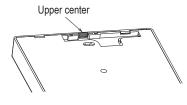

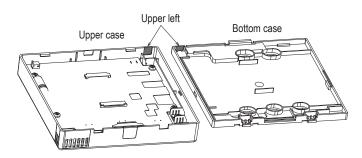

- ② Fix the bottom R/C case on a flat surface with two wood screws.
- ③ In case of the upper center, pass the wiring behind the bottom case. (Hatched section)
- 4 Connect wires from X and Y terminals of R/C to X and Y terminals of indoor unit. R/C wires (X, Y) have no polarity. Fix wires such that the wires will run around the terminal screws on the top case of R/C.
- (5) Install the top case with care not to pinch wires of R/C.
- 6 Seal the area cut in 1 with putty.

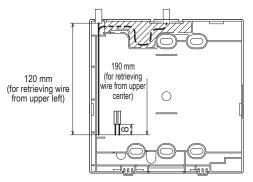

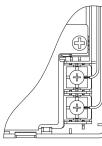


5. Main/Sub setting when more than one remote control are used

Up to two units of R/C can be used at the maximum for 1 indoor unit or 1 group.

One is main R/C and the other is sub R/C.

Operating range is different depending on the main or sub R/C.

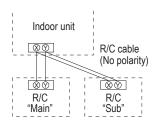

R/C operation	Main	Sub		
Run/Stop, Ch Change flap speed operat	0	0		
High power of	peration, En	ergy-saving operation	0	0
Silent mode	control		0	×
Useful	Individual f	ap control	0	×
functions	Anti draft se	etting	0	×
	Timer		0	0
	Favorite se	tting	0	0
	Weekly tim	er	0	×
	Home leave	e mode	0	×
	External ve	ntilation	0	0
	Select the I	anguage	0	0
	Silent mode	e control	0	×
Energy-savin	ig setting		0	×
Filter	Filter sign r	eset	0	0
User setting	Initial settin	gs	0	0
	Administrator settings	Permission/ Prohibition setting	0	×
		Outdoor unit silent mode timer	0	×
		Setting temp. range	0	×
		Temp increment setting	0	×
		Set temp. display	0	0
		R/C display setting	0	0
		Change administrator password	0	0
		F1/F2 function setting	0	0

○: operable ×: not operable						
R/C operation		Main	Sub			
Service	Installation	Installati	on date	0	×	
setting	settings	Compan	0	0		
		Test run	0	×		
		Static pr	essure adjustment	0	×	
		Change	auto-address	0	×	
		Address	setting of main IU	0	×	
		IU back-	up function	0	×	
		Motion s	ensor setting	0	×	
	R/C function	Main/Su	b of R/C	0	0	
	settings	Return a	nir temp.	0	×	
		R/C sen	sor	0	×	
		R/C sen	sor adjustment	0	×	
		Operation	n mode	0	×	
		°C / °F		0	×	
		Fan spe	ed	0	×	
		External	0	×		
		Upper/lo	0	×		
		Left/righ	0	×		
		Ventilation	0	×		
		Auto-res	0	×		
		Auto temp. setting		0	×	
		Auto fan	0	×		
	IU settings		0	×		
	Service &	IU address		0	0	
	Maintenance	Next service date		0	×	
		Operation	n data	0	×	
		Error	Error history	0	0	
		display	Display/erase anomaly data	0	×	
			Reset periodical check	0	0	
		Saving I	U settings	0	×	
		Special	Erase IU address	0	×	
		settings	CPU reset	0	0	
			Restore of default setting	0	×	
			Touch panel calibration	0	0	
		Indoor u	nit capacity display	0	×	


Advice: Connection to personal computer

It can be set from a personal computer via the USB port (mini-B). Connect after removing the cover for USB port of upper case.

Replace the cover after use.

Special software is necessary for the connection.


For details, view the web site.

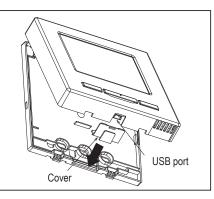

Advice: Initializing of password

Administrator password (for daily setting items) and service password (for installation, test run and maintenance) are used.

- The administrator password at factory default is "0000". This setting can be changed (Refer to User's Manual).
 - If the administrator password is forgotten, it can be initialized by holding down the [F1] and [F2] switches together for five seconds on the administrator password input screen.
- Service password is "9999", which cannot be changed.
 When the administrator password is input, the service password is also accepted.

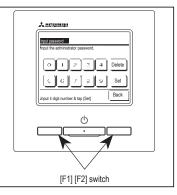

Advice

When connecting two or more FDT/FDTC to one R/C, unify the panel type either to a panel with anti draft function or a standard panel.

(2) Model RC-E5



Read together with indoor unit's installation manual.

MARNING

Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal.

Loose connection or hold will cause abnormal heat generation or fire.

Make sure the power source is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.



ACAUTION

- Do not install the remote control at the following places in order to avoid malfunction.
- (1) Places exposed to direct sunlight
- (4) Hot surface or cold surface enough to generate condensation
- (2) Places near heat devices
- (5) Places exposed to oil mist or steam directly
- (3) High humidity places
- (6) Uneven surface



Do not leave the remote control without the upper case.


In case the upper cace needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.



Accessories	Remote control, wood screw (ø3.5x16) 2 pieces			
Prepare on site	Remote control cord (2 cores) the insulated thickness in 1mm or more.			
	[In case of embedding cord] Erectrical box, M4 screw (2 pieces)			
	[In case of exposing cord] Cord clamp (if needed)			

Installation procedure


- Open the cover of remote control, and remove the screw under the buttons without fail.
- ② Remove the upper case of remote control. Insert a flat-blade screwdriver into the dented part of the upper part of the remote control, and wrench slightly.

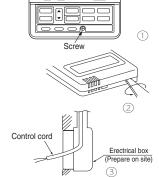


[In case of embedding cord]

3 Embed the erectrical box and remote control cord beforehand.

Prepare two M4 screws (recommended length is 12-16mm) on site, and install the lower case to erectrical box. Choose either of the following two positions in fixing it with screws.

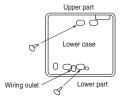


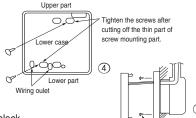

- Connect the remote control cord to the terminal block. Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)
- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.

[In case of exposing cord]

- 3 You can pull out the remote control cord from left upper part or center upper part. Cut off the upper thin part of remote control lower case with a nipper or knife, and grind burrs with a file etc.
- ④ Install the lower case to the flat wall with attached two wooden screws.

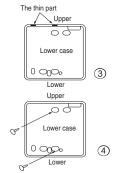


M4 screw × 2 (Prepare on site)

S Connect the remote control cord to the terminal block.

Connect the terminal of remote control (X,Y) with the terminal of indoor unit (X,Y). (X and Y are no polarity)

Wiring route is as shown in the right diagram depending on the pulling out direction.

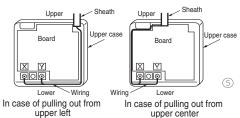

The wiring inside the remote control case should be within 0.3mm² (recommended) to 0.5mm². The sheath should be peeled off inside the remote control case.

The peeling-off length of each wire is as below.



- Install the upper case as before so as not to catch up the remote control cord, and tighten with the screws.
- In case of exposing cord, fix the cord on the wall with cord clamp so as not to slack.

Installation and wiring of remote control


- Wiring of remote control should use 0.3mm² x 2 cores wires or cables. (on-site configuration)
- ② Maximum prolongation of remote control wiring is 600 m.

If the prolongation is over 100m, change to the size below.

But, wiring in the remote control case should be under 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Master/ slave setting when more than one remote controls are used

A maximum of two remote controls can be connected to one indoor unit (or one group of indoor units.)

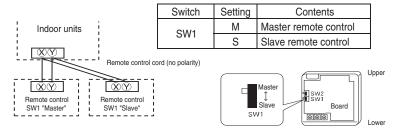

Set SW1 to "Slave" for the slave remote control. It was factory set to "Master" for shipment.

Note: The setting "Remote control sensor enabled" is only selectable with the master remote control in the position where you want to check room temperature.

The air-conditioner operation follows the last operation of the remote control regardless of the master/ slave setting of it.

The indication when power source is supplied

When power source is turned on, the following is displayed on the remote control until the communication between the remote control and indoor unit settled.

At the same time, a mark or a number will be displayed for two seconds first.

This is the software's administration number of the remote control, not an error cord.



When remote control cannot communicate with the indoor unit for half an hour, the below indication will appear

Check wiring of the indoor unit and the outdoor unit etc.



The range of temperature setting

When shipped, the range of set temperature differs depending on the operation mode as below.

Heating: 16-30°C (55-86°F)

Except heating (cooling, fan, dry, automatic): 18-30°C (62-86°F)

●Upper limit and lower limit of set temperature can be changed with remote control.

Upper limit setting: valid during heating operation. Possible to set in the range of 20 to 30°C (68 to 86°F). Lower limit setting: valid except heating (automatic, cooling, fan, dry) Possible to set in the range of 18 to 26°C (62 to 79°F).

When you set upper and lower limit by this function, control as below.

When ②TEMP RANGE SET, remote control function of function setting mode is "INDN CHANGE" (factory setting),
 If upper limit value is set]

During heating, you cannot set the value exceeding the upper limit.

[If lower limit value is set]

During operation mode except heating, you cannot set the value below the lower limit.

2. When ② TEMP RANGE SET, remote control function of function setting mode is "NO INDN CHANGE" [If upper limit value is set]

During heating, even if the value exceeding the upper limit is set, upper limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.

[If lower limit value is set]

During except heating, even if the value lower than the lower limit is set, lower limit value will be sent to the indoor unit. But, the indication is the same as the temperature set.


How to set upper and lower limit value


1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for over three seconds .

The indication changes to "FUNCTION SET ▼".

- 2. Press ▼ button once, and change to the "TEMP RANGE ▲ " indication.
- 3. Press (SET) button, and enter the temperature range setting mode.
- 4. Select "UPPER LIMIT ▼" or "LOWER LIMIT ▲" by using ▲ ▼ button.
- 5. Press (SET) button to fix.
- 6. When "UPPER LIMIT ▼" is selected (valid during heating)
 - ① Indication: " $\bigcirc \lor \land$ SET UP" \rightarrow "UPPER 30°C \lor "
 - ② Select the upper limit value with temperature setting button ☑ ⚠. Indication example: "UPPER 26°C ∨ ∧" (blinking)
 - ③ Press ◯ (SET) button to fix. Indication example: "UPPER 26°C" (Displayed for two seconds)

 After the fixed upper limit value displayed for two seconds, the indication will return to "UPPER LIMIT ▼".
- 7. When "LOWER LIMIT ▲" is selected (valid during cooling, dry, fan, automatic)
 - ① Indication: " \bigcirc $\lor \land$ SET UP" \rightarrow "LOWER 18°C \land "
 - ② Select the lower limit value with temperature setting button ☑ △. Indication example: "LOWER 24°C ∨ ∧" (blinking)
 - ③ Press (SET) button to fix. Indication for example: "LOWER 24°C" (Displayed for two seconds)
 After the fixed lower limit value displayed for two seconds, the indication will return to "LOWER LIMIT ▼".
- 8. Press ON/OFF button to finish.

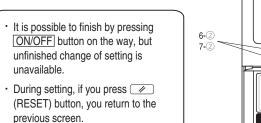

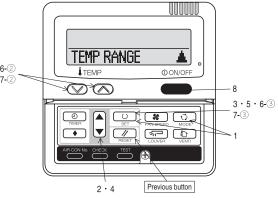

The functional setting

The initial function setting for typical using is performed automatically by the indoor unit connected, when remote control and indoor unit are connected.

As long as they are used in a typical manner, there will be no need to change the initial settings. If you would like to change the initial setting marked "C", set your desired setting as for the selected item. The procedure of functional setting is shown as the following diagram.

[Flow of function setting] Record and keep the setting Consult the technical data etc. for each control details

Stop air-conditioner and press

Stop air-conditioner and press

(NODE) buttons at the same time for over three second

Note 1: The initial setting marked "%" is decided by connected indoor and outdoor unit, and is automatically defined as following table.

Function No.	Item	Default	Model
Remote control	AUTO RUN SET	AUTO RUN ON	"Auto-RUN" mode selectable indoor unit.
function02		AUTO RUN OFF	Indoor unit without "Auto-RUN" mode
Remote control	32 FAN SPEED S₩	டு VALID	Indoor unit with two or three step of air flow setting
function06		⊕⊠ INVALID	Indoor unit with only one of air flow setting
Remote control	☑ LOUVER SW	&⊡ VALID	Indoor unit with automatically swing louver
function07		⊕ 🖾 INVALID	Indoor unit without automatically swing louver
Remote control	I/U FAN	HI-MID-LO	Indoor unit with three step of air flow setting
function13		HI-LO	Indoor unit with two step of air flow setting
		HI-MID	
		1 FAN SPEED	Indoor unit with only one of air flow setting
Remote control	NODEL TYPE	HEAT PUMP	Heat pump unit
function15		COOLING ONLY	Exclusive cooling unit

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit.

But only master indoor unit is received the setting change of indoor unit function "05 EXTERNAL INPUT" and "06 PERMISSION / PROHIBISSION."

(Remote control fur	nation)	/1	unction) I/U FUNCTION ▲ plu		No. are indicated only who	511	Note2: Fan setting of "H	Indoor unit air flow	setting	
N ▼ (Hemote control ful	nction)	(Indoor unit t	Tuction) [1/0 HONC 110N ▼] bin	rai iriuoc	Function		Fan tap	8aff - 8af - 8af - 8a) 8af - 8af - 8		8at - 3
Function			1/1000	d Is	*IO2 FAN SPEED SET	setting	07411040			Hi - N
O1 TOWN ESP SET	setting		1/0001 =		TO CENTRALED OCT	STANDARD X	FAN STANDAR	OH - HI - ME - LO	HI-LO	mi-n
	L&MIZIESP VALID	 Validate setting of ESP:External Static Pre 				HIGH SPEED 1 *	SFT HIGH	UH - UH - Hi - Me UH - Hi - Me	e UH - Me	UH -
02 TAUTO RUN SET	LECTION FOR INVALID	Invalidate setting of ESP	1/0003		* 0.3 IFILTER SIGN SET	HIGH SPEED 2	SPEED1,	2	011-ING	011-
02 THUTU KUN 2ET	LAUTO RUN ON	×	1700043	티 [1	* 103 TETETER STOM SET	INDICATION OFF	Initial function setting of	some indoor unit is "HIGH SPEED".		
		Automatical operation is impossible	! -			TYPE 1	The filter sign is indicated	after running for 180 hours.		
03 MA TEMP SW		Tutomatical operation to impossible	To set other indoor unit, pr			TYPE 2		after running for 600 hours.		
	S⊠∆ VALID	<u> </u>	AIR CON No. button, which			TYPE 3	The filter sign is indicated	after running for 1000 hours.		
04 ES MODE SW	S⊠⊠ INVALID	Temperature setting button is not working	allows you to go back to th			TYPE 4	The filter sign is indicated compulsion after 24 hours	after running for 1000 hours, then the indoo	r unit will be stop	ped by
04 LEE HODE OW	는데 VALID 는데 INVALID	0	unit selection screen	ie indoo	04 ⇒, POSITION			nction "04 = POSTTION".		
	ভিক্ত INVALID	Mode button is not working	(for example: I/U 000 ▲).				you must change the moon to	te control function "14 > POSITION" acco	ordinaly	
05 ON/OFF SW			(for example, I/O 000 🛋).			4POSITION STOP O	You can select the louver:	top position in the four.		
	⊕ © VALID ⊕ © INVALID	0-10# 1-11			05 EXTERNAL INPUT	FREE STOP	The louver can stop at any	position.		
06 [Œ]FAN SPEED SWI	I O O TIMANTID	On/Off button is not working			02 TEVIEWALT TALOI	LEVEL INPUT				
00 ZZZTTIN GI ZZZZ GW]	등로 VALID 응로 INVALID	*				PULSE INPUT				
	&⊠ INVALID	Fan speed button is not working			06 Obertombelenessonschammentom					
07 E2 LOUVER SW						INVALID O				
	SE VALID SE INVALID	Louver button is not working			* 07 TEMERGENCY STOP	VALID	Permission/prohibition con	trol of operation will be valid.		
08 @ TIMER SW	TINVHLIU TEET	Louver button is not working		,	+ O1 TELEVORAPI 910L	INVALID O				
00 1-22 12100100	용한 VALID	0				VALID	With the VRF series it is a	sed to stop all indoor units connected with t	he same outdoor	r unit imn
	⊕@ VALID ⊕@ INVALID	Timer button is not working						from remote on-off terminal "CNT-6", all in		
09 SENSOR SET	Lamoranon orr									
	SENSOR OFF	Remote thermistor is not working. Remote thermistor is working.				OFFSET +3,0%	To be recet for product	3.0°C increase in temperature during heati	00	
	■SENSOR +3.0%	Remote thermistor is working, and to be set for pro	ducing +3.0°C increase in tempera	ture.		0FFSET +2.0%	To be reset for producing -	3.0 C increase in temperature during neati 2.0°C increase in temperature during heati	na.	
	© SENSOR +3.0°c © SENSOR +2.0°c	Remote thermistor is working, and to be set for pro	ducing +2.0°C increase in tempera	ture.	* 08 ₩ SP OFFSET	OFFSET +1.0%		1.0°C increase in temperature during heati		
	☐SENSOR +1.0%	Remote thermistor is working, and to be set for pro	ducing +1.0°C increase in tempera	ture.		NO OFFSET O			-	
	■SENSOR -1.0℃	Remote thermistor is working, and to be set for pro	ducing -1.0°C increase in temperat	ure.		Introck . o.o.				
	■SENSOR -2.0°c ■SENSOR -3.0°c	Remote thermistor is working, and to be set for pro				OFFSET +2.0% OFFSET +1.5%	To be reset producing +2.0	"C increase in return air temperature of ind "C increase in return air temperature of ind	oor unit.	
10 AUTO RESTART	Bothook 3000	Tremote tremistor is working, and to be set for pro-	duding 0.0 0 mid-cabo in temperar		* 09 RETURN AIR TEMP	0FFSET +1.0%		C increase in return air temperature of ind		
	INVALID VALID	0				NO OFFSET O				
	VALID					OFFSET - 1.0%		'C increase in return air temperature of indo		
11 VENT LINK SET	NO VENT					OFFSET -1.5% OFFSET -2.0%		C increase in return air temperature of indo		
	NU VEN I	In case of Single split series, by connecting	ventilation device to CNT of the	10	* 10 I X FAN CONTROL	UH3E1 -2.06	To be reset producing -2.0	'C increase in return air temperature of indo	oor unit.	
	l	indoor printed circuit board (in case of VRF	series, by connecting it to CNI	D of the	- IO INCLIN CONTINUE I	LOW FAIN SPEED O	When heating thermostat i	s OFF, fan speed is low speed.		
	VENT LINK	indoor printed circuit board), the operation	of ventilation device is linked v	vith the		SET FAN SPEED	When heating thermostat i	s OFF, fan speed is set speed.		
		operation of indoor unit.						s OFF, fan speed is operated intermittently.		
	NO VENT LINK	In case of Single split series, by connecting ventile	tion device to CNT of the indoor pri	nted		INTERNITTENCE FAN OFF	When heating thermostat i When heating thermostat i	S OFF, fan speed is operated intermittently.		
	NO TENT LINK	circuit board (in case of VRF series, by connecting board), you can operate /stop the ventilation devi				Invoi	When the remote thermist	or is working, "FAN OFF" is set automaticall	y.	
12 TEMP RANGE SET		board), you can operate /stop the verillation devi	e illochelinelini pi (AFIAI	j button.			Do not set "FAN OFF" who	n the indoor unit's thermistor is working.		
	INDN CHANGE	 If you change the range of set temperature 	the indication of set temperate	ıre			01			
	NO INDN CHANGE	will vary following the control.			* 11 FROST PREVENTION TEMP	Trown urou	Change or indoor neat exc	hanger temperature to start frost prevention	control.	
	NO THON CHINGS	If you change the range of set temperature will not vary following the control, and keep	the indication of set temperati	ıre		TEMP HIGH TEMP LOW				
13 I/U FAN		, , ,				101 001				
	HI-MID-LO	※ Air flow of fan becomes the three speed of	म - इ.म.) - इ.म.) व्यक्तमा - इ.म इ.म	(f. 8 (f.)	* 12 FROST PREVENTION CONTROL		Working only with the Sing	le split series.		
	HI-LO	※ Air flow of fan becomes the two speed of ¾	d-8a1.			FAN CONTROL ON O	To control frost prevention	the indoor fan tap is raised.		
	HI-MID 1 FAN SPEED	Air flow of fan becomes the two speed of & X Air flow of fan is fixed at one speed.	ni -87 ni .		* 13 DRAIN PUMP LINK	FHIN CONTROL OFF				
		7 III IION OF IAIT IO IIXOG AL ONO OPCOG.			- 10 Insert the Child	26 [○	Drain pump is run during of	poling and dry.		
14 S7→POSITION	_	If you change the remote control function "				© O AND ☆	Drain pump is run during of	poling, dry and heating.		
	4POSITION STOP	you must change the indoor function "04 <	rusi IUN accordingly.			© Ó AND X AND RE © Ó AND RE	Drain pump is run during o	poling, dry, heating and fan.		
	4POSITION STOP FREE STOP	 You can select the louver stop position in the louver can stop at any position. 	ie tour.	,	* 14 T© FAN REMAINING	#ONNU#E	Drain pump is run during of	ooing, ary and tan.		
15 MODEL TYPE	prince 0101	The louver can stop at any position.			- 14 lacturationing	NO REMAINING	After cooling is stopped is	OFF, the fan does not perform extra operati	inn	
	HEAT PUMP	*				0.5 HOUR	After cooling is stopped is	OFF, the fan perform extra operation for ha	If an hour.	
Le Lourness courses1	COOLING ONLY	*				1 HOUR	After cooling is stopped is	OFF, the fan perform extra operation for an	hour.	
16 EXTERNAL CONTROL SET	I	If you input signal into CnT of the indoor pr	ntad airquit hoard from autore	al tho	* 15 T FAN REMAINING	6 HOUR	Atter cooling is stopped is	OFF, the fan perform extra operation for six	hours.	
	INDIVIDUAL	If you input signal into Ch I of the indoor pr indoor unit will be operated independently	according to the input from ex	ai, lile 3	4 10 1% LULU MUTURUM	INO REMAINING I O	After heating is stopped or	heating thermostat is OFF, the fan does no	t norform over o	neration
	FOR ALL UNITS	If you input into CNT of the indoor printed circu	it board from external, all units w	/hich		0.5 HOUR	After heating is stopped or	heating thermostat is OFF, the fan perform	extra operation for	or half an
		connect to the same remote control are opera-	ed according to the input from ex	ternal.		2 HOUR	After heating is stopped or	heating thermostat is OFF, the fan perform	extra operation for	or two ho
17 ROOM TEMP INDICATION SET	LINDICATION OFF				* 16 X: FAN INTERMITTENCE	6 HOUR	After heating is stopped or	heating thermostat is OFF, the fan perform	extra operation f	or six ho
	INDICATION ON	In normal working indication, indoor unit tem	erature is indicated instead of	air flow	- TO TAX LAM THICKNET LENCE	NO REMAINING O				
	0101	(Only the master remote control can be in	ficated.)			zominOFF sminON		or heating thermostat is OFF, the fan perfor	m intermittent op	eration fo
18 **MINDICATION		() In maker formed sention can be in				ZUMI NUTT SMI NUN	with low fan speed after tw	enty minutes' OFF.		
	INDICATION ON	<u> </u>				sminOFF sminON		or heating thermostat is OFF, the fan perfor	m intermittent op	eration fo
	INDICATION OFF	Heating preparation indication should not	oe indicated.		* 17 IPRESSURE CONTROL		with low fan speed after fiv	e minutés' OFF.		
19 %/F SET				,	* IT TERESOURE PRINTINGE	STANDARD I Ж				
	0	Temperature indication is by degree C.				TYPE1 ×	Connected "OA Processin	" type indoor unit, and is automatically defi	ned.	
	L	Temperature indication is by degree F.						.,		
Note(1) * The mark car	nnot use SRK. SRF and	SRR series	ON/OFF butto	n						
	cannot use SRR series.									

How to set function

Stop air-conditioner and press (SET) (MODE) buttons at the same time for over three seconds, and the
"FUNCTION SET ▼" will be displayed.




- 2. Press (SET) button.
- Make sure which do you want to set, "☐ FUNCTION ▼" (remote control function) or "I/U FUNCTION ▲" (indoor unit function).




5. Press (SET) button.

- 6. [On the occasion of remote control function selection]

 - Press ▲ or ▼ button. *No. and function*are indicated by turns on the remote control function table, then you can select from them. (For example)

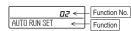

③ Press ○ (SET) button. The current setting of selected function is indicated. (for example) "AUTO RUN ON" ← If "02 AUTO RUN SET" is selected

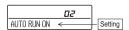

④ Press ▲ or ▼ button. Select the setting.




⑤ Press ◯ (SET)

"SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, Set as the same procedure if you want to set continuously ,and if to finish, go to 7.



7. Press ON/OFF button. Setting is finished.

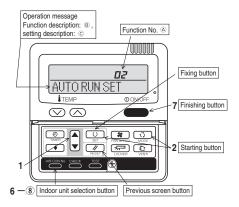

[On the occasion of indoor unit function selection]

① "DATA LOADING" (Blinking for 2 to 23 seconds to read the data)
Indication is changed to "02 FAN SPEED SET".
Go to ②.

[Note]

 If plural indoor units are connected to a remote control, the indication is "I/U 000" (blinking)


The lowest number of the indoor unit connected is indicated.



- (2) Press ▲ or ▼ button. Select the number of the indoor unit you are to set If you select "ALL UNIT ▼", you can set the same setting with all unites.
- (3) Press (SET) button.
- ② Press ▲ or ▼ button.


"No. and function" are indicated by turns on the indoor unit function table, then you can select from them.

(For example)

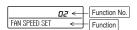

③ Press (SET) button.

The current setting of selected function is indicated. (For example) "STANDARD" \leftarrow If "02 FAN SPEED SET" is selected.

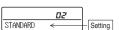

- ④ Press ▲ or ▼ button. Select the setting.
- Press ()(SET) button. "SET COMPLETE" will be indicated, and the setting will be completed.

Then after "No. and function" indication returns, set as the same procedure if you want to set continuously , and if to finish, go to 7.



When plural indoor units are connected to a remote control, press the AIR CON No. button, which allows you to go back to the indoor unit selection screen. (example "I/U 000 ▲")

- It is possible to finish by pressing ON/OFF button on the way, but unfinished change of setting is unavailable.
- During setting, if you press (RESET) button, you return to the previous screen.
- Setting is memorized in the control and it is saved independently of power failure.

[How to check the current setting]

When you select from "No. and function" and press set button by the previous operation, the "Setting" displayed first is the current setting.

(But, if you select "ALL UNIT ▼ ", the setting of the lowest number indoor unit is displayed.)

12.2 Simple wired remote control (RCH-E3)

PJZ000Z272


Ventilation display

This is lit during the ventilation

Setting TEMP display

Error code display

operation.

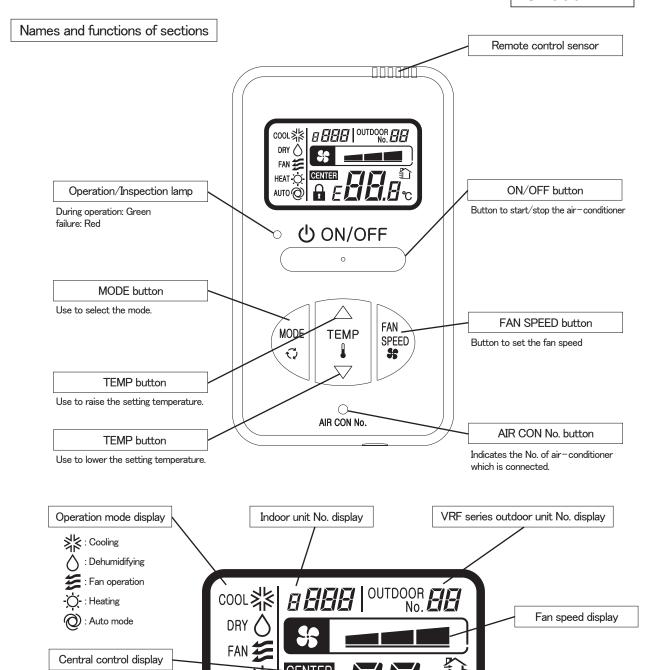

Installation of remote control

pressed.

Displayed when controlling the

Control disable display

The lamp is lit for 3 seconds


when a disabled button is

unit with the central control.

Do not install the remote control at the following places in order to avoid malfunction.


- ${\rm (1)\, Places\ exposed\ to\ direct\ sunlight}$
- (4) Hot surface or cold surface enough to generate condensation
- (2) Places near heat devices
- (5) Places exposed to oil mist or steam directly
- (3) High humidity places
- (6) Uneven surface

Remote control installation dimensions

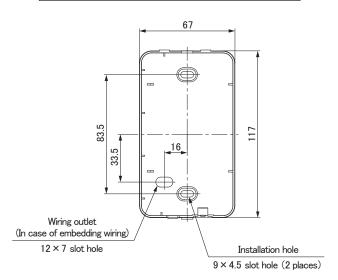


Note: Installation screw for remote control M4 screw (2 pieces)

In case of exposing wiring

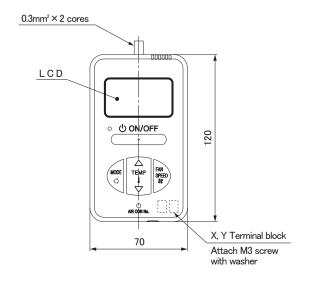


In case of embedding wiring

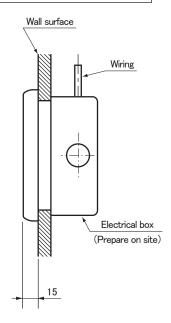


The remote control wiring can be extracted from the upper center. After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file.

Thin part

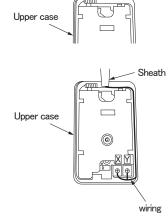

The peeling length of each wiring is as follows:

X wiring : 160mm Y wiring : 150mm

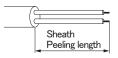

Unit:mm

Wiring specifications

- (1) Wiring of remote control should use $0.3 \text{mm}^2 \times 2$ cores wires or cables. (on–site configuration)
- (2) Maximum prolongation of remote control wiring is 600m.

If the prolongation is over 100 m, change to the size below.

But, the wiring in the remote control case should be 0.3mm^2 (recommended) to $0.5 \text{mm}^2.$

Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire connecting section. Be careful about contact failure.

Length	Wiring thickness
100 to 200m	0.5mm² × 2 cores
Under 300m	0.75mm² × 2 cores
Under 400m	1.25mm² × 2 cores
Under 600m	2.0mm ² × 2 cores

Adapted to **RoHS** directive

Simple Remote Control Installation Manual

PJZ012D069/A


Read together with indoor unit's installation manual.

∴WARNING

• Fasten the wiring to the terminal securely and hold the cable securely so as not to apply unexpected stress on the terminal. Loose connection or hold will cause abnormal heat generation or fire.



Make sure the power source is turned off when electric wiring work. Otherwise, electric shock, malfunction and improper running may occur.

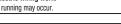

⚠ CAUTION

Do not install the remote control at the following places in order to avoid malfunction.

(1) Places exposed to direct sunlight (2) Places near heat devices (3) High humidity places

(4) Hot surface or cold surface enough to generate condensation (5) Places exposed to oil mist or steam directly (6) Uneven surface

 Do not leave the remote control without the upper case.
 In case the upper cace needs to be detached, protect the remote control with a packaging box or bag in order to keep it away from water and dust.



Accessories	Remote control, wood screw (ϕ 3.5 \times 16) 2 pieces			
Prepare on site	Remote control cord (2 cores) (Refer to [2. Installation and wiring of remote control]) [In case of embedding cord] Electrical box, M4 screw (2 pieces) [In case of exposing cord] Cord clamp (if needed)			

1. Installation procedure

In case of embedding cord


(1) Make certain to remove the screw on the bottom surface of the remote control.




(2) Remove the upper case of the remote control. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed.




(3) Pre-bury the electrical box and remote control cord.

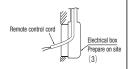

(4) Prepare two M4 screws (recommended length; 12 – 16mm), and install the lower case to the electrical box. Do not use a screw whose screw head is larger than the height of the wall around the screw hole.

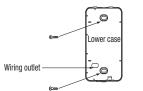

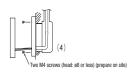

- (5) Connect the remote control cord to the terminal block. Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and Y)
- Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.

In case of exposing cord

Make certain to remove a screw on the bottom surface of the remote control



(2) Remove the upper case of the remote control. Insert a flat-blade screwdriver to a concave portion of the bottom surface of the remote control and slightly twist it, and the case is removed.




(3) The remote control cord can be extracted from the upper center.

After the thin part in the upper side of the remote control upper case is scraped with a nipper or knife, remove burr with a file.



The lower case of the remote control is mounted to a flat wall with two accessory wood screws.

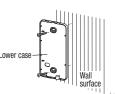

Connect the remote control cord to the terminal block. Connect the terminals (X and Y) of the remote control and the terminals (X and Y) of the indoor unit. (No polarity of X and

The wiring route is as shown in the right.



The wiring in the remote control case should be 0.3 mm² (recommended) to 0.5 mm² at maximum

Further neel off the sheath

The peeling length of each wiring is as follows:

X wiring: 160mm Y wiring: 150mm



- Mount the upper case for restoring to its former state so as not to crimp the remote control cord, and secure with the removed screw.
- In the case of exposing installation, secure the remote control cord to the wall surface with a cord clamp so as not to loosen the remote control cord.

2. Installation and wiring of remote control

- (1) Wiring of remote control should use $0.3 \text{mm}^2 \times 2$ cores wires or cables. (on-site configuration)
- (2) Maximum prolongation of remote control wiring is 600 m.

If the prolongation is over 100m, change to the size below.

But, the wiring in the remote control case should be 0.3mm² (recommended) to 0.5mm². Change the wire size outside of the case according to wire connecting. Waterproof treatment is necessary at the wire


connecting section. Be careful about contact failure. 100 - 200m · · · · · · · · · · · 0.5mm² × 2 cores

Under $400m \cdot \cdot \cdot \cdot \cdot \cdot \cdot \cdot 1.25mm^2 \times 2$ cores Under $600m \cdot 2.0mm^2 \times 2$ cores

3. Master/ slave setting when more than one remote control are used

SW1-1 "ON"


(1) Up to two remote controls can be connected to one unit (or one group) of indoor unit.

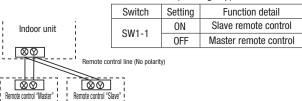

(2) Set the switch SW1-1 of the slave remote control is "Slave" (ON). The factory default is set as "Master" (OFF). (Note) • The remote control thermistor enabled setting can be set only to the master remote control.

Install the master remote control at the position to detect room temperature.

• The air-conditioner operation follows the last operation of the remote control in case of the master / slave setting.

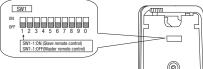

4. The indication when power source is supplied

SW1-1 "0FF"

At the time of turning the power source on, after the light is on for the first 2 seconds, the display becomes as shown below.

The number displayed on the upper side of LCD in the remote control is the software number,

and this is not an error code.



Software number

(The number in the left is one example. Another number may be shown.)

- Then, "88.0 °C" blinks on the remote control until the communication between the remote control and the indoor unit is established.
- In the case of connecting one remote control with one unit (or one group) of indoor unit, make certain to set the master remote control (factory default). If the slave remote control is set, a communication cannot be established.
- If a state where the communication between the remote control and the indoor unit cannot be established continues about for 30 minutes, "E" is displayed. Confirm the wiring of the indoor unit and the outdoor unit and master/slave setting of the remote control.

E


5. Confirmation method for return air temperature

Return air temperature can be confirmed by the remote control operation.

Press AIR CON No. button for over 5 seconds.

"88" blinks on the temperature setting indicator.

("88" blinks for approximately 2 seconds while data are read.)

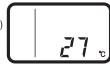

Then, the return air temperature is displayed.

(Example) return air temperature: "27 °C" (blinking)

(Note) For the return air temperature, in the normal case, the return air temperature of the indoor unit is displayed; however, in the case that the remote control thermistor is effective, detected temperature by the remote control thermistor is displayed.

Press () ON/OFF button.

[In the case that the remote thermistor is ineffective and plural indoor units are connected to one remote control 1

(1) Press AIR CON No. button for over 5 seconds. Indoor unit No. indicator: "U 000" (blinking) (Among the connected indoor units, the lowest

number is displayed.) Press TEMP△ or TEMP▽ button. Select the indoor unit No.



Press MODE button.

Dectder the indoor unit No.

(Example) Indoor unit No. indicator: "U 000"

"88" blinks on the temperature setting indicator. (blinking for approximately 2 to 10 seconds while data are read) Then, the return air temperature is displayed. When AIR CON No. is pressed, return to the indoor unit selection display (example, "U 000").


6. Function setting

Each function of the remote control and the indoor unit is automatically set to the initial setting, which is the standard use, on the occasion of connecting the remote control with the indoor unit. In the case of the standard use, the setting change is unnecessary. However, if you whould like to change the initial setting " O ", change the setting for only the item of the function number. Record the setting contents and stored them.

$(1) \quad \hbox{Function setting item by switch on PCB}$

Switch No.	Setting	Setting detail	Initial setting
SW1-1	ON	Slave remote control	
SWI-I	0FF	Master remote control	0
SW1-2	ON	Remote control thermistor enabled	
3W1-2	0FF	Remote control thermistor disabled	0
SW1-3	ON	"MODE" button prohibited	
SW1-3	0FF	"MODE" button enabled	0
SW1-4	ON	"ON/OFF" button prohibited	
3W1-4	0FF	"ON/OFF" button enabled	0

Switch No.	Setting	Setting detail	Initial setting
SW1-5	ON	"TEMP" button prohibited	
3W1-3	0FF	"TEMP" button enabled	0
SW1-6	ON	"FAN SPEED" button prohibited	※ Note 1
	0FF	"FAN SPEED" button enabled	※ Note 1
SW1-7 ON		Auto restart function enabled	
3W1-7	0FF	Auto restart function disabled	0
SW1-8, 9, 0	ON	- Not used	
	0FF	Tivot useu	

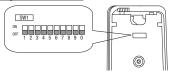

- \bullet As for the slave remote control, function setting is impossible other than SW1-1.
- In the indoor unit with only one fan speed, "FAN SPEED" button cannot be enabled.

$(2) \quad \hbox{Function setting item by button operation} \\$

01ifi	Formation No.		C-Hi N-	C-#i	takat aastaa	Deporter	
Classification	Function No.	Function	Setting No.	Setting	Initial setting		
		Indoor unit fan speed	01	Fan speed: three steps		The fan speed is three steps, * a = = - * a =	
	01		02	Fan speed: two steps (Hi-Lo)	፠ Note 1	The fan speed is two steps, * ■■■ * * ■.	
			03	Fan speed: two steps (Hi-Me)	W 11 1 4	The fan speed is two steps, * • • • • • • • • • • • • • • • • • •	
			04	Fan: one step	※ Note 1	The fan speed is fixed to one step.	
			01	Remote control thermistor: no offset	0		
			02	Remote control thermistor: +3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +3.0°C.	
		Remote control	03	Remote control thermistor: +2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +2.0°C.	
	03	thermistor at the time	04	Remote control thermistor: +1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at +1.0°C.	
		of cooling	05	Remote control thermistor: -1.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -1.0°C.	
			06	Remote control thermistor: -2.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offset temperature at -2.0°C.	
Remote			07	Remote control thermistor: -3.0 °C		At the time of cooling, in the case of remote control thermistor enabled, offsett temperature at -3.0°C.	
control function			01	Remote control thermistor: no offset	0		
TUTICUOTI			02	Remote control thermistor: +3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +3.0°C.	
		Remote control	03	Remote control thermistor: +2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +2.0°C.	
	04	thermistor at the time	04	Remote control thermistor: +1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at +1.0°C.	
		of heating	05	Remote control thermistor: -1.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -1.0°C.	
			06	Remote control thermistor: -2.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -2.0°C.	
			07	Remote control thermistor: -3.0 °C		At the time of heating, in the case of remote control thermistor enabled, offset temperature at -3.0°C.	
			01	No ventilator connection	0		
	05	Ventilation setting	02	Ventilator links air-conditioner		In case of Single split series, by connecting ventilation device to CnT of the indoor printed circuit board (in case of VRF series, b connecting it to CND of the indoor printed circuit board), the operation of ventilation device is linked with the operation of indoor unit.	
	06	"Auto" operation	01	"Auto" operation enabled	※ Note 1		
	06	setting	02	"Auto" operation disabled	※ Note 1	"Auto" operation disabled	
	07 Operation	Operation permission/	01	Disabled	0		
	07	prohibition	02	Enabled		Operation permission/prohibition control is enabled.	
	08	External input	01	Level input	0		
	08	External input	02	Pulse input			
		Fan speed setting	01	Standard	Note2		
	09		02	High speed 1	Note2		
			03	High speed 2	Note2		
			01	No remaining operation	0	After cooling stopped, no fan remaining operation	
	10	Fan remaining operation at the time	02	0.5 hours		After cooling stopped, fan remaining operation for 0.5 hours	
	10	of cooling	03	1 hour		After cooling stopped, fan remaining operation for 1 hour	
		or cooming	04	6 hours		After cooling stopped, fan remaining operation for 6 hours	
			01	No remaining operation	0	After heating stopped or after heating thermostat OFF, no fan remaining operation	
		Fan remaining	02	0.5 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 0.5 hours	
	11	operation at the time of heating	03	2 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 2 hours	
Indoor unit		of ficating	04	6 hours		After heating stopped or after heating thermostat OFF, fan remaining operation for 6 hours	
function			01	No offset	0		
Idilction	4.0	Setting temperature	02	Setting temperature offset + 3.0 °C		The setting temperature at the time of heating is offset by +3.0 °C.	
	12	offset at the time of heating	03	Setting temperature offset + 2.0 °C		The setting temperature at the time of heating is offset by +2.0 °C.	
		neating	04	Setting temperature offset + 1.0 °C		The setting temperature at the time of heating is offset by +1.0 °C.	
			01	Low fan speed	* Note 1	At the time of heating thermostat OFF, operate with low fan speed.	
			02	Setting fan speed		At the time of heating thermostat OFF, operate with the setting fan speed.	
	13	Heating fan controller	03	Intermittent operation	* Note 1	At the time of heatingr thermostat OFF, intermittently operate.	
			04	Fan off		At the time of heating thermostat OFF, a fan will be stopped. When the remote control thermistor is enabled, automatically set to "Fan off". Do not set at the time of the indoor unit thermistor.	
			01	No offset	0		
			02	Return air temperature offset +2.0 °C		Offset the return air temperature of the indoor unit by +2.0 °C.	
			03	Return air temperature offset +1.5 °C		Offset the return air temperature of the indoor unit by +1.5 °C.	
	14	Return air temperature	04	Return air temperature offset +1.0 °C		Offset the return air temperature of the indoor unit by +1.0 °C.	
	''	offset	05	Return air temperature offset -1.0 °C		Offset the return air temperature of the indoor unit by -1.0 °C.	
			06	Return air temperature offset -1.5 °C		Offset the return air temperature of the indoor unit by -1.5 °C.	
			07	Return air temperature offset -1.5 °C		Offset the return air temperature of the indoor unit by -1.3 °C.	
				07	нетит air temperature offset -2.0 °С		Uπset the return air temperature of the indoor unit by -2.0 °C.

Note 1: The symbol " *X " in the initial setting varies depending upon the indoor unit and the outdoor unit to be connected, and this is

Swith No. Function No.	Function	Setting	Product model
	"FAN SPEED"	"FAN SPEED" button prohibited	Product model whose indoor fan speed is only one step
SW1-6	button	"FAN SPEED" button enabled	Product model whose indoor fan speed is two steps or three steps
		Fan speed: three steps	Product model whose indoor unit fan speed is three steps
Remote control function 01	Indoor unit fan	Fan speed: two steps (Hi-Lo)	Product model whose indoor unit fan speed is two steps
nemote control function of	speed	Fan speed: two steps (Hi-Me)	
	.,	Fan: one step	Product model whose indoor unit fan speed is only one step
Remote control function 06	"Auto" operation	"Auto" operation enabled	Product model where "Auto" mode is selectable
nemote control turiculor do	setting	"Auto" operation disabled	Product model without "Auto" mode
Indoor unit function 13	Heating fan	Low fan speed	Product model except FDUS
indoor driit idilction 13	control	Intermittent operation	FDUS

	Note 2. Fall speed of Fright speed Setting						
Г	Fan speed setting	Indoor unit fan speed setting					
	ran speed setting	30 mm m - 30 mm - 30 m	30 mm m - 30 m	St = ## - St = #			
	Standard	Hi — Mid — Lo	Hi — Lo	Hi — Mid			
	High speed 1 · 2	UHi — Hi — Mid	UHi — Mid	UHi — Hi			


Initial setting of some indoor unit is "High speed".

Note 3: As for plural indoor unit, set indoor functions to each master and slave indoor unit. But only master indoor until seceived the setting change of indoor unit function "07 Operation permission/ prohibition" and "08 External input".

7. How to set functions by button operation

1) Stop air-conditioning, and simultaneously press AIR CON No. and \(\tilde{\cap}\) MODE buttons at the same time for over three seconds.

The function number "01" blinks in the upper right.

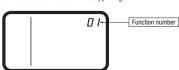

- (2) **Press TEMP** or **TEMP** button. Select the function number.
- (3) **Press 7 MODE** button. Decide the function number.

(4) [In the case of selecting the remote control function (01-06)]

 $\ensuremath{\bigcirc}$ The current setting number of the selected function number blinks (Example)

Function number: "01" (lighting) Setting number: "01" (blinking)



- ② Press TEMP or TEMP button.
 Select the setting number.
- ③ Press **₹ MODE** button.


The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted. (Example)

Function number: "01" (lighting for 3 to 20 seconds) Setting number: "01" (lighting for 3 to 20 seconds)



Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

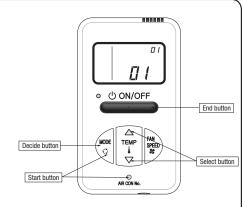

[In the case of selecting the indoor unit function (07-14)]

① "88" blinks on the temperature setting indicators.

(blinking for approximately 2 to 10 seconds while data are read)

After that, the current setting number of the selected function number blinks. (Example)

Function number: "07" (lighting) Setting number: "01" (blinking)




Proceed to $\ensuremath{@}$.

[Note]

a. In the case of connecting one remote control to plural indoor units, the display will be as follows:

Indoor unit No. display: "U 000" (blinking)

(Display the lowest number among the connected indoor units.)

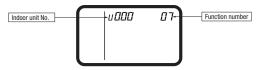

b. Press TEMP△ or TEMP▽ button.

Select the indoor unit No. to be set.

If "U ALL" is selected, the same setting can be set to all units.

c. Press 7 MODE button.

Decide the indoor unit No.

"88" blinks on the temperature setting indicators. (blinking for 2 to 10 seconds while data are read)

When AIR CON No. button is pressed, go back to the indoor unit selection display (for example, "U 000" blinking).

② Press TEMP△ or TEMP▽ button.

Select the setting number

$\begin{tabular}{ll} \hline \end{tabular} \begin{tabular}{ll} \end{tabular} \$

The setting is completed.

Light is on for approximately 3 to 20 seconds while data of the decided function No. and setting No. is transmitted.

(Example)

Indoor unit No.: "U 000" (lighting for 3 to 20 seconds) Function number: "07" (lighting for 3 to 20 seconds) Setting number: "01" (lighting for 3 to 20 seconds)



Then, the screen goes back to the function number blinking indication (1), if the setting is sequentially conducted, continue with the same procedures. If the setting is finished, proceed to (5).

- (5) Press ON/OFF button.
 - The setting is completed.
 - Even if **ON/OFF** button is pressed during setting, the setting is ended. However, any details where the setting has not been completed will be ineffective.
 - The setting contents are stored in the control, and even if the power failure occur, this will not be lost.

[Confirmation method for current setting]

According to the operation, the "setting number" displayed first after selecting "function number" and pressing \(\frac{\tau}{\tau}\) MODE button is the currently set content. (However, in the case of selecting "U ALL" (all units), the setting number of the lowest number among the indoor units is displayed.)

12.3 Wireless kit (FDTC only)

• FDTC series (RCN-TC-5AW-E3)

PJF012D506B

Safety precautions

•Please read this manual carefully before starting installation work to install the unit properly. All of the following are important information to be observed strictly.

MARNING Failure to follow these instructions properly may result in serious consequences such as death, severe injury, etc.

<u>^</u>CAUTION Failure to follow these instructions properly may cause injury or property damage. It could have serious consequences depending on the circumstances.

•The following symbols are used in the text.



Never do.



Always follow the instructions given.

•Keep this manual at a safe place where you can consult with whenever necessary. Show this manual to installers when moving or repairing the unit. When the ownership of the unit is transferred, this manual should be given to the new owner.

WARNING



• Consult your dealer or a professional contractor to install the unit.

Improper installation made on your own may cause electric shocks, fire or dropping of the unit.



• Installation work should be performed properly according to this installation manual. Improper installation work may result in electric shocks, fire or break-down.



• Be sure to use accessories and specified parts for installation work.

Use of unspecified parts may result in drop, fire or electric shocks.



• Install the unit properly to a place with sufficient strength to hold the weight. If the place is not strong enough, the unit may drop and cause injury.



• Be sure to have the electrical wiring work done by qualified electrical installer, and use exclusive circuit.

Power source with insufficient and improper work can cause electric shock and fire.



• Shut OFF the main power source before starting electrical work. Otherwise, it could result in electric shocks, break-down or malfunction.



• Do not modify the unit.

It could cause electric shocks, fire, or break-down.



• Be sure to turn OFF the power circuit breaker before repairing/inspecting the unit.

Repairing/inspecting the unit with the power circuit breaker turned ON could cause electric shocks or injury.



• Do not install the unit in appropriate environment or where inflammable gas could generate, flow in, accumulate or leak.

If the unit is used at places where air contains dense oil mist, steam, organic solvent vapor, corrosive gas (ammonium, sulfuric compound, acid, etc) or where acidic or alkaline solution, special spray, etc. are used, it could cause electric shocks, break-down, smoke or fire as a result of significant deterioration of its performance or corrosion.



• Do not install the unit where water vapor is generated excessively or condensation occurs. It could cause electric shocks, fire, or break-down.



• Do not use the unit in a place where it gets wet, such as laundry room. It could cause electric shocks, fire, or break-down.



• Do not operate the unit with wet hands. It could cause electric shocks.

⚠ WARNING



Do not wash the unit with water.

It could cause electric shocks, fire, or break-down.



Use the specified cables for wiring, and connect them securely with care to protect electronic parts from external forces.

Improper connections or fixing could cause heat generation, fire, etc.



 When installing the unit at a hospital, telecommunication facility, etc., take measures to suppress electric noises.

It could cause malfunction or break-down due to hazardous effects on the inverter, private power generator, high frequency medical equipment, radio communication equipment, etc. The influences transmitted from the remote control to medical or communication equipment could disrupt medical activities, video broadcasting or cause noise interference.



Do not leave the remote control with its PCB case removed.

If dew, water, insect, etc. enter through the hole, it could cause electric shocks, fire or break-down.

♠ CAUTION

- Do not install the wireless kit at the following places in order to avoid malfunction. It could cause break-down or deformation of remote control.
 - (1) Places exposed to direct sunlight
 - (2) Places near heat-generating devices
 - (3) High humidity places
 - (4) Hot surface or cold surface enough to (9) Places where the receiver is affected by infrared generate condensation
 - (5) Places exposed to oil mist or steam directly (10) Places where some object may obstruct the
 - (6) Uneven surface

- (8) Places where the receiver is influenced by fluorescent lamp (especially inverter type) or sunlight
 - rays of any other communication devices
 - communication with the remote control
- (7) Places affected by the direct air flow of the AC unit

1 Accessories Please make sure that you have all of the following accessories. 1) Wireless remote control (RCN-E2) Receiver ⑤ Bracket mounting screw 1 Remote control holder 1 2 PCB 6 Wiring (For communication) 1 (3) Screw for holder RP 2 4 AAA dry cell battery (LR03) 2 ③ PCB mounting support Wiring (For receiving) 1 ⑤ User's manual 1 ④ Bracket (Sheet metal) 8 Installation manual 9 Parts set

(2) Preparation before installation

Setting of PCB


Accessory PCB has the following switches to set the functions. Default setting is shown with

SW1	Prevents interference during multiple setting	ON : Normal OFF : Remote
SW2	Receiver master/slave setting	ON : Master OFF : Slave
SW3	Buzzer	ON : Valid OFF : Invalid
SW4	Auto restart	ON : Valid OFF : Invalid

② Preparation before installation (continued)

To change setting

1. Change the setting of switches on the accessory PCB.

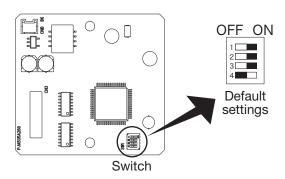

Master/Slave setting when using multiple remote controls

Up to two receivers or wired remote controls can be installed on one indoor unit group. In such occasion, it is necessary to change the setting to slave on either one.

To change the setting on the receiver, refer to the instruction manual of the receiver.

When SW1 is turned to OFF position, change the wireless remote control setting.
 For the method of changing the setting, refer to Setting to avoid mixed communication of Wireless remote control.


*For the receivable area of the signal, refer to (5) Receiver .

3 How to install the receiver

It is possible to install the receiver by replacing the corner lid on the panel.

Preparation before installation


- ① Remove the inlet grille according to the installation manual of the panel.
- ② Remove the corner lid at the refrigerant pipe side.
- 3 Loosen screws (2 pcs.) on the control box of the unit.
- 4 Slide the control lid in the arrow direction, and remove it.

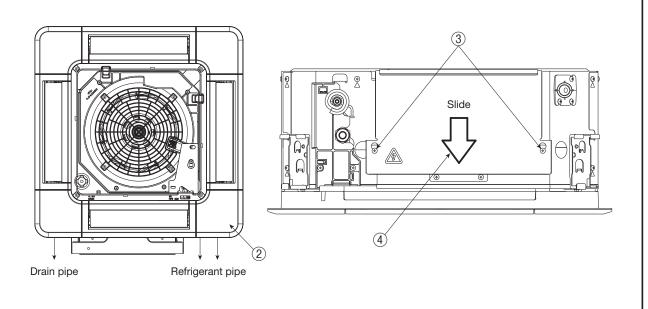

3 How to install the receiver (continued)

Installation of the receiver

- (1) Connect the wire connector (Communication) to CNB on PCB.
- (2) Connect the wire connector (Receiver) to CN3 on PCB.
- (3) Install the PCB mounting supports on the bracket (Sheet metal).
- (4) Install PCB on the PCB mounting supports.
- (5) Insert the bracket (Sheet metal) in one side of control box, and fix the other side with screws as shown in the figure.
- 6 Connect round terminals of wires (Communication) to the terminal block (X, Y) in the control box. The wires have no polarity.
- (7) Fix wires with bands as shown in the figure.
- (8) Cut off the half-blanks on the panel (at 4 places) as shown in the figure.
- (9) Pass the wiring (Communication) through the opening on the panel.
- (ii) Connect connectors of the wiring (Communication) and the receiver.
- (i) Install the receiver on the panel according to the installation manual of the panel.
- (2 pcs.).

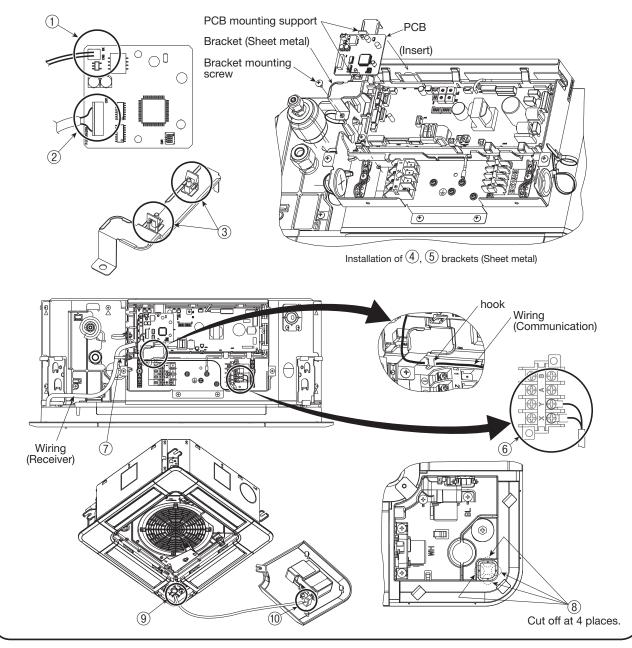


(4) Wireless remote control

Installation tips for the remote control holder


Fix the remote control holder using the screws supplied with this product.

- * Precautions for installing the holder
- · Adjust the position so that it is upright.
- · Ensure that the screw heads are not protruding.
- Do not attach the holder on plaster wall.

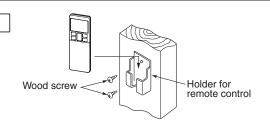

How to insert batteries

- 1. Detach the back lid.
- 2. Insert the batteries. (two AAA batteries)
- 3. Reattach the back lid.

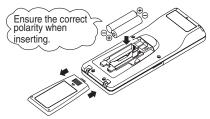

Setting to avoid mixed communication

- 1. Detach the back lid, and remove the batteries.
- 2. Cut off the switching wire in the battery compartment using nippers.
- 3. Insert the batteries, and attach the back lid.



Changing the remote control setting

How to change the Auto Run setting

The Auto Run mode is not available on the building air-conditioning and gas heat pump series (excluding the cooling/heating free multi system).

When using the remote control to operate those models, set the remote control to disable the Auto Run mode.


To disable the Auto Run mode, press the ACL switch while holding down the MODE button, or insert batteries while holding down the MODE button.

* Note: Once the batteries are removed, the setting is reset to the factory default. When the batteries are removed, repeat the steps described above.

Indoor function settings

- 1. How to set indoor functions
 - 1) Press the ON/OFF button to stop the unit.
 - Press the desired one of the buttons shown item 2. while holding down the FUNCTION SETTING switch.
 - ③ Use the selection buttons ▲ and ▼ to change the setting.
 - 4 Press the SET button.

The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.

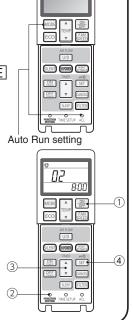

4 Wireless remote control (continued)

2. Setting details The following functions can be set.

Button	Number indicator	Function setting					
	00	Fan speed setting : Standard					
FAN SPEED	01	Fan speed setting: Setting 1 *					
	02	Fan speed setting: Setting 2 *					
	00	Room heating temperature adjustment : Disable					
MODE	01	Room heating temperature adjustment : +1°C					
MODE	02	Room heating temperature adjustment : +2°C					
	03	Room heating temperature adjustment: +3°C					
	00	Filter sign display : OFF					
	01	Filter sign display: 180 hours					
FILTER	02	Filter sign display: 600 hours					
	03	Filter sign display: 1000 hours					
	04	Filter sign display: Operation stop after 1000 hours have elapsed					
U/D	00	Anti draft setting : Disable					
(Up/Down)	01	Anti draft setting : Enable					
OII ENT	00	Infrared sensor setting (Motion sensor setting) : Disable					
SILENT	01	Infrared sensor setting (Motion sensor setting) : Enable					
	00	Infrared sensor control (Motion sensor control) : Disable					
LII DOWED	01	Infrared sensor control (Motion sensor control) : Power control only					
HI POWER	02	Infrared sensor control (Motion sensor control) : Auto OFF only					
	03	Infrared sensor control (Motion sensor control) : Power control + Auto OFF					
	00	Cooling fan residual-period running : Disable					
ON TIMER	01	Cooling fan residual-period running : 0.5 hours					
ON HIVIER	02	Cooling fan residual-period running : 2 hours					
	03	Cooling fan residual-period running : 6 hours					
	00	Heating fan residual-period running : Disable					
OFF TIMER	01	Heating fan residual-period running : 0.5 hours					
	02	Heating fan residual-period running : 2 hours					
	03	Heating fan residual-period running : 6 hours					
	00	Remote control signal receiver LED : Brightness High					
NIGHT SETBACK	01	Remote control signal receiver LED : Brightness Low					
SEIDAUN	02	Remote control signal receiver LED : OFF					

5 Receiver

1 Control multiple indoor units with one remote control

Up to 16 indoor units can be connected.

- 1. Connect the XY terminal with 2 cores wire. As for the size, refer to the note on the right.
- For Packaged air-conditioner series, set the indoor unit address with SW2 on the indoor unit PCB from [0] to [F] so as not to duplicate.

Restrictions on the thickness and length of wire (Maximum length is 600m.)


Standard Within $0.3 \text{ mm}^2 \times 100 \text{m}$ Within $0.5 \text{ mm}^2 \times 200 \text{m}$

Within 0.75mm² × 300m Within 1.25mm² × 400m

Within 2.0 mm² × 600m

For the shop series

For VRF series, set the indoor unit address with SW1, SW2 and SW5-2 on the indoor unit PCB from [000] to [127] so as not to duplicate.

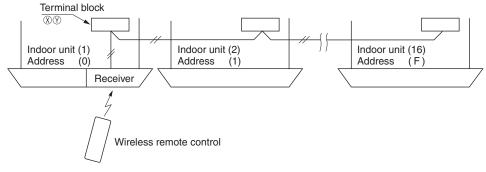


For the building air-conditioning and gas heat pump series

Set the indoor unit and outdoor unit numbers by manually specifying the addresses.

Use the rotary switches SW1 and SW2 provided on the indoor unit PCB (printed circuit board) to set the indoor unit numbers so that they are not duplicated.

Master/Slave setting when using multiple remote control

Up to two receivers can be installed in one indoor unit group.

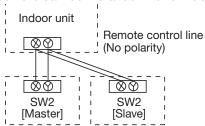


Switch	Setting	Function	
SW2	ON	Master	
3002	OFF	Slave	

Wireless remote control's operable area

1. Standard reachable area of the signal

[Condition] Illuminance at the receiver: 300lux

(When no lighting is installed within 1m of the receiver in an ordinary office)

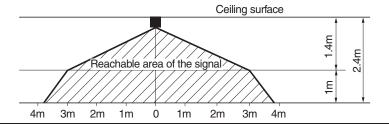

(5) Receiver (continued)


2. Correlation between illuminance at the receiver and reachable area of the signal in a plain view.

The drawing in the right shows the correlation between the reachable area of the signal and illuminance

at the receiver when the remote control is operated at 1m high

under the condition of ceiling height of 2.4m.

When the illuminance becomes double, the area is narrowed down to two thirds.

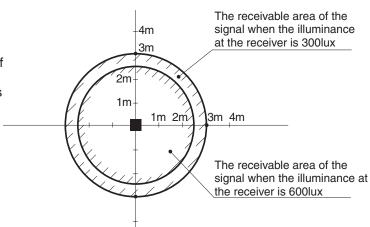

3. Installation tips when several receivers are installed close to one another.

Minimum distance between the indoor units which can avoid cross communication is 5m under the condition of 300lux of illuminance at the receiver.

(When no lighting is installed within 1m of the receiver in an ordinary office)


Backup switch

A backup switch is provided on the receiver section of the panel surface.

When operation from the wireless remote control unit is not possible (due to flat batteries, a mislaid unit, a unit failure), you can use it as an emergency means. You should operate this switch manually.

If pressed while the air-conditioner is in a halt, it will cause the air-conditioner to start operation in the automatic mode (In case of cooling only, it is in the cooling mode).
 Wind speed: Hi fan, Temperature setting: 23°C, Louver: horizontal

2. If pressed while the air-conditioner is in operation, it will stop the air-conditioner.

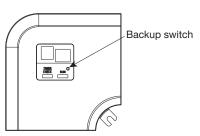

Cooling test run operation

- · After safety confirmation, turn on the power.
- Transmit a cooling operation command with the wireless remote control unit, while the backup switch on the receiver is pressed.
- If the backup switch on the receiver is pressed during a test run, it will end the test run.
- If you cannot operate the unit properly during a test run, please check wiring by consulting with inspection guides.

How to read the two-digit display

On the receiver of a wireless kit, a two-digit (7-segment) display is provided.

- 1. An indication will be displayed for one hour after power on.
- 2. An indication will be displayed for 3.5 seconds after transmitting a "STOP" command from the wireless remote control or the operation of the backup switch to stop the unit.
- 3. An indication appearing in (1) or (2) above will go off as soon as the unit starts operation.
- 4. When there are no error records to indicate, addresses of all the connected units are displayed.
- 5. When there are some error records remaining, the error records are displayed.
- 6. Error records can be cleared by transmitting a "STOP" command from the wireless remote control, while the backup button is pressed.

12.4 Motion sensor kit (FDTC only)

(1) FDTC series (LB-TC-5W-E)

PJF012D504 🛕

⚠ WARNING

Connect the wiring to the PCB in the control box on the indoor unit and fix the wiring securely so as not to apply unexpected stress on the PCB.
Loose connection or fixing will cause abnormal heat generation or fire.



Make sure the power source is turned off during electrical wiring work.
 Otherwise, electric shock, malfunction and abnomal operation may occur.



A CAUTION

- Do not install the motion sensor kit at the following places in order to avoid malfunction.
 - (1) Places exposed to direct sunlight
 - (2) Places near heat-generating devices
 - (3) High humidity places
 - (4) Hot surface or cold surface enough to generate condensation
 - (5) Places directly exposed to oil mist or steam
 - (6) Places affected by the direct air flow of the indoor unit
 - (7) Places where the motion sensor may be influenced by fluorescent lamp or sunlight
- (8) Places where the motion sensor may be affected by infrared rays of any other communication devices



- (9) Places where some object may obstruct the motion sensor
- (10) Places where there may be impact on the motion sensor
- (11) Places with strong radio wave or static electricity
- (12) Dusty place where the motion sensor lens may become tainted or be damaged
- Do not leave the motion sensor without the cover.
 In case the cover needs to be detached, protect the motion sensor with a packaging or bag in order to keep it away from water and dust.




Attention

- Instruct the customer how to operate the motion sensor kit correctly by referring to the instruction manual.
- For the installation method of the air-conditioner itself, refer to the installation manual enclosed in the package.

1 Accessories

Please make sure that all components are in the package.

Motion sensor

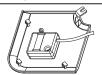


1

2 Installing the motion sensor

It is possible to install the motion sensor by replacing the corner lid on the panel.


The detectable area

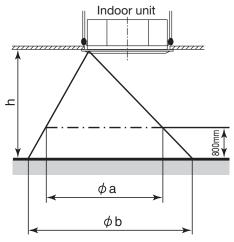

Height of the ceiling	h[m]	2.7	3.5	4.0
Detectable area①	ϕ a[m]	about 4.5	about 6.4	about 7.6
Detectable area②	ϕ b[m]	about 6.4	about 8.3	about 9.5


Preparation before installation

- ① Remove the inlet grille according to the installation manual of the panel.
- ② Remove the corner lid at the drain pipe side.
- ③ Loosen screws (2 pcs) on the control box of the unit. (It is not necessary to remove the screws.)
- 4 Slide the control lid in the arrow direction, and remove it.

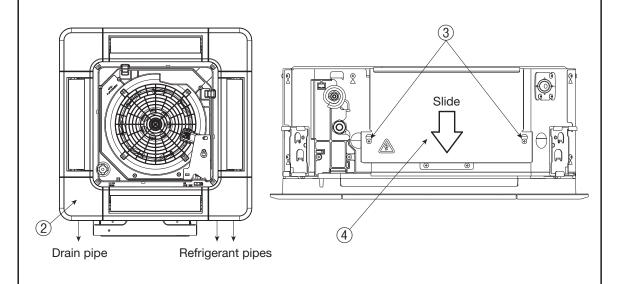

Installation of the motion sensor

- ① Cut the half blanking (4 sections) of the panel as shown in the following figure.
- ② Pass the motion sensor wiring through the opening of the panel.
- ③ Connect the wiring connector to CNL (3P, black) on the PCB in the control box.
- 4) Fix the wiring with a band as shown below.
- ⑤ Install the motion sensor on the panel according to the installation manual of the panel.
- ⑥ Install the control lid with care not to pinch the wiring, and reinstall the control lid with screws (2 pcs.).

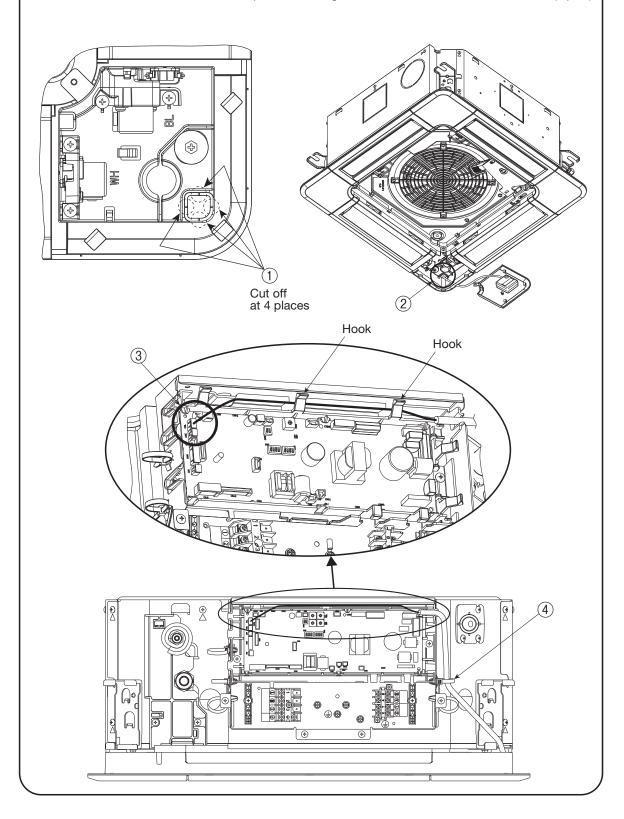

3 Setting the motion sensor

The motion sensor will not function if it is only installed. Set the function of the motion sensor by the wired or wireless remote control. Refer to the manual instruction of each remote control for the setting procedure.

Note: It is not possible to set by the following remote control models or older ones.

Wired:RC-EX1A, RC-E5, RCH-E3

Wireless: RCN-E1R

PJZ012A164

SAFETY PRECAUTIONS

⚠ WARNING

If a child, person with disease or other persons needed for assist uses this product, people around the person should take sufficient care.



A halt of the air-conditioner due to abnormal situation or motion sensor's control may cause a feeling of sickness or accident.

ATTENTION


- The sensor may not detect a person near the border of detection range.
- Installation near an object with a different temperature from the surrounding may cause a false detection of human.
- Due to correction of temperature setting, some people may feel chilly.

This product uses infrared sensor to detect person's activity level to support control of air-conditioner. Please set the control you like from the remote control.

Indoor unit control	Detective situation	Description of control	Display of eco touch remote control
① Power control	Activity level is large	setting for conflict.	Power control ON
Tower control	Activity level is small	Raise the indoor temperature setting for energy-saving.	Power control ON
② Auto-off	No one is detected for 1 hour	Stop operation and stand by	In auto-off mode
2 Auto-on	No one is detected for 12 hours	Stop operation	-
1 + 2	Any combination of the above	Any of the above	Any of the above
All disabled (default setting)	-	Standard control	-

If the sensor is disconnected or defective, the control will be set as if it no detects (or less) activity level.


Refer to the next section for setting method.

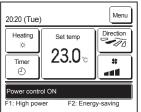

When power control is enabled

The amount of human motion is detected by a motion sensor to adjust the Set temp.

During power control, "Power control ON" will be displayed on the message display.

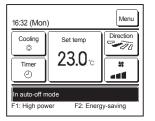

When auto-off is enabled

The unit will enter the "Operation wait" state when an hour has elapsed since the last time a human presence was detected and will be in "Complete stop" state after another 12 hours.


"Operation wait"...The unit stops but will resume operation when human presence is detected. When the unit is in "Complete stop", "In auto-off mode" will be displayed on the message display.


"Complete stop"...When auto-off is enabled, the unit stops. The unit will not resume operation even when human presence is detected.


The message "In auto-off mode" will disappear from the message display, and the operation lamp will turn off.

Control setting (from eco touch remote control)

Refer to the installation manual for eco touch remote control to activate the infrared sensor (motion sensor).
 TOP screen Menu ⇒ Service setting ⇒ Installation settings ⇒ Service password

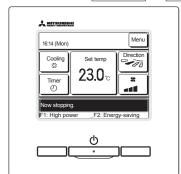


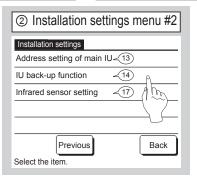

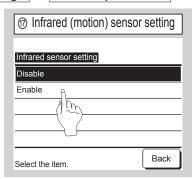

- Refer to the installation manual for eco touch remote control to set control mode.
- Infrared sensor (motion sensor) control (for IUs with motion sensors)

 Presence of humans and the amount of motion are detected by a motion sensor to perform various controls.
- When the R/C is set as the sub R/C, the infrared sensor (motion sensor) control cannot be set.

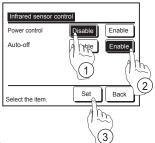

Tap the Menu button on the TOP screen and select Energy-saving setting
⇒ Infrared sensor control or Motion sensor control.

The Infrared sensor control screen and contents of the current settings are displayed.

- 1) Enable/disable power control.
- ② Enable/disable auto-off.
- ③ After you set each item, tap the Set button. The display returns to the Energy-saving setting menu screen.


Control setting (from wireless remote control)


■ Refer to the installation manual for wireless remote control to enable motion sensor in Indoor function settings

Indoor function settings

- 1. How to set indoor functions
 - 1) Press the ON/OFF button to stop the unit.
 - ② Press the desired one of the buttons shown item **2.** while holding down the FUNCTION SETTING switch.
 - ③ Use the selection buttons, ▲ and ▼, to change the setting.
 - 4) Press the SET button.
 - The buzzer on the remote control signal receiver beeps twice, and the LED lamp flashes four times at two-second intervals.



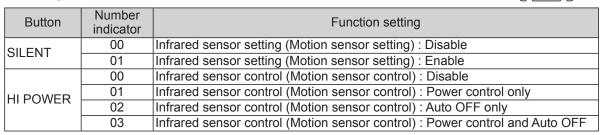

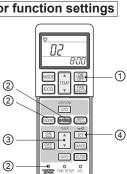

12.5 Interface kit (SC-BIKN2-E)

* When RC-EX3A is connected, please use SC-BIKN2-E by all means.

RKZ012A099

Accessories included in package

Be sure to check all the accessories included in package.

No.	Part name	Quantity
1	Indoor unit's connection cable (cable length: 1.8m)	1
2	Wood screws (for mounting the interface: φ 4x 25)	2
3	Tapping screws (for the cable clump and the interface mounting bracket)	3
4	Interface mounting bracket	1
⑤	Cable clamp (for the indoor unit's connection cable)	1
6	CnT terminal connection cable (total cable length: 0.5m)	1

Safety precautions

Before use, please read these Safety precautions thoroughly before installation.

• All the cautionary items mentioned below are important safety related items to be taken into consideration, so be sure to observe them at all times.

⚠Warning Incorrect installation could lead to serious consequences such as death, major injury or environmental destruction.

Symbols used in these precautions



Always go along these instruction.

After completed installation, carry out trial operation to confirm no anomaly, and ask the user to keep this installation manual in a good place for future reference.

$\dot{\mathbb{N}}$

Warnings



● Installation must be carried out by a qualified installer.

If you install it by yourself, it may cause an electric shock, fire and personal injury, as a result of a system malfunction.

● Install it in full accordance with the installation manual.

Incorrect installation may cause an electric shock, fire and personal injury.

 Electrical work must be carried out by a qualified electrician in accordance with the technical standard for electrical equipment, the indoor wiring standard and this installation manual.

Incorrect installation may cause an electric shock, fire and personal injury.

● Use the specific cables for wiring. And connect all the cables to terminals or connectors securely and clamp them with cable clamps in order for external forces not to be transmitted to the terminals directly.


Incomplete connection may cause malfunction, and lead to heat generation and fire.

• Use the original accessories and specified components for installation.


If the parts other than those prescribed by us are used, it may cause an electric shock, fire and sersonal injury.

Connecting the indoor unit's connection cable to the interface

- ①Remove the upper case of the interface.
 - Remove 2 screws from the interface casing before removal of upper casing.
- ②Connect the indoor unit's connection cable to the interface.
 - Connect the connector of the indoor unit connection cable to the connector on the interface's circuit board.
- 3Fix the indoor unit's connection cable with the cable clamp.
 - Cable can be brought in from the top or from the back.
 - Cut out the punch-outs for the connection cables running into the casing with cutter.
- (4) Connect the indoor unit's connection cable to the indoor control PCB.
 - Connect the indoor unit's connection cable to the indoor control PCB securely.
 - Clamp the connection cable to the indoor control box securely with the cable clamp provided as an accessory.
 - Regarding the cable connection to the indoor unit, refer to the installation manual for indoor unit.

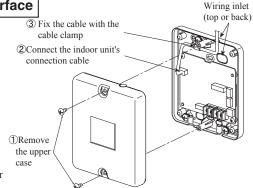

Name of each part of the interface

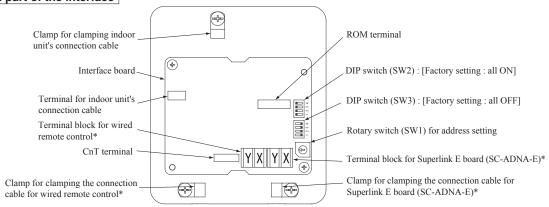

*Either the connection cables of Superlink E board (SC-ADNA-E) or of wired remote control is connectable.

			-			
	Switch	Setting	Function	Switch	Setting	Function
	SW2-1	ON**	CnT level input	SW2-3	ON**	External input (CnT input)
SW2-1	OFF	CnT pulse input	3 W 2-3	OFF	Operation permission/prohibition (CnT input)	
	SW2-2	ON**	Wired remote control : Enable	SW2-4	ON**	Annual cooling : Enable***
	3 W 2-2	OFF Wired remote control : Disable		3 W 2-4	OFF	Annual cooling : Disable***

^{**} Factory setting

*** Indoor fan control at low outdoor air temperature in cooling


Wiring inlet

Installation of the interface

- Install the interface within the range of the connection cable length (approximately 1.3m) from the indoor unit.
- Be sure not to extend the connection cable on site. If the connection cable is extended, malfunction may occur.
- Fix the interface on the wall, pillar or the like.
- Don't install the interface and wired remote control at the following places.
 - OPlaces exposed to direct sunlight
 - OPlaces near heating devices
 - OHigh humidity places
 - OSurfaces where are enough hot or cold to generate condensation
 - OPlaces exposed to oil mist or steam directly
 - OUneven surface


Mounting the interface directly on a wall

- ①Mount the lower casing of the interface on a flat surface with wood screws provided as standard accessory.
- 2 Mount the upper casing.

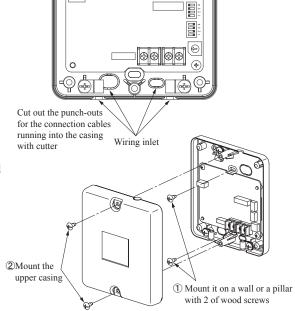


Recessing the interface in the wall

- ①Recess the electrical box (procured locally) and connection cables in the wall.
- ②Mount the lower casing of the interface to the electrical box with M4 screws (procured locally).
- 3 Mount the upper casing.

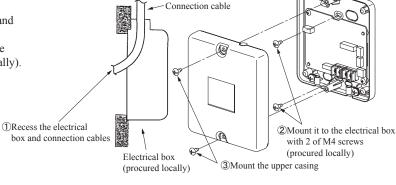

Mounting the interface with the mounting bracket

- ①Mount the upper casing.
- ②Mount the mounting bracket to the interface with tapping screws provided as standard accessory.
- 3Mount the mounting bracket on wall or the like with wood screws provided as standard accessory.

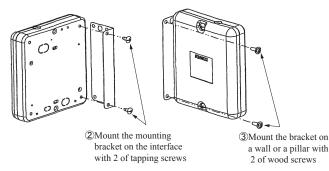


Installation check items

- ☐ Are the connection cables connected securely to the terminal blocks and connectors?
- ☐ Are the thickness and length of the connection cables conformed with the standard?

Functions of CnT connector

It is available to operate the air-conditioner and to monitor the operation status with the external control unit (remote display) by sending the input/output signal through CnT connector on the indoor control PCB.


- (1) Connect a external remote control unit (procured locally) to CnT terminal.
- ②In case of the pulse input, switch OFF the DIP switch SW2-1 on the interface PCB.
- 3When setting operation permission/prohibition mode, switch OFF the DIP switch SW2-3 on the interface PCB.

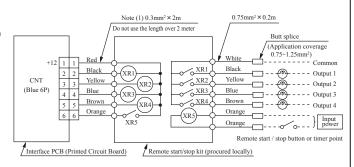

- Output signal Input/ Function Content Relay ON/OFF Output 1 Operation output XR₁ ON During air-conditioner operation Output 2 Heating output XR₂ ON During heating operation Output 3 | Compressor operation output XR₃ ON During compressor running Output 4 Malfunction output XR₄ ON During anomalous stop
- ■XR₁₋₄ are for the DC 12V relay
- XR5 is a DC 12/24V or AC 220-240V relay
- CnT connector (local) maker, model

Connector	Molex	5264-06
Terminals	Molex	5263T

Immut/	Function	SW2-1		SW2-3			Air-	Operation by	
Input/ Output		Setting		Setting	Input signal		Content	conditioner	remote control
op				betting	Level/Pulse	XR5	Content		
				ON*		OFF→ON	External input	ON	
		ON*	ON* Level input		Level	$\text{ON} {\rightarrow} \text{OFF}$		OFF	Allowed
				OFF		OFF→ON	Operation permission	OFF	
Input	External control					ON→OFF	Operation prohibition	OFF	Not allowed
	input		OFF Pulse input	ON*	Pulse	OFF→ON	OFF→ON External input	OFF→ON	
		OEE						ON→OFF	Allowed
		OFF		OFF	Level	OFF→ON	Operation permission	ON	
						ON→OFF	Operation prohibition	OFF	Not allowed

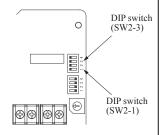


In case of the remote control (RC-EX3 or later model), the external outputs (1-4) and the external input can be changed using the function setting of remote control. For the setting method, refer to the installation manual. Also refer to the technical manual to know how it is adapted to the function setting for the external outputs and input, at the indoor unit side.

Connection of Superlink E board

Regarding the connection of Superlink E board, refer to the installation manual of Superlink E board. For electrical work, power source for all of units in the Superlink system

must be turned OFF. ①Switch ON the DIP switch SW2-2 (Factory setting: ON) on the interface PCB.


Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

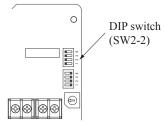

Names of recommended signal wires

Vinyl insulated wire vinyl sheathed cable for control

2 Wiring connection between the interface and the Superlink E board.

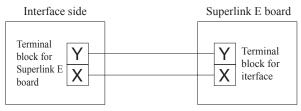

Within 200 m $0.5 \text{ mm}^2 \times 2 \text{ cores}$ Within 300 m $0.75 \text{ mm}^2 \times 2 \text{ cores}$

Shielded wire

Vinyl cabtyre round cord

Vinyl cabtyre round cable

No.

2

Within 400 m $1.25 \text{ mm}^2 \times 2 \text{ cores}$

3Clamp the connection cables with cable clamps.

Within 600 m $2.0 \text{ mm}^2 \times 2 \text{ cores}$

^{*} Factory setting

DIP suitch

(SW2-2)

0

Connection of wired remote control

Regarding the connection of wired remote control, refer to the installation manual of wired remote control.

①Switch ON the DIP switch SW2-2 (Factory setting: ON) on the interface PCB.

Caution: Wireless remote control attached to the indoor unit can be used in parallel, after connecting the wired remote control. However, some of functions other than the basic functions such as RUN/STOP, temperature setting, etc. may not work properly and may have a mismatch between the display and the actual behavior.

②Wiring connection between the interface and the wired remote control.

Installation and wiring of wired remote control

- (A) Install the wired remote control with reference to the attached installation manual of wired remote control.
- $\bigcirc 0.3$ mm² \times 2 cores cable should be used for the wiring of wired remote control.
- © Maximum length of wiring is 600m.

If the length of wiring exceeds 100m, change the size of cable as mentioned below. 100m-200m: $0.5mm^2 \times 2$ cores, 300m or less: $0.75mm^2 \times 2$ cores, 400m or less: $1.25mm^2 \times 2$ cores, 600m or less: $2.0mm^2 \times 2$ cores However, cable size connecting to the terminal of wired remote control should not exceed $0.5mm^2$. Accordingly if the size of connection cable exceeds $0.5mm^2$, be sure to downsize it to $0.5mm^2$ at the nearest section of the wired remote control and waterproof treatment should be done at the connecting section in order to avoid contact failure.

- Don't use the multi-core cable to avoid malfunction.
- (E) Keep the wiring of wired remote control away from grounding (Don't touch it to any metal frame of building, etc.).
- © Connect the connection cables to the terminal blocks of the wired remote control and the interface securely (No polarity).
- 3 Clamp the connection cables with cable clamps.

Control of multiple units by a single wired remote control

Multiple units (up to 16) can be controlled by a single wired remote control. In this case, all units connected with a single wired remote control will operate under the same mode and same setting temperature.

- ①Connect all the interface with 2 cores cables of wired remote control line.
- ②Set the address of indoor unit for remote control communication from "0" to "F" with the rotary switch SW1 on the interface PCB.
- ③ After turning the power ON, the address of indoor unit can be displayed by pressing AIR CON No. button on the wired remote control.

 Make sure all indoor units connected are displayed in order by pressing

 or □ button.

Master/Slave setting wired when 2 of wired remote control are used

Maximum two wired remote control can be connected to one indoor unit (or one group of indoor units)

- ①Set the DIP switch SW1 on the wired remote control to "Slave" for the slave remote control. (Factory setting: Master)
 - O Caution: Remote control sensor of the slave remote control is invalid.
- When using the wireless remote control in parallel with the wired remote control; Since temperature setting range of wired remote control is different from that of wireless remote control, please adjust the setting range of wired remote control to be the same setting range of wireless remote control by following procedure. (The set temperature may not be displayed correctly on the wireless remote control, unless change of temperature setting range is done.)
 Changing procedure of temperature setting range is as follows.

How to set upper and lower limit of temperature setting range

- 1. Stop the air-conditioner, and press (SET) and (MODE) button at the same time for 3 seconds or more.
 - The indication changes to "FUNCTION SET▼"
- Press button once, and change to the "TEMP RANGE ▲" indication.
 Press (SET) button, and enter the temperature range setting mode.
- Fless (SE1) button, and effect the temperature range set
 Confirm that the "Upper limit ▼" is shown on the display.
- 5. Press (SET) button to fix.
- 6. ①Indication: "७∨∧ SET UP"→"UPPER 28°C ∨∧"
 - ②Select the upper limit value 30°C with temperature setting button △."UPPER30°C∨" (blinking)
 - ③Press (SET) button to fix. "UPPER 30°C" (Displayed for two seconds)


 After the fixed upper limit value displayed for two seconds, the indication will returm to "UPPER LIMIT ▼".
- 7. Press button once, "LOWER LIMIT ▲ " is selected, press (SET) button to fix.

 ①Indication: "♠∨ ∧ SET UP" → "LOWER 20°C ∨ ∧"
 - ②Select the lower limit value 18°C with temperature setting button ☑."LOWER18°C ∧" (blinking)
 - ③Press (SET) button to fix. "LOWER 18°C" (Displayed for two seconds)

 After the fixed lower limit value displayed for two seconds, the indication will returm to "LOWER LIMIT▼"
- 8. Press ON/OFF button to finish.

Temperature setting range

Mode	Temperature setting range
Cooling, Heating, Dry, Auto	18-30℃

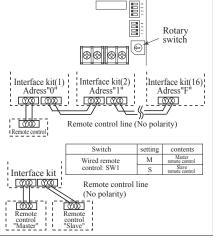

• It is possible to quit in the middle by pressing <u>ON/OFF</u> button, but the change of setting is incompleted.

Previous button

IIIIII

• During setting, if pressing (RESET) button, it returns to the previous screen.

TEMP RANGE



12.6 Superlink E board (SC-ADNA-E)



- Read and understand the instructions completely before starting installation.
- Refer to the instructions for both indoor and outdoor units.

Safety precautions

- Carefully read "Safety precautions" first. Follow the instructions for installation.
- Precautions are grouped into "Warning 🗥 and "Caution 🖈". The "Warning 🗥 group includes items that may lead to serious injury or death if not observed. The items included
- in the "Caution A" group also may lead to serious results under certain conditions. Both groups are crucial for safety installation. Read and understand them carefully.

 After installation, conduct the test operation of the device to check for any abnormalities. Describe how to operate the device to the customer following the installation instruction manual. Instruct the customer to keep this installation instruction for future reference.

∕.\Warning


- This device should be installed by the dealer where you purchase the device or a licensed professional shop. If the device is incorrectly installed by the
- customer, it may result in electric shock or fire.

 Install the device carefully following the installation instruction. If the device is incorrectly installed, it may result in electric shock or fire.
- Use the accessory parts and specified parts for installation. If any parts that do not match the specifications are used, it may result in electric shock or fire.
- A person with the electrical service certification should conduct the service based on the "Technical standards for electrical facilities", "Electrical Wiring Code", and the installation instruction. If the work is done incorrectly, it may result in electric shock or fire
- Wiring should be securely connected using the specified types of wire. No external force on the wire should be applied to any terminals. If a secure connection is not achieved, it may result in electric shock or fire.

1 Application

Indoor-to-outdoor three core communication specification type 3 (since

Accessories

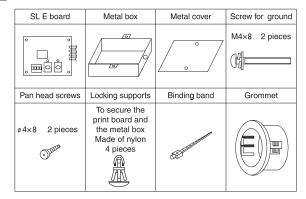

3 Function

Allowing the central control SL1N-E, SL2NA-E, and SL4-AE/BE to control and monitor the commercial air-conditioner unit.

4 Control switching

Settings can be changed by the DIP switch SW3 on the SL E board as in the following

Switch	Symbol	Switch	Remarks	
SW3	1	ON	Master	
		OFF (default)	Slave	
	2	ON	Fixed previous protocol	
		OFF (default)	Automatic adjustment of Superlink protocol	
	3	ON	Indicates the forced operation stop when abnormality has occurred.	
		OFF (default)	Indicates the status of running/stop as it is, when abnormality has occurred.	
	4	ON	The hundredth address activated "1"	
		OFF (default)	The hundredth address activated "0"	

.↑Caution


- Provide around connection.
- The ground line should never be connected to the gas supply piping, the water supply piping, the lightning conductor rod, nor the telephone ground. If the grounding is improper, it may result in electric shock.
- Do not install the device in the following locations.
 - 1.Where there is mist/spray of oil or steam such as kitchens. 2.Where there is corrosive gases such as sulfurous acid gas.

 - 3. Where there is a device generating electromagnetic waves These may interfere with the control system resulting in the device becoming
 - Where flammable volatile materials such as paint thinner and gasoline may exist or where they are handled. This may cause a fire.

5 Connection outline

Note for setting the address

- Set the address between 00 and 47 for the previous Superlink connection and between 000 and 127 for the new Superlink connection. (*1)
- Do not set the address overlapping with those of the other devices in the network. (The default is 000)

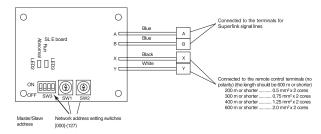


(*1) Whether the actual link is either the new Superlink or the previous Superlink depends on the models of the connected outdoor and indoor units. Consult the agent or the dealer.

Signal line specification

Communication method	Previous Superlink	New Superlink
Line type	MVVS	MVVS
Line diameter	0.75 - 1.25mm ²	0.75/1.25mm ²
Signal line (total length)	up to 1000m	up to 1500/1000m (*2)
Signal line (maximum length)	up to 1000m	up to 1000m

- (*2) Up to 1500m for 0.75mm², and up to 1000m for 1.25mm². Do not use 2.0mm2. It may cause an error.
- (*3) Connect grounding on both ends of the shielding wire. For the grounding method, refer to the section "6 Installation".


- Set the Superlink network address with SW1 (tens place), SW2 (ones place), and SW3 (hundreds place).
- (2) Set the SL E board SW3-1 to be ON (Master) when using this without any remote control (no wired remote controller nor wireless remote control).
- (3) Set up the plural master/slave device using the DIP switches on the indoor unit board.
- (4) Set up the remote control master/slave device using the slide switch on the remote control board.
- (5) Set up "0" to "F" using the address rotary switch on the indoor unit board when controlling the indoor unit with the multiple remote control.

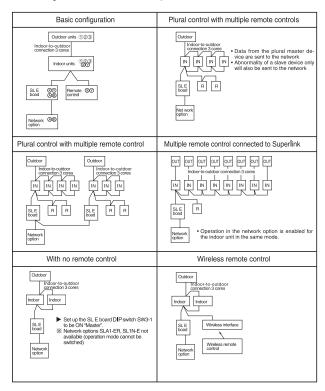

6 Installation

- 1. When using the metal box (mounted on the indoor unit / mounted on the back of the remote control):
 - (1) Mount the SL E board in the metal box using the locking supports.
 - (2) Wiring should go through the provided grommet since then through the wiring to the hole on the Metal box.


Secure the grommet after inserting the grommet into the Metal box as shown in below figure, then tie the wiring at the outlet of the unit using a binding band.

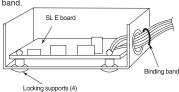


▲ When installed outside the indoor unit, put the metal cover on.




▲ When installed on the back of the remote control, mount it directly on the remote control bottom case.

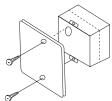

Connect grounding. Connect grounding for the power line to Ground ①, and grounding for the signal line to Ground ② or to the Ground on the indoor unit control box.

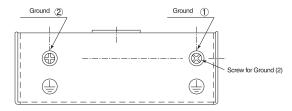

- 2. When connecting to the indoor unit control box (ceiling-concealed type and FDT type only):
 - (1) Mount the SL E board in the control box using the locking supports.
 - (2) Remove 6 bands from the box and put the wiring through the bands to be secured.

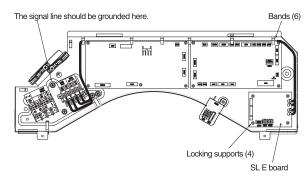

Electrical shock hazard! make sure to turn the power off for servicing. Be cautious so that no abnormal force should be applied to the wiring. Do not let the SL E board hung by the wiring. Do not damage the board with a screwdriver.

The board is sensitive to static electricity. Release the static electricity of your body before servicing.

(You can do this by touching the control board which is grounded).

Location of installation

Install the device at the location where there are no electromagnetic waves nor where there is water and dust. The specified temperature range of the device is 0 to 40° C. Install the device at the location where the ambient temperature stays within the range. If it exceeds the specification, make sure to provide solution such as installing a cooling fan. When used outside of the range, it may cause abnormal operation.

7 Indicator display

Check the LED 3 (green) and LED 2 (red) on the SL E board for flashing.

SL E board LEDs			Display on the
Red	Green	Inspection mode	integrated network control device
Off	Flashing	Normal communication	
Off	Off	Disconnection in the remote control communication line (X or Y) Short-circuit in the remote control communication line (between X and Y) Faulty indoor unit remote control power Faulty remote control communication circuit Faulty CPU on SL E board	No corresponding unit number
One flash	Flashing	Disconnection in the Superlink signal line (A or B) Short-circuit in the Superlink signal line (between A and B) Faulty Superlink signal circuit	
Two flashes	Flashing	Faulty address setting for the SL E board (Set up the address for previous SL E board : more than 48 new SL E board : more than 128)	
Three flashes	Flashing	SL E board parent not set up when used without a remote control Faulty remote control communication circuit	E1
Four flashes	Flashing	Address overlapping for the SL E board and the Superlink network connected indoor unit	E2
Off	Flashing	Number of connected devices exceeds the specification for the multiple indoor unit control	E10

12.7 Ceiling concealed type (SRR) option parts

(1) Bottom air inlet kit

This manual contains installation points for BOTTOM AIR INLET KIT manufactured by MHI. Carry out the work following the instructions below.

Keep this manual properly with USER'S MANUAL provided with the indoor unit.

CAUTION

- After unpacking, carry out this work on the ground.
- Do not carry out the work during operation, or there is a danger of being entangled in the rotating parts and getting injured.
- Be sure to cut off the power and stop the unit before maintenance.


1) Applicable model of unit and type of BOTTOM AIR INLET KIT

BOTT	OM AIR INLET KIT	UT-BAT1EF	UT-BAT2EF	UT-BAT3EF
Model	for FDUT	15,22,28,36	45,56	71
Model	for SRR	25,35	50,60	

2) Parts list of BOTTOM AIR INLET KIT

Rear panel	Fan guard	Parts set (Tapping screw)
1 pc.	1 pc.	4mm(diameter)×12mm(length) UT-BAT1EF 12 pcs. UT-BAT2EF 12 pcs. UT-BAT3EF 14 pcs.


- 3) Installation Points
 - (Figure shows the state that the unit is placed on a floor. Top and bottom are inverted after installing the unit.)
 - (i) Place the unit as shown below.
 - (ii) Remove the bottom plate and duct flange plate of rear from the unit. Keep the removed tapping screws to reuse later.

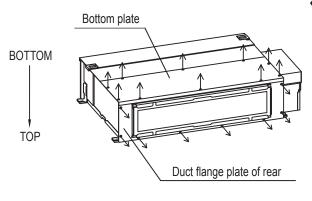

◆The number of tapping screws to be removed

Model		Bottom	Rear
FDUT	15,22,28,36	10 pcs.	8 pcs.
	45,56	10 pcs.	9 pcs.
	71	12 pcs.	8 pcs.
SRR	25,35	10 pcs.	8 pcs.
	50,60	10 pcs.	9 pcs.

(iii) Install rear panel by using removed tapping screws in process(2). Install fan guard by using tapping screws in parts set.

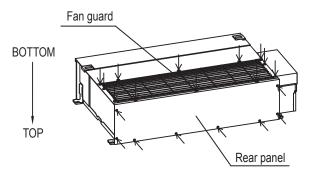

◆The number of tapping screws to be tightened

Model		Fan guard	Rear panel
FDUT	15,22,28,36	12 pcs.	8 pcs.
	45,56	12 pcs.	9 pcs.
	71	14 pcs.	8 pcs.
SRR	25,35	12 pcs.	8 pcs.
	50,60	12 pcs.	9 pcs.

(2) Remote sensor kit (SC-THB-E3)

Sensor for return air temperature detection is located in the air inlet of the indoor unit.

Use the remote sensor kit SC-THB-E3, and install it on the suitable wall so the temperature of the room can be accurately detected.

This remote sensor kit is to be used as an alternative to the pre-installed sensor of the indoor unit.

1) Accessory parts

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Sensor box	1	4	Band	1
2	Cable (8m)	1	(5)	Screw (4×16)	2
3	Tape (Double -stick)	1			


*Installation manual in the SC-THB-E3 is not it for SRR ZM-S.

2) Selection of installation position


- •The thermistor for detecting room temperature is located inside the remote sensor box.
- •Do not install the remote sensor in places where.
- Average room temperature can not be detected.
- A heat source is located nearby.
- The wall temperature is different from average room temperature.
- Affected by the outdoor air when opening / closing the door, etc.
- The discharge air from indoor unit blows directly.
- Covered by curtains or other obstacles.
- Exposed to the sun.
- Exposed to water, humidity or dew.
- Mount the remote sensor vertically on the wall surface, etc.
- Run the sensor cable in a place where the power cable or electrical noise will not cause any abnormal operation.

3) Installation procedure


- (a) Insert the tip of slotted screwdriver to the gap between the cover and base of the sensor box (①), and twist it to disassemble.
- (b) Fix the base to the wall with screws (5).
- (c) Connect the cable (2) to the terminal block in the base. (No polarity)

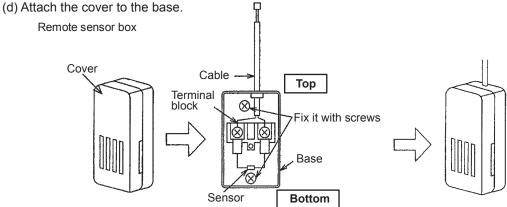

(e) Remove the control lid of the indoor unit. Take off CnG connector from PCB of the indoor unit .

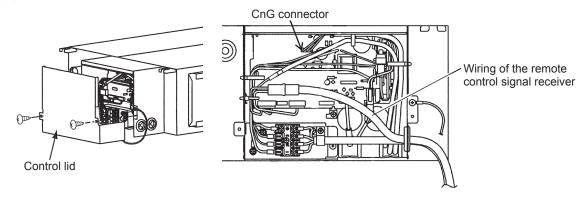


(f) Cut wiring from 1 & 2 pins of CnG connector. (wiring length: about 100 mm from the connector) If the pre-installed return air temperature sensor ASSY is not removed, the end of the sensor wiring should prevent a short circuit by insulating tape etc.

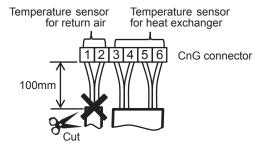

- (g) Insert the cable from remote sensor box to the control box of the indoor unit through the grommet of the remote control signal receiver side.
- (h) Adjust the length of the cable and cut it off. (Connector cable is not need.)
- (i) Connect the cable from remote sensor box and the cut wiring (procedure (f)) of CnG connector. (No polarity)

Be sure to connect the wirings by solder separately. Then, wirings should prevent a short circuit separately by insulating tapes etc. In case of faulty wiring connection, it can cause electrical shock and fire.

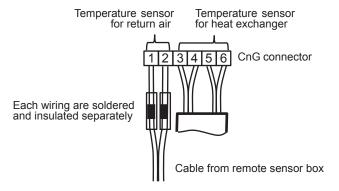

- (j) Put CnG connector back on the indoor unit PCB.
- (k) Attach the control lid of the indoor unit.

12.8 OA spacer (FDTC only)

This manual describes the installation methods for OA spacer (TC-OAS-E2) and the duct joint (TC-OAD-E). ©This OA spacer is designed for assembling on the indoor unit (FDTC Series), not for be using independently.



Application model	FDTC15-56KXZE1
	FDTC25-60VH

- OPrepare the duct (size: Ø75) and the booster fan at site.
- OFor the installation of indoor unit, refer to the installation manual attached to the indoor unit.

SAFETY PRECAUTIONS

Read the "SAFETY PRECAUTIONS" carefully first of all and then strictly follow it during the installation work in order to protect yourself.

MARNING

- Installation should be performed by the specialist.
 - If you install the unit by yourself, it may lead to serious trouble such as water leakage, electric shock, fire, and injury due to overturn of the unit.
- \bullet Install the system correctly according to these installation manuals.

Improper installation may cause explosion, injury, water leakage, electric shock, and fire.

 \bullet Use the genuine accessories and the specified parts for installation.

If parts unspecified by our company are used it could cause water leakage, electric shock, fire, and injury due to overturn of the unit.

● Turn off the power source during servicing or inspection work.

If the power is supplied during servicing or inspection work, it could cause electric shock and injury by the operating fan.

Shut off the power before electrical wiring work.

It could cause electric shock, unit failure and improper running.

ACAUTION

Do not install and use the unit where corrosive gas (such as sulfurous acid gas etc.) or flammable gas (such as thinner, petroleum etc.) may be generated or accumulated, or volatile flammable substances are handled.

It could cause the corrosion of heat exchanger, breakage of plastic parts etc. And inflammable gas could cause fire.



1 Before installation

• Confirm the following parts are included:

OA spacer (TC-OAS-E2)

Spacer	Bracket 1	Bracket 2	Bracket 3	Bracket 4	Bolt
		2	3	4	
1	2	2	2	2	8

Duct joint (TC-OAD-E)

-				
	Duct Joint	Screw	Insulation 1 (120 × 54)	Insulation 2 (40 × 60)
	1	6	1	2

Prior study before installation (Usage limitation)

(1) Temperature conditions for OA spacer

- · Adjust the temperature conditions of mixed air with outdoor air and indoor air within the usage range of suction air temperature for the air-conditioner.
- · The usage temperature conditions of intake outdoor air and indoor air around the ducts are shown in the following table.
- · If the temperature conditions of intake outdoor air do not meet, process the outdoor air

Oncretion mode	Usage temperature conditions					
Operation mode	Intake outdoor air	Indoor air around the ducts				
In heating	5°C DB or higher	18.5°C WB or lower and 60% RH or lower				
In cooling	29°C DB or lower and 80% RH or lower	20°C DB or higher				

(2) Intake outdoor air volume

- Intake outdoor air volume is 3.0 m³/min at the maximum (when two sets of duct joints are used). Up to two sets of duct joint can be installed on OA spacer.
 In case one set of duct joint is installed: 1.5 m³/min max.


 - In case two sets of duct joint is installed: 3.0 m3/min max.


(3) Selection of booster fan

· Select the booster fan based on the duct resistance plus the pressure loss at the duct joint. (See the figure)

(4) Other conditions

- Determine the capacity of air conditioner based on the calculation of air-conditioning load including the heat load of intake outdoor air.
- · Install the filter for the intake outdoor air and the reverse flow prevention dumper during the
- Insulate the duct and duct joint in order to prevent dewing.
 Interlock the operation of booster fan with ON/OFF operation of the indoor unit. (See Section 7.)

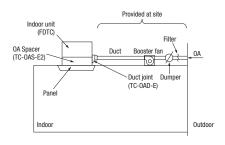

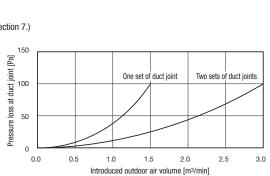

530 (Suspension bolts pitch)

530

Duct joint (TC-OAD-E)

175

Control box

325

③ Installation of duct joint (TC-OAD-E) onto OA spacer ·There are two places where the duct joint can be installed. When installing one duct joint Install OA spacer at either one of two installation places on the duct joint. To install the duct joint, When installing the duct screw it in as shown at left. joint at the lid side, remove Duct joint the lid and reinstall it at the other end before installing Duct joint the duct joint. -Screw When installing two duct joints Spacer Remove the lid and then install two pieces of duct joint. Duct joint


4 Installation of OA spacer on the indoor unit

OA spacer can be installed regardless whether the indoor unit has already been hanged or not. (It is recommended to install before hanging the unit for convenience of installation.)


1-1. When installing OA spacer before hanging the indoor unit

① Placing OA spacer on the indoor unit, fix the brackets 1 and 2 (2 pieces each) with bolts.

Install OA spacer in the appropriate position that the duct joint side of OA spacer becomes opposite to the control box of indoor unit (FDTC).

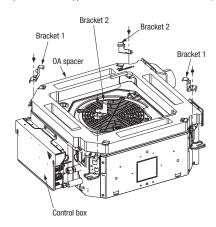


② Fix the brackets 3 and 4 (2 pieces each) with bolts.

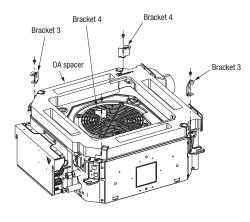


1-2. When installing OA spacer after hanging the indoor unit

After hanging the indoor unit (*), fix the bracket 1 (2 pieces) temporarily with bolt by 2 turns as shown in the figure.


* For the height (position) of hanging the indoor unit, refer to Section 5.

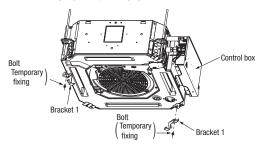

- ② Install OA spacer.
 - i. Install it in the way that the recess of OA spacer will fit on the bracket 1 fixed temporarily at the step 1.
 - ii. Tighten the bolt of bracket 1.
 - iii. Fix the bracket 2 with bolt. (Tighten up)

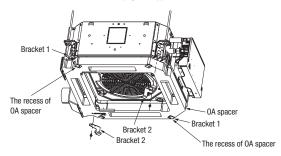


③ Fix the brackets 3 and 4 (2 pieces each) with bolts.

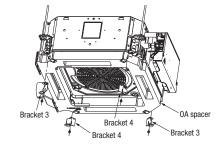


2. Applying insulation

Applying the insulation attached to duct joint set (TC-OAD-E)

- ① Applying the insulation 1 as shown in the figure.
- Applying the insulation 2 as shown in the figure.
- * Be sure to cover the entire surface of sheet metal of the duct joint with the insulation.

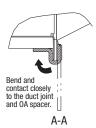

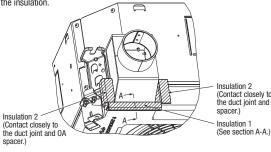



(5) Installation of indoor unit


Work procedure


- 1. This units is designed for 2 \times 2 grid ceiling.
 - If necessary, please detach the T bar temporarily before you install it.
 - If it is installed on a ceiling other than 2×2 grid ceiling, provide an inspection port on the control box side.
- 2. Arrange the suspension bolt at the right position (530mm530mm).
- 3. Make sure to use four suspension bolts and fix them so as to be able to hold 500N load.
- 4. Ensure that the lower end of the suspension bolt should be 102mm above the ceiling plane. Temporarily put the four lower nuts 182mm above the ceiling plane and the upper nuts on distant place from the lower nuts in order not to obstruct hanging the indoor unit or adjust the indoor unit position, and then hang the indoor unit.
- 5. Adjust the indoor unit position after hanging it by inserting the level gauge (Packed together with the indoor unit.) attached on the package into the air supply port and checking if the gap between the ceiling plane and the indoor unit is appropriate. (*) In order to adjust the indoor unit position, adjust the lower nuts while the upper nuts are put on distant place. Conrm there is no backlash between the hanger plate for suspension bolt and the lower nut and washer.

* Use the level gauge only when OA spacer has been installed before hanging (4 1-1 only).

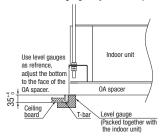


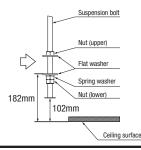

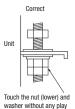

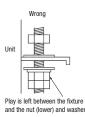

6 Installation of panel

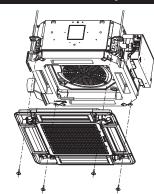


Tighten the panels to the brackets 3 and 4 with bolts. For further details, refer to the installation manual of panel.

(Caution) Connect the connector of lover motor within the control box.

Interlocking with the indoor unit fan

©Connect the single split series and the VRF series to CnT on the indoor PCB and to CnD on the indoor PCB respectively. If a ventilation device is connected been geared with the motion of indoor device (ON: DC12V output, OFF: 0V output), the ventilation device is operated/stopped.

Set it at "VENT LINK" by selecting "No. 11 VENT LINK SET" from the functional setting by remote control. For details, refer to the "ELECTRIC WIRNG WORK INSTRUCTION" of indoor unit.

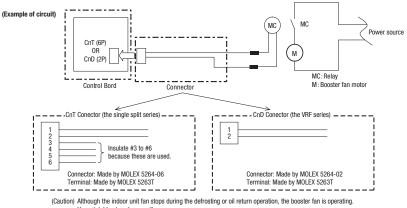

12.9 Duct joint (FDTC only)

PJZ012D073 🛕

• This product is used by assembling on the spacer (TC-0AS-E2)


1.Before installation

• Confirm the following parts are included:

Duct joint	Screw	Insulation 1 (120 × 54)	Insulation 2 (40 × 60)
1	6	1	2

2.Regarding the use of this product

- Fix the product on the spacer (TC-OAS-E2) as shown below.
 For the installation method, refer to the installation manual of the spacer.

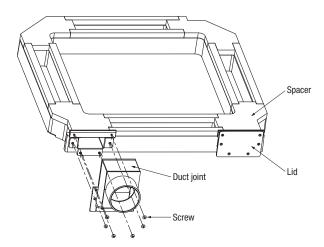

13. TECHNICAL INFORMATION

(1) Wall mounted type (SRK)

Model SRK20ZS-W

Indoor unit model name Outdoor unit model name Function(indicate if present) cooling heating	SRK20ZS-W SRC20ZS-W Yes Yes			information relates to. Indicated values heating season at a time. Include at leas Average(mandatory)		
cooling				Average/mandaton/\		
cooling				LIGVERAUEUHAHÜÄLÜLVI	Yes	
heating	Yes			Warmer(if designated)	Yes	
				Colder(if designated)	No	
Item	symbol	value	unit	Item	symbol	value class
Design load			_	Seasonal efficiency and energy efficience	cy class	_
cooling	Pdesigno	2.00	kW	cooling	SEER	8.50 A+++
heating / Average heating / Warmer	Pdesignh Pdesignh	2.60 3.30	kW kW	heating / Average heating / Warmer	SCOP/A SCOP/W	4.60 A++ 5.80 A+++
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	
Declared capacity at outdoor temperatur	o Tdooigab			Back up heating capacity at outdoor ten	anaratura T	unit
heating / Average (-10°C)	Pdh	2.60	kW	heating / Average (-10°C)	elbu	- kW
heating / Warmer (2°C)	Pdh	3.30	kW	heating / Warmer (2°C)	elbu	- kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	- kW
Declared capacity for cooling, at indoor t	emperature 2	7(19)°C a	nd	Declared energy efficiency ratio, at indo	or tempera	ature 27(19)°C and
outdoor temperature Tj		. ,	_	outdoor temperature Tj		
Tj=35°C Tj=30°C	Pdc Pdc	2.00 1.40	kW kW	Tj=35°C Tj=30°C	EERd EERd	4.55 6.80
Tj=25°C	Pdc	1.00	kW	Tj=25°C	EERd	11.80
Tj=20°C	Pdc	1.00	kW	Tj=20°C	EERd	18.20 -
Declared capacity for heating / Average	season of inc	door		Declared coefficient of performance / A	verage coo	son at indoor
temperature 20°C and outdoor temperature		1001		temperature 20°C and outdoor temperature		oui, at iiiuuui
Tj=-7°C	Pdh	2.40	kW	Tj=-7°C	COPd	2.50 -
Tj=2°C Tj=7°C	Pdh Pdh	1.40 0.95	kW kW	Tj=2°C Ti=7°C	COPd COPd	4.70 6.24
Tj=12°C	Pdh	1.10	kW		COPd	7.80
Tj=bivalent temperature	Pdh	2.60	kW	Tj=bivalent temperature	COPd	2.20 -
Tj=operating limit	Pdh	2.60	kW	Tj=operating limit	COPd	2.20 -
Declared capacity for heating / Warmer s	season at ind	loor		Declared coefficient of performance / W	armer sea	son at indoor
temperature 20°C and outdoor temperatu			_	temperature 20°C and outdoor temperat	ture Tj	
Tj=2°C	Pdh	3.30	kW	Tj=2°C	COPd	2.57 -
Tj=7°C Tj=12°C	Pdh Pdh	2.10 1.10	kW kW	Tj=7°C Tj=12°C	COPd COPd	5.12 - 7.80 -
Tj=bivalent temperature	Pdh	3.30	kW	Tj=12 C	COPd	2.57
Tj=operating limit	Pdh	3.30	kW	Tj=operating limit	COPd	2.57 -
Declared capacity for heating / Colder setemperature 20°C and outdoor temperature.	ure Tj Pdh	-	kW	Declared coefficient of performance / C temperature 20°C and outdoor temperat Tj=-7°C	ture Tj COPd	<u>-</u>
Tj=2°C	Pdh Pdh	-	kW kW	Tj=2°C Tj=7°C	COPd COPd	
Tj=7°C Tj=12°C	Pdh	-	kW		COPd	
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	
Bivalent temperature				Operating limit temperature		
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-10 °C
heating / Warmer heating / Colder	Tbiv Tbiv	2	ာိ သ	heating / Warmer heating / Colder	Tol Tol	2 °C °C
					101	
Cycling interval capacity	Poves	-	INV.	Cycling interval efficiency	EEDerra	
for cooling for heating	Pcycc Pcych	-	kW kW	for cooling for heating	EERcyc COPcyc	
	-,-		1			l l
Degradation coefficient cooling	Cdc	0.25]-	Degradation coefficient heating	Cdh	0.25 -
Electric power input in power modes other		-]\A/	Annual electricity consumption	0	00 134/6/
off mode standby mode	Poff Psb	4	W	cooling heating / Average	Qce Qhe	83 kWh/a 793 kWh/a
thermostat-off mode	Pto(cooling)	10	W	heating / Warmer	Qhe	797 kWh/a
	Pto(heatling)	11	w	heating / colder	Qhe	- kWh/a
crankcase heater mode	Pck	0	W			
Capacity control(indicate one of three op	tions)			Other items Sound power level(indoor) Sound power level(outdoor)	Lwa Lwa	48 dB(A) 56 dB(A)
fixed	No	-		Global warming potential	GWP	675 kgCO2eq
staged variable	No Yes			Rated air flow(indoor) Rated air flow(outdoor)	-	558 m ³ /h 1644 m ³ /h
vai idDIC	162			nvaced all now(outdoor)	-	1044 HY/H
more information Mitsubish 5 The Squ MHIAE Sl	i Heavy Indus uare, Stockley ERVICES B.\	stries Air-0 / Park, Ux /.	Conditioning bridge, Mid	of its authorised representative. g Europe, Ltd. Idlesex, UB11 1ET,United Kingdom // Amsterdam, Netherlands		

Model SRK25ZS-W

Information to identify the model(s) to Indoor unit model name		rmation re	lates to:	If function includes heating: Indicate the	e heating se	eason the	
	ODIZACTO	A.		! #			
Outdoor unit model name	SRK25ZS-			information relates to. Indicated values heating season at a time. Include at leas			Λνοτασο'
Outdoor unit moder name	3KC29Z3-	WAZ		lifeating season at a time. Include at leas	t tile rieatii	y season	Average.
Function(indicate if present)				Average(mandatory)	Yes		
cooling	Yes			Warmer(if designated)	Yes		
heating	Yes			Colder(if designated)	No		
3				3,			
Item	symbol	value	unit	Item	symbol	value	class
Design load	-		_	Seasonal efficiency and energy efficien	cy class		
cooling	Pdesignc	2.50	kW	cooling	SEER	8.50	A+++
heating / Average	Pdesignh	2.70	kW	heating / Average	SCOP/A	4.70	A++
heating / Warmer	Pdesignh	3.30	kW	heating / Warmer	SCOP/W		A+++
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	
D	torre Talendards			Dealers heating assessing to the state of the		Falla a Samuela	unit
Declared capacity at outdoor tempera	ture raesignn Pdh	2.70	kW	Back up heating capacity at outdoor ter heating / Average (-10°C)	nperature elbu	aesignn	kW
heating / Average (-10°C) heating / Warmer (2°C)	Pdh	3.30	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Warrier (2 C)	Pdh	3.30	kW	heating / Warrier (2 C)	elbu	<u> </u>	kW
rieating / Colder (-22 C)	i uii		KVV	rieating / Colder (-22 C)	CIDU	_	KVV
Declared capacity for cooling, at indoo	or temperature	27(19)°C	and	Declared energy efficiency ratio, at indo	or tempera	ture 27/19	a)°C and
outdoor temperature Tj	or temperature	21(10)0	unu	outdoor temperature Tj	or tompore	itaro Er (it) o ana
Tj=35°C	Pdc	2.50	kW	Tj=35℃	EERd	4.03]-
Tj=30°C	Pdc	1.80	kW	Tj=30°C	EERd	6.45	1-
Tj=25°C	Pdc	1.11	kW	Tj=25°C	EERd	11.80	-
Tj=20°C	Pdc	1.10	kW	Tj=20°C	EERd	18.20	<u>l</u>
			· · · · · · · · · · · · · · · · · · ·				
Declared capacity for heating / Average		ndoor		Declared coefficient of performance / A		son, at inc	loor
temperature 20°C and outdoor tempe			1	temperature 20°C and outdoor tempera			1
Tj=-7℃	Pdh	2.40	kW	Tj=-7°C	COPd	2.50	-
Tj=2°C	Pdh Pdh	1.40	kW	Tj=2°C Tj=7°C	COPd	4.92	1
Tj=7℃ Ti=12℃	Pan Pdh	0.95 1.10	kW kW	Ti=12°C	COPd COPd	6.15 7.86	E
Tj=12 C Tj=bivalent temperature	Pan Pdh	2.70	kW	Tj=12 C Tj=bivalent temperature	COPa	2.40	ł[
Tj=blvalerit terriperature Tj=operating limit	Pdh	2.70	kW	Tj=operating limit	COPd	2.40	ł[
rj-operating mint	i uii	2.70	IVAA	1)-operating innit	OOF U	4.40	I -
Declared capacity for heating / Warm	er season, at ir	ndoor		Declared coefficient of performance / W	armer sea	son at inc	loor
temperature 20°C and outdoor tempe				temperature 20°C and outdoor tempera		,	
Tj=2 [°] C	Pdh	3.30	kW	Tj=2°C	COPd	2.70]-
Tj=7℃	Pdh	2.10	kW	Tj=7°C	COPd	5.23	-
Tj=12°C	Pdh	1.10	kW	Tj=12°C	COPd	7.86]-
Tj=bivalent temperature	Pdh	3.30	kW	Tj=bivalent temperature	COPd	2.70	-
Tj=operating limit	Pdh	3.30	kW	Tj=operating limit	COPd	2.70	-
temperature 20°C and outdoor tempe Tj=-7°C Tj=2°C Tj=12°C Tj=12°C Tj=bivalent temperature Tj=operating limit Tj=-15°C	rature Tj Pdh Pdh Pdh Pdh Pdh Pdh Pdh	- - - - -	kW kW kW kW kW kW	temperature 20°C and outdoor tempera Tj=-7°C Tj=2°C Tj=12°C Tj=12°C Tj=bivalent temperature Tj=operating limit Tj=-15°C	ture Tj COPd COPd COPd COPd COPd COPd COPd	- - - - -	- - - - -
		•				•	
Bivalent temperature			10	Operating limit temperature	_		10
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-10	°C
heating / Warmer	Tbiv	2	°C	heating / Warmer	Tol	2	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
for cooling	Pcycc	-	kW	for cooling	EERcyc	-]_
for heating	Pcych	-	kW	for heating	COPcyc	-	1-
Degradation coefficient cooling	Cdc	0.25]-	Degradation coefficient heating	Cdh	0.25]-
Electric power input in sever	other then last	(o model	1	Appual alactricity consumation			
Electric power input in power modes of mode	otner than 'acti' Poff		lw	Annual electricity consumption cooling	Qce	103	kWh/a
oπ mode standby mode	Poπ Psb	4	W	heating / Average	Qce Qhe	804	kwn/a kWh/a
standby mode thermostat-off mode	Pto(cooling)	10	W	heating / Average heating / Warmer	Qhe	784	kWh/a
and the second s	Pto(cooling)	11	w	heating / Warrier	Qhe	-	kWh/a
crankcase heater mode	Pck	0	w			1	1
	*			ı			
Capacity control(indicate one of three	options)			Other items Sound power level(indoor)	Lwa	50	dB(A)
				Sound power level(outdoor)	Lwa	56	dB(A)
fixed	No			Global warming potential	GWP	675	kgCO2eq
staged	No			Rated air flow(indoor)	-	594	m ³ /h
variable	Yes			Rated air flow(outdoor)	-	1644	m ³ /h
more information Mitsubi 5 The S MHIAE	shi Heavy Indu Square, Stockl SERVICES B	ustries Air- ey Park, U 3.V.	Conditionir Ixbridge, M	of its authorised representative. ng Europe, Ltd. iddlesex, UB11 1ET,United Kingdom			

Model SRK35ZS-W

Wiodel Shko323-W	111016			Disc. e e e e		
Information to identify the model(s) to v			lates to:	If function includes heating: Indicate the		
Indoor unit model name Outdoor unit model name	SRK35ZS-			information relates to. Indicated values heating season at a time. Include at leas		
Outdoor unit moder name	3KC35Z3-	VVAZ		Theating season at a time. Include at leas	t trie rieatii	ig season Average.
Function(indicate if present)				Average(mandatory)	Yes	
cooling	Yes			Warmer(if designated)	Yes	
heating	Yes			Colder(if designated)	No	
				coluci (ii coolgilatou)		
Item	symbol	value	unit	Item	symbol	value class
Design load	,			Seasonal efficiency and energy efficient		
cooling	Pdesignc	3.50	kW	cooling	SEER	8.40 A++
heating / Average	Pdesignh	3.00	kW	heating / Average	SCOP/A	4.70 A++
heating / Warmer	Pdesignh	3.70	kW	heating / Warmer	SCOP/W	6.00 A+++
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	
						unit
Declared capacity at outdoor temperate			٦	Back up heating capacity at outdoor ten		
heating / Average (-10°C)	Pdh	3.00	kW	heating / Average (-10°C)	elbu	- kW
heating / Warmer (2°C)	Pdh	3.70	kW	heating / Warmer (2°C)	elbu	- kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	- kW
Declared conscitutor cooling at indeed		27/40\°0		Deployed an army officion sy votice at inde	4	-tura 07/10\°0 and
Declared capacity for cooling, at indoor	temperature	27(19) C	and	Declared energy efficiency ratio, at indo	or tempera	ature 27(19) C and
outdoor temperature Tj Tj=35°C	Pdc	3.50	lkW	outdoor temperature Tj	EERd	3.82 -
Tj=30℃	Pdc	2.58	kW	Tj=30°C	EERd	5.82
Tj=25℃	Pdc	1.60	kW	Tj=25°C	EERd	11.20 -
Ti=20°C	Pdc	1.07	kW	Tj=20°C	EERd	18.50 -
,		,	1	1		
Declared capacity for heating / Average	e season, at i	ndoor		Declared coefficient of performance / A	verage sea	son, at indoor
temperature 20°C and outdoor tempera	ature Tj			temperature 20°C and outdoor tempera		
Tj=-7°C	Pdh	2.65	kW	Tj=-7°C	COPd	2.50 -
Tj=2℃	Pdh	1.62	kW	Tj=2℃	COPd	4.92 -
Tj=7°C	Pdh	1.04	kW	Tj=7°C	COPd	6.10 -
Tj=12°C	Pdh	1.16	kW	Tj=12°C	COPd	7.86 -
Tj=bivalent temperature	Pdh	3.00	kW	Tj=bivalent temperature	COPd	2.40 -
Tj=operating limit	Pdh	3.00	kW	Tj=operating limit	COPd	2.40 -
				1 -		
Declared capacity for heating / Warme		ndoor		Declared coefficient of performance / W		son, at indoor
temperature 20°C and outdoor tempera Tj=2°C	Pdh	3.70	lkW	temperature 20°C and outdoor tempera	COPd	2.80 -
Tj=7°C	Pdh	2.38	kW		COPd	5.20
Tj=12°C	Pdh	1.16	kW		COPd	7.86
Tj=bivalent temperature	Pdh	3.70	kW	Tj=bivalent temperature	COPd	2.80
Tj=operating limit	Pdh	3.70	kW	Tj=operating limit	COPd	2.80
Declared capacity for heating / Colder		door		Declared coefficient of performance / Co		on, at indoor
temperature 20°C and outdoor tempera			TLAM	temperature 20°C and outdoor tempera		
Tj=-7°C	Pdh	-	kW	Tj=-7°C	COPd	
Tj=2°C	Pdh Pdh	-	kW kW	Tj=2°C	COPd COPd	
Tj=7°C Tj=12°C	Pdh	-	kW	∏j=7°C ∏i=12°C	COPd	
Tj=bivalent temperature	Pdh	<u> </u>	kW	Tj=bivalent temperature	COPd	-
Ti=operating limit	Pdh	-	kW	Tj=operating limit	COPd	
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	<u> </u>
1) 10 0	1 011	1	1111	1, 100	001 0	L
Bivalent temperature				Operating limit temperature		
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-10 ℃
heating / Warmer	Tbiv	2	℃	heating / Warmer	Tol	2 ℃
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	- °C
				1.5		
Cycling interval capacity	D		TLAM	Cycling interval efficiency		
for cooling	Pcycc	-	kW	for cooling	EERcyc	
for heating	Pcych	-	kW	for heating	COPcyc	
Degradation coefficient				Degradation coefficient		
cooling	Cdc	0.25	7-	heating	Cdh	0.25 -
						•
Electric power input in power modes of				Annual electricity consumption		
off mode	Poff	4	W	cooling	Qce	146 kWh/a
standby mode	Psb	4	W	heating / Average	Qhe	895 kWh/a
thermostat-off mode	Pto(cooling)	10	W	heating / Warmer	Qhe	863 kWh/a
avantinana hantau wa! -	Pto(heatling)	11	W	heating / colder	Qhe	- kWh/a
crankcase heater mode	Pck	0	W	I		
Capacity control(indicate one of three of	ptions)			Other items Sound power level(indoor)	Lwa	54 dB(A)
				Sound power level(outdoor)	Lwa	61 dB(A)
fixed	No			Global warming potential	GWP	675 kgCO2e
staged	No			Rated air flow(indoor)	-	678 m ³ /h
variable	Yes			Rated air flow(outdoor)	-	1890 m ³ /h
						•
				of its authorised representative.		
				ng Europe, Ltd.		
			Jxbridge, M	iddlesex, UB11 1ET,United Kingdom		
	SERVICES B		nA 4404 0	M Amotordom Notherland		
Herikerb	ergweg 238,	Luna Arei	na, 1101 C	M Amsterdam, Netherlands		

Model SRK20ZS-WB

nformation to identify the model(s) to			If function includes heating: Indica	
ndoor unit model name Outdoor unit model name	SRK20ZS-		information relates to. Indicated value inheating season at a time. Include a	
Juluoor unit modername	3KC2023-	WA	Ineating season at a time. Include a	t least the heating season Average
Function(indicate if present)			Average(mandatory)	Yes
cooling	Yes		Warmer(if designated)	Yes
neating	Yes		Colder(if designated)	No
tem	symbol	value unit	ltem	symbol value class
Design load cooling	Pdesignc	2.00 kW	Seasonal efficiency and energy eff cooling	SEER 8.50 A++-
neating / Average	Pdesignh	2.60 kW	heating / Average	SCOP/A 4.60 A++
neating / Warmer	Pdesignh	3.30 kW	heating / Warmer	SCOP/W 5.80 A++-
neating / Colder	Pdesignh	- kW	heating / Colder	SCOP/C
		'		unit
Declared capacity at outdoor tempera			Back up heating capacity at outdoor	
neating / Average (-10°C)	Pdh	2.60 kW	heating / Average (-10°C)	elbu - kW
neating / Warmer (2°C)	Pdh Pdh	3.30 kW - kW	heating / Warmer (2°C)	elbu - kW elbu - kW
neating / Colder (-22°C)	Pun	- KVV	heating / Colder (-22°C)	elbu - kW
Declared capacity for cooling, at indoo	or temperature	27(19)℃ and	Declared energy efficiency ratio, a	t indoor temperature 27(19)°C and
outdoor temperature Tj	n temperature	27(10) 0 and	outdoor temperature Tj	t indoor temperature 27 (10) o and
Γj=35°C	Pdc	2.00 kW	Tj=35°C	EERd 4.55 -
Гј=30°С	Pdc	1.40 kW	Tj=30°C	EERd 6.80 -
Γj=25°C	Pdc	1.00 kW	Tj=25°C	EERd 11.80 -
Гj=20°С	Pdc	1.00 kW	Tj=20°C	EERd 18.20 -
Declared capacity for heating / Average	ne season at i	ndoor	Declared coefficient of performance	re / Average season at indoor
emperature 20°C and outdoor temper		14001	temperature 20°C and outdoor tem	
Γj=-7°C	Pdh	2.40 kW	Tj=-7°C	COPd 2.50 -
Γj=2℃	Pdh	1.40 kW	Tj=2°C	COPd 4.70 -
Гj=7°С	Pdh	0.95 kW	Tj=7°C	COPd 6.24 -
Γj=12°C	Pdh	1.10 kW	Tj=12°C	COPd 7.80 -
Fj=bivalent temperature Fj=operating limit	Pdh Pdh	2.60 kW 2.60 kW	Tj=bivalent temperature	COPd 2.20 - COPd 2.20 -
j=operating limit	Pan	2.60 KVV	Tj=operating limit	COPa 2.20 -
Declared capacity for heating / Warme	er season, at ir	ndoor	Declared coefficient of performance	e / Warmer season, at indoor
emperature 20°C and outdoor temper			temperature 20°C and outdoor tem	
Γj=2°C	Pdh	3.30 kW	Tj=2°C	COPd 2.57 -
Гј=7℃	Pdh	2.10 kW	Tj=7°C	COPd 5.12 -
Гj=12°С	Pdh	1.10 kW	Tj=12°C	COPd 7.80 -
Fj=bivalent temperature	Pdh	3.30 kW	Tj=bivalent temperature	COPd 2.57 -
Γj=operating limit	Pdh	3.30 kW	Tj=operating limit	COPd 2.57 -
Declared capacity for heating / Colder	season at inc	loor	Declared coefficient of performance	e / Colder season, at indoor
emperature 20°C and outdoor temper			temperature 20°C and outdoor tem	
Гj=-7°С	Pdh	- kW	Tj=-7°C	COPd
rj=2°C	Pdh	- kW	Tj=2°C	COPd
Γj=7°C	Pdh	- kW	Tj=7°C	COPd
Γj=12℃	Pdh	- kW	Tj=12°C	COPd
Fj=bivalent temperature	Pdh	- kW	Tj=bivalent temperature	COPd
Γj=operating limit Γj=-15℃	Pdh Pdh	- kW kW	Tj=operating limit Tj=-15℃	COPd
.j15 C	Pull	- KVV	[1]15 C	COPa
Bivalent temperature			Operating limit temperature	
neating / Average	Tbiv	-10 ℃	heating / Average	Tol -10 °C
neating / Warmer	Tbiv	2 ℃	heating / Warmer	Tol 2 °C
neating / Colder	Tbiv	- °C	heating / Colder	Tol - °C
Cycling interval capacity	Povoc	- kW	Cycling interval efficiency	FERcyc
or cooling or heating	Pcycc Pcych	- kW kW	for cooling for heating	EERcyc
or nodding	i cycii	-	liot licating	- -
Degradation coefficient			Degradation coefficient	
cooling	Cdc	0.25 -	heating	Cdh 0.25 -
Electric power input in power modes o			Annual electricity consumption	0
	Poff	4 W	cooling	Qce 83 kWh/a
off mode	Psb	10 W	heating / Average heating / Warmer	Qhe 793 kWh/a Qhe 797 kWh/a
off mode standby mode	Pto(cooling)		Linearing / Walling	CALLO 121 VANII/9
off mode	Pto(cooling)		heating / colder	Qhe - kWh/a
off mode tandby mode hermostat-off mode	Pto(cooling) Pto(heatling) Pck	11 W 0 W	heating / colder	Qhe - kWh/a
off mode standby mode	Pto(heatling)	11 W	heating / colder	Qhe - kWh/a
off mode standby mode hermostat-off mode	Pto(heatling) Pck	11 W	Other items	
off mode standby mode hermostat-off mode crankcase heater mode	Pto(heatling) Pck	11 W	Other items Sound power level(indoor)	Lwa 48 dB(A)
off mode standby mode hermostat-off mode crankcase heater mode Capacity control(indicate one of three	Pto(heatling) Pck options)	11 W	Other items Sound power level(indoor) Sound power level(outdoor)	Lwa 48 dB(A) Lwa 56 dB(A)
off mode standby mode hermostat-off mode crankcase heater mode Capacity control(indicate one of three ixed	Pto(heatling) Pck options)	11 W	Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Lwa 48 dB(A) Lwa 56 dB(A) GWP 675 kgCO2
off mode standby mode hermostat-off mode crankcase heater mode Capacity control(indicate one of three ixed staged	Pto(heatling) Pck options) No No	11 W	Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor)	Lwa 48 dB(A) Lwa 56 dB(A) GWP 675 kgC02 - 558 m ³ /h
off mode standby mode hermostat-off mode crankcase heater mode Capacity control(indicate one of three ixed	Pto(heatling) Pck options)	11 W	Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Lwa 48 dB(A) Lwa 56 dB(A) GWP 675 kgCO2
off mode standby mode hermostat-off mode hermostat-off mode crankcase heater mode Capacity control(indicate one of three ixed staged variable	Pto(heatling) Pck options) No No Yes	11 W W	Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor)	Lwa 48 dB(A) Lwa 56 dB(A) GWP 675 kgCO ₂ - 558 m ³ /h
off mode standby mode hermostat-off mode crankcase heater mode Capacity control(indicate one of three staged variable Contact details for obtaining Name a	Pto(heatling) PCk options) No No Yes and address of	11 W W	Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	Lwa 48 dB(A) Lwa 56 dB(A) GWP 675 kgCO ₂ - 558 m ³ /h
off mode tandby mode hermostat-off mode crankcase heater mode Capacity control(indicate one of three taged taged ariable Contact details for obtaining nore information Name a Mitsubi	Pto(heatling) Pck options) No No Yes and address of ishi Heavy Indu	11 W W	Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	Lwa 48 dB(A) Lwa 56 dB(A) GWP 675 kgCO2 - 558 m³/h - 1644 m³/h
off mode standby mode hermostat-off mode erankcase heater mode Capacity control(indicate one of three dixed staged eraiable Contact details for obtaining more information Name a Mitsubi 5 The S MHIAE	Pto(heatling) PCk options) No No Yes and address of isshi Heavy Indu Square, Stockles SERVICES B	11 W 0 W If the manufacturer stries Air-Conditio gey Park, Uxbridge, V.	Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative. ning Europe, Ltd.	Lwa 48 dB(A) Lwa 56 dB(A) GWP 675 kgCO2 - 558 m³/h - 1644 m³/h

Model SRK25ZS-WB

				The second second		
Information to identify the model(s) to w Indoor unit model name	SRK25ZS-		elates to:	If function includes heating: Indicate the		
Outdoor unit model name	SRC25ZS-			information relates to. Indicated values heating season at a time. Include at least		
Catagor and modername	OKOZOZO-	*****		ricating scason at a time. Include at least	ot the ricati	ig scason Avera
Function(indicate if present)				Average(mandatory)	Yes	
cooling	Yes			Warmer(if designated)	Yes	
heating	Yes			Colder(if designated)	No	
				,		
Item	symbol	value	unit	Item	symbol	value class
Design load			_	Seasonal efficiency and energy efficier	icy class	
cooling	Pdesignc	2.50	kW	cooling	SEER	8.50 A+
heating / Average	Pdesignh	2.70	kW	heating / Average	SCOP/A	4.70 A-
heating / Warmer	Pdesignh	3.30	kW	heating / Warmer	SCOP/W	
heating / Colder	Pdesignh		kW	heating / Colder	SCOP/C	
5				I		unit
Declared capacity at outdoor temperature heating / Average (-10°C)	ıre Taesignn Pdh	2.70	kW	Back up heating capacity at outdoor te		
heating / Warmer (2°C)	Pdh	2.70 3.30	kW	heating / Average (-10°C) heating / Warmer (2°C)	elbu elbu	- kW kW
heating / Warrier (2 C)	Pdh	3.30	kW	heating / Warrier (2 C)	elbu	- kW kW
Tleating / Colder (-22 C)	Full		KVV	rieating / Colder (-22 C)	CIDU	- KVV
Declared capacity for cooling, at indoor	temperature	27/19\°C	and	Declared energy efficiency ratio, at inde	or tempera	ature 27(19)°C a
outdoor temperature Tj	temperature	27(13) 0	ana	outdoor temperature Tj	or tempere	ature 27 (15) 6 a
Ti=35°C	Pdc	2.50	kW	Tj=35℃	EERd	4.03 -
Tj=30°C	Pdc	1.80	kW	Tj=30°C	EERd	6.45 -
Tj=25°C	Pdc	1.11	kW	Tj=25℃	EERd	11.80 -
Tj=20°C	Pdc	1.10	kW	Tj=20°C	EERd	18.20 -
Declared capacity for heating / Average		ndoor		Declared coefficient of performance / A		ason, at indoor
temperature 20°C and outdoor tempera	,	1	_	temperature 20°C and outdoor tempera		
Tj=-7°C	Pdh	2.40	kW	Tj=-7°C	COPd	2.50 -
Tj=2°C	Pdh	1.40	kW	Tj=2°C	COPd	4.92 -
Tj=7°C	Pdh	0.95	kW	Tj=7°C	COPd	6.15 -
Tj=12°C	Pdh	1.10	kW	Tj=12°C	COPd	7.86 -
Tj=bivalent temperature	Pdh	2.70	kW	Tj=bivalent temperature	COPd	2.40 -
Tj=operating limit	Pdh	2.70	kW	Tj=operating limit	COPd	2.40 -
B				[D] (C) (C)		
Declared capacity for heating / Warmer		naoor		Declared coefficient of performance / V		ison, at indoor
temperature 20°C and outdoor tempera Tj=2°C	Pdh	3.30	lkW	temperature 20°C and outdoor tempera	COPd	2.70 -
Tj=7°C	Pdh	2.10	kW	Ti=7°C	COPd	5.23
Tj=12°C	Pdh	1.10	kW	Tj=12°C	COPd	7.86
Tj=bivalent temperature	Pdh	3.30	kW	Tj=12 C	COPd	2.70
Tj=operating limit	Pdh	3.30	kW	Tj=operating limit	COPd	2.70
rj-operating iiriit	1 dii	0.00	KVV	1)-operating limit	001 u	2.70
Declared capacity for heating / Colder s	season at inc	door		Declared coefficient of performance / C	older seas	on at indoor
temperature 20°C and outdoor tempera				temperature 20°C and outdoor tempera		, at illu00i
Ti=-7°C	Pdh	-	kW	Tj=-7°C	COPd	
, Tj=2°C	Pdh	-	kW	Tj=2℃	COPd	
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	
Tj=12℃	Pdh	-	kW	Tj=12°C	COPd	
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	
Bivalent temperature			_	Operating limit temperature		
heating / Average	Tbiv	-10	℃	heating / Average	Tol	-10 °C
heating / Warmer	Tbiv	2	℃	heating / Warmer	Tol	2 ℃
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	- °C
Outline interval and "			- 1	Overline internal off		
Cycling interval capacity for cooling	Doveo.	-	kW	Cycling interval efficiency for cooling	EEDo:	
for heating	Pcycc Pcych	-	kW	for heating	EERcyc COPcyc	<u>-</u>
ioi neating	ruyuli		VAA	ioi neating	COPCyC	<u> </u>
Degradation coefficient				Degradation coefficient		
	Cdc	0.25	ا ا	heating	Cdh	0.25 -
	Cuc		1	· ······ · · · ·		
cooling	Cuc					
		· I		Annual electricity consumption		
cooling		· I]w	Annual electricity consumption cooling	Qce	103 kWh.
cooling Electric power input in power modes ot	her than 'acti	ve mode'	w		Qce Qhe	103 kWh.
cooling Electric power input in power modes ot off mode	her than 'acti Poff	ve mode'		cooling		
cooling Electric power input in power modes of off mode standby mode	her than 'acti Poff Psb	ve mode'	w	cooling heating / Average	Qhe	804 kWh
cooling Electric power input in power modes of off mode standby mode	her than 'acti Poff Psb Pto(cooling)	ve mode' 4 4 10	W W	cooling heating / Average heating / Warmer	Qhe Qhe	804 kWh.
cooling Electric power input in power modes ot off mode standby mode thermostat-off mode crankcase heater mode	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder	Qhe Qhe	804 kWh.
cooling Electric power input in power modes of off mode standby mode thermostat-off mode	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder	Qhe Qhe Qhe	804 kWh. 784 kWh.
cooling Electric power input in power modes ot off mode standby mode thermostat-off mode crankcase heater mode	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor)	Qhe Qhe Qhe	804 kWh 784 kWh - kWh
cooling Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of the cooling to t	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor)	Qhe Qhe Qhe Lwa Lwa	804 kWh 784 kWh - kWh 50 dB(A 56 dB(A
cooling Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of the control of t	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck pptions)	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Qhe Qhe Qhe Lwa Lwa GWP	804 kWh 784 kWh - kWh 50 dB(A 56 dB(A 675 kgCC
cooling Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed staged	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck pptions)	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor)	Qhe Qhe Qhe Lwa Lwa GWP	50 dB(A 56 dB(A 675 kgCC 594 m³/h
cooling Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of the control of t	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck pptions)	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	Qhe Qhe Qhe Lwa Lwa GWP	804 kWh 784 kWh - kWh 50 dB(A 56 dB(A 675 kgCC
cooling Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of the staged variable	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck pptions) No No Yes	ve mode' 4 4 10 11	W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor)	Qhe Qhe Qhe Lwa Lwa GWP	50 dB(A 56 dB(A 675 kgCC 594 m³/h
cooling Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of staged variable Contact details for obtaining Name ar	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck Pptions) No No Yes and address o	ve mode' 4 4 10 11 0	W W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative.	Qhe Qhe Qhe Lwa Lwa GWP	804 kWh 784 kWh - Wh 50 dB(A 56 dB(A 675 kgCC 594 m³/h
Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of staged variable Contact details for obtaining more information Name ar Mitsubisi	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck pptions) No No Yes and address of hi Heavy Indu	ve mode' 4 4 10 11 0	W W W W	cooling heating / Average heating / Warmer heating / Colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative. g Europe, Ltd.	Qhe Qhe Qhe Lwa Lwa GWP	804 kWh 784 kWh - Wh 50 dB(A 56 dB(A 675 kgCC 594 m³/h
Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of staged variable Contact details for obtaining more information Name ar Mitsubisi 5 The Sci	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck pptions) No No Yes and address o hi Heavy Indiquare, Stockl	ve mode' 4 4 10 11 0	W W W W	cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative.	Qhe Qhe Qhe Lwa Lwa GWP	804 kWh 784 kWh - Wh 50 dB(A 56 dB(A 675 kgCC 594 m³/h
cooling Electric power input in power modes of off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of staged variable Contact details for obtaining more information Name ar Mitsubisi 5 The Sc MHIAE S	her than 'acti Poff Psb Pto(cooling) Pto(heatling) Pck pptions) No No Yes and address or hi Heavy Indu quare, Stockl SERVICES B	ve mode' 4 4 10 111 0	W W W W	cooling heating / Average heating / Warmer heating / Colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) of its authorised representative. g Europe, Ltd.	Qhe Qhe Qhe Lwa Lwa GWP	804 kWh 784 kWh - Wh 50 dB(A 56 dB(A 675 kgCC 594 m³/h

Model SRK35ZS-WB

Model SRK35ZS-WB			
Information to identify the model(s) to		If function includes heating: Indicate the	
Indoor unit model name Outdoor unit model name	SRK35ZS-WB SRC35ZS-WA2	information relates to. Indicated values	
Outdoor unit model name	SRC352S-WA2	heating season at a time. Include at lea	ist the heating season. Average
Function(indicate if present)		Average(mandatory)	Yes
cooling	Yes	Warmer(if designated)	Yes
heating	Yes	Colder(if designated)	No
Item Design load	symbol value unit	Item Seasonal efficiency and energy efficie	symbol value class
cooling	Pdesignc 3.50 kW	cooling	SEER 8.40 A++
heating / Average	Pdesignh 3.00 kW	heating / Average	SCOP/A 4.70 A++
heating / Warmer	Pdesignh 3.70 kW	heating / Warmer	SCOP/W 6.00 A+++
heating / Colder	Pdesignh - kW	heating / Colder	SCOP/C
	<u> </u>		unit
Declared capacity at outdoor temperat		Back up heating capacity at outdoor to	
heating / Average (-10°C)	Pdh 3.00 kW	heating / Average (-10°C)	elbu - kW
heating / Warmer (2°C) heating / Colder (-22°C)	Pdh 3.70 kW Pdh - kW	heating / Warmer (2°C) heating / Colder (-22°C)	elbu - kW elbu - kW
rieating / Colder (-22 C)	Full - KVV	rieating / Colder (-22 C)	elbu - kvv
Declared capacity for cooling, at indoo	r temperature 27(19)°C and	Declared energy efficiency ratio, at inc	loor temperature 27(19)°C and
outdoor temperature Tj		outdoor temperature Tj	(10) 5 and
Tj=35℃	Pdc 3.50 kW	Tj=35°C	EERd 3.82 -
Tj=30°C	Pdc 2.58 kW	Tj=30°C	EERd 5.82 -
Tj=25°C	Pdc 1.60 kW	Tj=25°C	EERd 11.20 -
Tj=20°C	Pdc 1.07 kW	Tj=20°C	EERd 18.50 -
Declared capacity for hosting / Average	e season at indoor	Declared coefficient of performance /	Average sesson at indeer
Declared capacity for heating / Average temperature 20°C and outdoor 20°C and outdoor 20°C and outdoor 20°C and outdoor 20°C and out		Declared coefficient of performance / / temperature 20°C and outdoor temper	
Ti=-7°C	Pdh 2.65 kW	Ti=-7°C	COPd 2.50 -
Tj=2℃	Pdh 1.62 kW	∏j=2°C	COPd 4.92 -
Tj=7°C	Pdh 1.04 kW	Tj=7°C	COPd 6.10 -
Tj=12°C	Pdh 1.16 kW	Tj=12°C	COPd 7.86 -
Tj=bivalent temperature	Pdh 3.00 kW	Tj=bivalent temperature	COPd 2.40 -
Tj=operating limit	Pdh 3.00 kW	Tj=operating limit	COPd 2.40 -
		1 -	
Declared capacity for heating / Warme		Declared coefficient of performance /	
temperature 20°C and outdoor temper Tj=2°C	Pdh 3.70 kW	temperature 20°C and outdoor temper Tj=2°C	COPd 2.80 -
Tj=7°C	Pdh 2.38 kW	T =7°C	COPd 2.80 -
Tj=12°C	Pdh 1.16 kW	Tj=7 C Tj=12°C	COPd 5.20 - COPd 7.86 -
Tj=bivalent temperature	Pdh 3.70 kW	Tj=12 C	COPd 7.86 -
Ti=operating limit	Pdh 3.70 kW	Tj=operating limit	COPd 2.80 -
7 - 1 - 2 - 3		, ,, , , , ,	
Declared capacity for heating / Colder		Declared coefficient of performance /	
temperature 20°C and outdoor temper		temperature 20°C and outdoor temper	
Tj=-7°C	Pdh - kW	Tj=-7°C	COPd
Tj=2°C	Pdh - kW	Tj=2°C	COPd
Tj=7°C	Pdh - kW	Tj=7°C	COPd
Tj=12°C	Pdh - kW	Tj=12°C	COPd
Tj=bivalent temperature Tj=operating limit	Pdh - kW Pdh - kW	Tj=bivalent temperature Tj=operating limit	COPd
Tj=-15°C	Pdh - kW	Tj-operating limit	COPd
1]10 0	T dil - KVV	1]==10 0	
Bivalent temperature		Operating limit temperature	
heating / Average	Tbiv -10 °C	neating / Average	Tol -10 °C
heating / Warmer	Tbiv 2 °C	heating / Warmer	Tol 2 ℃
heating / Colder	Tbiv - °C	heating / Colder	Tol - °C
Oraling internal		Ovaling into 1 - fC -: -	
Cycling interval capacity	Pcycc - kW	Cycling interval efficiency	EERovo
for cooling for heating	Pcycc - kW Pcych - kW	for cooling for heating	EERcyc
To Housing	. Cycli - KVV	ior neating	551 Gyo - -
Degradation coefficient		Degradation coefficient	
cooling	Cdc 0.25 -	heating	Cdh 0.25 -
Electric power input in power modes of		Annual electricity consumption	0
off mode	Poff 4 W	cooling	Qce 146 kWh/a
standby mode thermostat-off mode	Psb 4 W Pto(cooling) 10 W	heating / Average	Qhe 895 kWh/a Qhe 863 kWh/a
mennostat-on mode	Pto(cooling) 10 W Pto(heatling) 11 W	heating / Warmer heating / colder	Qhe 863 kWh/a Qhe - kWh/a
crankcase heater mode	Pro(neatiing) II VV	neating / colder	GIIC - KVVII/a
	• ••		
Capacity control(indicate one of three	options)	Other items	
		Sound power level(indoor)	Lwa 54 dB(A)
		Sound power level(outdoor)	Lwa 61 dB(A)
fixed	No	Global warming potential	GWP 675 kgCO2e
staged	No	Rated air flow(indoor)	- 678 m ³ /h
variable	Yes	Rated air flow(outdoor)	- 1890 m ³ /h
Contact dataile for obtaining	and and decreases of the second	and the could not be a first	
	nd address of the manufacturer of the manufacturer of the high shift Heavy Industries Air-Condition		
		Middlesex, UB11 1ET,United Kingdom	
	SERVICES B.V.		
	pergweg 238, Luna ArenA, 1101	CM Amsterdam, Netherlands	

Model SRK20ZS-WT

Outdoor unit model name Function(indicate if present) cooling heating Item Design load cooling heating / Average heating / Warmer	SRK20ZS-W SRC20ZS-W Yes Yes Yes Symbol Pdesignc Pdesignh Pdesignh	VT VA value	ates to:	If function includes heating: Indicate the information relates to. Indicated values s heating season at a time. Include at least Average(mandatory) Warmer(if designated) Colder(if designated)	hould relatine heatine	te to one	Average'.
Outdoor unit model name Function(indicate if present) cooling heating Item Design load cooling heating / Average heating / Warmer	Yes Yes Symbol Pdesignc Pdesignh Pdesignh	value		heating season at a time. Include at least Average(mandatory) Warmer(if designated)	Yes Yes		Average'.
Function(indicate if present) cooling heating Item Design load cooling heating / Average heating / Warmer	Yes Yes Yes Symbol Pdesignc Pdesignh Pdesignh	value		Average(mandatory) Warmer(if designated)	Yes Yes	y season A	-verage .
cooling heating Item Design load cooling heating / Average heating / Warmer	Yes symbol Pdesignc Pdesignh Pdesignh			Warmer(if designated)	Yes		
cooling heating Item Design load cooling heating / Average heating / Warmer	Yes symbol Pdesignc Pdesignh Pdesignh			Warmer(if designated)	Yes		
heating Item Design load cooling heating / Average heating / Warmer	Yes symbol Pdesignc Pdesignh Pdesignh						
Item : Design load : cooling heating / Average heating / Warmer	symbol Pdesignc Pdesignh Pdesignh				No		
Design load cooling heating / Average heating / Warmer	Pdesignc Pdesignh Pdesignh						
cooling heating / Average heating / Warmer	Pdesignh Pdesignh		unit	Item	symbol	value	class
heating / Average heating / Warmer	Pdesignh Pdesignh			Seasonal efficiency and energy efficience			
heating / Warmer	Pdesignh	2.00	kW	cooling	SEER	8.50	A+++
•		2.60	kW	heating / Average	SCOP/A	4.60	A++
		3.30	kW	heating / Warmer	SCOP/W		A+++
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	
				15 1 2 2 2 1 1 1			unit
Declared capacity at outdoor temperature	e raesignn Pdh -	2.60	kW	Back up heating capacity at outdoor tem	elbu		kW
3 - 3 (- 7	Pdh	3.30	kW	heating / Average (-10°C) heating / Warmer (2°C)	elbu		kW
3 , ,	Pdh	-	kW	heating / Warrier (2 C)	elbu		kW
Theating / Colder (-22 C)	uii		K V V	rieating / Colder (-22 C)	CIDU		KVV
Declared capacity for cooling, at indoor to	mperature 2	27(19)°C a	and	Declared energy efficiency ratio, at indoor	r tempera	ture 27(19)°C and
outdoor temperature Tj		(.0, 0 0		outdoor temperature Tj			,
	Pdc	2.00	kW	Tj=35°C	EERd	4.55	-
Tj=30°C	Pdc	1.40	kW	Tj=30°C	EERd	6.80	-
Tj=25°C	Pdc	1.00	kW	Tj=25°C	EERd	11.80	-
Tj=20°C	Pdc	1.00	kW	Tj=20℃	EERd	18.20	-
Declared capacity for heating / Average s		door		Declared coefficient of performance / Av		son, at ind	oor
temperature 20°C and outdoor temperatu			,	temperature 20°C and outdoor temperat			i
,	Pdh	2.40	kW	Tj=-7°C	COPd	2.50	-
, ,	Pdh	1.40	kW	Tj=2°C	COPd	4.70	_
,	Pdh	0.95	kW	Tj=7°C	COPd	6.24	_
,	Pdh Pdh	1.10	kW	Tj=12°C	COPd	7.80 2.20	_
,	Pan Pdh	2.60	kW kW	Tj=bivalent temperature Tj=operating limit	COPd COPd	2.20	_
Tj=operating limit	Puli	2.00	KVV	rj-operating limit	COPu	2.20	<u> </u>
Declared capacity for heating / Warmer s	eason at inc	door		Declared coefficient of performance / Wa	armer sea	son at inde	oor
temperature 20°C and outdoor temperatu		4001		temperature 20°C and outdoor temperature		oon, at ma	501
	Pdh	3.30	kW	Tj=2°C	COPd	2.57	-
Tj=7°C	Pdh	2.10	kW	Tj=7°C	COPd	5.12	-
Tj=12°C	Pdh	1.10	kW	Tj=12°C	COPd	7.80	-
Tj=bivalent temperature	Pdh	3.30	kW	Tj=bivalent temperature	COPd	2.57	-
Tj=operating limit	Pdh	3.30	kW	Tj=operating limit	COPd	2.57	-
Tj=2°C Tj=7°C Tj=12°C Tj=bivalent temperature Tj=operating limit	re Tj Pdh Pdh Pdh Pdh Pdh Pdh		kW kW kW kW kW kW	temperature 20°C and outdoor temperating=7°C $Tj=7^{\circ}C$ $Tj=7^{\circ}C$ $Tj=7^{\circ}C$ $Tj=12^{\circ}C$ $Tj=bivalent temperature Tj= operating limit Tj= 15°C$	ure Tj COPd COPd COPd COPd COPd COPd COPd	- - - -	- - - -
Division to the second state of			1	On a vating a limit to man a vature			
Bivalent temperature heating / Average	Tbiv	-10	l℃	Operating limit temperature heating / Average	Tol	-10	°C
	Tbiv	2	°C	heating / Average	Tol	2	°C
	Tbiv		°C	heating / Warrier	Tol	-	°C
Cycling interval capacity				Cycling interval efficiency			
•	Pcycc	-	kW	for cooling	EERcyc	-	-
for heating	Pcych	-	kW	for heating	COPcyc	-	-
Degradation as officient			1	Degradation coefficient			
Degradation coefficient cooling	Cdc	0.25]-	Degradation coefficient heating	Cdh	0.25	-
Electric power input in power modes other	r than 'active	e mode'		Annual electricity consumption			
	Poff	4	W	cooling	Qce	83	kWh/a
	Psb	4	W	heating / Average	Qhe		kWh/a
	Pto(cooling)	10	W	heating / Warmer	Qhe		kWh/a
!	Pto(heatling)	11	W	heating / colder	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W				
Capacity control(indicate one of three opt	ions)			Other items Sound power level(indoor)	Lwa	48	dB(A)
				Sound power level(outdoor)	Lwa	56	dB(A)
fixed	No			Global warming potential	GWP	675	kgCO2eq
staged	No			Rated air flow(indoor)	-	558	m ³ /h
variable	Yes			Rated air flow(outdoor)	-	1644	m ³ /h
more information Mitsubishi 5 The Squ MHIAE SE	Heavy Indus are, Stockle RVICES B.	stries Air-0 y Park, Ux V.	Conditionin xbridge, Mi	of its authorised representative. g Europe, Ltd. ddlesex, UB11 1ET,United Kingdom M Amsterdam, Netherlands			

Model SRK25ZS-WT

Model SRK2525-W I							
Information to identify the model(s)			lates to:	If function includes heating: Indicate			
Indoor unit model name Outdoor unit model name	SRK25ZS-V			information relates to. Indicated value heating season at a time. Include at least			'Average'
Outdoor unit moder name	3KC23Z3-V	VAZ		I lifeating season at a time. Include at le	casi ille lleailli	y season	Average.
Function(indicate if present)				Average(mandatory)	Yes		
cooling	Yes			Warmer(if designated)	Yes		
heating	Yes			Colder(if designated)	No		
Item	symbol	value	unit	Item	symbol	value	class
Design load	Delasiona	2.50	TLAM	Seasonal efficiency and energy effici		0.50	I A
cooling heating / Average	Pdesignc Pdesignh	2.50 2.70	kW kW	cooling heating / Average	SEER SCOP/A	8.50 4.70	A+++ A++
heating / Warmer	Pdesignh	3.30	kW	heating / Average	SCOP/W	5.90	A+++
heating / Warrier	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
modaling / coloci	. accigiiii	l	1	nearing / eerae.	000.70	I	unit
Declared capacity at outdoor tempe	rature Tdesignh			Back up heating capacity at outdoor	temperature 1	designh	
heating / Average (-10°C)	Pdh	2.70	kW	heating / Average (-10°C)	elbu	-	kW
heating / Warmer (2°C)	Pdh	3.30	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
		07/40\00		10 1 1 6 1		. 07/4	0).00
Declared capacity for cooling, at ind	oor temperature	27(19)℃	and	Declared energy efficiency ratio, at in	ndoor tempera	ture 27(1	9)°C and
outdoor temperature Tj Tj=35°C	Pdc	2.50	ΊκW	outdoor temperature Tj Tj=35°C	EERd	4.03	7_
Tj=30°C	Pdc	1.80	kW	Tj=30°C	EERd	6.45	1_
Tj=25°C	Pdc	1.11	kW	Tj=25°C	EERd	11.80	1_
Tj=20°C	Pdc	1.10	kW	Tj=20°C	EERd	18.20	1-
Declared capacity for heating / Aver		ndoor		Declared coefficient of performance		son, at in	door
temperature 20°C and outdoor temp	•	2 (2	Tioner	temperature 20°C and outdoor 20°		0.50	7
Tj=-7°C	Pdh	2.40	kW	Tj=-7°C	COPd	2.50	<u>-</u>
Tj=2°C	Pdh	1.40	kW	Tj=2°C	COPd	4.92	<u> </u> -
Tj=7°C	Pdh	0.95	kW	Tj=7°C	COPd	6.15	<u> </u> -
Tj=12°C	Pdh Pdb	1.10	kW kW	Tj=12°C	COPd	7.86 2.40	4⁻
Tj=bivalent temperature Tj=operating limit	Pdh Pdh	2.70 2.70	kW	Tj=bivalent temperature Tj=operating limit	COPd COPd	2.40	- 1⁻
1j-operating iinit	Full	2.70	IVAA	1j-operating limit	COFU	2.40	Ι-
Declared capacity for heating / Warr	mer season, at in	door		Declared coefficient of performance	/ Warmer sea	son at inc	loor
temperature 20°C and outdoor temp				temperature 20°C and outdoor temperature		Jon, at	
Tj=2°C	Pdh	3.30	kW	Tj=2°C	COPd	2.70	7-
Tj=7°C	Pdh	2.10	kW	Tj=7°C	COPd	5.23	1-
Tj=12°C	Pdh	1.10	kW	Tj=12°C	COPd	7.86	1-
Tj=bivalent temperature	Pdh	3.30	kW	Tj=bivalent temperature	COPd	2.70]-
Tj=operating limit	Pdh	3.30	kW	Tj=operating limit	COPd	2.70]-
Declared capacity for heating / Cold temperature 20°C and outdoor temp Tj=-7°C Tj=2°C Tj=12°C Tj=bivalent temperature Tj=operating limit	erature Tj Pdh Pdh Pdh Pdh Pdh Pdh	- - - -	kW kW kW kW kW	Declared coefficient of performance temperature 20°C and outdoor temperature 7j=-7°C Tj=-2°C Tj=12°C Tj=bivalent temperature Tj=operating limit	COPd COPd COPd COPd COPd COPd COPd COPd	- - - -]- - - - - - -
Tj=-15℃	Pdh	-	kW	Tj=-15°C	COPd	-	-
Divolent temperature				Operating limit temperature			
Bivalent temperature heating / Average	Tbiv	-10	ີແ	Operating limit temperature heating / Average	Tol	-10]℃
heating / Warmer	Tbiv	2	-c	heating / Average	Tol	2	÷
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
9							
Cycling interval capacity	_		7	Cycling interval efficiency		_	7
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	<u> </u> -
for heating	Pcych	-	kW	for heating	COPcyc	-	I-
Degradation coefficient				Degradation coefficient			
cooling	Cdc	0.25	7-	heating	Cdh	0.25	7-
-		ı					
Electric power input in power modes		e mode'	-	Annual electricity consumption			=
off mode	Poff	4	W	cooling	Qce	103	kWh/a
standby mode	Psb	4	W	heating / Average	Qhe	804	kWh/a
thermostat-off mode	Pto(cooling)	10	W	heating / Warmer	Qhe	784	kWh/a
crankcase heater mode	Pto(heatling) Pck	11 0	W	heating / colder	Qhe	-	kWh/a
CIAIINCASE HEALEI IIIUUE	FUN	U	Ivv	Д			
Capacity control(indicate one of three	e options)			Other items Sound power level(indoor)	Lwa	50	dB(A)
fixed	No			Sound power level(outdoor)	Lwa	56 675	dB(A)
fixed	No			Global warming potential	GWP -	675	kgCO2eq. m ³ /h
staged variable	No Yes			Rated air flow(indoor) Rated air flow(outdoor)	-	594 1644	m ³ /h
variable	1 62			I tated all how(outdoor)	-	1044	Jui-711
more information Mitsu 5 The MHIA	bishi Heavy Indu Square, Stockle E SERVICES B.	istries Air- ey Park, U .V.	Conditioni	liddlesex, UB11 1ET,United Kingdom			
			nA, 1101 (CM Amsterdam, Netherlands			

Model SRK35ZS-WT

Information to identify the model(s) to wall indoor unit model name Outdoor unit model name Function(indicate if present)	SRK35ZS- SRC35ZS-	WT	elates to:	If function includes heating: Indicate the information relates to. Indicated values sheating season at a time. Include at least	should rela		
Outdoor unit model name Function(indicate if present)						ite to one	
Function(indicate if present)	31C3323-	****		Theating season at a time. Include at least		n cascan '	Average'
				'	ine neath	ig scason	Average.
				Average(mandatory)	Yes		
cooling	Yes			Warmer(if designated)	Yes		
heating	Yes			Colder(if designated)	No		
•	1			, ,	ı		
ltem	symbol	value	unit	Item	symbol	value	class
Design load				Seasonal efficiency and energy efficience	y class		
cooling	Pdesignc	3.50	kW	cooling	SEER	8.40	A++
heating / Average	Pdesignh	3.00	kW	heating / Average	SCOP/A	4.70	A++
heating / Warmer	Pdesignh	3.70	kW	heating / Warmer	SCOP/W		A+++
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	
D	Talandanah			Dealers heating assessite at entire at an	t -	F.I	unit
Declared capacity at outdoor temperatu heating / Average (-10°C)	re raesignn Pdh	3.00	kW	Back up heating capacity at outdoor tem	perature elbu		kW
heating / Average (-10 C)	Pdh	3.70	kW	heating / Average (-10°C) heating / Warmer (2°C)	elbu		kW
heating / Warrier (2 C)	Pdh	3.70	kW	heating / Warrier (2 °C)	elbu	-	kW
rieating / Colder (-22 C)	i uii	_	KVV	rieating / Colder (-22 C)	Cibu	_	KVV
Declared capacity for cooling, at indoor	temperature	27(19)°C	and	Declared energy efficiency ratio, at indo	or tempera	ature 27/10	a)°C and
outdoor temperature Tj	tomporataro	27(10) 0	ana	outdoor temperature Tj	or tompore	2010 27 (10	o, o una
Tj=35°C	Pdc	3.50	kW	Tj=35°C	EERd	3.82	7-
Tj=30°C	Pdc	2.58	kW	Tj=30°C	EERd	5.82	1-
Tj=25°C	Pdc	1.60	kW	Tj=25°C	EERd	11.20	Ī-
Tj=20℃	Pdc	1.07	kW	Tj=20°C	EERd	18.50	1-
Declared capacity for heating / Average		ndoor		Declared coefficient of performance / Av		ison, at inc	door
temperature 20°C and outdoor tempera	,		ا	temperature 20°C and outdoor temperat			7
Tj=-7°C	Pdh	2.65	kW	Tj=-7°C	COPd	2.50	_
Tj=2°C	Pdh	1.62	kW	Tj=2°C	COPd	4.92	<u> </u> -
Tj=7°C	Pdh	1.04	kW	Tj=7°C	COPd	6.10	<u> </u> -
Tj=12°C	Pdh Pdh	1.16	kW kW	Tj=12°C	COPd	7.86	-
Tj=bivalent temperature		3.00	kW	Tj=bivalent temperature Ti=operating limit	COPd COPd	2.40	
Tj=operating limit	Pdh	3.00	KVV	TJ=operating limit	COPa	2.40	-
Declared capacity for heating / Warmer	eeaeon at ir	ndoor		Declared coefficient of performance / W	armar caa	eon at inc	loor
temperature 20°C and outdoor tempera		luuui		temperature 20°C and outdoor temperat		Son, at mic	1001
Tj=2°C	Pdh	3.70	kW	Tj=2°C	COPd	2.80	7-
rj=7°C	Pdh	2.38	kW	Tj=7°C	COPd	5.20	1_
rj=12℃	Pdh	1.16	kW	Tj=12°C	COPd	7.86	1_
Tj=bivalent temperature	Pdh	3.70	kW	Tj=bivalent temperature	COPd	2.80	-
Tj=operating limit	Pdh	3.70	kW	Tj=operating limit	COPd	2.80	1_
Declared capacity for heating / Colder s temperature 20°C and outdoor tempera Tj=-7°C Tj=2°C	ture Tj Pdh Pdh	- - -	kW kW	Declared coefficient of performance / Cotemperature 20°C and outdoor temperat Tj=-7°C Tj=2°C	ure Tj COPd COPd	-	or]- -
Tj=7°C	Pdh		kW	Tj=7°C	COPd		
Tj=12°C	Pdh Pdh	-	kW kW	Tj=12°C	COPd COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature Tj=operating limit	COPd	-	-
Tj=operating limit Ti=-15°C	Pan Pdh	-	kW	Tj=operating limit	COPd		-
1]13 6	i uii		KVV	1]10 0	COLU	_	<u> </u>
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-10	°C
heating / Warmer	Tbiv	2	℃	heating / Warmer	Tol	2	°C
heating / Colder	Tbiv	-	℃	heating / Colder	Tol	-	°C
Cycling interval capacity	_		٦	Cycling interval efficiency			7
for cooling	Pcycc	-	kW	for cooling	EERcyc	-	<u> </u> -
for heating	Pcych	-	kW	for heating	COPcyc	-	-
Degradation coefficient			1	Degradation coefficient			
cooling	Cdc	0.25	<u> </u>	heating	Cdh	0.25	1
Electric power input in power modes otl				Annual electricity consumption	_		
off mode	Poff	4	W	cooling	Qce	146	kWh/a
standby mode	Psb	4	W	heating / Average	Qhe	895	kWh/a
thermostat-off mode	Pto(cooling)	10	W	heating / Warmer	Qhe	863	kWh/a
ananticana hantee ee de	Pto(heatling)	11	W	heating / colder	Qhe	-	kWh/a
crankcase heater mode	Pck	0	W	I			
Capacity control(indicate one of three o	ptions)			Other items Sound power level(indoor) Sound power level(outdoor)	Lwa Lwa	54 61	dB(A)
fixed	No			Global warming potential	GWP	675	kgCO2eq
staged	No			Rated air flow(indoor)	-	678	m ³ /h
variable	Yes			Rated air flow(outdoor)	-	1890	m ³ /h
				\/			
more information Mitsubisl 5 The So MHIAE S	ni Heavy Indu quare, Stockl SERVICES B	ustries Air- ey Park, U .V.	-Conditionin Jxbridge, Mi	of its authorised representative. g Europe, Ltd. iddlesex, UB11 1ET,United Kingdom M Amsterdam, Netherlands			

(2) Floor standing type (SRF)

Model SRF25ZS-W

Information to identify the model(s) to w			relates to:	If function includes heating: Indicate the			
Indoor unit model name	SRF25ZS			information relates to. Indicated value			
Outdoor unit model name	SRC25ZS	S-WA2		heating season at a time. Include at lea	ast the heatir	ng season	'Average'.
					-		
Function(indicate if present)				Average(mandatory)	Yes		
cooling	Yes			Warmer(if designated)	Yes		
heating	Yes			Colder(if designated)	No		
Item	symbol	value	unit	Item	symbol	value	class
Design load			- 1	Seasonal efficiency and energy efficie			
cooling	Pdesignc		kW	cooling	SEER	7.40	A++
heating / Average	Pdesignh		kW	heating / Average	SCOP/A		A+
heating / Warmer	Pdesignh		kW	heating / Warmer	SCOP/W		A+++
heating / Colder	Pdesignh	-	kW	heating / Colder	SCOP/C	-	-
							unit
Declared capacity at outdoor temperatu	re Tdesign	h	_	Back up heating capacity at outdoor to	emperature ⁻	Γdesignh	_
heating / Average (-10°C)	Pdh	2.40	kW	heating / Average (-10°C)	elbu	-	kW
heating / Warmer (2°C)	Pdh	3.00	kW	heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh	-	kW	heating / Colder (-22°C)	elbu	-	kW
							•
Declared capacity for cooling, at indoor	temperatur	e 27(19)°0	C and	Declared energy efficiency ratio, at inc	door tempera	ature 27(19	9)°C and
outdoor temperature Tj	·	, ,		outdoor temperature Tj		,	,
Tj=35°C	Pdc	2.50	kW	Tj=35°C	EERd	4.24	7-
Tj=30°C	Pdc	1.80	kW	Tj=30°C	EERd	6.32	1-
Tj=25℃	Pdc	1.20	kW	Tj=25°C	EERd	10.20	1-
Tj=20°C	Pdc	1.10	kW	Tj=20°C	EERd	15.20	1-
,			1	1		,	
Declared capacity for heating / Average	season at	indoor		Declared coefficient of performance /	Average sea	son, at inc	loor
temperature 20°C and outdoor tempera				temperature 20°C and outdoor temper		,	
Ti=-7°C	Pdh	2.10	kW	Ti=-7°C	COPd	2.60	7-
Tj=2°C	Pdh	1.30	kW	Tj=2℃	COPd	3.70	1_
Tj=7°C	Pdh	0.90	kW	Ti=7°C	COPd	5.65	1_
Tj=12°C	Pdh	1.10	kW		COPd	7.48	Ł
,	Pdh	2.40	kW	Tj=12 C Tj=bivalent temperature	COPd	2.60	Ŧ
Tj=bivalent temperature							ł
Tj=operating limit	Pdh	2.40	kW	Tj=operating limit	COPd	2.60	<u> </u>
Declared consider for booking (AMessaco		to do on		Dealers desertisient of medicines of	\A/		
Declared capacity for heating / Warmer		muoor		Declared coefficient of performance /		son, at ind	001
temperature 20°C and outdoor tempera	Pdh	3.00	kW	temperature 20°C and outdoor temper	COPd	2.99	7
Tj=2°C				Tj=2°C			ļ ⁻
Tj=7°C	Pdh	1.90	kW	Tj=7°C	COPd	5.18	<u> </u> -
Tj=12°C	Pdh	1.10	kW	Tj=12°C	COPd	7.48	-
Tj=bivalent temperature	Pdh	3.00	kW	Tj=bivalent temperature	COPd	2.99	-
Tj=operating limit	Pdh	3.00	kW	Tj=operating limit	COPd	2.99	-
Declared capacity for heating / Colder s		ndoor		Declared coefficient of performance /		on, at indo	or
temperature 20°C and outdoor tempera			-	temperature 20°C and outdoor temper			_
Tj=-7°C	Pdh	-	kW	Tj=-7℃	COPd	-	-
Tj=2°C	Pdh	-	kW	Tj=2°C	COPd	-	-
Tj=7°C	Pdh	-	kW	Tj=7°C	COPd	-	<u>l</u> -
Tj=12℃	Pdh	-	kW	Tj=12°C	COPd	-	-
Tj=bivalent temperature	Pdh	-	kW	Tj=bivalent temperature	COPd	-]-
Tj=operating limit	Pdh	-	kW	Tj=operating limit	COPd	-	7-
Tj=-15°C	Pdh	-	kW	Tj=-15°C	COPd	-	1-
						1	1
Bivalent temperature				Operating limit temperature			
heating / Average	Tbiv	-10	°C	heating / Average	Tol	-10	°C
heating / Warmer	Tbiv	2	°C	heating / Warmer	Tol	2	°C
heating / Colder	Tbiv	-	°C	heating / Colder	Tol	-	°C
		1	1	· — — — — — — — — — — — — — — — — — — —			
Cycling interval capacity				Cycling interval efficiency			
Cycling interval capacity for cooling	Pcycc	-	kW	Cycling interval efficiency for cooling	EERcyc	-	7-
	Pcycc Pcych	-	kW kW		EERcyc COPcyc	-]-
for cooling		-		for cooling		-]- -
for cooling for heating		-		for cooling for heating		-]- -
for cooling		0.25		for cooling		0.25]- - 1-
for cooling for heating Degradation coefficient	Pcych			for cooling for heating Degradation coefficient	COPcyc]-
for cooling for heating Degradation coefficient cooling	Pcych Cdc	0.25	kW -	for cooling for heating Degradation coefficient heating	COPcyc]-
for cooling for heating Degradation coefficient	Pcych Cdc	0.25	kW -	for cooling for heating Degradation coefficient	COPcyc		- - -]-]kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes otl off mode	Cdc her than 'ac	0.25	kW - W	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling	COPcyc Cdh Qce	0.25	
for cooling for heating Degradation coefficient cooling Electric power input in power modes otl off mode standby mode	Cdc ner than 'ac Poff Psb	0.25 tive mode 7 7	kW - W W	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average	COPcyc Cdh Qce Qhe	0.25 119 840	kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes otl off mode	Cdc her than 'ac Poff Psb Pto(cooling)	0.25 tive mode 7 7 12	kW - - W W	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer	COPcyc Cdh Qce Qhe Qhe Qhe	0.25	kWh/a kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes oth off mode standby mode thermostat-off mode	Cdc Cdc her than 'ac Poff Psb Pto(cooling) Pto(heating)	0.25 tive mode 7 7 12 15	kW - , , , , , , , , , , ,	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average	COPcyc Cdh Qce Qhe	0.25 119 840	kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes otl off mode standby mode	Cdc her than 'ac Poff Psb Pto(cooling)	0.25 tive mode 7 7 12	kW - - W W	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer	COPcyc Cdh Qce Qhe Qhe Qhe	0.25 119 840	kWh/a kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes otl off mode standby mode thermostat-off mode crankcase heater mode	Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck	0.25 tive mode 7 7 12 15	kW - , , , , , , , , , , ,	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder	COPcyc Cdh Qce Qhe Qhe Qhe	0.25 119 840	kWh/a kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes oth off mode standby mode thermostat-off mode	Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck	0.25 tive mode 7 7 12 15	kW - , , , , , , , , , , ,	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items	COPcyc Cdh Qce Qhe Qhe Qhe	0.25 119 840 737	kWh/a kWh/a kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes otl off mode standby mode thermostat-off mode crankcase heater mode	Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck	0.25 tive mode 7 7 12 15	kW - , , , , , , , , , , ,	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor)	COPcyc Cdh Qce Qhe Qhe Qhe Lwa	0.25 119 840 737	kWh/a kWh/a kWh/a
for cooling for heating Degradation coefficient cooling Electric power input in power modes oth off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three or	Cdc ner than 'acc Poff Psb Pto(cooling) Pto(heating) Pck ptions)	0.25 tive mode 7 7 12 15	kW - , , , , , , , , , , ,	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor)	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa Lwa	0.25 119 840 737 - 50 59	kWh/a kWh/a kWh/a dB(A) dB(A)
for cooling for heating Degradation coefficient cooling Electric power input in power modes otl off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed	Cdc ner than 'acc Poff Psb Pto(cooling) Pto(heating) Pck ptions)	0.25 tive mode 7 7 12 15	kW - , , , , , , , , , , ,	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa GWP	0.25 119 840 737 - 50 59 675	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq.
for cooling for heating Degradation coefficient cooling Electric power input in power modes oth off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of fixed staged	Pcych Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck ptions)	0.25 tive mode 7 7 12 15	kW - , , , , , , , , , , ,	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor)	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa Lwa	0.25 119 840 737 - 50 59 675 540	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h
for cooling for heating Degradation coefficient cooling Electric power input in power modes off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of staged variable	Pcych Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes	0.25 tive mode 7 7 12 15 0	kW - - W W W	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor)	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa GWP	0.25 119 840 737 - 50 59 675	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq.
for cooling for heating Degradation coefficient cooling Electric power input in power modes off off mode standby mode thermostat-off mode Crankcase heater mode Capacity control(indicate one of three of staged variable Contact details for obtaining Name are	Cdc Terr than 'acc Poff Psb Pto(cooling) Pto(heating) Pck Ptions) No No Yes and address	0.25 tive mode 7 7 12 15 0	kW	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / Colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa GWP	0.25 119 840 737 - 50 59 675 540	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h
for cooling for heating Degradation coefficient cooling Electric power input in power modes off off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of the staged variable Contact details for obtaining more information Name an Mitsubis	Pcych Cdc ner than 'acc Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Ves and address hi Heavy In-	tive mode 7 7 12 15 0	kW - W W W W w inufacturer	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa GWP	0.25 119 840 737 - 50 59 675 540	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h
for cooling for heating Degradation coefficient cooling Electric power input in power modes off off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three off fixed staged variable Contact details for obtaining more information Name ar Mitsubis 5 The Sc	Pcych Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes nd address hi Heavy In- quare, Stoci	0.25 tive mode 7 7 12 15 0	kW - W W W W w inufacturer	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / Colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa GWP	0.25 119 840 737 - 50 59 675 540	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h
for cooling for heating Degradation coefficient cooling Electric power input in power modes off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of staged variable Contact details for obtaining more information Name ar Mitsubis 5 The S MHIAE S	Pcych Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes nd address ni Heavy In quare, Stoc SERVICES	0.25 tive mode 7 7 12 15 0 of the mandustries A kley Park, B.V.	kW	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(indoor) or of its authorised representative. ing Europe, Ltd. Middlesex, UB11 1ET, United Kingdom	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa GWP	0.25 119 840 737 - 50 59 675 540	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h
for cooling for heating Degradation coefficient cooling Electric power input in power modes off mode standby mode thermostat-off mode crankcase heater mode Capacity control(indicate one of three of staged variable Contact details for obtaining more information Name ar Mitsubis 5 The S MHIAE S	Pcych Cdc ner than 'ac Poff Psb Pto(cooling) Pto(heating) Pck ptions) No No Yes nd address ni Heavy In quare, Stoc SERVICES	0.25 tive mode 7 7 12 15 0 of the mandustries A kley Park, B.V.	kW	for cooling for heating Degradation coefficient heating Annual electricity consumption cooling heating / Average heating / Warmer heating / colder Other items Sound power level(indoor) Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	COPcyc Cdh Qce Qhe Qhe Qhe Lwa Lwa GWP	0.25 119 840 737 - 50 59 675 540	kWh/a kWh/a kWh/a dB(A) dB(A) kgCO2eq. m ³ /h

Model SRF35ZS-W

Model SRF35ZS-W				
Information to identify the model			If function includes heating: Indica	te the heating season the
Indoor unit model name	SRF35ZS-W		information relates to. Indicated va	
Outdoor unit model name	SRC35ZS-V	VA2	heating season at a time. Include a	at least the heating season 'Average'.
Function(indicate if present)			Average(mandatory)	Yes
cooling	Yes		Warmer(if designated)	Yes
heating	Yes		Colder(if designated)	No
<u> </u>				
Item	symbol va	alue unit	Item	symbol value class
Design load	_		Seasonal efficiency and energy ef	
cooling	Pdesignc	3.50 kW	cooling	SEER 8.10 A++
heating / Average	Pdesignh Pdesignh	2.90 kW	heating / Average	SCOP/A 4.70 A++ SCOP/W 5.90 A+++
heating / Warmer heating / Colder	Pdesignh	3.80 kW - kW	heating / Warmer heating / Colder	SCOP/W 5.90 A+++
rieating / Colder	ruesigiiii	-	rieating / Colder	unit
Declared capacity at outdoor ter	nperature Tdesignh		Back up heating capacity at outdo	
heating / Average (-10°C)	Pdh	2.90 kW	heating / Average (-10°C)	elbu - kW
heating / Warmer (2°C)	Pdh	3.80 kW	heating / Warmer (2°C)	elbu - kW
heating / Colder (-22°C)	Pdh	- kW	heating / Colder (-22°C)	elbu - kW
	*	•		· ·
Declared capacity for cooling, at	indoor temperature 2	27(19)°C and		t indoor temperature 27(19)°C and
outdoor temperature Tj			outdoor temperature Tj	
Tj=35°C	Pdc	3.50 kW	Tj=35°C	EERd 4.27 -
Tj=30°C	Pdc	2.60 kW	Tj=30°C	EERd 6.47 -
Tj=25°C	Pdc	1.60 kW	Tj=25°C	EERd 10.10 - EERd 18.90 -
Tj=20°C	Pdc	1.20 kW	Tj=20°C	EERd 18.90 -
Declared capacity for heating / A	verage season at in	door	Declared coefficient of performance	ce / Average season, at indoor
temperature 20°C and outdoor to		4001	temperature 20°C and outdoor ten	
Tj=-7°C	Pdh	2.50 kW	Ti=-7°C	COPd 2.86 -
Tj=2℃	Pdh	1.60 kW	Ti=2°C	COPd 4.90 -
Tj=7°C	Pdh	1.00 kW	Tj=7°C	COPd 5.70 -
Tj=12°C	Pdh	1.00 kW	Tj=12°C	COPd 7.30 -
Tj=bivalent temperature	Pdh	2.90 kW	Tj=bivalent temperature	COPd 2.60 -
Tj=operating limit	Pdh	2.90 kW	Tj=operating limit	COPd 2.60 -
Declared capacity for heating / V		door	Declared coefficient of performance	
temperature 20°C and outdoor to		0.00	temperature 20°C and outdoor ten	
Tj=2°C	Pdh	3.80 kW	Tj=2°C	COPd 2.99 -
Tj=7°C	Pdh	2.40 kW	∏j=7°C ∏j=12°C	COPd 5.36 -
Tj=12°C	Pdh	1.00 kW	11 2	COPd 7.30 -
Tj=bivalent temperature Tj=operating limit	Pdh Pdh	3.80 kW 3.80 kW	Tj=bivalent temperature Tj=operating limit	COPd 2.99 - COPd 2.99 -
1j-operating limit	Full	3.00 KVV	rj-operating innit	COFu 2:39
Declared capacity for heating / 0	colder season, at indo	oor	Declared coefficient of performance	ce / Colder season, at indoor
temperature 20°C and outdoor to			temperature 20°C and outdoor ten	
Tj=-7°C	Pdh	- kW	Tj=-7°C	COPd
Tj=2°C	Pdh	- kW	Tj=2°C	COPd
Tj=7°C	Pdh	- kW	Tj=7°C	COPd
Tj=12°C	Pdh	- kW	Tj=12°C	COPd
Tj=bivalent temperature	Pdh	- kW	Tj=bivalent temperature	COPd
Tj=operating limit	Pdh	- kW	Tj=operating limit	COPd
Tj=-15℃	Pdh	- kW	Tj=-15°C	COPd
Divolent temperature			Operating limit temperature	
Bivalent temperature heating / Average	Tbiv	-10 °C	Operating limit temperature heating / Average	Tol -10 °C
heating / Warmer	Tbiv	2 °C	heating / Warmer	Tol 2 °C
heating / Warrier	Tbiv	- ℃	heating / Colder	Tol - °C
	-	<u> </u>		
Cycling interval capacity	_		Cycling interval efficiency	
for cooling	Pcycc	- kW	for cooling	EERcyc
for heating	Pcych	- kW	for heating	COPcyc
Dogradation as efficient			Degradation apofficiant	
Degradation coefficient cooling	Cdc	0.25 -	Degradation coefficient heating	Cdh 0.25 -
cooming	Cuc	0.20 -	meaning	Cuii 0.25 -
Electric power input in power mo	des other than 'active	e mode'	Annual electricity consumption	
off mode	Poff	7 W	cooling	Qce 152 kWh/a
standby mode	Psb	7 W	heating / Average	Qhe 864 kWh/a
thermostat-off mode	Pto(cooling)	12 W	heating / Warmer	Qhe 902 kWh/a
	Pto(heating)	15 W	heating / colder	Qhe - kWh/a
	Pck	0 W		•
crankcase heater mode			1 [0]	
	0 0 1		Other items	
crankcase heater mode Capacity control(indicate one of	three options)		Cound nower level/in de	
	three options)		Sound power level(indoor)	Lwa 51 dB(A)
Capacity control(indicate one of			Sound power level(outdoor)	Lwa 63 dB(A)
Capacity control(indicate one of	No		Sound power level(outdoor) Global warming potential	Lwa 63 dB(A) GWP 675 kgCO2ed
Capacity control(indicate one of fixed staged	No No		Sound power level(outdoor) Global warming potential Rated air flow(indoor)	Lwa 63 dB(A) GWP 675 kgCO2eq - 552 m³/h
Capacity control(indicate one of fixed staged variable	No No Yes	the manufactures	Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor)	Lwa 63 dB(A) GWP 675 kgCO2eq
Capacity control(indicate one of fixed staged variable Contact details for obtaining N	No No Yes ame and address of the state of th		Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	Lwa 63 dB(A) GWP 675 kgCO2eq - 552 m³/h
Capacity control(indicate one of fixed staged variable Contact details for obtaining more information	No No Yes ame and address of litsubishi Heavy Indus	stries Air-Condition	Sound power level(outdoor) Global warming potential Rated air flow(outdoor) Rated air flow(outdoor) or of its authorised representative.	Lwa 63 dB(A) GWP 675 kgCO2eq - 552 m³/h - 1890 m³/h
Capacity control(indicate one of fixed staged variable Contact details for obtaining more information	No No Yes ame and address of litsubishi Heavy Indus	stries Air-Condition y Park, Uxbridge,	Sound power level(outdoor) Global warming potential Rated air flow(indoor) Rated air flow(outdoor) or of its authorised representative.	Lwa 63 dB(A) GWP 675 kgCO2ec - 552 m³/h - 1890 m³/h

(3) Ceiling concealed type (SRR)

Model SRR25ZS-W

Information to identify the model(s) to	which the information	on relates to:	If function includes heating: Indicate the	he heating se	ason the	
Indoor unit model name	SRR25ZS-W		information relates to. Indicated value	s should rela	te to one	
Outdoor unit model name	SRC25ZS-W2		heating season at a time. Include at lea	ast the heatin	g season	'Average'.
Function(indicate if present)			Average(mandatory)	Yes		
cooling	Yes		Warmer(if designated)	Yes		
heating	Yes		Colder(if designated)	No		
3			l control of the cont			
Item	symbol value	unit	Item	symbol	value	class
Design load	- · · · 		Seasonal efficiency and energy efficie			
cooling	Pdesignc 2.50		cooling	SEER	6.60	A++
heating / Average	Pdesignh 2.50		heating / Average	SCOP/A	4.10	A+
heating / Warmer	Pdesignh 3.20		heating / Warmer	SCOP/W		A+++
heating / Colder	Pdesignh -	KVV	heating / Colder	SCOP/C	-	- unit
Declared capacity at outdoor tempera	ture Tdesignh		Back up heating capacity at outdoor to	emperature T	designh	uniii
heating / Average (-10°C)	Pdh 2.50	0 kW	heating / Average (-10°C)	elbu	-	kW
heating / Warmer (2°C)	Pdh 3.2 0		heating / Warmer (2°C)	elbu	-	kW
heating / Colder (-22°C)	Pdh -	kW	heating / Colder (-22°C)	elbu	-	kW
		•				•
Declared capacity for cooling, at indo	or temperature 27(19	9)°C and	Declared energy efficiency ratio, at inc	door tempera	ture 27(1	9)℃ and
outdoor temperature Tj			outdoor temperature Tj			_
Tj=35°C	Pdc 2.5 0		Tj=35°C	EERd	4.03	
Tj=30°C	Pdc 1.90		Tj=30°C	EERd	5.90	
Tj=25°C	Pdc 1.20		Tj=25°C	EERd	8.60	-
Tj=20°C	Pdc 1.10	0 kW	Tj=20°C	EERd	10.90	<u> </u> -
Declared capacity for heating / Average	ne ceason at indeer		Declared coefficient of performance /	Average see	eon of in-	door
temperature 20°C and outdoor tempe			temperature 20°C and outdoor temper		our, at in	JUUI
Tj=-7°C	Pdh 2.2 0	0 kW	Ti=-7°C	COPd	2.60	٦-
Tj=2°C	Pdh 1.30		Ti=2°C	COPd	4.13	1_
Ti=7°C	Pdh 1.00		Ti=7°C	COPd	5.35	1_
Tj=12°C	Pdh 1.20			COPd	6.60	1_
Tj=12 C Tj=bivalent temperature	Pdh 2.50		Tj=bivalent temperature	COPd	2.60	- _
Tj=blvalent temperature Tj=operating limit	Pdh 2.50		Tj=operating limit	COPd	2.60	վ_
T) operating innit	1 011 2.00	u likti	if operating intin	001 0	2.00	
Declared capacity for heating / Warm	er season, at indoor		Declared coefficient of performance /	Warmer seas	son, at inc	door
temperature 20°C and outdoor tempe			temperature 20°C and outdoor temperature			
Tj=2°C	Pdh 3.20	0 kW	Tj=2°C	COPd	2.95	-
Tj=7°C	Pdh 2.1 0	0 kW	Tj=7°C	COPd	4.87	-
Tj=12°C	Pdh 1.2 0	0 kW	Tj=12°C	COPd	6.60	-
Tj=bivalent temperature	Pdh 3.20	0 kW	Tj=bivalent temperature	COPd	2.95	-
Tj=operating limit	Pdh 3.2 0	0 kW	Tj=operating limit	COPd	2.95	-
			15			
Declared capacity for heating / Colder			Declared coefficient of performance /		on, at indo	or
temperature 20°C and outdoor tempe Tj=-7°C	Pdh -	kW	temperature 20°C and outdoor temperature Tj=-7°C	COPd		-
Tj=-7 C				COPd		-
,	Pdh -	kW				-
Tj=7°C Tj=12°C	Pdh - Pdh -	kW kW	Tj=7°C Tj=12°C	COPd COPd	-	-1
Tj=12 C Tj=bivalent temperature	Pdh -	kW	Tj=12 C	COPa	-	-1.
Tj=blvalent temperature Tj=operating limit	Pdh -	kW	Tj=bivalent temperature Tj=operating limit	COPa	-	1.
Tj=-0perating iiifiit Tj=-15°C	Pdh -		Tj=-15°C	COPd	-	┨
., 100	i uii 📑	II/AA	ا ان ان ا	JOI'U		1
Bivalent temperature			Operating limit temperature			
heating / Average	Tbiv -10	°C	heating / Average	Tol	-10	°C
heating / Warmer	Tbiv 2	℃	heating / Warmer	Tol	2	°C
heating / Colder	Tbiv -	°C	heating / Colder	Tol	-	°C
		•				
Cycling interval capacity			Cycling interval efficiency			
for cooling	Pcycc -	kW	for cooling	EERcyc	-	վ-
for heating	Pcych -	kW	for heating	COPcyc	-	<u> -</u>
Degradation coefficient			Degradation coefficient			
cooling	Cdc 0.2 !	5 -	heating	Cdh	0.25	٦-
	U.Z.	- 1] [camig	Juli	0.20	1
Electric power input in power modes	other than 'active mo	ode'	Annual electricity consumption			
off mode	Poff 5	W	cooling	Qce	133	kWh/a
standby mode	Psb 5	w	heating / Average	Qhe	853	kWh/a
thermostat-off mode	Pto(cooling) 17	W	heating / Warmer	Qhe	862	kWh/a
	Pto(heating) 20		heating / colder	Qhe	-	kWh/a
crankcase heater mode	Pck 0	W				
Occasión control de la control		-	1 Other Henry			
Capacity control(indicate one of three	options)		Other items	1		Tab/A)
			Sound power level(indoor)	Lwa	56	dB(A)
fived	B1 -		Sound power level(outdoor)	Lwa	58	dB(A)
fixed	No		Global warming potential	GWP	675	kgCO2e
staged	No		Rated air flow(indoor)	-	570	m ³ /h
variable	Yes	manufa at	Rated air flow(outdoor)	-	1644	m ³ /h
	and address of the r ishi Heavy Industries		or of its authorised representative.			
			ning Europe, Lta. Middlesex, UB11 1ET,United Kingdom			
	Square, Stockley Pa E SERVICES B.V.	, Oxbilage,	Middlesex, ODTT TET, Officed Kingdofff			
IMHIAF						
		ArenA. 1101	CM Amsterdam, Netherlands			

Model SRR35ZS-W

Model SRR35ZS-W					
Information to identify the model(s)		on relates to:	If function includes heating: Indicate		
Indoor unit model name	SRR35ZS-W		information relates to. Indicated val		
Outdoor unit model name	SRC35ZS-W2		heating season at a time. Include at	t least the heating s	eason 'Average'.
Function(indicate if present)			Average(mandatory)	Yes	
cooling	Yes		Warmer(if designated)	Yes	
heating	Yes		Colder(if designated)	No	
Item	symbol value	unit	Item		lue class
Design load cooling	Pdesignc 3.5	0 kW	Seasonal efficiency and energy effi cooling		6.80 A++
heating / Average	Pdesignh 3.1		heating / Average		4.50 A+
heating / Warmer	Pdesignh 4.1		heating / Warmer		5.50 A+++
heating / Colder	Pdesignh -	kW	heating / Colder	SCOP/C	
		•			unit
Declared capacity at outdoor temper			Back up heating capacity at outdoo		
heating / Average (-10°C)	Pdh 3.10		heating / Average (-10°C)	elbu	- kW
heating / Warmer (2°C) heating / Colder (-22°C)	Pdh 4.1 0	kW	heating / Warmer (2°C) heating / Colder (-22°C)	elbu elbu	- kW - kW
riedurig / Colder (-22 C)	run -	KVV	rieating / Colder (-22 C)	eibu	-
Declared capacity for cooling, at inc	door temperature 27(1)	9)°C and	Declared energy efficiency ratio, at	indoor temperatur	e 27(19)°C and
outdoor temperature Tj	,	,	outdoor temperature Tj		(-)
Tj=35°C	Pdc 3.5 6		Tj=35℃	EERd	3.76 -
Tj=30°C	Pdc 2.6 0		Tj=30°C	EERd	5.51 -
Tj=25°C	Pdc 1.70		Tj=25°C	EERd	8.60 -
Tj=20℃	Pdc 1.1 0	0 kW	Tj=20℃	EERd	11.80 -
Declared capacity for heating / Ave	rage season, at indoor		Declared coefficient of performance	e / Average seasor	n. at indoor
temperature 20°C and outdoor tem			temperature 20°C and outdoor tem		.,
Tj=-7°C	Pdh 2.8 0	0 kW	Tj=-7℃	COPd	2.88 -
Tj=2°C	Pdh 1.6 0		Tj=2°C	COPd	4.60 -
Tj=7°C	Pdh 1.10		Tj=7°C	COPd	5.50 -
Tj=12°C	Pdh 1.20		Tj=12°C	COPd	6.85
Tj=bivalent temperature	Pdh 3.10		Tj=bivalent temperature	COPd	2.69
Tj=operating limit	Pdh 3.1 0	0 kW	Tj=operating limit	COPd	2.69 -
Declared capacity for heating / War	mer season, at indoor		Declared coefficient of performance	e / Warmer season	at indoor
temperature 20°C and outdoor tem			temperature 20°C and outdoor tem		., atacc.
Tj=2°C	Pdh 4.1 0	0 kW	Tj=2°C	COPd	3.05 -
Tj=7°C	Pdh 2.6 0	0 kW	Tj=7°C	COPd	4.90 -
Tj=12°C	Pdh 1.2 0		Tj=12°C	COPd	6.85 -
Tj=bivalent temperature	Pdh 4.1 0		Tj=bivalent temperature	COPd	3.05 -
Tj=operating limit	Pdh 4.1 0	0 kW	Tj=operating limit	COPd	3.05 -
Declared capacity for heating / Colo	der season, at indoor		Declared coefficient of performance	e / Colder season	at indoor
temperature 20°C and outdoor tem			temperature 20°C and outdoor tem		at indoor
Tj=-7°C	Pdh -	kW	Tj=-7℃	COPd	
Tj=2°C	Pdh -	kW	Tj=2°C	COPd	-
Tj=7°C	Pdh -	kW	Tj=7°C	COPd	
Tj=12°C	Pdh -	kW	Tj=12°C	COPd	-
Tj=bivalent temperature	Pdh -	kW	Tj=bivalent temperature	COPd	
Tj=operating limit Tj=-15°C	Pdh - Pdh -	kW kW	Tj=operating limit Ti=-15°C	COPd COPd	<u>-</u> -
1j=-15 C	Pull -	KVV	1]15 C	COPu	• -
Bivalent temperature			Operating limit temperature		
heating / Average	Tbiv -10		heating / Average	Tol	-10 ℃
heating / Warmer	Tbiv 2	°C	heating / Warmer	Tol	2 ℃
heating / Colder	Tbiv -	°C	heating / Colder	Tol	- ℃
Cycling intorval conscitu			Cycling interval efficiency		
Cycling interval capacity for cooling	Pcycc -	kW	Cycling interval efficiency for cooling	EERcyc	
for heating	Pcych -	kW	for heating	COPcyc	
	,				
Degradation coefficient			Degradation coefficient		
cooling	Cdc 0.2	5 -	heating	Cdh	0.25 -
Electric power input in a	o other than Is -45	ndo!	Appual alastricity as a secretical		
Electric power input in power mode off mode	s other than 'active mo	w W	Annual electricity consumption cooling	Qce	181 kWh/a
standby mode	Psb 5	₩	heating / Average		966 kWh/a
thermostat-off mode	Pto(cooling) 18		heating / Warmer		1045 kWh/a
	Pto(heating) 20		heating / colder	Qhe	- kWh/a
crankcase heater mode	Pck 0	W			· ·
Consolity control (in die 1	aa antiar - \		Other Heme		
Capacity control(indicate one of thr	ee options)		Other items Sound power level(indoor)	Lwa	57 dB(A)
			Sound power level(indoor)	Lwa	62 dB(A)
fixed	No		Global warming potential	GWP	675 kgCO2eq
staged	No		Rated air flow(indoor)		600 m ³ /h
variable	Yes		Rated air flow(outdoor)	-	1890 m ³ /h
Contact details for obtaining Nam	e and address of the r		or of its authorised representative.	•	*
	ubishi Heavy Industrie				
	e Square, Stockley Pa AE SERVICES B.V.	ırk, Uxbridge,	Middlesex, UB11 1ET,United Kingdor	m	
		ArenΔ 11∩1	CM Amsterdam, Netherlands		
пен	Norbergweg 200, Lulla	. AIGHA, I IUI	om Amotordam, Nemenando		

(4) 4-way ceiling cassette type (FDTC)

Model FDTC25VH1

Design load cooling Pdesign 2.50 kW heating / Average Pdesignh 3.00 kW heating / Average Pdesignh 3.00 kW heating / Average SCOP/N 4.50 keating / Average (10°C) heating / Average (10°C) Pd 3.00 kW heating / Average heating / Ave	Information to identify the model(a) to	uhiah tha infarmatiar		His femation in alcohol bootings Indicate the	. booting or		
Punction (indicate if present) Cooling Yes Cooling (easy) Yes Yes Cooling (easy) Yes Yes Cooling (easy) Yes			relates to:				
Function(indicate if present) cocling ves ves ves Coderif designated) Nemarind designated in the second designated of the designated designate							'Average'
Section Sect	Outdoor unit model name	3K023Z3-WZ		Theating season at a time. Include at least	st tile ricatii	ig season	Average.
Section Sect	Function/indicate if present)			Average(mandatory)	Voc		
Learning Yes	. ,	Vos					
Item	9			, , ,			
Design load Cooling Potesign 2.50 W heating / Average Potesign 2.40 W heating / Average Potesign 2.40 W heating / Average SCOP/M 4.60 1.70 Neating / Average Potesign 2.40 W heating / Average SCOP/M 4.60 W heating / Average 1.00 W heating / Average 1.				ediae.(ii addigilatea)			
Design load Cooling Potesign 2.50 W heating / Average Potesign 2.40 W heating / Average Potesign 2.40 W heating / Average SCOP/M 4.60 1.70 Neating / Average Potesign 2.40 W heating / Average SCOP/M 4.60 W heating / Average 1.00 W heating / Average 1.	Item	symbol value	unit	Item	symbol	value	class
heating / Average Pdesignh 2.40 Wheating / Average SCOPA 4.00 Neating / Average SCOPA 4.00 Neating / Colder SCOPA 4.00 Neating / Colder (22°C) Pdh 2.40 Neating / Society / Pdf 2.40 Neating / Pdf 2.40 Neat							
heating / Warmer Pdesignh 3.00 W heating / Warmer SCOPN 5.10 x heating / Colder SCOPN 5.10 x heating / Colder SCOPN 5.10 x heating / Warmer SCOPN 5.10 x x x heating / Colder SCOPN 5.10 x x x x x x x x x	cooling	Pdesignc 2.50	kW	cooling	SEER	6.80	A++
Declared capacity at outdoor temperature Tdesignh	heating / Average	Pdesignh 2.40	kW	heating / Average	SCOP/A	4.00	A+
Declared capacity at outdoor temperature Toesignh heating / Average (-10°C) Pdh 2.40 kW heating / Average (-10°C) Pdh 3.00 kW heating / Average (-10°C) elbu - kW heating / Average - kW heating / Aver	heating / Warmer	Pdesignh 3.00	kW	heating / Warmer	SCOP/W	5.10	A+++
Declared capacity at outdoor temperature Totasign heating / Warmer (2°C) Pdh 3.06 W heating / Warmer (2°C) Pdh 3.06 W heating / Warmer (2°C) elbu - W W heating / Cycle (2°C) Pdh - W W heating / Warmer (2°C) elbu - W W heating / Cycle (2°C) elbu - W Heating / Cycle (2°C) e	heating / Colder	Pdesignh -	kW	heating / Colder	SCOP/C	-	-
heating / Average (-10°C) Pdh 3.00 kW heating / Average (-10°C) elbu — kW heating / Colder (-22°C) elbu — elbu — kW heating / Colder (-22°C) elbu — elbu — kW heating / Colder (-22°C) elbu — e			•				unit
heating / Warmer (2°C) Pdh 3.00 W heating / Collect (2°C) elbu - W W Heating / C						Γ <u>designh</u>	_
heating / Colder (-22°C)							
Declared capacity for cooling, at indoor temperature 27(19)°C and outdoor temperature 17 1-35°C							
Section Sect	heating / Colder (-22°C)	Pdh -	kW	heating / Colder (-22°C)	elbu	-	kW
Section Sect			.0-	1			
Tj-35°C		r temperature 27(19)	C and		or tempera	ature 27(19	e)°C and
Tj=90°C		Dda 250	LAM		CCD4	4.40	7
Tij=26°C	•						- 1
Ti=20°C EERd 13.10							- 1
Declared capacity for heating / Average season, at indoor temperature 20°C and outdoor temperature T) Tij—?"C Pdh 1.20 kW Tij—?"C Pdh 1.20 kW Tij—?"C COPd 3.34 - Tij—?"C Pdh 1.10 kW Tij—?"C COPd 3.34 - Tij—?"C Pdh 3.00 kW Tij—?"C COPd 3.34 - Tij—	•						- 1
temperature 20°C and outdoor temperature T] T]=-7°C Pdh 1.20 kW T]=-2°C Pdh 1.10 kW T]=-12°C Pdh 1.10 kW T]=-12°	1]-20 0	ruc 1.10	r.vv		EEKO	13.70	<u> -</u>
temperature 20°C and outdoor temperature T] T]=-7°C Pdh 1.20 kW T]=-2°C Pdh 1.10 kW T]=-12°C Pdh 1.10 kW T]=-12°	Declared canacity for heating / Avorage	e season at indoor		Declared coefficient of performance / A	verage son	enn at inc	loor
1]=-7°C						ison, at iff	1001
			kW			2 56	7_
							1_
Tij=12°C Pdh Pdh 2.40 kW Tij=12°C COPd 2.44 Tij=operating limit Tij=12°C COPd 2.44 Tij=operating limit Tij=12°C COPd CoPd Tij=12°C COPd CoPd Tij=12°C Tij=12°C COPd Tij=12°C Ti							1_
Tj=byalent temperature	•						1_
Ti = operating limit							1_
Declared capacity for heating / Warmer season, at indoor temperature 20°C and outdoor temperature Ti Ti=2°C Pdh 3.00 kW Ti=12°C COPd 4.78 Ti=12°C COPd 6.48 Ti=12°C COPd 6.48 Ti=12°C COPd 6.48 Ti=12°C Ti=12°C COPd 6.48 Ti=12°C Ti=12°C COPd 6.48 Ti=12°C Ti							1_
temperature 20°C and outdoor temperature T ₁ T ₁ =2°C Pdh T ₁ =7°C Pd	., operating in the		1	i j oporazing iii ii	00. 0		1
temperature 20°C and outdoor temperature T) T)=2°C Pdh 3.00 kW T)=1°C Pdh 1.10 kW T)=1°C Pdh 1.10 kW T)=1°C Pdh 3.00 kW T)=1°C Pdh 1.10 kW T)=1°C Pdh 3.00 kW T)=1°C C)Pd 2.76 -1°C Pdh 1.10 kW T)=1°C C)Pd 6.48 -1°C Pdh 3.00 kW T)=1°C C)Pd 6.48 -1°C Pdh 3.00 kW T)=1°C C)Pd 2.76 -1°C Pdh 3.00 kW T)=1°C C)Pd 3.00 kW T)=1°C C)Pd 3.00 kW T)=1°C Pdh kW T)=1°C Pdh kW T)=1°C C)Pd 3.00 kW T)=1°C C)Pd	Declared capacity for heating / Warme	r season, at indoor		Declared coefficient of performance / W	Varmer sea	son, at inc	loor
Tj=7°C Pdh 1.10 kW Tj=7°C COPd 4.78 - Tj=12°C Pdh 1.10 kW Tj=12°C COPd 6.48 - Tj=15°C COPd 2.76 - Tj=15°C Pdh 3.00 kW Tj=12°C COPd 2.76 - Tj=15°C Pdh - kW Tj=12°C COPd 1.15°C Pdh - kW Tj=12°C COPd 1.15°C COPd 1.15°C Pdh - kW Tj=12°C COPd 1.15°C COPd 1.15						,	
Tj=12°C Pdh 3.00 kW Tj=12°C COPd 6.48 Tj=1bvalent temperature Pdh 3.00 kW Tj=12°C COPd 2.76 Tj=1bvalent temperature Pdh 3.00 kW Tj=12°C COPd 2.76 Tj=1bvalent temperature Pdh 3.00 kW Tj=1bvalent temperature COPd 2.76 Tj=1bvalent temperature Tj Tj=-7°C Pdh kW Tj=2°C COPd 1.75 C	Tj=2°C	Pdh 3.00	kW	Tj=2°C	COPd	2.76	-
Tj=bivalent temperature	Tj=7°C	Pdh 2.00	kW	Tj=7°C	COPd	4.78	Ī-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature 7 Tig=2°C	Tj=12°C	Pdh 1.10	kW	Tj=12°C	COPd	6.48	1-
Declared capacity for heating / Colder season, at indoor temperature 20°C and outdoor temperature TJ IJ=-7°C Pdh - kW IJ=-2°C Pdh - kW IJ=-2°C COPd - IJ=-7°C COPd - IJ=-7°C COPd - IJ=-7°C COPd - IJ=-7°C COPd - IJ=-12°C Pdh - kW IJ=-12°C COPd - IJ=-12°C C	Tj=bivalent temperature	Pdh 3.00	kW	Tj=bivalent temperature	COPd	2.76	Ī-
temperature 20°C and outdoor temperature Tj Tj=-7°C Pdh Tj=2°C Pdh NW Tj=2°C Pdh NW Tj=12°C Pdh NO	Tj=operating limit	Pdh 3.00	kW	Tj=operating limit	COPd	2.76	7-
temperature 20°C and outdoor temperature Tj Tj=-7°C Pdh Tj=2°C Pdh NW Tj=2°C Pdh NW Tj=12°C Pdh NO			•				
Tj=-7°C Tj=2°C Pdh N Tj=-7°C Tj=2°C Pdh N Tj=-7°C Tj=2°C Pdh N Tj=-7°C N ToPatill Tj=-7°C N Tj=12°C COPd Tj=12°C ToPatill Tip=12°C ToPatill Ti						on, at indo	or
Tj=2°C Pdh - kW Tj=2°C COPd - Tj=2°C COPd - Tj=2°C COPd - Tj=12°C							_
Tj=7°C Pdh - kW Tj=12°C COPd - Tj=12°C COPd - Tj=5 visualent temperature Pdh - kW Tj=0 visualent temperature COPd - Tj=0 visualent temperature Pdh - kW Tj=0 visualent temperature COPd - Tj=0 visualent temperature Pdh - kW Tj=0 visualent temperature Pdeating / Average Pdi visualent visual						-	
Tj=12°C Pdh - kW Tj=12°C COPd - Tj=50valent temperature Pdh - kW Tj=0perating limit Pdh - kW Tj=0perating limit COPd - Tj=15°C Pdh - kW Tj=0perating limit COPd - Tj=15°C C						-	-
Tj=bivalent temperature Pdh - kW Tj=bivalent temperature COPd							
Tj=operating limit Tj=operation coderation operating limit Tj=operating limit Tip=operating limit Tip=operation leading limit Tip=operation leading limit Tip=operating limit Tip=operating limit Tip=operating limit Tip=operating leading leading limit Tip=operating leading leadin				11 ,		-	
Tj=-15°C Pdh - kW Tj=-15°C COPd Bivalent temperature heating / Average Tbiv - 10 °C heating / Warmer Tbiv 2 °C heating / Warmer Tbiv 2 °C heating / Colder Tbiv - °C Pcycling interval capacity for cooling Pcych - kW Pcych - kW Portheating Polycheating Pcych - kW Portheating Polycheating Pcych - kW Polycheating Pcych - kW Polycheating Pcych - Polycheating Pcych - Polycheating Pcych - Reating Pcych - Pcych - Reating Pcych - Reating Pcych - Pcych - Reating Pcych - Pcych - Pcych - Reating Pcych - P						-	
Bivalent temperature heating / Average						-	
Peating / Average IDIV -10 C Peating / Warmer Toliv 2 °C Peating / Warmer Toliv -10 C Peating / Warmer Toliv -10 C Peating / Warmer Toliv -10 C Peating / Colder Toliv -10 C Peating / Warmer Policy Peating / Colder Toliv -10 C Peating / Colder -10 Peat	Tj=-15℃	Pdh -	kW	Tj=-15°C	COPd	-	-
Peating / Average IDIV -10 C Peating / Warmer Toliv 2 °C Peating / Warmer Toliv -10 C Peating / Warmer Toliv -10 C Peating / Warmer Toliv -10 C Peating / Colder Toliv -10 C Peating / Warmer Policy Peating / Colder Toliv -10 C Peating / Colder -10 Peat							
Peating / Average IDIV -10 C Peating / Warmer Toliv 2 °C Peating / Warmer Toliv -10 C Peating / Warmer Toliv -10 C Peating / Warmer Toliv -10 C Peating / Colder Toliv -10 C Peating / Warmer Policy Peating / Colder Toliv -10 C Peating / Colder -10 Peat		This. 12	°_	Operating limit temperature	T-1	- 10	700
heating / Colder Tbiv - °C heating / Colder Tol - °C Cycling interval capacity for cooling Pcych - kW for cooling Selection to Pcych - kW for heating Selection to Pcych S				neating / Average			
Cycling interval capacity for cooling for cooling Pcych - kW for heating Pcych - kW for heating COPcyc							
for cooling for heating Pcych - kW for cooling for heating Pcych - kW for heating For cooling for heating For heating For cooling For heating For heating For cooling For heating For cooling For heating For heat	neating / Colder	I DIV -	-C	neating / Colder	101	-	C
for cooling for heating Pcych - kW for cooling for heating Pcych - kW for heating For cooling for heating For heating For cooling For heating For heating For cooling For heating For cooling For heating For heat	Cualing interval pay = -th :			Cualing interval officion			
Tor heating Pcych - kW for heating COPcyc		Povec	k/v/		EEDovo		٦_
Degradation coefficient cooling							-[
Electric power input in power modes other than 'active mode' off mode standby mode Psb 7 W heating / Average Qhe standby mode Pro(cooling) 14 W hermostat-off mode Pck 0 W	ioi ricatiliy	r cycii -	KVV	nor neating	COPCyC		<u> </u>
Electric power input in power modes other than 'active mode' off mode standby mode Psb 7 W heating / Average Qhe standby mode Pro(cooling) 14 W hermostat-off mode Pck 0 W	Degradation coefficient			Degradation coefficient			
Electric power input in power modes other than 'active mode' off mode		Cdc 0.25			Cdh	0.25	7-
off mode standby mode thermostat-off mode Psb 7 W heating / Average Qhe B40 kW heating / Average heater mode Pck 0 W Capacity control(indicate one of three options) Capacity control(indicate one of three options) The standby mode Psb 7 W Heating / Average Qhe B40 kW heating / Average heating / Av		Jul 0.25	<u> </u>	Housing	Ouri	0.20	<u> </u>
off mode standby mode thermostate off mode Psb 7 W heating / Average heating / Avera	Electric power input in power modes of	ther than 'active mod	de'	Annual electricity consumption			
standby mode thermostat-off mode Psb Pto(cooling) 14 W Pto(heating) 18 W Crankcase heater mode Pck 0 W Capacity control(indicate one of three options) No Sound power level(indoor) Lwa 51 dB					Qce	129	kWh/a
thermostat-off mode							kWh/a
Capacity control(indicate one of three options) Capacity control(indicate one of three options) Capacity control(indicate one of three options) No Staged Variable No Contact details for obtaining more information Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.							kWh/a
Capacity control(indicate one of three options) Capacity control(indicate one of three options) Other items Sound power level(indoor) Sound power level(outdoor) Lwa 58 dB(Sound power level(outdoor) Lwa 58 dB(Global warming potential GWP 675 kgC Rated air flow(indoor) - 510 m³/ Rated air flow(outdoor) - 1644 m³/ Contact details for obtaining more information Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.	-						kWh/a
Capacity control(indicate one of three options) Condect details for obtaining more information Capacity control(indicate one of three options) Capacity control indicate one options of the manufacturer or of its authorised representative. Misturbish theavy Industries Air-Conditioning Europe, Ltd. Saturbish three options of the manufacturer or of its authorised representative. Misturbish three options of the manufacturer or of its authorised representative. Misturbish three options of the manufacturer or of its authorised representative. Misturbish three options o	crankcase heater mode					1	
Sound power level(indoor) Lwa 51 dB(Sound power level(outdoor) Lwa 58 dB(Sound power level(outdoor) Lwa 58 dB(Sound power level(outdoor) Lwa 58 dB(Global warming potential GWP 675 kgC Rated air flow(indoor) - 510 m³/ Rated air flow(outdoor) - 1644 m³/ Contact details for obtaining more information Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.				1			
Sound power level(indoor) Lwa 51 dB(Sound power level(outdoor) Lwa 58 dB(Global warming potential GWP 675 kgC Rated air flow(indoor) - 510 m³/ Rated air flow(outdoor) - 1644 m³/ Contact details for obtaining more information Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.	Capacity control(indicate one of three	options)					
fixed staged variable Contact details for obtaining more information No No Rated air flow(indoor) - 1644 m³/ Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.		•		Sound power level(indoor)	Lwa	51	dB(A)
staged variable Contact details for obtaining more information Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.				Sound power level(outdoor)	Lwa	58	dB(A)
staged variable Contact details for obtaining more information Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.	fixed	No			GWP	675	kgCO2eq
Contact details for obtaining more information Name and address of the manufacturer or of its authorised representative. Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET,United Kingdom MHIAE SERVICES B.V.	staged	No		Rated air flow(indoor)	-	510	m ³ /h
more information Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom MHIAE SERVICES B.V.				· ,		1644	m ³ /h
more information Mitsubishi Heavy Industries Air-Conditioning Europe, Ltd. 5 The Square, Stockley Park, Uxbridge, Middlesex, UB11 1ET, United Kingdom MHIAE SERVICES B.V.	Contact details for obtaining Name a	nd address of the ma	anufacturer o	or of its authorised representative.			
MHIAE SERVICES B.V.	more information Mitsubis	shi Heavy Industries	Air-Condition	ning Europe, Ltd.			
			k, Uxbridge,	Middlesex, UB11 1ET, United Kingdom			
Herikerbergweg 238 Tuna ArenA 1101 CM Amsterdam Netherlands							
promorporgroup 200, Edita Attoriza, 1 101 Otto Attorication, Neutralianus	Heriker	bergweg 238, Luna /	ArenA, 1101	Civi Amsterdam, Netherlands			

Model FDTC35VH1

Model FDTC35VH1				
Information to identify the model(s)		relates to:	If function includes heating: Indicate	
Indoor unit model name	FDTC35VH1		information relates to. Indicated valu	
Outdoor unit model name	SRC35ZS-W2		heating season at a time. Include at	least the heating season 'Average
Function(indicate if present)			Average(mandatory)	Yes
cooling	Yes		Warmer(if designated)	Yes
heating	Yes		Colder(if designated)	No
<u>-</u>			3	
Item	symbol value	unit	Item	symbol value class
Design load		٦	Seasonal efficiency and energy efficiency	
cooling	Pdesignc 3.50	kW	cooling	SEER 7.10 A++
heating / Average	Pdesignh 2.90	kW	heating / Average	SCOP/A 4.60 A++ SCOP/W 5.50 A+++
heating / Warmer heating / Colder	Pdesignh 3.70 Pdesignh -	kW kW	heating / Warmer heating / Colder	SCOP/W 5.50 A+++ SCOP/C - -
rieating / Colder	ruesigiiii -	KVV	rieating / Colder	unit
Declared capacity at outdoor tempe	rature Tdesignh		Back up heating capacity at outdoor	
heating / Average (-10°C)	Pdh 2.90	kW	heating / Average (-10°C)	elbu - kW
heating / Warmer (2°C)	Pdh 3.70	kW	heating / Warmer (2°C)	elbu - kW
heating / Colder (-22°C)	Pdh -	kW	heating / Colder (-22°C)	elbu - kW
	•	•		•
Declared capacity for cooling, at inc	loor temperature 27(19)°	C and	Declared energy efficiency ratio, at i	indoor temperature 27(19)°C and
outdoor temperature Tj		٦	outdoor temperature Tj	
Tj=35°C	Pdc 3.50	kW	Tj=35°C	EERd 3.85 -
Tj=30°C	Pdc 2.60	kW	Tj=30°C	EERd 5.65 -
Tj=25°C	Pdc 1.70	kW	Tj=25°C	EERd 9.10 -
Tj=20°C	Pdc 1.10	kW	Tj=20°C	EERd 14.20 -
Declared capacity for heating / Aver	ane season at indoor		Declared coefficient of performance	/ Average season at indoor
temperature 20°C and outdoor temp			temperature 20°C and outdoor temp	
Tj=-7°C	Pdh 2.50	kW	Ti=-7°C	COPd 2.71 -
Tj=2℃	Pdh 1.50	kW	Tj=2°C	COPd 4.78 -
Tj=7℃	Pdh 1.00	kW	Tj=7°C	COPd 5.85 -
Tj=12°C	Pdh 1.20	kW	Tj=12°C	COPd 6.97 -
Tj=bivalent temperature	Pdh 2.90	kW	Tj=bivalent temperature	COPd 2.51 -
Tj=operating limit	Pdh 2.90	kW	Tj=operating limit	COPd 2.51 -
	•	•		<u> </u>
Declared capacity for heating / War			Declared coefficient of performance	
temperature 20°C and outdoor temp		٦	temperature 20°C and outdoor temp	
Tj=2°C	Pdh 3.70	kW	Tj=2°C	COPd 2.82 -
Tj=7°C	Pdh 2.40	kW	Tj=7°C	COPd 5.05 -
Tj=12°C	Pdh 1.20	kW	Tj=12°C	COPd 6.97 -
Tj=bivalent temperature	Pdh 3.70	kW	Tj=bivalent temperature	COPd 2.82 -
Tj=operating limit	Pdh 3.70	kW	Tj=operating limit	COPd 2.82 -
Declared capacity for heating / Cold	ler season at indoor		Declared coefficient of performance	/ Colder season at indoor
temperature 20°C and outdoor temp			temperature 20°C and outdoor temp	
Tj=-7°C	Pdh -	kW	Ti=-7°C	COPd
Tj=2°C	Pdh -	kW	Tj=2°C	COPd
Tj=7°C	Pdh -	kW	Tj=7°C	COPd
Tj=12°C	Pdh -	kW	Tj=12°C	COPd
Tj=bivalent temperature	Pdh -	kW	Tj=bivalent temperature	COPd
Tj=operating limit	Pdh -	kW	Tj=operating limit	COPd
Tj=-15°C	Pdh -	kW	Tj=-15°C	COPd
	• 			
Bivalent temperature		700	Operating limit temperature	T.
heating / Average	Tbiv -10	°C	heating / Average	Tol -10 °C
heating / Warmer	Tbiv 2	္တိ	heating / Warmer	Tol 2 °C
heating / Colder	Tbiv -	°C	heating / Colder	Tol - ℃
Cycling interval capacity			Cycling interval efficiency	
for cooling	Pcycc -	kW	for cooling	EERcyc
for heating	Pcych -	kW	for heating	COPcyc
		<u> </u>		
Degradation coefficient		_	Degradation coefficient	
cooling	Cdc 0.25	-	heating	Cdh 0.25 -
Electric control of the control of t	4141- 1 22 - 1		Annual alast 1 2 2	
Electric power input in power mode			Annual electricity consumption	000 470 134/1/
off mode	Poff 7	W	cooling	Qce 173 kWh/a
standby mode thermostat-off mode	Psb 7	W	heating / Average	Qhe 883 kWh/a Qhe 942 kWh/a
memostat-on mode	Pto(cooling) 14 Pto(heating) 18	W	heating / Warmer heating / colder	
crankcase heater mode	Pto(heating) 18 Pck 0	W	meaning / conder	Qhe - kWh/a
Granicase ricater mode	i on U	1**	I	
Capacity control(indicate one of three	ee options)		Other items	
. ,			Sound power level(indoor)	Lwa 52 dB(A)
			Sound power level(outdoor)	Lwa 62 dB(A)
	No		Global warming potential	GWP 675 kgCO26
fixed	140			
fixed staged	No		Rated air flow(indoor)	- 540 m ³ /h
			Rated air flow(indoor) Rated air flow(outdoor)	- 1890 m ³ /h
staged variable	No Yes	nufacturer o	1 1	
staged variable Contact details for obtaining more information Nam Mitsu	No Yes e and address of the mar ubishi Heavy Industries A	ir-Condition	Rated air flow(outdoor) or of its authorised representative. ning Europe, Ltd.	- 1890 m ³ /h
staged variable Contact details for obtaining more information Nam Mitsu 5 Th	No Yes e and address of the mai ubishi Heavy Industries A e Square, Stockley Park,	ir-Condition	Rated air flow(outdoor) or of its authorised representative.	- 1890 m ³ /h
staged variable Contact details for obtaining more information Nam Mitsu 5 Th MHI/	No Yes e and address of the ma ubishi Heavy Industries A e Square, Stockley Park, AE SERVICES B.V.	ir-Condition Uxbridge,	Rated air flow(outdoor) or of its authorised representative. ning Europe, Ltd.	- 1890 m ³ /h

INVERTER RESIDENTIAL AIR-CONDITIONERS



MITSUBISHI HEAVY INDUSTRIES THERMAL SYSTEMS, LTD.

2-3, Marunouchi 3-chome, Chiyoda-ku, Tokyo, 100-8332, Japan http://www.mhi-mth.co.jp/en/